


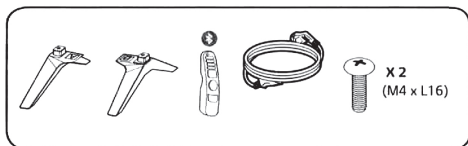


43UP7560AUD 43UP8000PUR  
43UP7700PUB  
43UP8000PUA

804006611


1



2

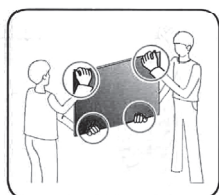

3

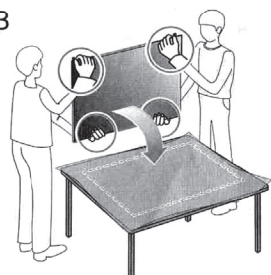


43UP75\*


1



2

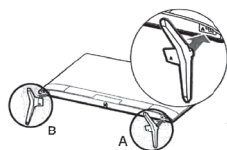

3

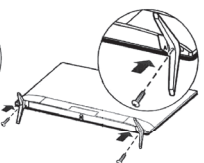

4




43UP77\*/43UP80\*


1




2

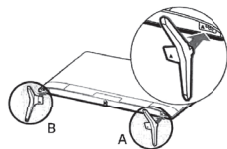

3

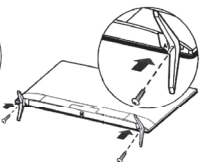


4

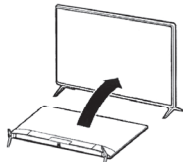


Easy TV Connect Guide (Animation)


The cables mentioned in this guide is not supplied with your unit.

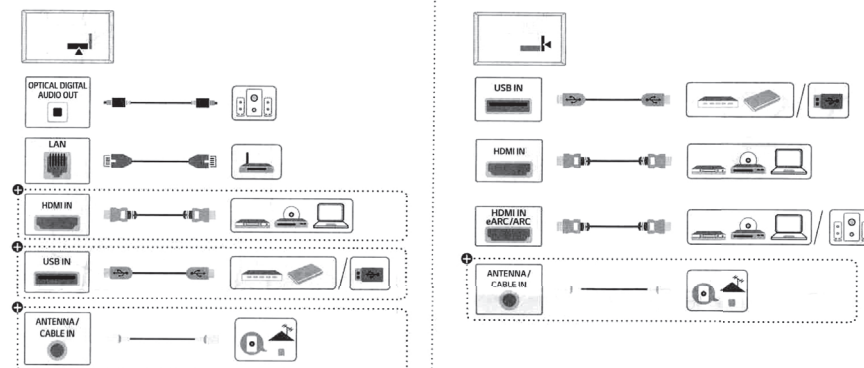

(Batteries Not Supplied)

 


The remote control vary depend of model: The buttons on the remote control may have a different name or location than the remote control shows in this manual.

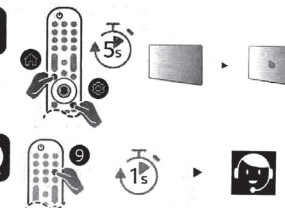

A, B, C, D, E : mm (inches)

F, G : kg (lbs)

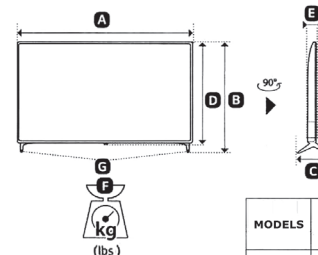

Note: The image shown here is for illustrative purposes only and may be subject to change. The actual number of ports and their locations may vary depending on the model.

Read Safety and Reference.

Easy Setup Guide

Please read this manual carefully operating your set and retain it for future reference.

⊕ : Depending upon model

MODELS	A	B	C	D	E	F	G	Power consumption
43UP7560AUD	973 (38.3)	973 (38.3)	623 (24.5)	216 (8.5)	572 (22.5)	85.0 (3.3)	8.1 (1.8)	8.0 (1.7)
43UP7700PUB	967 (38.1)	967 (38.1)	622 (24.4)	216 (8.5)	564 (22.2)	85.0 (3.3)	8.0 (1.7)	8.0 (1.7)
43UP8000PUA	967 (38.1)	967 (38.1)	622 (24.4)	216 (8.5)	564 (22.2)	85.0 (3.3)	8.0 (1.7)	8.0 (1.7)
43UP8000PUR	967 (38.1)	967 (38.1)	622 (24.4)	216 (8.5)	564 (22.2)	85.0 (3.3)	8.0 (1.7)	8.0 (1.7)
Power requirement								
AC 120 V - 50 / 60 Hz								

