



GIGA Lounger PS2


User Manual

Using instruction


- Find a large flat surface of minimum 200x100 (cm).
- Unfold the GIGA Lounger and lay it flat on the ground.
- Check if the deflate valve is closed.
- Open the sealing cap and the air inlet stopper, then press the power button to turn on the air pump. (For more details please refer to the "Instruction of air pump")
- After the GIGA Lounger is fully inflated, close air inlet stopper on the air inlet port tightly before pressing the button to turn off the air pump. (Note: Make sure the air inlet stopper is tightly closed.)

Description of parts of the air pump

- ❶ Sealing cap
- ❷ Charging port
- ❸ Power button
- ❹ Outer shell
- ❺ Air inlet port
- ❻ Air inlet stopper

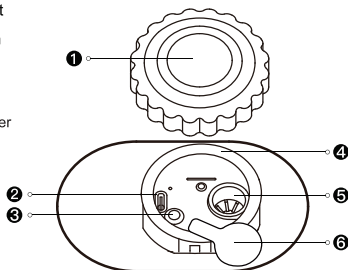

Instruction of air pump

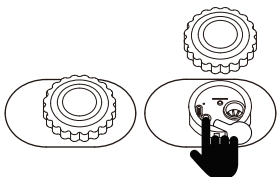

Press the power button to turn on/off the air pump

Instruction of using the air pump



Do not use the air pump continuously for more than 5 minutes.

1. Open the sealing cap of the air pump.
2. Unplug the air inlet stopper.
3. Press the power button to turn on the air pump.




4. Plug the air inlet stopper tightly once fully inflated.
5. Press the power button to turn off the air pump.
6. Twist close the sealing cap and use the GIGA Lounger.




Instruction of other parts


Deflate valve position
& illustration

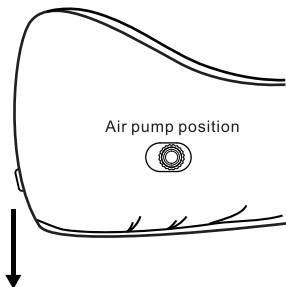

Valve for
external air
pumping device

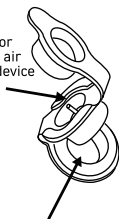

Deflate valve

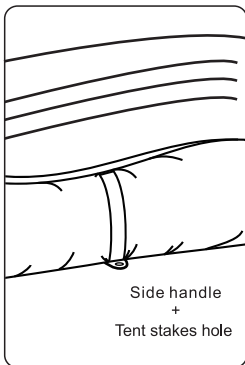

Specifications

Net weight	2.1 kg
Folded size	Ø 20cm * 33cm
Inflated size	185cm * 80cm * 50cm
Full inflation time	About 130 seconds
Output power	33.6 W
The usage count of the fully charged air pump	10 times
Charging time of air pump	6 hours
Waterproof rating of air pump	IP 68
Input voltage	5V
Battery capacity of air pump	3.7V 3800mAh
Max. Load-bearing of air lounger	150kg
Packaging content	User manual, Storage bag, GIGA Lounger, Patches * 2, Charging cable
Material of air lounger	Polyester+PVC
Material of air pump	ABS + Silicon + PVC

Troubleshoot

- When the air pump is not working and the red light is on, it indicates low power and charging required.
- When the inflating speed reduces, please check whether the inlet port is stuck or power is low.
- If the fan is not working, please check if it is jammed.
- Charging the air pump to check whether its battery is flat or not.

Reminder

- It is normal that the GIGA Lounger gets softer slowly, simply turn on the air pump to re-inflate it.
- If there is small hole in the surface of the GIGA Lounger, simply fix it with the patches provided.
- Make sure you close the deflate valve tightly before inflating to prevent air leaking.
- While deflating and folding the GIGA Lounger, protect the air pump to prevent from collision damages.
- If you inadvertently submerge the air pump in water, pour out the water and dry the pump quickly. You must wait until the air pump is dry before storing or using it.
- Remove all the bits and pieces from the area that the GIGA Lounger will be used in. Especially remove all the sharp objects, stones, twigs, glass fragments and other objects to prevent scratches on the GIGA Lounger.

Warning

- Do not let water to get in the air pump when you use or store the GIGA Lounger.
- All children under 12 must be supervised by an adult when using the GIGA Lounger.
- Do not put your finger or any obstacles into the air inlet port of the pump when inflating.
- Clear the bottom of the GIGA Lounger and remove all sharp objects from area the GIGA Lounger will be used in.
- Keep the inlet port and deflate valve clean.
- Do not use the GIGA Lounger in water.

Indicator Light

- The red light will be on when the pump is on low battery levels.
- The red light will be on when the pump is charged. When fully charged, the green indicator light on the air pump turns solid green.

Disclaimer

- Defects (cosmetic or incidental damages) or malfunction caused by misuse, abuse, improper storage or maintenance.
- Failure to follow operating instructions, or use with equipment with which it is not intended to be used.
- Damage caused by unauthorized disassembly, alteration, modification or repair of the product.

Regulatory Compliance Information



- All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.



- EU Declaration of Conformity
We, Shanghai MicroNovelty Information Technology Co., Ltd hereby, declare that this equipment is in compliance with the applicable Directives and European Norms, and amendments.

Basic information

Product name: GIGA Lounger

Brand: Aerogogo

Model: PS2

Manufacturer: Shanghai MicroNovelty Information Technology Co., Ltd

Address: Room 102, Unit 2, Lane 88, Shengrong Road,

China (Shanghai) Pilot Free Trade Zone

E-mail: service@aerogogo.com

Made in China

If there is any problem when using the product, please contact the local authorized dealers or retailers. For more information, you can also send email to: service@aerogogo.com

RoHS REACH
EAC