



01

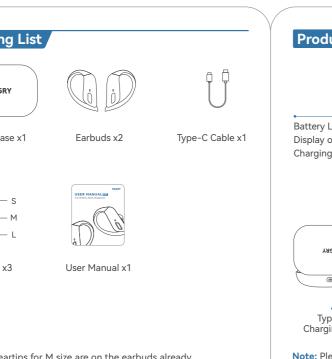

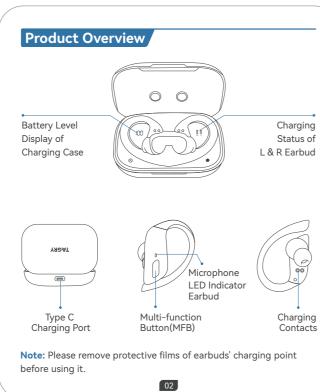

Product Parameters Model No.: X07 Support Profile: HSP/HFP/AVRCP/A2DP Transmission Range: 33feet(Without Obstacles) ■ FCC ID: 2A58W-G17 Charging Cord Type: Type-C Input: 5V — 1A Charging Case: 600mAh 3.7V, 2.22Wh Earbuds: 50mAh 3.7V, 0.18Wh Weight: 0.22 lb ■ Size: 4.2*2.8*1.3 in

Before the first use, please tear off the isolation film on each.

earbuds in time when they are in low battery.


earbud. Put both earbuds into charging case, then use USB-C

cable to charge the case and earbuds for 1H. Please charge the


2 These earbuds are installed with M size eartips. Please select the

suitable one according to your ears to get a better sound enjoying.

First-Use

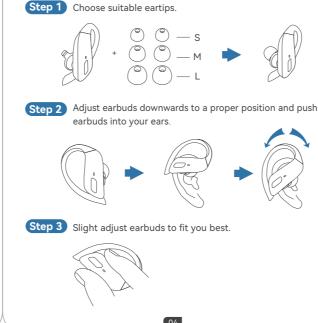



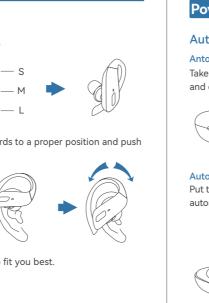

Power On / Off

Auto Power On /Off

Anto Power On Take the earbuds out from charging case, they will auto power on and enter pairing mode.





Put the earbuds into charging case, they will power off and disconnect automatically.





Note: These earbuds will power off automatically if don't connect any device within 5 minutes.

with device.

How to Pair Long press either earbud for 2s, then the earbud will power on.

1 Pick up two earbuds from charging case. They will power on and pair with each other automatically.



You will hear a prompt "power on" flash white and red alternately

2 Turn on your phone bluetooth, search "X07" and click to pair Once connected successfully you will hear a prompt" connected ' and the light on earbuds will be off.

In the disconnected statement, the earbuds will enter pairing mode



automatically.

auto power off after 5mins, when earbuds are power on and in pairing mode. 2. After first pairing earbuds will memorize the last connection device, second time when you take out the earbuds from charging case, earbuds will auto reconnect.

Single Mode

case, you can get the single mode.

out, you can get the single mode.

3. After first pairing, if you want "X07" to pair with different device, please forget "X07" on your previous device, then you can use "X07" to connect with other devices.

08


1. If both earbuds do not connect with your device, earbuds will

1. When both earbuds are in using, please put one earbud into the

2. When both earbuds are in charging case, please just take one earbud

Music Control


Pause/Play: Once click (L/R)

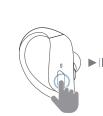

Previous Track: Double click L earbud



Volume Adjustment: (In play mode or call mode)

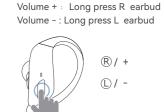

Double click R earbud



Multi-Function Operations


Phone Calls Control

Answer/End Call: Once Click L/R Reiect Calls: Long Press 2s

Note: Each earbud bulid-in microphone can be used individually or simmultaneously.

10

Voice Assistance Activate Voice Assistance: Quick Triple Click L/R Turn off Voice Assistance: Quick Triple Click L/R

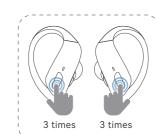


1 time

Earbuds Charging

To Charge Earbuds

Insert earbuds into charging case properly, they will power off & get charged automatically.

The power display of earbuds will flash up and down during charging. After fully charged, the light will be off. -

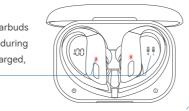

Low Battery Alarm

When the earbuds battery is below 10%(and the voltage is below 3.4V), a voice "Low Battery, Please charge" will be prompted and once per minute, 5 times in total. Finally the earbuds will turn off normally.

Note: Please clean and dry up the earbuds before putting into charging case.

Charging Case Charging

There is a Type-C USB charging cable in the package, please use it to charge the case directly.

During charging, the digital display will flash and show the battery in real time. The indicator light outside of the case will be red. After being fully charged, the number is displayed as 100. And the indicator light will be off.



Note: The right display panel indicates the charging status per earbud. There are separated power consumption indicators by 4 grids in total, the indicator light will always flash during charging.

Battery Warning

Using the wrong battery can cause fire and other hazards (for example, in the case of somelithium battery types). 1. Disposal of a battery into fire or a hot oven, or mechanically

crushing or cutting of abattery, that can result in an explosion 2. Do not leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.

3. A battery subjected to extremely low air pressure that may result in an explosion or theleakage of flammable liquid or gas.

Storage and Maintenance

1. If the earbuds have been unused for more than 3 months, we recommend that you charge them.

2. Please use chargers that are FCC (Federal Communications). 3. Do not disassemble earbuds.

4. Adult supervision is required for children aged 6 and under. 5. Do not expose earbuds to high or low temperature, do not use the earbuds in thunderstorm storm. Avoid falling or violent impact of the device. Keep the device away from fire,do not put.

13

FCC Warning Statement

-- Reorient or relocate the receiving antenna.

that to which the receiver is connected.

subject to the following two conditions:

of the following measures:

Changes or modifications not expressly approved by the party

responsible for compliance could void the user's authority to operate the

Rules. These limits are designed to provide reasonable protection against

equipment. This equipment has been tested and found to comply with

the limits for a Class B digital device, pursuant to Part 15 of the FCC

harmful interference in a residential installation. This equipment

generates uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause

harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation. If

this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and

the user is encouraged to try to correct the interference by one or more

- Increase the separation between the equipment and receiver.

This device complies with part 15 of the FCC Rules. Operation is

(1) This device may not cause harmful interference, and (2)

this device must accept any interference received, including

interference that may cause undesired operation.

Connect the equipment into an outlet on a circuit different from

- Consult the dealer or an experienced radio/TV technician for help.

You can refer to the following solutions. If you cannot solve them, please contact us by email, we will support you throughout)

Trouble Shooting Guide

Long press either earbud for 5s, then the earbud will power off.

Note: This method only works when the earbuds are disconnected

06

Q: Why these earbuds can not pair with my phones?

- A: 1 Please make sure the earbuds are fully charged and power on. 2 Please make sure the bluetooth of your phone is turn on.
- If above 2 points have no problem, please put earbuds into the case again and close the case, hold on for 1 min, then pick out the earbuds from charging case and reconnect earbuds with you

Please note, the earbuds will connect with your last device automaticlly. If you need to pair with new device, please forget the earbuds from your previous device bluetooth list.

Q: Why does the music cut in or cut out?


- A: Please don't let the distance between these earbuds and your phone more than 33 feet (without obstacle) If the distance is less than 33 feet, please check the below steps:
- 1 Put earbuds into charging case and forget "X07" on your phone bluetooth list.
- 3 Search "X07" at your phone bluetooth and click to reconnect.
- 2 After 1 min, take the earbuds out of charging case. 15

USB-C cable to charge it. It will take about 2.5H for fully If not about the battery, please check the earbuds as below details:

Q: How can i do when the earbuds can't be charged?


A: Please check if the earbuds are out of battery. If yes, please use

- ① Check whether there are dirty in the charging pins of the and the charging case. Use a fine cotton swab dipped in a small
- amount of alcohol, wipe the charging pins of the earbuds and ② Whether the earbuds can be turned on normally.
- ③ Whether the charging case is charged and whether the charging case can be charged.

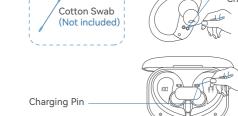

Q: Poor sound quality, how to deal with this issue?

- A: ① Please choose the suitable ear-tips already, and rotate to the comfortable angle to you ear.
 - ② The earbuds may be dirty. Please use a fine cotton swab dipped in a small smount of alcohol to wipe the mesh of earbuds.

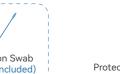







17