

Contents

In the box

Getting started

Charging your machine

Emptying your bin

Cleaning your bin

Clearing blockages from your Mini
motorised tool

Washing the Pre-filter

Washing the Post-filter

Washing your soft roller cleaner head

 
Cleaning the tools

Looking after your machine

In the box


Your machine is boxed in 2 parts:

1. Machine body
2. Cleaner head/tools

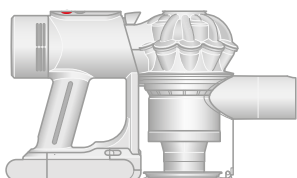


Machine body

 Simply attach the cleaner head or tool to the front end of the main body or wand.

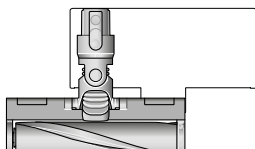

Soft roller head

 

Mini motorised tool



Crevice tool



Wand

The charger can be used independently or as part of the dock.



Charger



Dock

Caring for your floors

Check that the underside of the cleaner head or tool is clean and free from any objects that may cause damage.

Before vacuuming your flooring, rugs, and carpets, check the manufacturer's recommended cleaning instructions.

The brush bar on your cleaner head, or motorised tool, can damage certain flooring. Some rug materials may fuzz if a rotating brush bar is used when vacuuming. If this happens, we recommend vacuuming without the motorised floor tool and consulting with your flooring manufacturer.