

cecotec

Power Espresso 20 Barista Pro


Cafetera espresso/Espresso coffee machine



Manual de instrucciones
Instruction manual
Manuel d'instructions
Bedienungsanleitung
Manuale di istruzioni
Manual de instruções
Instructiehandleiding


1. PIEZAS Y COMPONENTES

Parts and components/Pièces et composants/Ersatzteile und Komponenten/
Parti e componenti/Peças e componentes/ Onderdelen en componenten

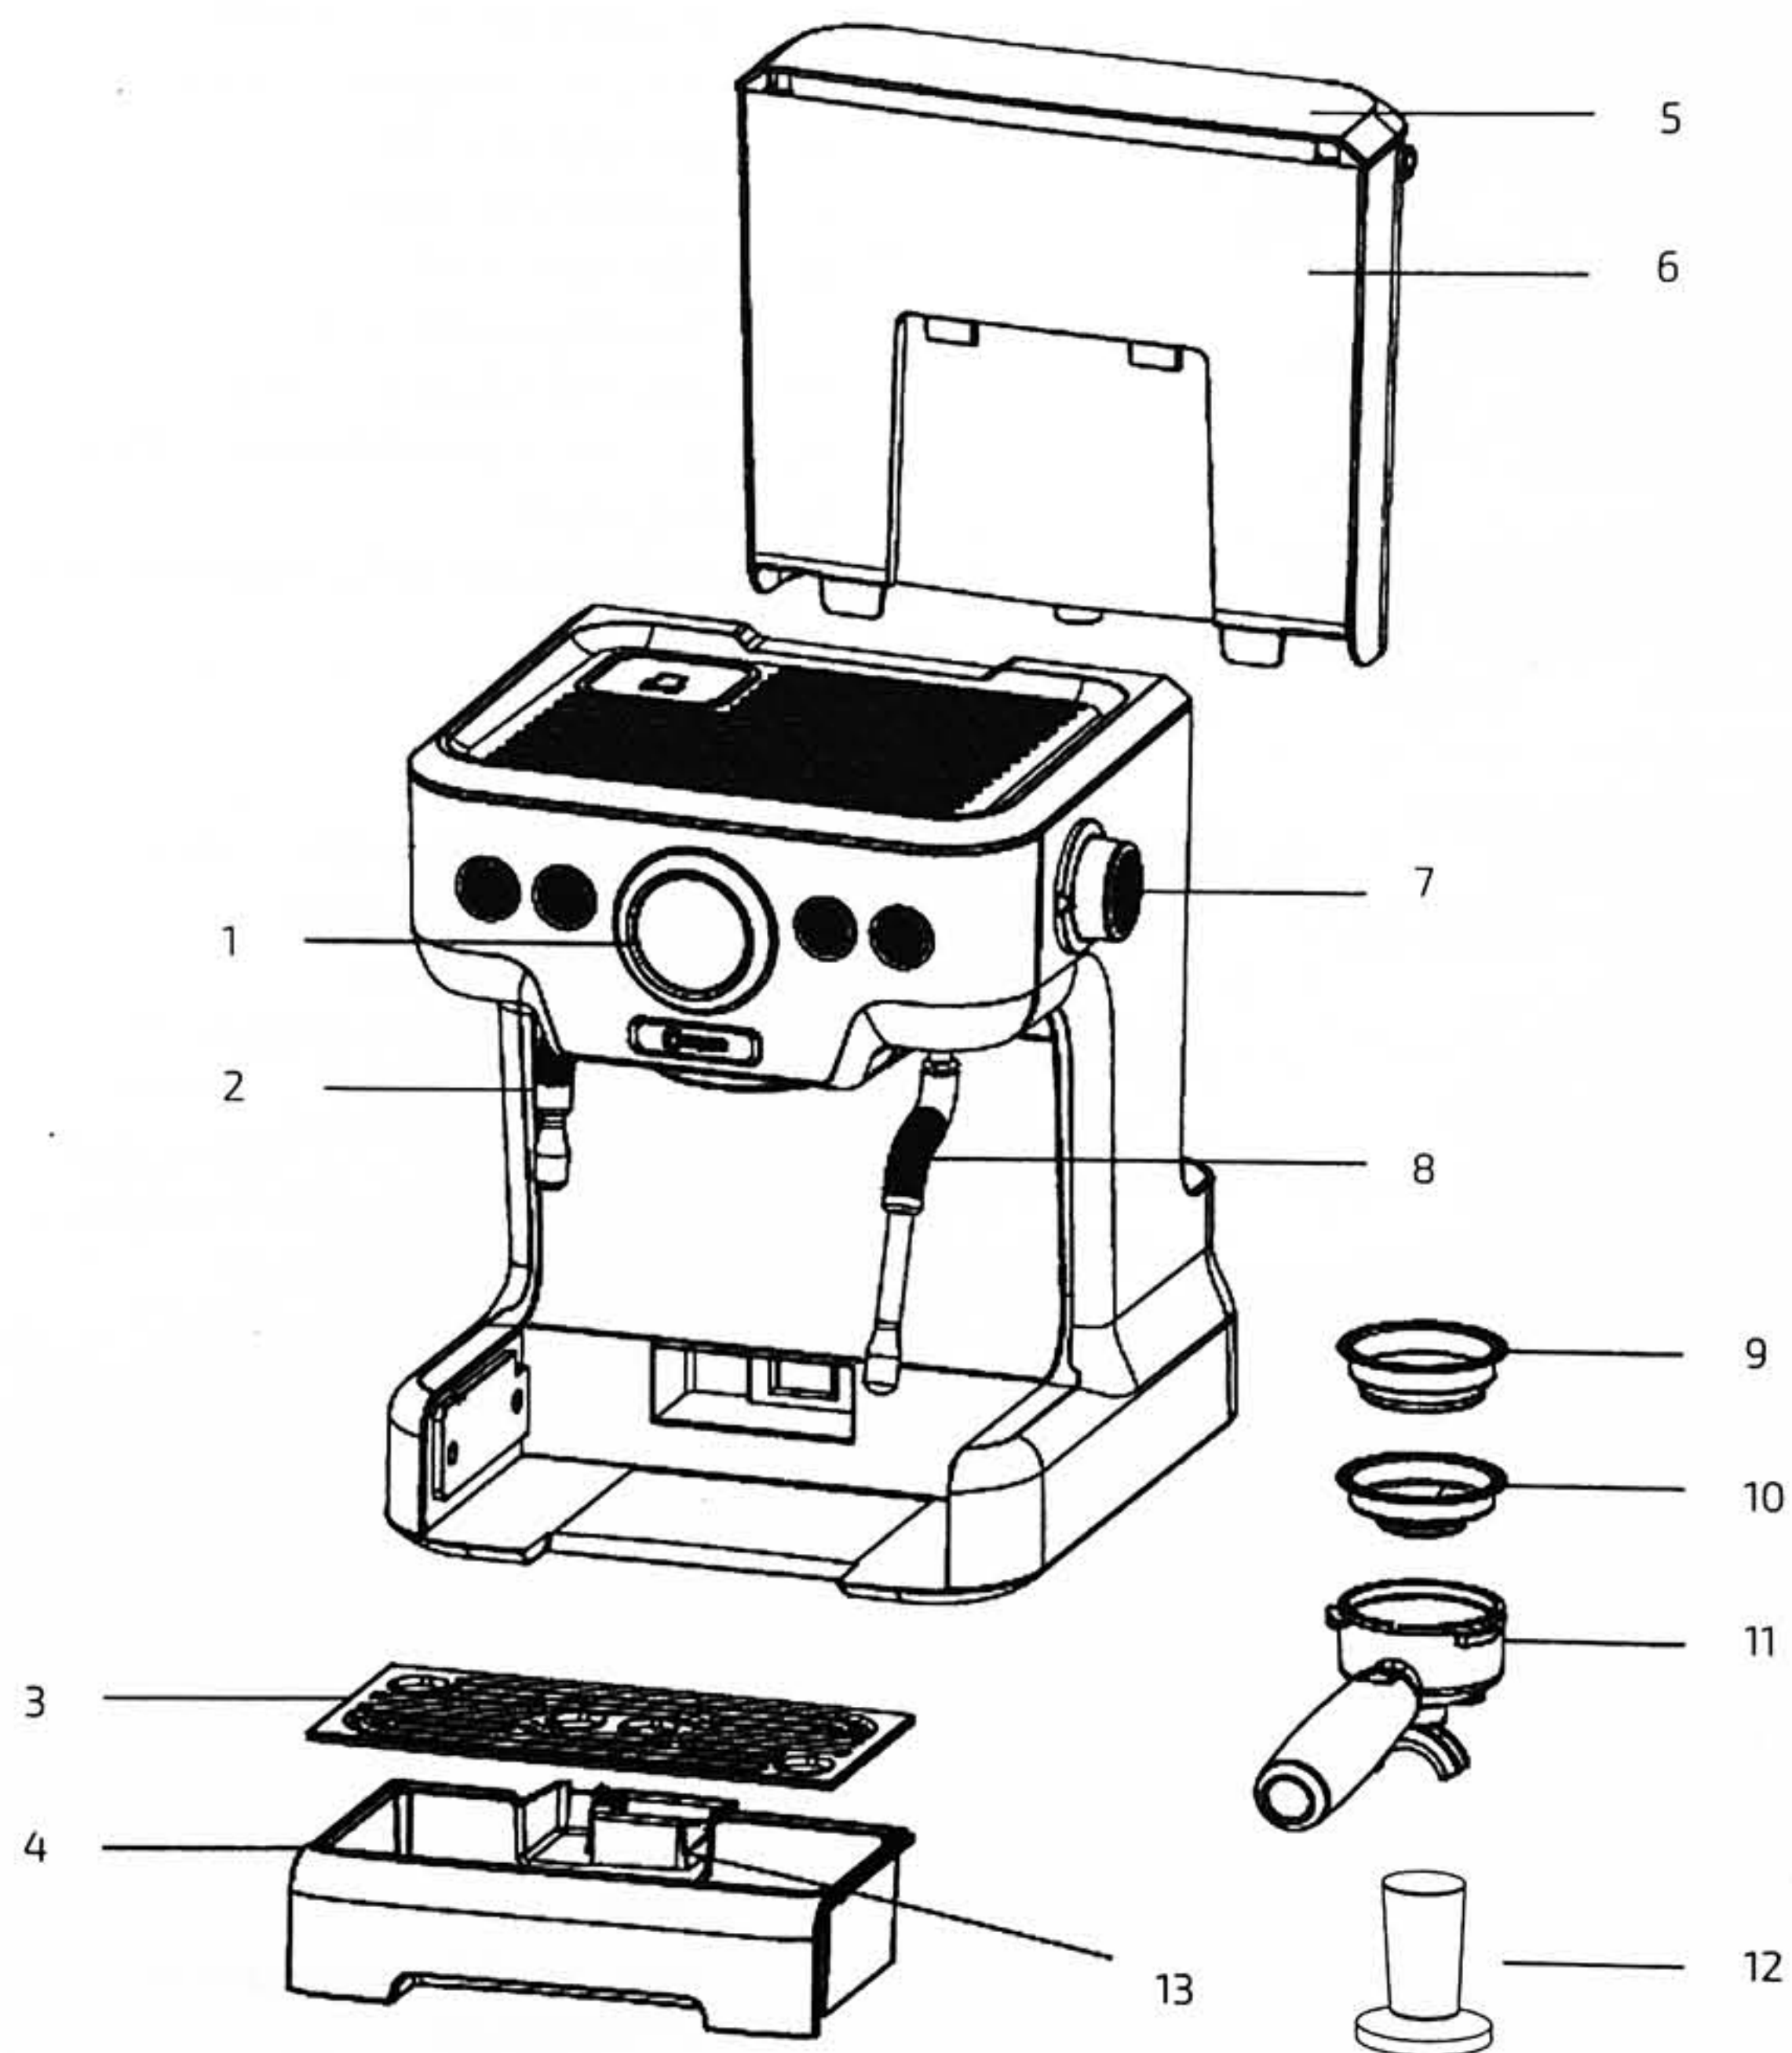

EN

- | | |
|---------------------|-----------------------------------|
| 1. Pressure gauge | 9. Double espresso filter |
| 2. Hot water tube | 10. Espresso filter |
| 3. Cup-holder tray | 11. Portafilter and filler funnel |
| 4. Drip tray | 12. Coffee press |
| 5. Water tank cover | 13. Full-tray indicator |
| 6. Water tank | |
| 7. Steam knob | |
| 8. Steam tube | |

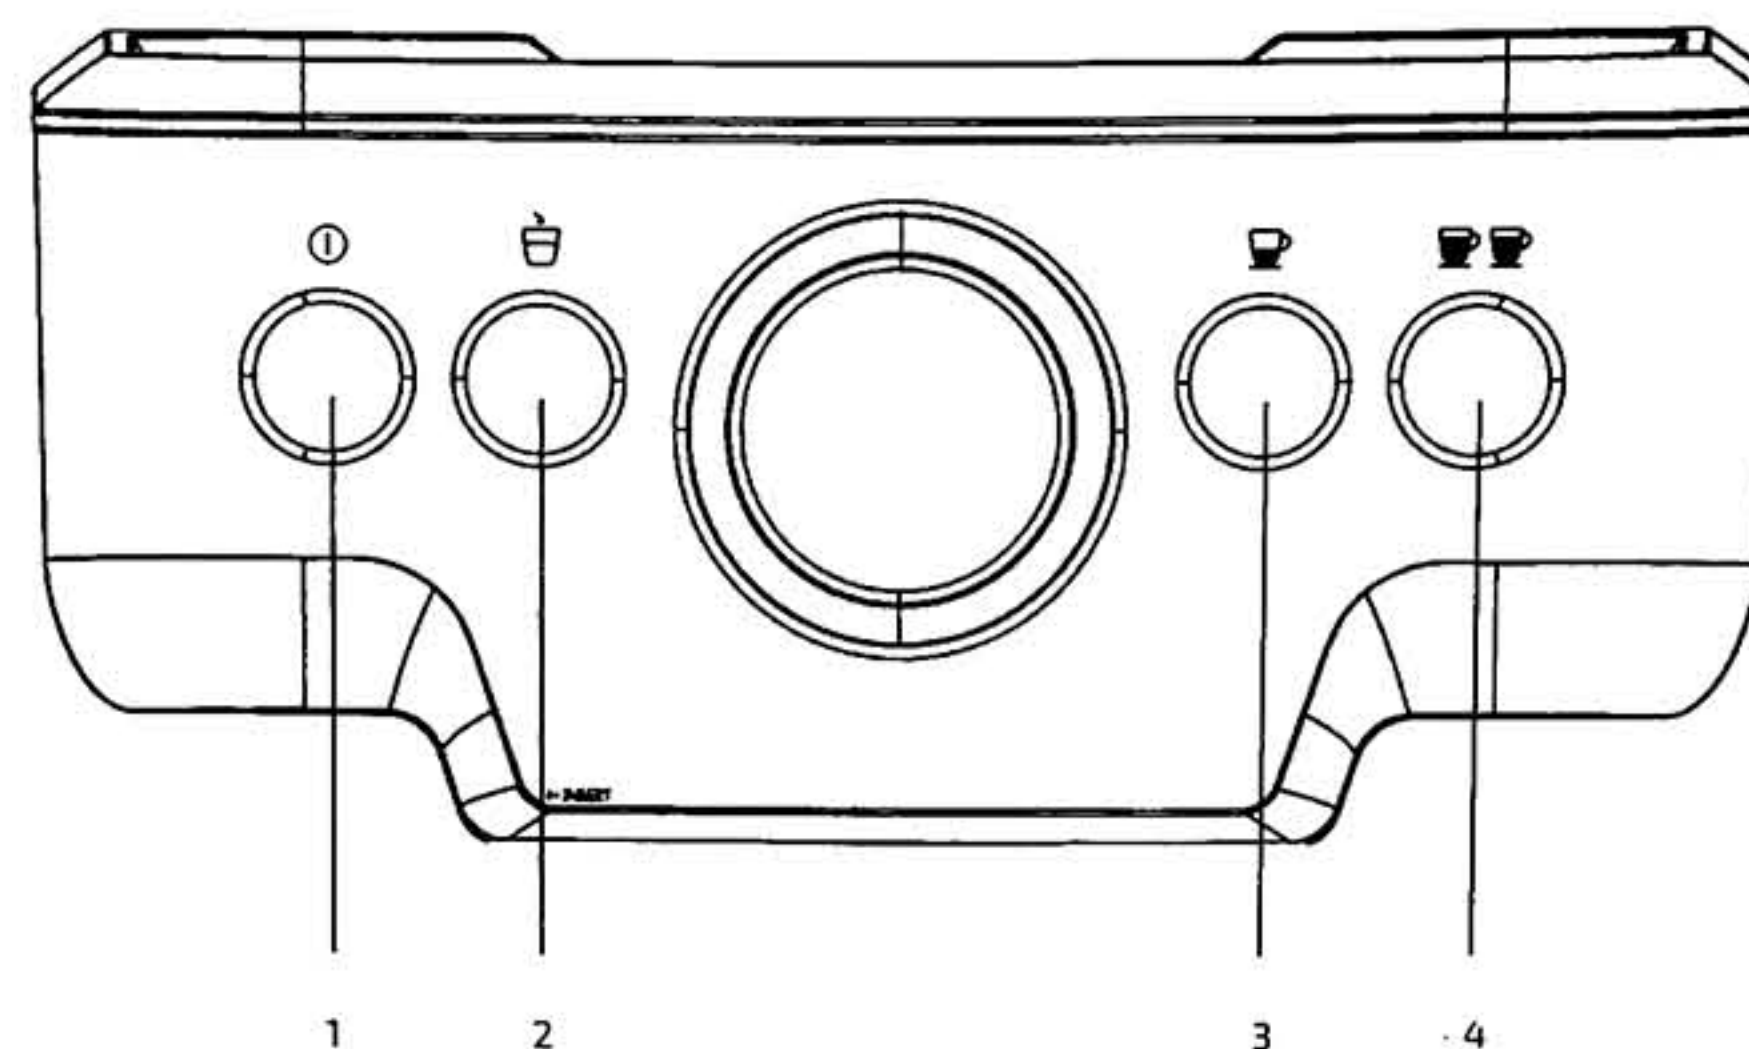

EN

- | |
|-------------------------|
| 1. On/off |
| 2. Hot water |
| 3. Single coffee |
| 4. Espresso/2 espressos |

Note: Each button has a light indicator around it that is turned on when the function is activated.

2. SAFETY INSTRUCTIONS

Read these instructions thoroughly before using the appliance. Keep this instruction manual for future reference or new users.

- All safety instructions should be closely followed when using the appliance.
- Make sure that the mains voltage matches the voltage stated on the rating label of the appliance and that the outlet is grounded.
- Do not immerse the cord, plug, or any non-removable part of the appliance in water or any other liquid, nor expose the electrical connections to water. Make sure your hands are dry before handling the plug or switching on the appliance.
- Turn off and unplug the appliance from the mains supply when not in use, before cleaning it and before attaching components. Pull from the plug, not the cord, to disconnect it from the outlet.
- Do not use the appliance if its cord, plug, or housing is damaged, nor after it malfunctions or has been dropped or damaged in any way.
- Do not try to repair the appliance by yourself. Contact the official Technical Support Service of Cecotec for advice.
- Do not use any accessory that has not been recommended by Cecotec, as they might cause injuries or damage.
- Place the appliance on a dry, stable, at, heat-resistant surface.
- Do not use the appliance under the following circumstances:
 - On or near a gas or electric hob, in heated ovens, or near open flames.
 - On soft surfaces (such as carpets) or where it may tip over during use.
 - Outdoors or in areas with high humidity levels.
- Do not cover the appliance while in use.
- This appliance is intended for domestic use only. It is not suitable for commercial or industrial use.
- The temperature of accessible surfaces may be high while in use and could cause burns. Do not touch hot surfaces

while in use or immediately after. Use handles or knobs.


- Do not operate the device without water.
- Do not leave the appliance unattended while in use. Unplug it from the mains supply when you finish using it or when you leave the room.
- Cleaning and maintenance must be carried out according to this instruction manual to make sure the appliance functions properly. Turn off and unplug the appliance before moving and cleaning it.
- Cleaning and maintenance tasks must not be carried out by children.
- The appliance is not intended to be used by children under the age of 12. It can be used by children over the age of 12, as long as they are given continuous supervision.
- This appliance is not intended to be used by persons with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance in a safe way by a person responsible for their safety, and understand the hazards involved.
- Supervise young children to make sure that they do not play with the appliance. Close supervision is necessary when the appliance is being used by or near children.

Warning:

- Do not remove the water tank or the portafilter when preparing coffee, hot water or frothing milk to prevent hot water from scalding or causing other injuries. Before removing the portafilter to brew another coffee, make sure the coffee machine is in standby mode. If you want to add more water, press the power button and wait until the light indicators turn off to ensure the machine is off.
- This product has undergone a quality control previous to its commercialization with the aim of ensuring its correct operating. After the quality control testing, the appliance is cleaned thoroughly, therefore, there could be rests of water drops or coffee in its inner parts.

3. BEFORE USE

- Take the product out of the box and remove all packaging material, stickers or labels.
- Make sure all the components are included, and if not, contact immediately the official Technical Support Service of Cecotec.
- Fill the water tank with water.
- Insert the portafilter into place and turn it anticlockwise to lock it tightly.

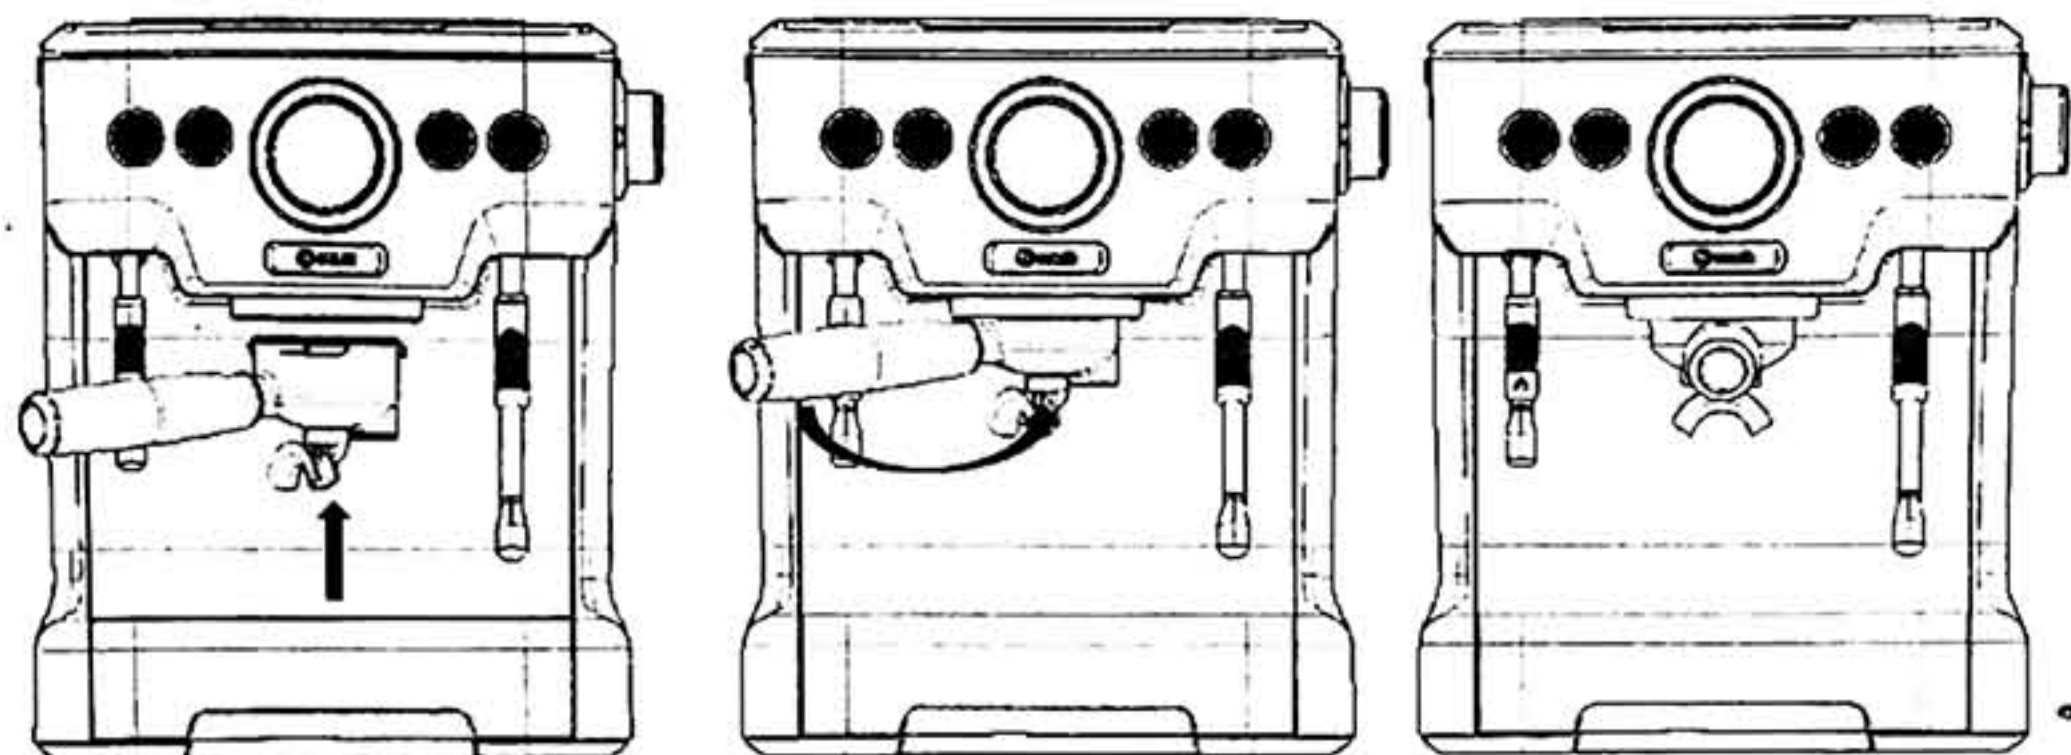

- Place a container on the cup-holder tray and connect the machine to a power supply. Make sure the steam knob is set at the off position.
- Press the power button, the coffee machine will start preheating and then will enter standby mode.
- Press the hot water button to dispense hot water and press again to stop it. Then, press the espresso or double espresso button to clean the tubing system.
- Use warm water to clean all the coffee machine's parts.

4. OPERATION

- Fill the water tank with water without exceeding the MAX. mark.
- Connect the machine to a power supply and make sure the steam knob is set at the off position.

Preheating

Press the power button, the coffee machine will start preheating while the on/off light indicator blinks.

Standby

Once it is preheated, the device will enter standby mode and the On/off indicator light will turn steady.

Hot water

From standby mode, press the Hot water button to activate this function. The light indicator will turn on while the machine dispenses hot water. The coffee machine will dispense approx. 240 ml hot water and then automatically stop, but the function can also be stopped manually by pressing the Hot water button again. Once it has finished, it will enter standby mode again.

Espresso

Place an espresso filter in the portafilter, pour 13-15 g of coffee powder into the filter and press it down. Align the portafilter with the portafilter bracket, insert it into place and turn it anticlockwise to lock it. Place a cup on the cup-holder tray. From the standby mode, press the single-coffee button, the light indicator will blink and the machine will start brewing coffee. The pressure gauge will display pressure parameters during the brewing process and will be reset when it has finished. The function will finish automatically, or if desired, can be stopped manually by pressing the same button again.

Double espresso

Place a double espresso filter in the portafilter, pour 20-22 g of coffee powder into the filter and press it down. Align the portafilter with the portafilter bracket, insert it into place and turn it anticlockwise to lock it. Place 1 cup for a double espresso or 2 cups for 2 espressos on the cup-holder tray. From the standby mode, press the double-coffee button, the light indicator will blink and the machine will start brewing coffee. The pressure gauge will display pressure parameters during the brewing process and will be reset when it has finished. The function will finish automatically, or if desired, can be stopped manually by pressing the same button again.

Recommendation: Preheat the appliance, the portafilter, filter and cup before brewing coffee to ensure that coffee taste is not affected by temperature.

Steam (Milk froth)

1. First, turn the steam knob to the preheating position, the On/off light indicator will turn steady and the steam indicator light will blink. The steam light indicator will turn steady when the steam function is ready to be used.
2. From standby mode, turn the steam knob from the "0" to the Max. position, the steam tube will start emitting steam. The steam indicator will blink. Turn the steam knob to the "0" position again to turn the function off.

Recommendation: Allow the coffee machine to rest for 1 minute after performing a continuous 10-minute steam operation to prevent it from overheating.

Coffee customization

Press and hold the single and double espresso button at the same time to enter coffee customization mode, the single and double espresso light indicators will blink.

Press the espresso button for the machine to dispense an espresso, the light indicator will blink. Press again the same button when you have the desired amount of coffee for an espresso. This amount will be saved.

Repeat these steps with the double espresso button to save the desired amount of coffee for a double espresso.

Note: If you want to reset factory settings of the coffee amounts, just press and hold the corresponding coffee button for 5 seconds until the light indicator flashes twice.

Recommendation: The suggested amount of water for coffees is 20-60 ml for an espresso and 60-100 ml for a double espresso.

Sleep mode

The coffee machine will automatically enter sleep mode after 30 minutes of no operation. The On/off button will remain on. Press any button to exit sleep mode.

Coffee selection

Coffee used in this coffee machine should be freshly ground and deep roasted. It is important to use only specific ground coffee for espresso coffee machines.

Pre-ground coffee powder can only remain scented for 7 to 8 days unless it is stored in a sealed container and placed in a cool place. Do not store coffee in the refrigerator or freezer. It is recommended to grind all coffee beans into powder before use. The fragrance of the coffee beans stored in the sealed container can be maintained for 4 weeks.

If you are grinding coffee yourself, this step is a very important step in the espresso making process, coffee must be finely ground.

- Ground coffee should look like salt.
- If powder is too fine, even if it is tamped it may cause the coffee to flow out intermittently. These ground coffee feels like flour.
- If powder is too thick, water will flow too fast, reducing its flavour.

In order to get a uniform, consistent coffee, make sure to use a high-quality coffee grinder.

Warnings:

- Single or double espressos can be brewed only after finishing preheating.

- The machine will beep and its light indicators will turn on when there is not enough water in the water tank. After refilling it, it will return to normal conditions.
- After finish using steam, hot water and brewing coffee functions cannot be used while the machine cools down, wait until it enters standby mode.
- Empty the drip tray when the full-tray indicator raises.

5. CLEANING AND MAINTENANCE

- Disconnect the device from the power supply and allow it to cool down completely before cleaning.
- Do not use abrasive cleaners or scouring pads as they could cause damage to the product's surface.
- Use a soft, dampened cloth to clean the outer part of the device.
- Do not immerse the main body in water or other liquids.
- Wash the water tank, drip tray and cup-holder tray regularly.
- After using the steam function, the tube must be cleaned with a cloth immediately after. Allow steam to be released to avoid possible blockages inside the tube.
- If the steam tube is clogged, use a needle to unblock the conduct.
- Turn the portafilter clockwise to detach it and empty all coffee residues inside it. Then, use water and a cloth to clean it, do not wash it in the dishwasher.
- Clean all parts with water and dry thoroughly before storing it or using the device again.

Cleaning mineral deposits

Mineral deposits built up in the unit might affect the machine's operating. It is important to remove and clean them to keep the coffee machine operating efficiently. Quality of used water and use will determine how often these deposits have to be cleaned.

It is recommended to carry out an Autocleaning cycle after each 1000 uses. If it is used 1000 working cycles, the machine will emit a reminder signal when turned on and the indicator lights will blink in red twice.

1. Fill the water tank with water and descaling product up to the MAX. level. Citrus can also be used.
Note: Water and descaling proportion is 4:1.
2. Press the On/off button, the machine will start preheating and the indicator light will turn on steady.

3. Insert the portafilter in its position and make sure it is securely fitted.
4. Place a large container (approx. 2 L) on the cup-holder tray. Make sure it is big enough so that water coming out from the water tube, nozzle and steam tube can fall inside it.
5. Press and hold the Hot water button for 5 seconds for the machine to enter Autocleaning mode.
6. Turn the steam knob to the MAX. position. Hot water with descaling product (or the used one) will be emitted through the portafilter spouts and hot water and steam tubes. This process will take from 10 to 15 minutes, then the coffee machine will turn off.
7. Once it has finished, fill the water tank with clear water and repeat these steps until there is no more descaling product.
8. Clean the water tank and the drip tray.

Notes:

- During the Autocleaning process, the pump will turn on and off intermittently, this is normal and does not involve malfunction.
- During the Autocleaning process, the steam knob must not be set at "0". The machine will beep once to remind it must be turned to the MAX. mark in order to clean the steam tube.

6. TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
Water leaks from the bottom of coffee maker.	There is too much water in the drip tray	Empty and clean the drip tray
	The coffee maker is damaged	Contact the official Technical Support Service of Cecotec
Water leaks from the portafilter holder	There is some coffee powder on filter edge	Clean the filter and portafilter holder
Water leaks from the portafilter holder	There is some coffee powder on filter edge	Clean the filter and portafilter holder

Coffee tastes like acid/vinegar	The device has not been cleaned properly after descaling	Follow the cleaning and maintenance instructions to clean the device properly
	Coffee powder has not been stored in an adequate place and has turned bad	Use fresh coffee powder, or store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly.
The coffee machine does not work	Connection between the device and the power supply may be defective	Check the power supply and the cord
The steam knob does not froth	The container used is not of the correct size or shape	Use a high and narrow cup
	You have used skimmed, soy, rice or other type of milk	Use whole milk
All the light indicators turn on red and flash	There is not enough water in the water tank	Fill the water tank until the device shows no error
While brewing coffee, the single and double espresso buttons flash red and no coffee is brewed or only drops	The coffee filter is clogged	Do not grind coffee too fine and do not exceed the indicated quantity of coffee powder

7. TECHNICAL SPECIFICATIONS

Model: Power Espresso 20 Barista Pro

Product reference: 01577

Power: 2445 - 2900 W

Voltage and frequency: 220-240 V, 50 Hz

Made in China | Designed in Spain

8. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly. If the product has a built-in battery or uses batteries, they should be removed from the appliance and disposed of appropriately.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

9. TECHNICAL SUPPORT SERVICE AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

- The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.
- The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.
- Faults deriving from the normal wear and tear of its parts, due to use.

The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at **+34 963 210 728**.