


XOMAX

Universal Double Car MP5 Player

OPERATING INSTRUCTIONS

BEFORE OPERATING THE UNIT, PLEASE READ THIS MANUAL THOROUGHLY AND RETAIN IT FOR FUTURE REFERENCE

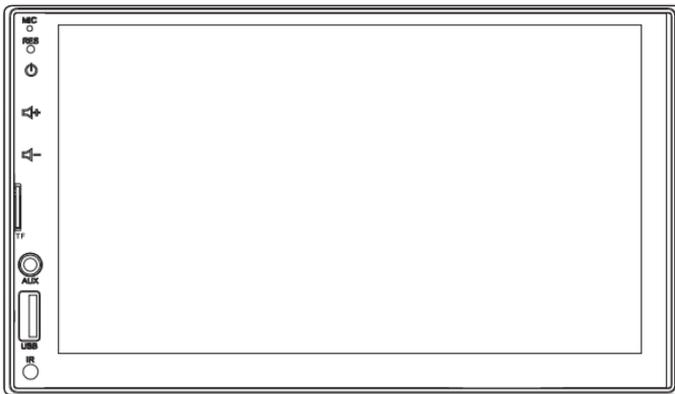

Summarizes the basic functions

This product uses high-definition digital touch screen, fine bright image, coupled with high-quality audio processing chip, has reached the perfect sensual touching visual effects. Efficient platform multimedia system. Support Bluetooth, music player and plug-in USB / SD player functions. Intelligent steering wheel control function, the product and the perfect combination of the original car, the operation step, is your ideal choice!

Precautions

To avoid accidents, please read the following precautions before the installation and operation of the head unit.

About Security

1. Please observe local traffic rules and regulations.
2. Do not watch or operate the head unit while driving.
3. Make sure to stop your car before you watch or operate the head unit.

About Installation

1. This machine should be installed by the qualified technician or service personnel.
2. If you install the head unit by yourself, you should follow the user manual.

If the car is parked under sunlight, do not turn on the head unit until it is cool. Before turning on the machine, make sure the interior temperature is within (0°C) to (+40°C).

Avoid using this machine in a magnetic environment (GPS, Bluetooth, digital TV will be affected).

In the rainy or very humid areas, there might be moisture condensation inside the head unit. Under this condition, the head unit will not work properly. You should wait until the moisture has evaporated dehumidifier or before using.

Before switching off the ignition, turn off the head unit, otherwise it will cause consumption to car's battery.

Use the product for a long time will affect its service life. In order to extend the product service life, please choose the moderate volume.

Please don't rebuild the model privately. If rebuilding, it is likely to cause an accident.

Common icon function instruction

	Play/Pause		Stop
	Previous chapter		Fast backward function
	Next track		Fast forward function
	Click into Blank screen		Disc reject
	Return to previous menu		Return to main menu

Radio

Click  on the menu to enter radio mode



Band Selection


Press  turn to radio mode, then press  to select different band of programs (FM1/2/3, AM1 / 2)

Browse / Auto Memory stations

Press , it will browse the saved stations on the band (each last for 10 seconds), press  when you browse the station you want, then it will start to play the selected station. Hold  last 3 seconds for storage the stations automatically.

Radio will start to search and storage the stations automatically from the present band. Memorize the strong signal firstly, then the weak signal.

1. Manual search: Press  or , can be manually up or down to convert different radio frequency
2. Auto search: Hold  or , can be automatically up or down to search different radio frequency .

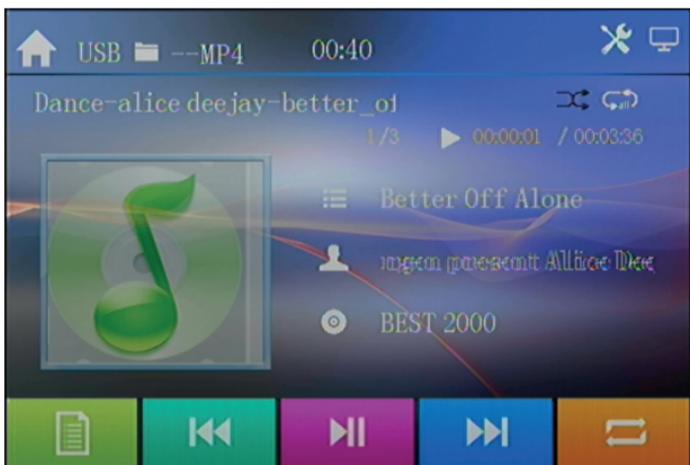

Mp3 select tracks player

1.Select tracks method 1:

In selecting tracks from the list in MP3 mode, Press **▶▶** for next song, Turn **◀◀** for last song.

2.Select tracks method 2:


In MP3 mode directly touch the song of the list you choose on the screen is ok when it is playing,also you can use the Remote Control with (0-9) button or 10+ button to select the track.

USB/SD play

When you connect the USB/SD to the head unit, the system will search all the content of the USB/SD and start to play automatically.

Main menu

Press any button on the panel to turn on the device, then enter  into the main menu.

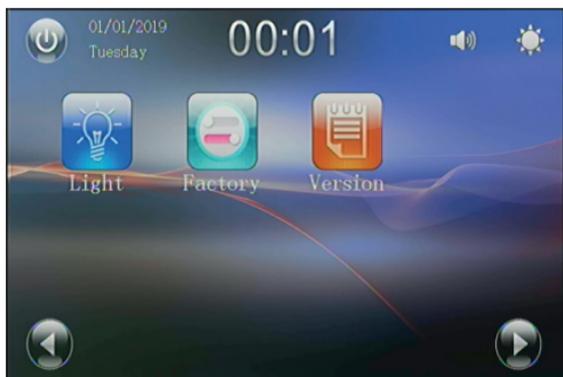

Bluetooth phone:

Click  to the Bluetooth phone mode, as shown:



Click the menu to enter the Bluetooth phone function, then using a mobile phone to search for Bluetooth device, connected with the mobile phone (can set up the password yourself, such as 0000). After connected, when there is a phone call coming, Bluetooth system would automatically convert to the Bluetooth hands-free interface, click  for start conversation. When phone call end, the unit system will automatically recover the last working status. As shown: (Note: When turn off the original Bluetooth connected, it need about 30 seconds to automatically connected. Thus in these 30 seconds, the system are still searching the last connected unit.)

Click  on the menu to enter the Bluetooth phone functions directly on the screen, enter the phone number then click  to Call


Note: This feature refers to the Bluetooth phone and Bluetooth connection status

Click  for Bluetooth phone function.

Click  for Bluetooth phone book function.


Click  for Bluetooth music.

Enter Bluetooth music as shown:

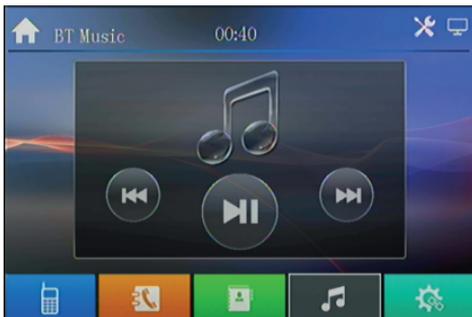

AV in

Click the  menu enter AUX mode, as shown,

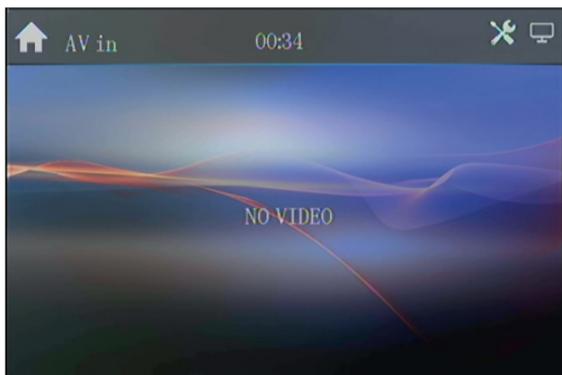


Set up

Click  into setting mode (as show)




Scroll your finger in the „System“ menu to view more settings.

2. Click „Audio“ into audio setting mode:

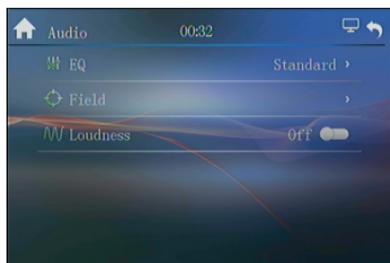


3. Click „Display“ into display setting mode:

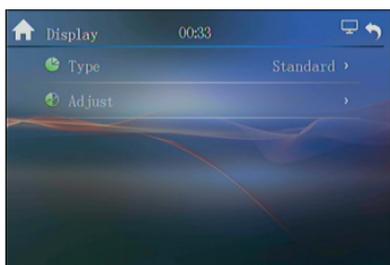

Set up

4. Click „BT Setup“ into Bluetooth setting mode:

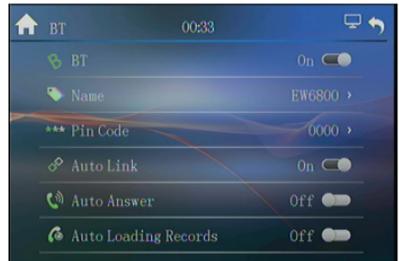



Scroll your finger in the „System“ menu to view more settings.

5. Click „SWC“ into steering wheel control setting mode:




Please press the key, then press button on the screen und hold on.
Please repeat all keys and save the settings with  button.

6. Click „Factory“ into factory setting mode:

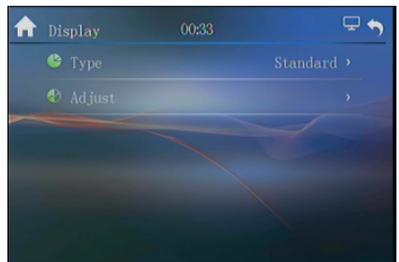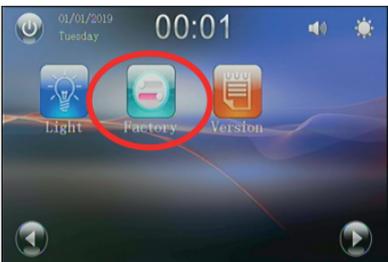

Click on "Ajust". Please enter the password: **123456** and confirm with Enter.

***Aim at the remote control receiver “IR” when you start to use the remote control.**

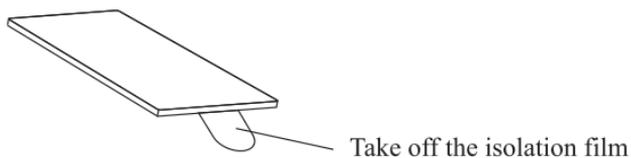


Battery change


Press the locking button and pull out the battery seat



Put the battery to the right position (With the mark “2025” up side)

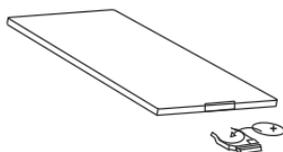

Fix the battery seat to the right position of the remote control

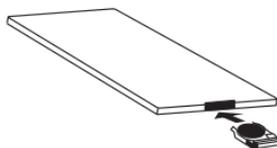

Instruction of the remote control

Power button 

Press  to switch on/off

* **Volume** VOL+

Press VOL+ increase the volume.

* **SEL mode** SEL

Press SEL could select standard (ordinary style), CLASS (classical style), POPS (pop music), ROCK (ROCK music), the hall and movie six different listening acoustics.

* **Channel/Musical Selection/FF** SEEK+

Radio mode: press it selects the current six stations FM automatically, hold it is for manually up search the stations. Playing mode: press it is for the next track function

* **The volume reduction** VOL-

Press VOL- reduce the volume.

Simple Troubleshooting Guide

Problem	Cause and resolve
Power off	<ol style="list-style-type: none">1.Check the power fuse is burn out or not, change it.2.Fail in connection of DC wires, connect them again.
Fail in keying	Program disorder, press reset button or turn off the power to restart.
Fail in getting stations	Check if the antenna has been inputed, or it is not connected correctly, if it is, please input the antenna or connect it correctly.
Bad station receiving effect	<ol style="list-style-type: none">1.Antenna length may not be set up right, check if it reach out completely or is broken down, if it broke down, please change it for new one.2.Or the radio signal is too week.3.Antenna is not grounding rightly, please confirm if it connects the ground wire rightly.
“STEREO”flashing	<ol style="list-style-type: none">1.tuning the radio frequency accurately.2.Radio signal is too week.(please press ST button to turn off stereo.
Noise, image jumping,no color	<ol style="list-style-type: none">1.disc is damaged or blurry.2.Color system setup is not correct, set the color system for “PAL” or “NTSC” according to the connected TV condition
Remote unavailable	<ol style="list-style-type: none">1.The battery of remote control has no power, change the battery.2.The remote control window can't receive signal, made the remote control aim at model's remote receiver window.
SD/USB no reading	<ol style="list-style-type: none">1.not connected correctly.2.belongs to unsupported card, only supports 2G card at present.