




Original	Replacement
	Power
	SD Card
	Input TV
	Input AV
	Menu
	[+]/Aspect
	N
	Direct Rec TV
	i
	Exit
	Viera Tools
	Viera Link
	Up
	Guide
	Left
	OK
	Right

Original	Replacement
	Option
	Down
	Return
	Red
	Green
	Yellow
	Blue
	Text
	[≡♦]/STTL
	[≡i]/Index
	[≡+]/Hold
	1
	2
	3
	4
	5
	6

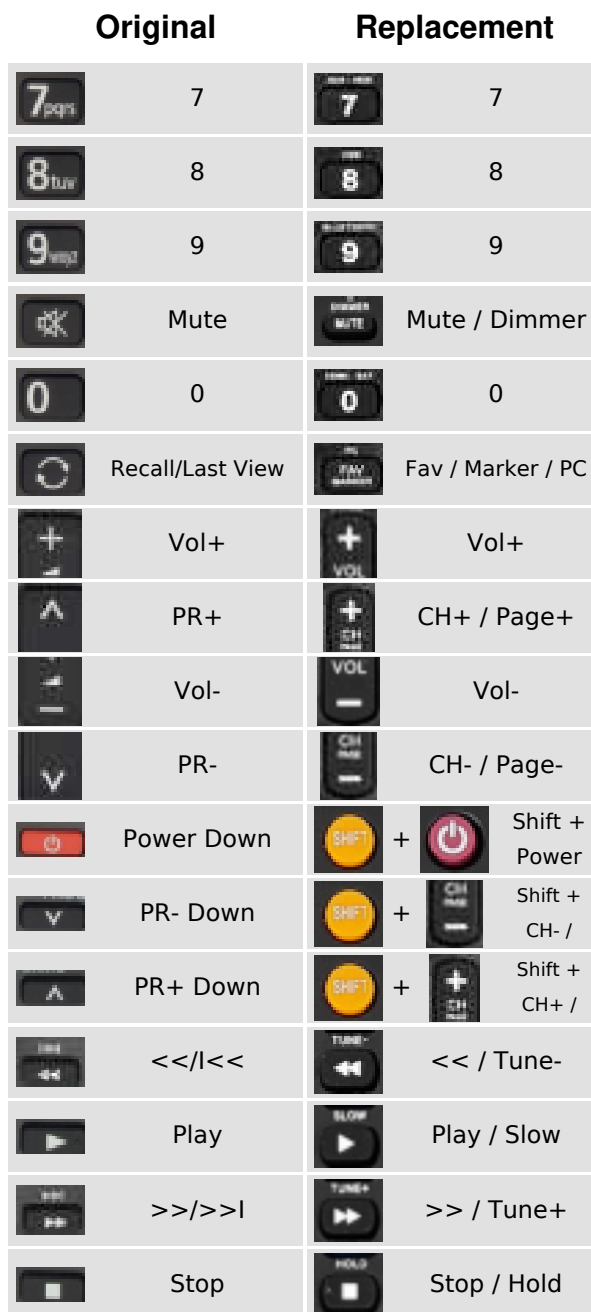

[illegible]