



Original	Replacement	Original	Replacement
 Source	 AV / Input / RDS	 Guide	 Guide / EPG / -/--
 Power	 Power	 Up	 Up
 Theatre	 Sleep / Timer	 [i+]	 Info / Angle
 <<	 << / Tune-	 Left	 Left
 Play	 Play / Slow	 OK	 OK
 >>	 >> / Tune+	 Right	 Right
 Sync Menu	 D.Menu / Top	 Return	 Back / Return
 I<<	 I<< / Preset-	 Down	 Down
 Stop	 Stop / Hold	 Options	 Setup / OPT /
 I-Manual	 TV/Radio /	 Home	 Menu / Home
 Scene	 Picture / Format	 Red	 Red / Netflix / Search
 [+]	 Zoom / Size	 Green	 Green / APP / Repeat
 Digital/Analog	 Smart / List	 Yellow	 Yellow / YouTube / Repeat
 Exit	 Exit / Cancel / Clear	 Blue	 Blue / Prime Video / Random
 Internet/Video	 Display / Media	 1	 1
 FAV	 Fav / Marker / PC	 2	 2
		 3	 3





Original	Replacement	Original	Replacement
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 Text	 Text / Goto		
 0	 0		
 Subtitle	 Subtitle / EQ		
 Vol+	 Vol+		
 Pr+	 CH+ / Page+		
 Mute	 Mute / Dimmer		
 Audio	 Audio / Lang I/II		
 Vol-	 Vol-		
 Pr-	 CH- / Page-		

