

 


Parts Manual

Mfg. No: 09D902-2083-99


Model Components	Page
Air Cleaner, Controls, Exhaust System, Governor Spring, Ignition.	4
Blower Housing/Shrouds, Flywheel, Rewind Starter.	8
Brake.	12
Camshaft, Crankcase Cover/Sump, Crankshaft, Piston/Rings/Connecting Rod.	14
Carburetor, Fuel Supply.	18
Cylinder, Cylinder Head, Gasket Set - Engine, Gasket Set - Valve, Lubrication, Operator's Manual, Warning	20
Replacement Engine - US & Canada.	24

Not For
Reproduction

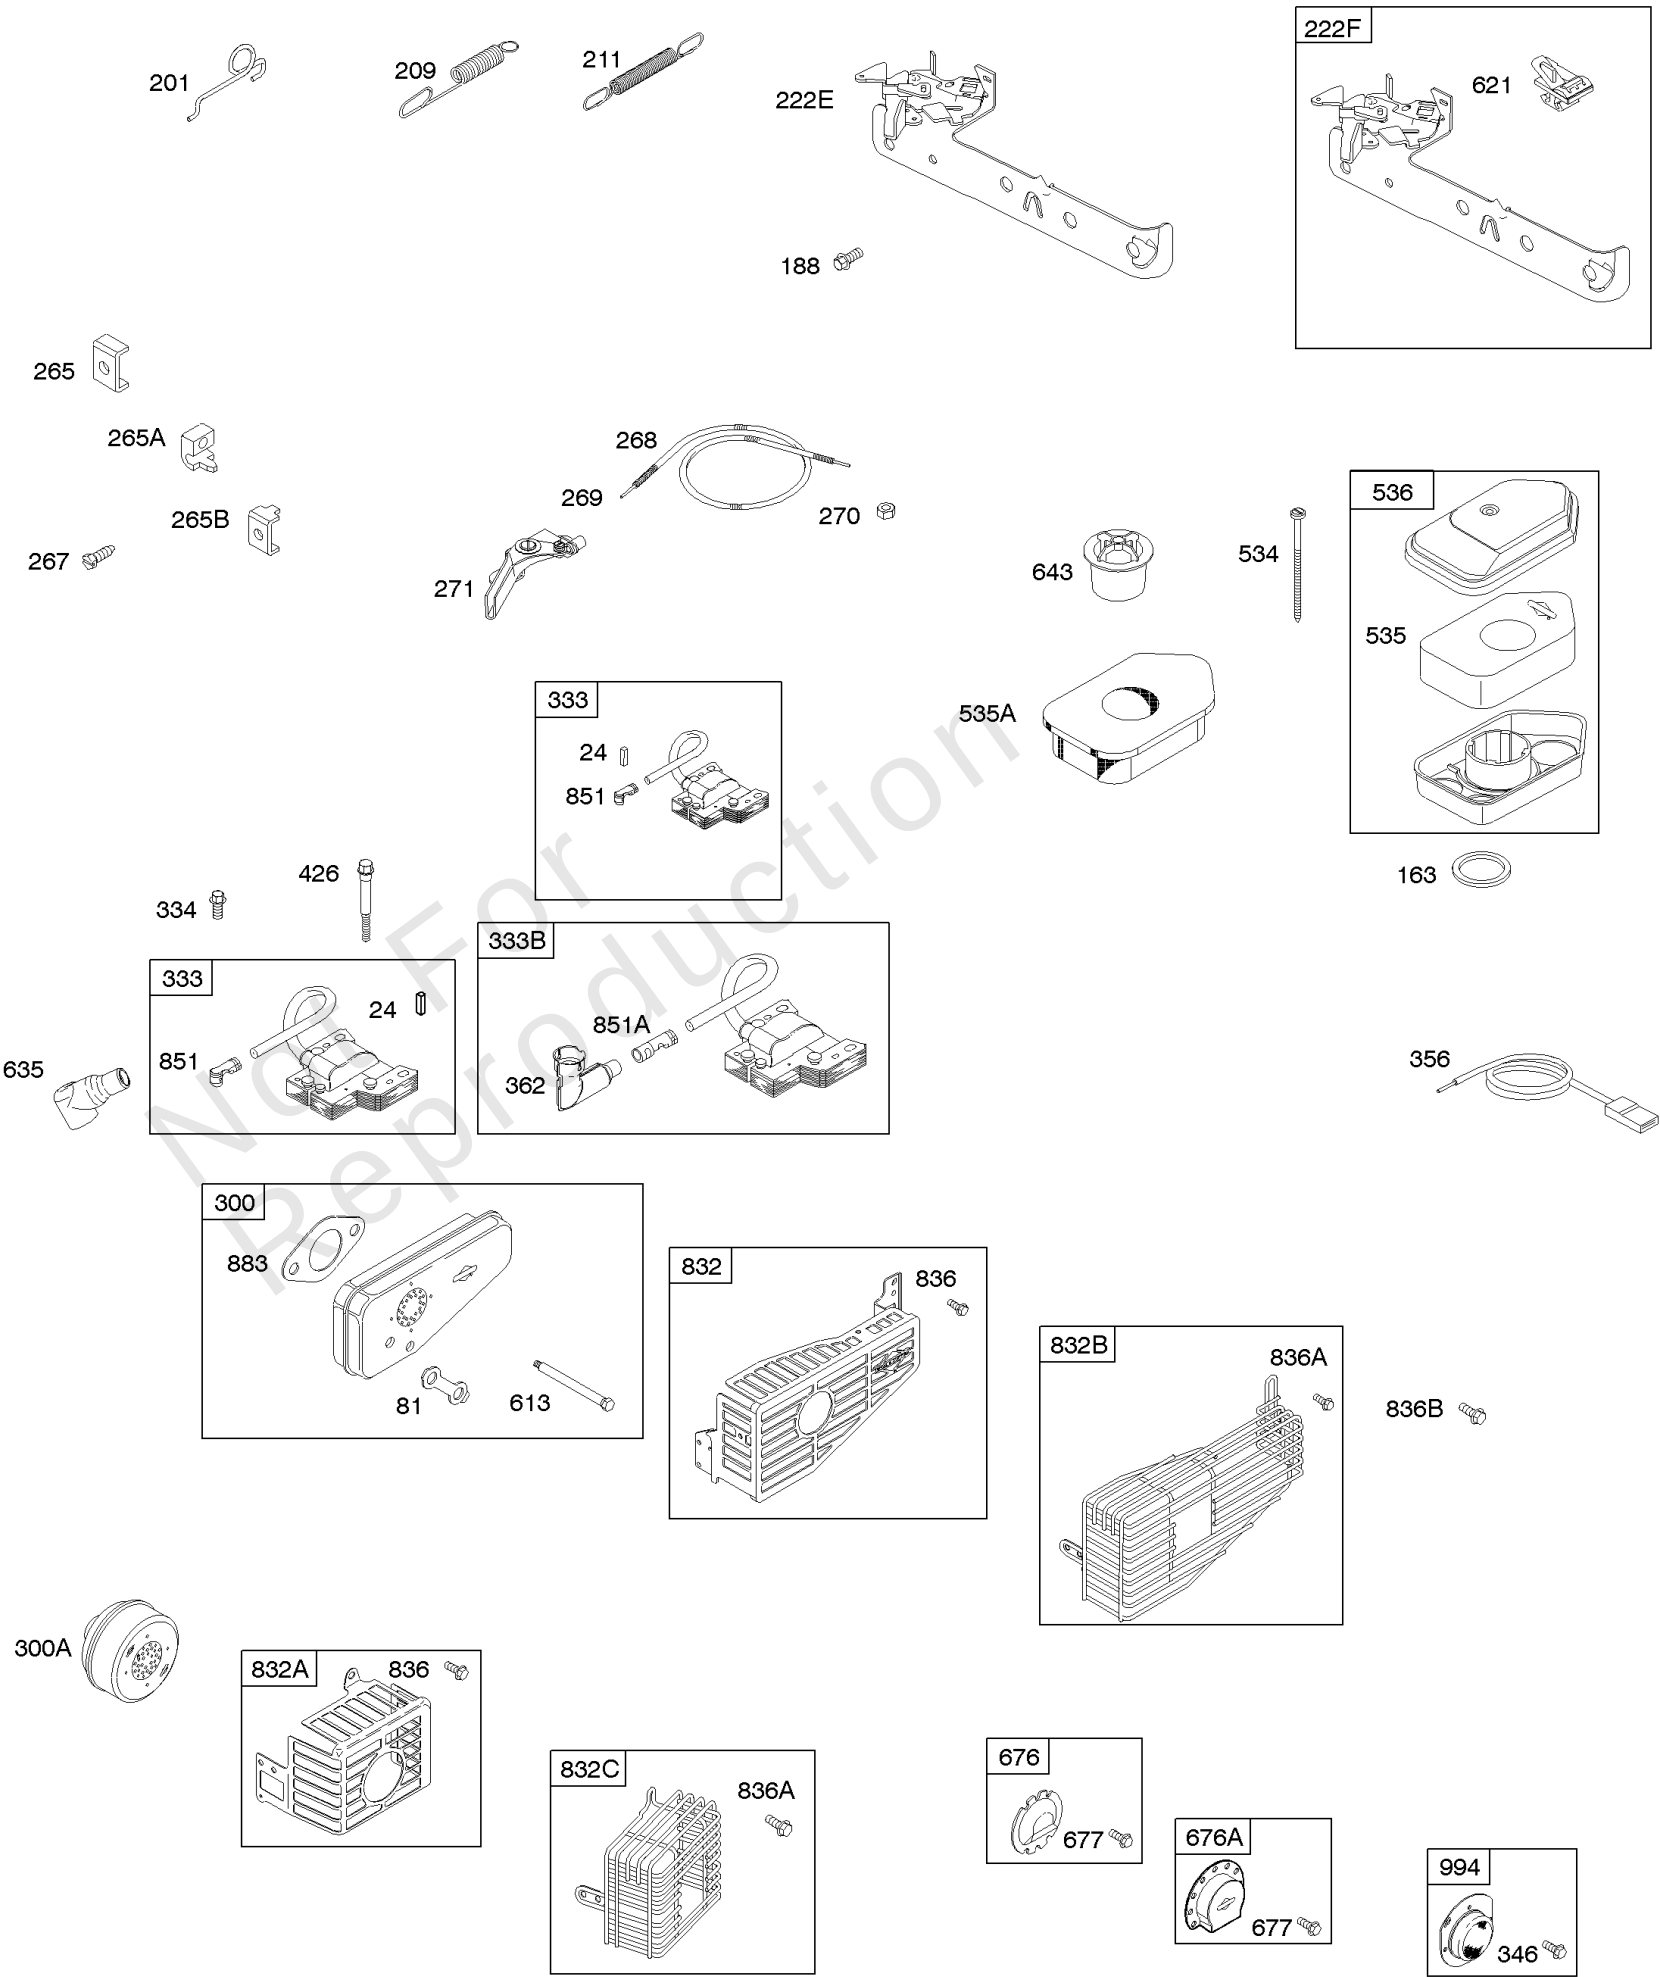

Air Cleaner, Controls, Exhaust System, Governor Spring, Ignition

REF NO	PART NO	QTY	DESCRIPTION
24	222698S		KEY, Flywheel
81	691179		LOCK, Muffler Screw
163	271139S		GASKET, Air Cleaner -(Air Cleaner)
188	692198		SCREW -(Control Bracket)
201	690347		LINK, Air Vane
209	691297		SPRING, Governor
211	691859		SPRING, Governed Idle
222E	691446		BRACKET-CONTROL
265	692179		CLAMP-CASING
267	691044		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire
269	691026		WIRE, Control
270	691027		NUT -(Control Wire Casing)
271	691028		LEVER, Control
300	692307		MUFFLER -(Super Lo Tone)
300A	394569S		MUFFLER -(Round Lo Tone)
333	793281		ARMATURE, Magneto -(Slide On Spark Plug Boot)
334	691061		SCREW -(Magneto Armature)
346	690661		SCREW -(Spark Arrestor)
356	692390		WIRE, Stop
362	793351		SHIELD-SPARK PLUG
426	691107		SCREW -(Governor Blade) (2 Inches)
534	691417		SCREW -(Air Cleaner)
535	698369		FILTER, Air Cleaner Foam -Used After Code Date 02101000
535A	272235S		FILTER, Air Cleaner Foam -Used Before Code Date 02101100
536	698472		CLEANER, Air
613	691413		SCREW -(Muffler)
621	692310		SWITCH, Stop
635	66538S		BOOT-SPARK PLUG -(Slip On Style)
643	691911		RETAINER, Air Filter -Used Before Code Date 02101100
677	690661		SCREW -(Muffler Deflector)
832	699299		GUARD, Muffler -(Super Lo Tone)
832A	699670		GUARD-MUFFLER -(Round Lo Tone)
836	690664		SCREW -(Muffler Guard) (13/32)
836A	790745		SCREW -(Muffler Guard) (1/2)
836B	691125		SCREW -(Muffler Guard) (2/3)







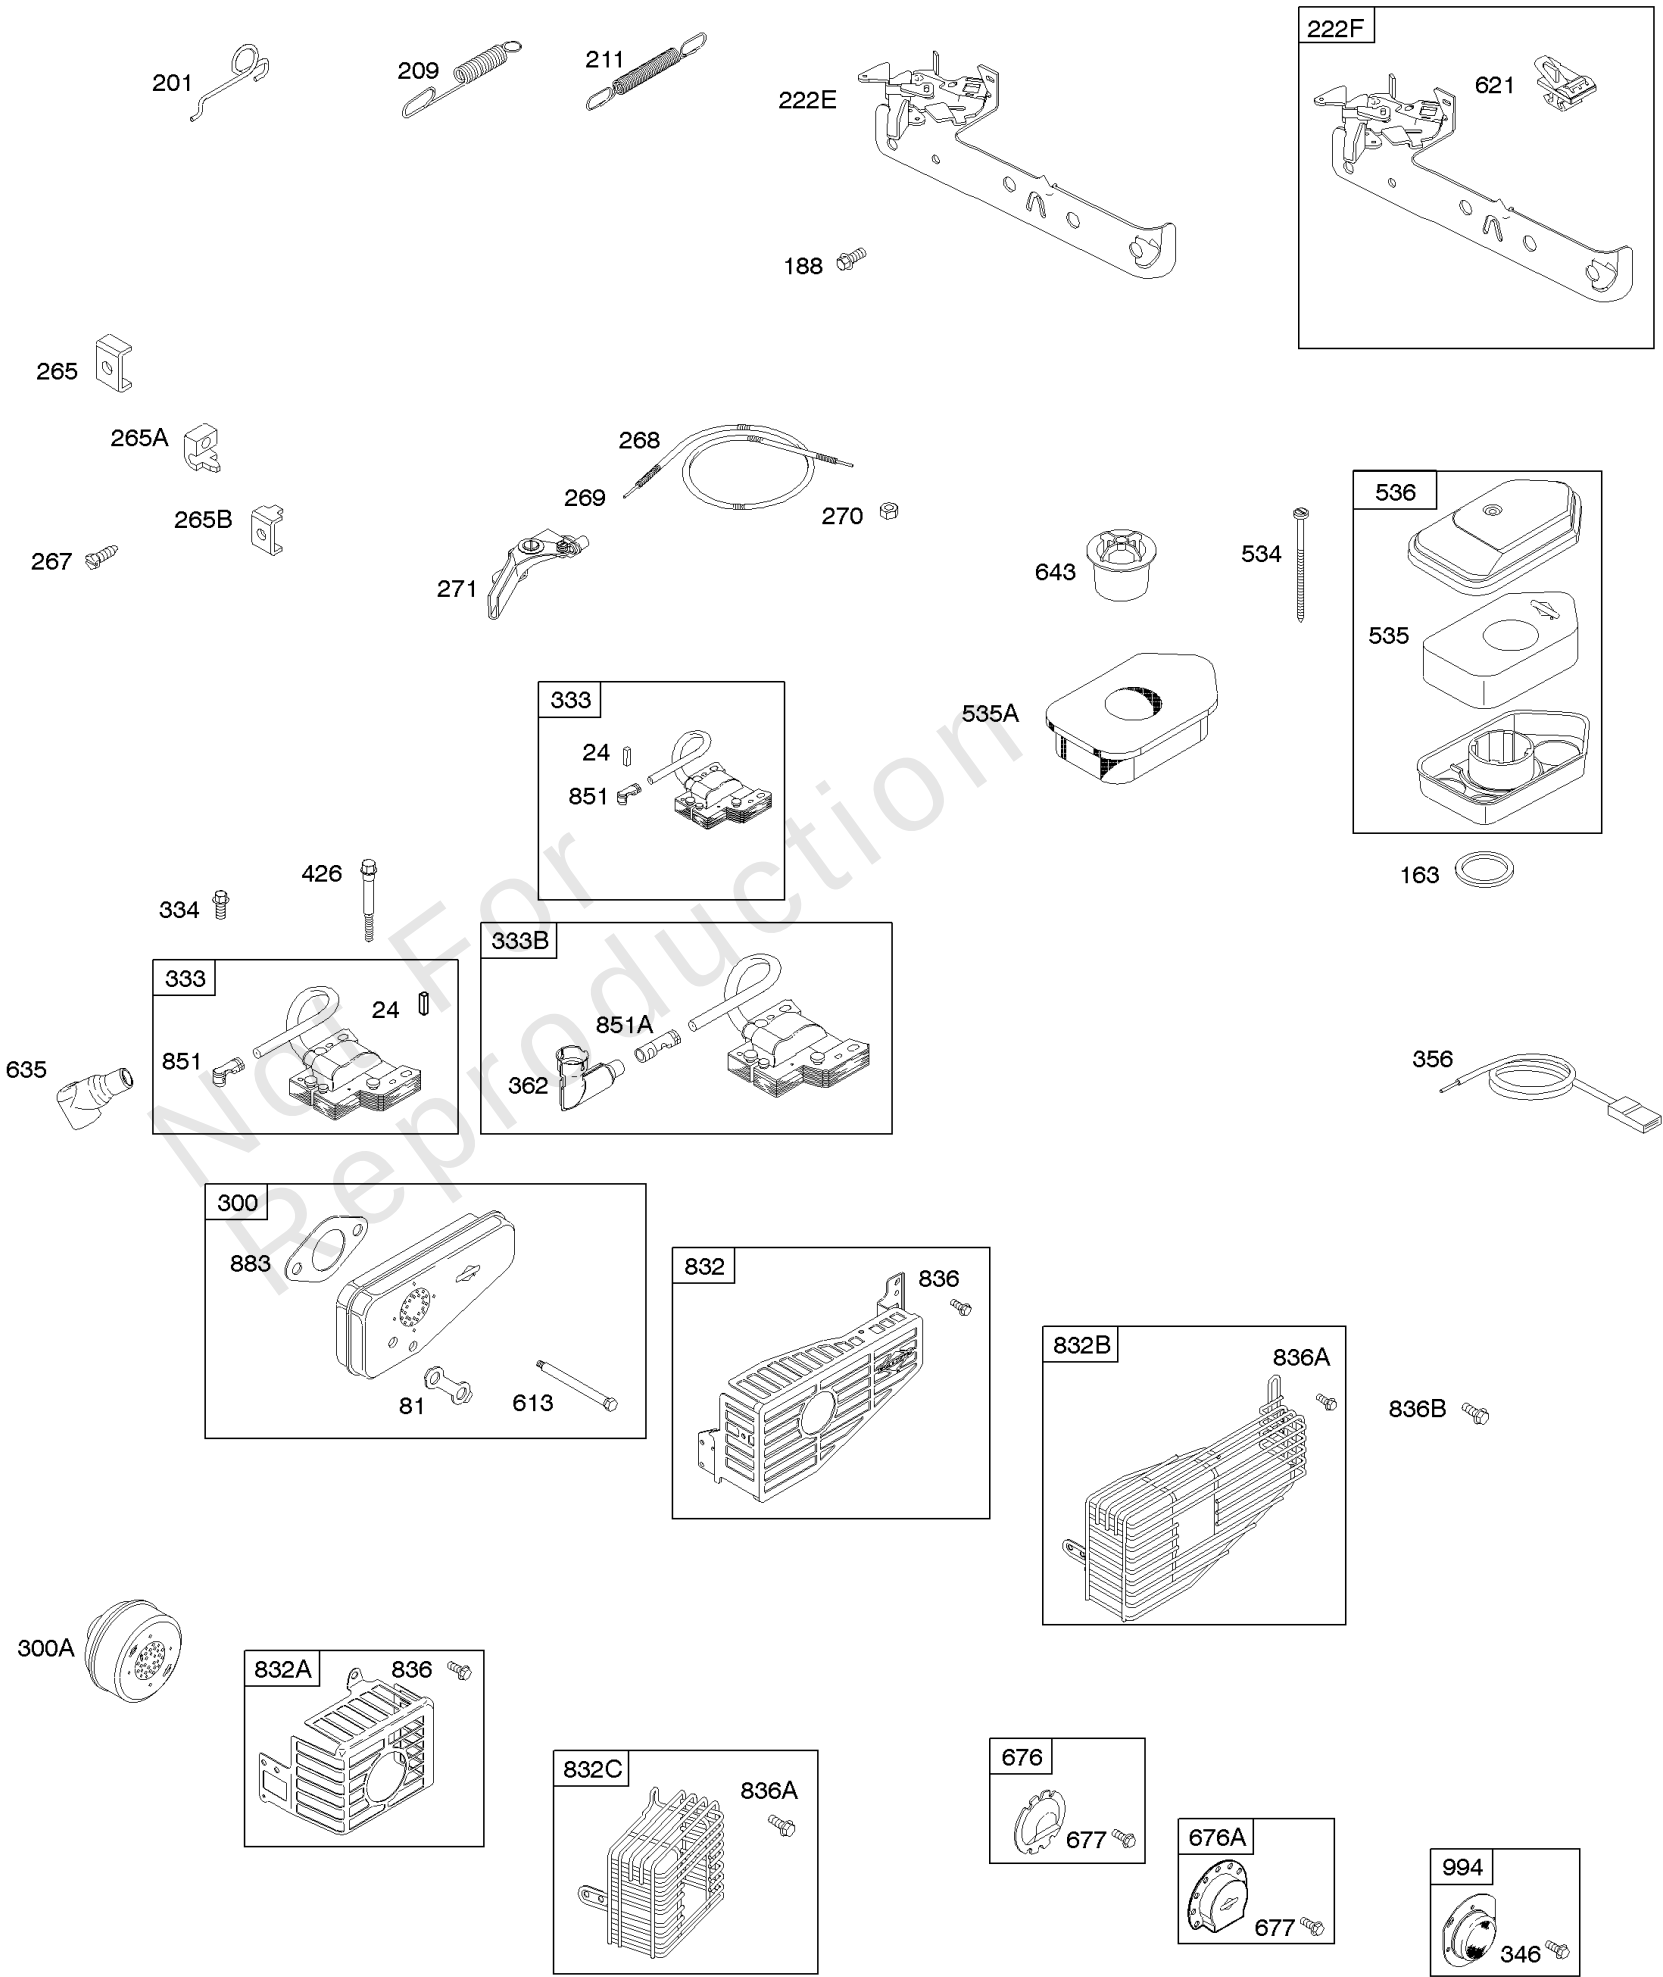 


Air Cleaner, Controls, Exhaust System, Governor Spring, Ignition

REF NO	PART NO	QTY	DESCRIPTION
851	493880S		TERMINAL-SPARK PLUG
851A	692424		TERMINAL, Spark Plug
883	691880		GASKET-EXHAUST

Not For Reproduction

  
 
 
 
 
 
1036 EMISSIONS LABEL

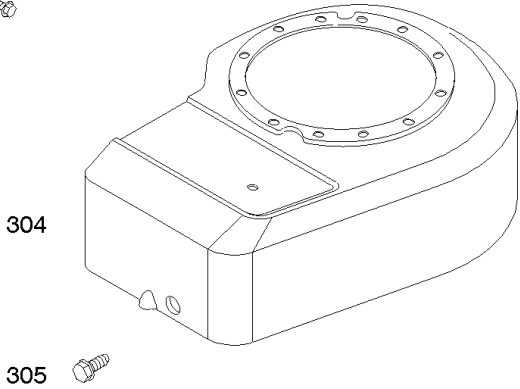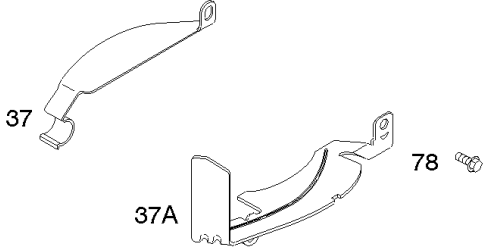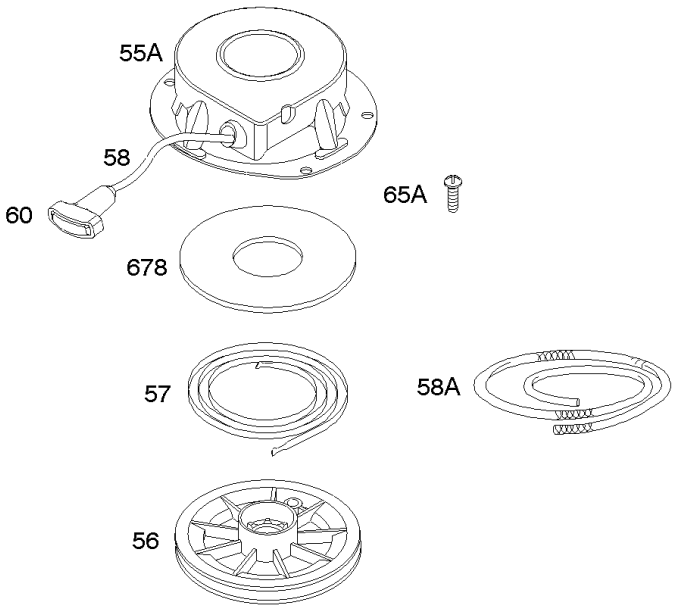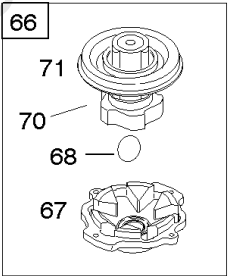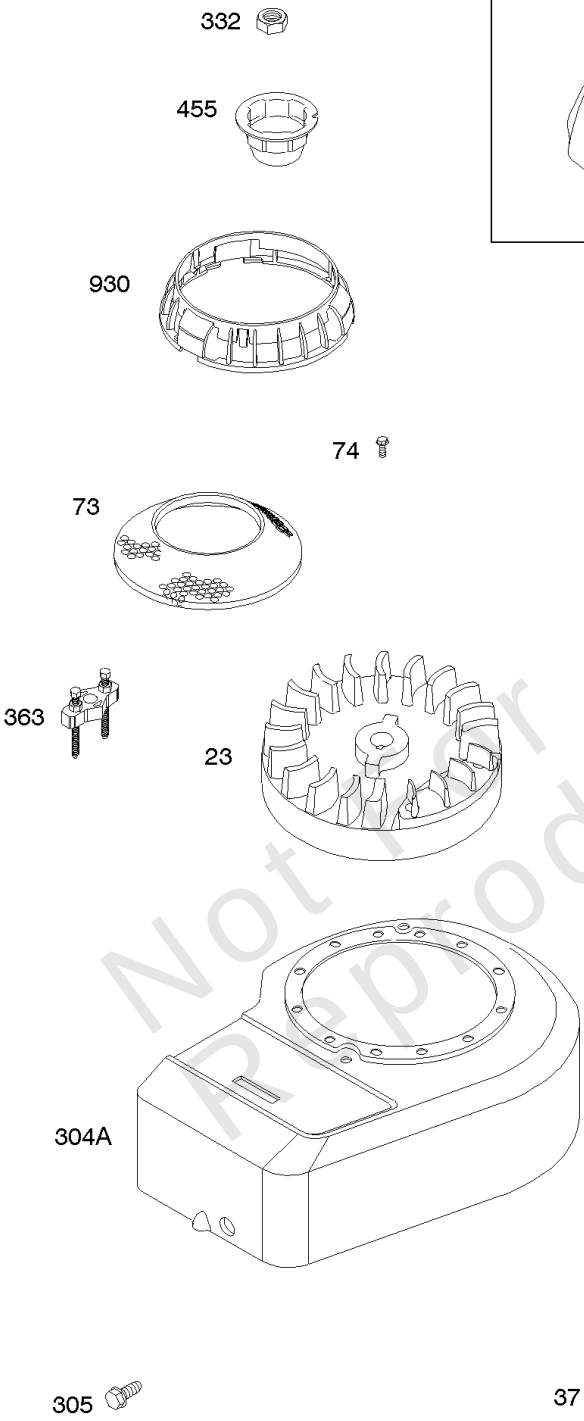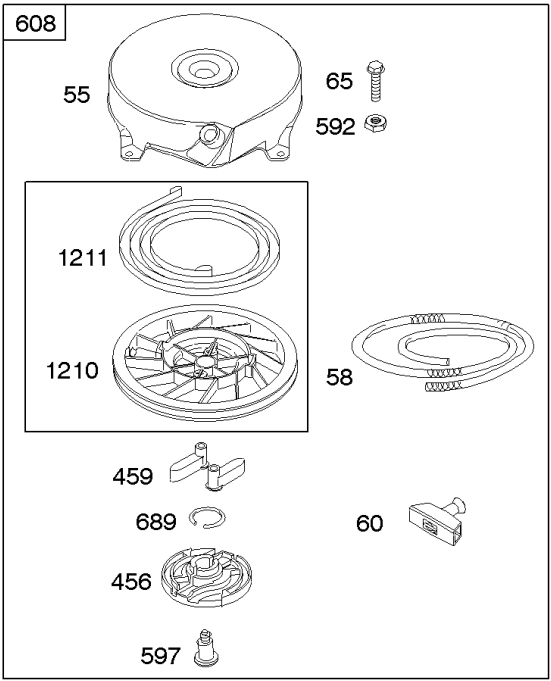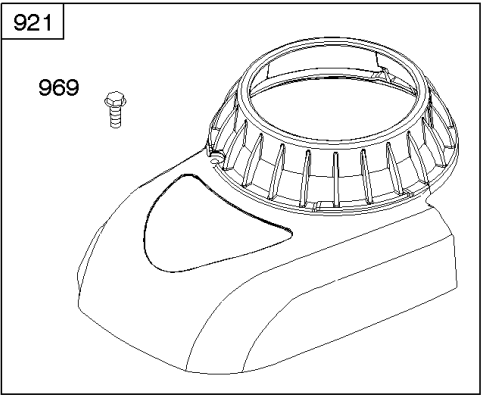

Blower Housing/Shrouds, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
23	795549		FLYWHEEL
37	690482		GUARD, Flywheel -(Carburetor Side)
37A	691209		GUARD-FLYWHEEL -(Muffler Side)
55	692144		HOUSING, Rewind Starter
55A	393576		HOUSING, Rewind Starter
56	280439S		PULLEY, Rope Starter
57	490179		SPRING-REWIND STR
58	691921		ROPE, Starter -(70)
58	697316		ROPE, Starter -(88 5/8)
58A	280406S		ROPE, Starter -(82 Rope)
60	691915		GRIP, Starter Rope
65	690837		SCREW -(Rewind Starter)
65A	690338		SCREW -(Rewind Starter) (3/8)
66	399671		CLUTCH-STARTER
67	394897		HOUSING, Clutch
68	691604		BALL, Clutch
70	691945		RATCHET-CLUTCH
71	691359		COVER, Ratchet
73	699850		SCREEN, Rotating
74	690345		SCREW -(Rotating Screen)
78	692198		SCREW -(Flywheel Guard)
304	691484		HOUSING, Blower -(Compliance Engines)
304A	692536		HOUSING, Blower -(Non Compliance Engines)
305	692198		SCREW -(Blower Housing)
332	690662		NUT -(Flywheel)
363	19069		PULLER, Flywheel
455	691236		CUP, Flywheel
456	692299		PLATE-PAWL FRICTION
459	281505S		PAWL-RATCHET
592	690800		NUT -(Rewind Starter)
597	691696		SCREW -(Pawl Friction Plate)
608	690101		STARTER, Rewind -(70 Rope)
608	499706		STARTER, Rewind -(88 5/8 Rope)
678	490817		SPACER-REWIND -(Rewind)
689	691855		SPRING-FRICTION
921	699796		HOUSING, Blower
930	691348		GUARD, Rewind
969	692523		SCREW -(Blower Housing) (5/8)

      
1036 EMISSIONS LABEL

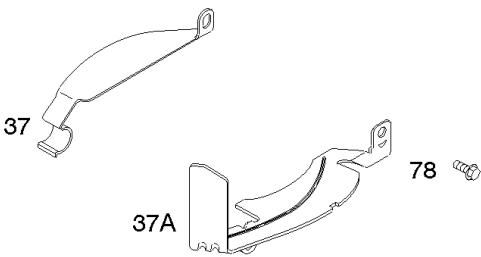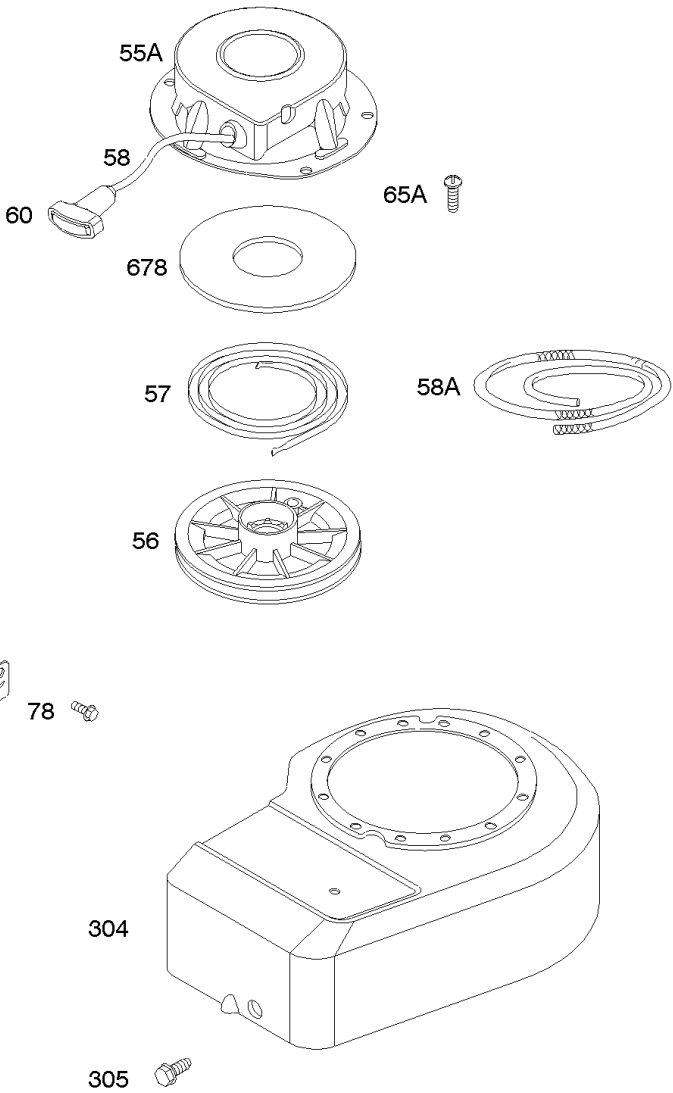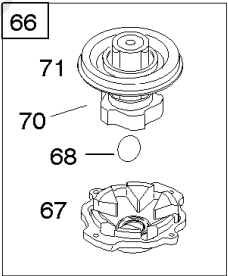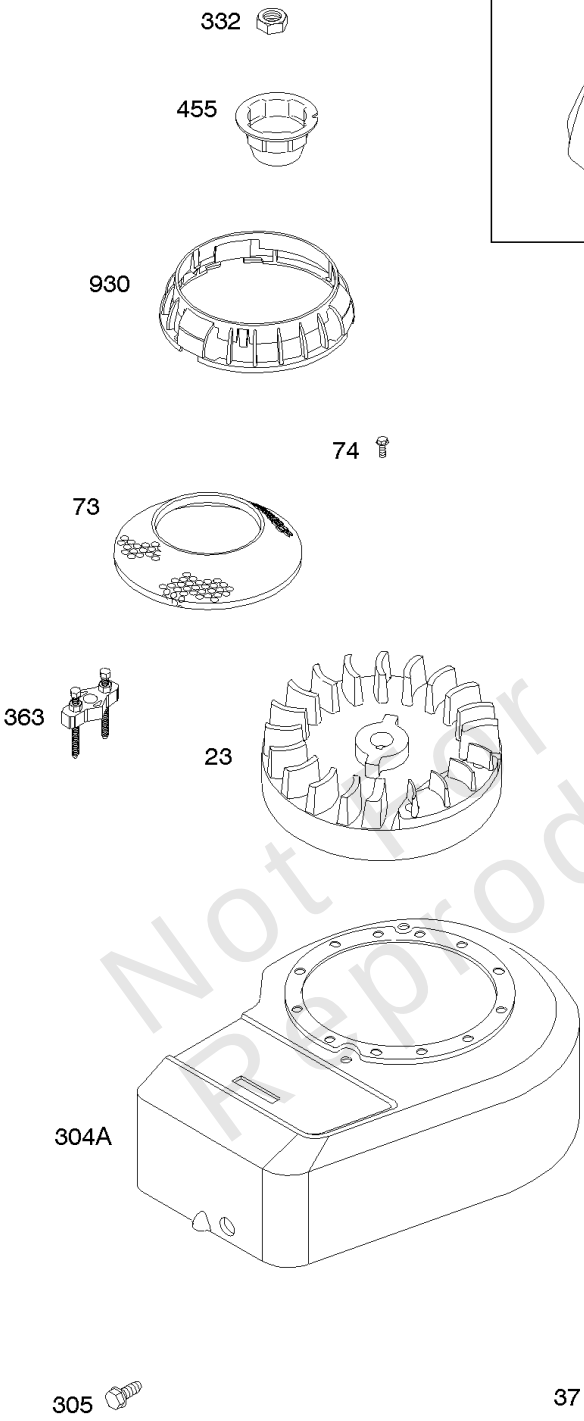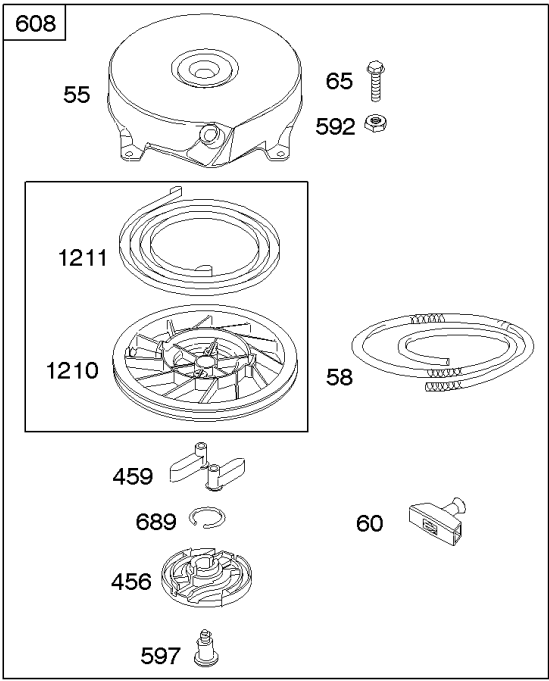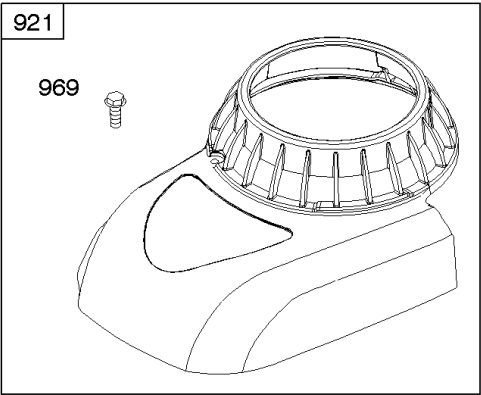

Blower Housing/Shrouds, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1210	499901		PULLEY/SPRING ASSY -(Pulley)
1211	499901		PULLEY/SPRING ASSY -(Spring)

 Not For Reproduction

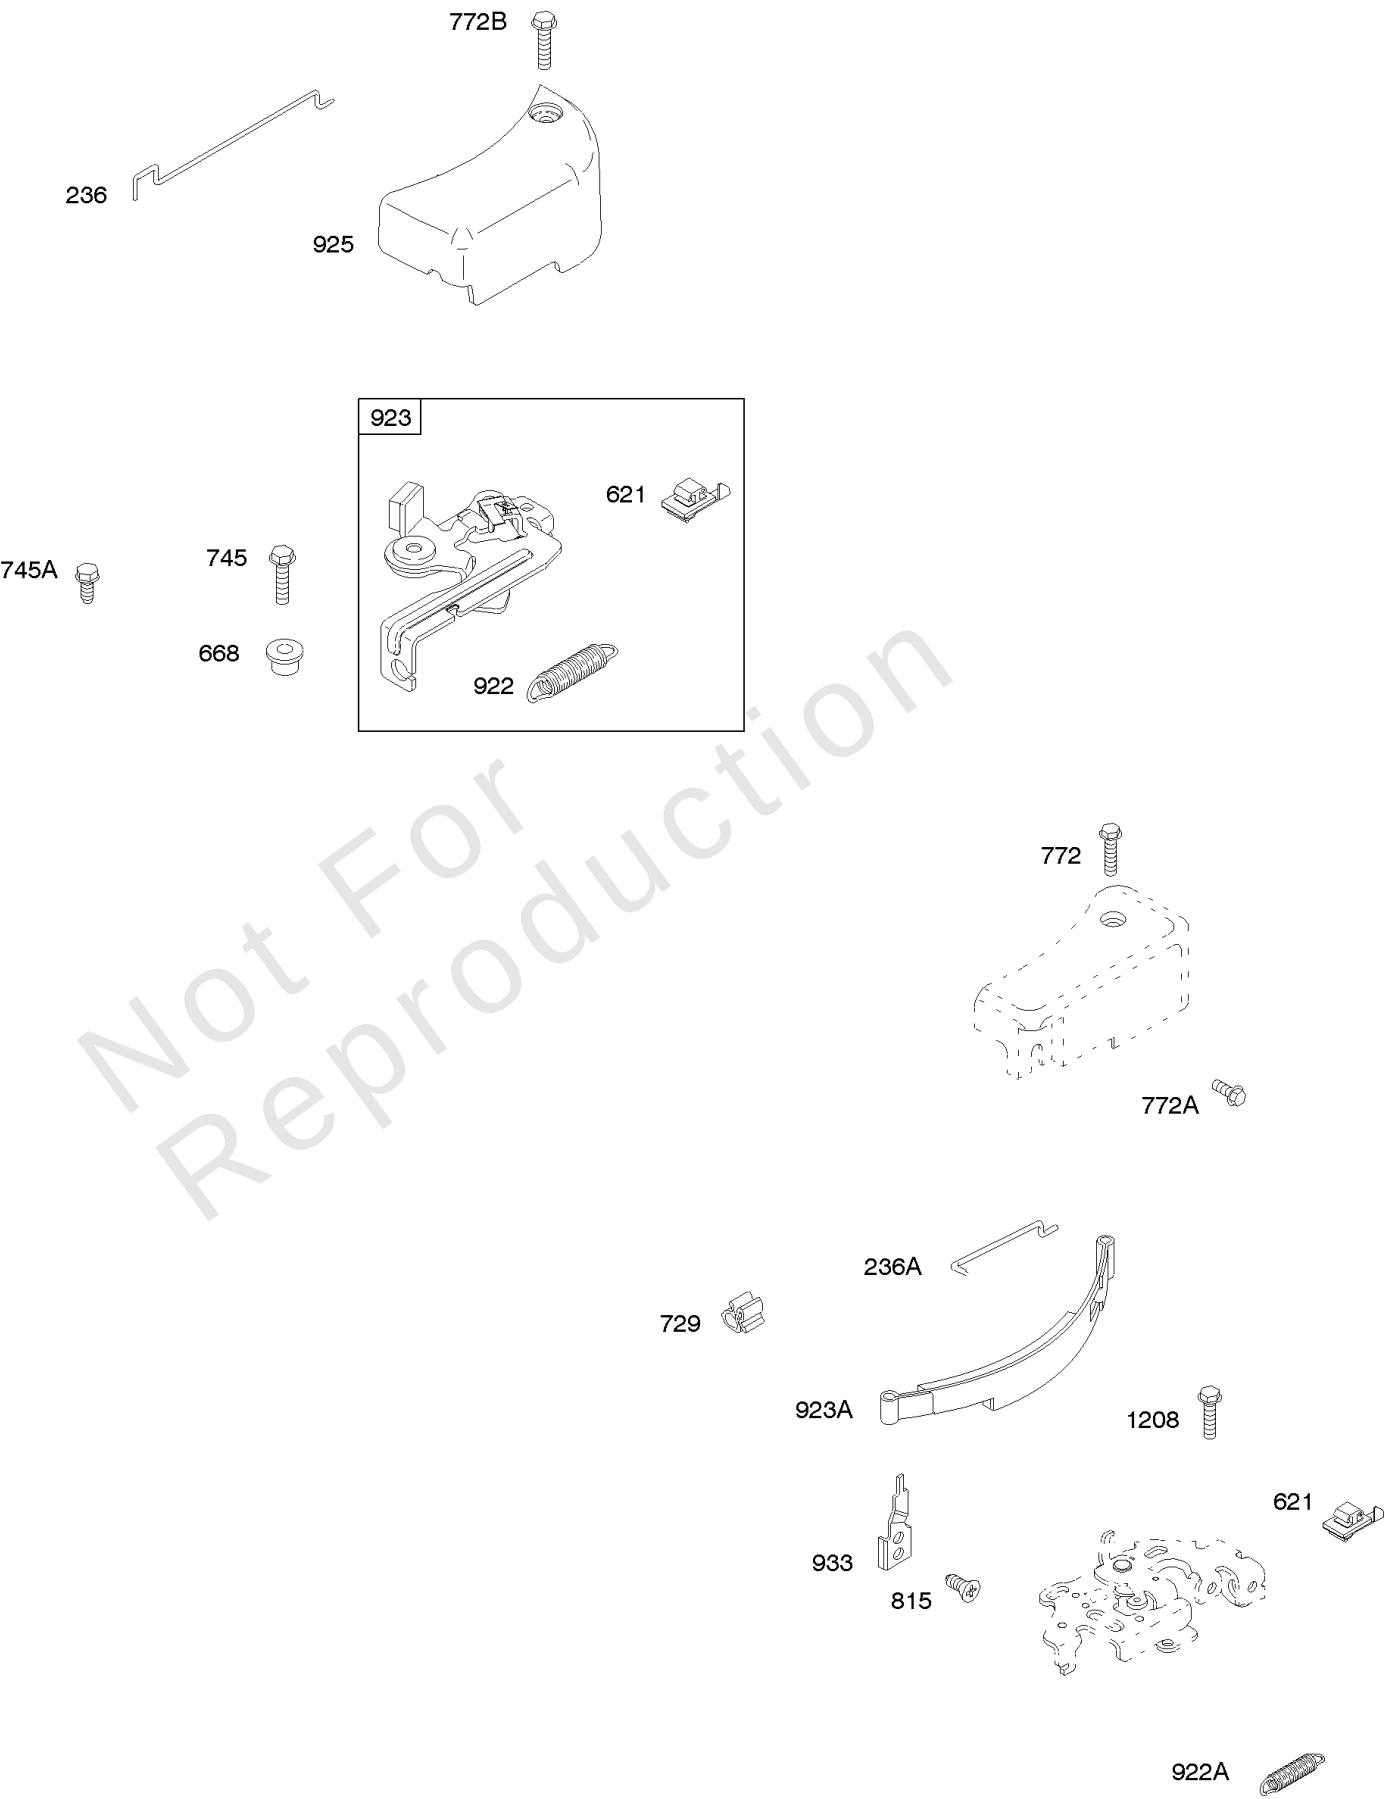

Brake


REF NO	PART NO	QTY	DESCRIPTION
621	692310		SWITCH, Stop
668	692889		SPACER -(Cylinder)
729	690586		CLIP, Wire
745	691146		SCREW -(Brake) (7/8)
745A	690859		SCREW -(Brake) (1/2)
772	691183		SCREW -(Linkage Cover) (3/4" Long) -Used Before Code Date 97071400
772A	690345		SCREW -(Linkage Cover) (7/16) -Used Before Code Date 97071400
772B	691111		SCREW -(Linkage Cover) (1 3/32)
815	690324		SCREW -(Band Brake Pivot)
922	692135		SPRING, Brake
922A	691809		SPRING, Brake
923	691487		BRAKE
923A	394867		PIVOT, Band Brake
925	691349		COVER, Linkage -Used After Code Date 97071300
933	690428		PIVOT, Band Brake
1208	690859		SCREW -(Brake Bracket)

Mfg. No: 09D902-2083-99




Camshaft, Crankcase Cover/Sump, Crankshaft, Piston/Rings/Connecting Rod

REF NO	PART NO	QTY	DESCRIPTION
4	395384		SUMP, Engine -Used Before Code Date 02111300
4	698691		SUMP, Engine -Used After Code Date 02111200
12	270895		GASKET, Crankcase -(.005)
12	270896		GASKET, Crankcase -(.009)
12	692218		GASKET, Crankcase -(.015)(Standard)
15	691680		PLUG-OIL DRAIN
16	796211		CRANKSHAFT -Used After Code Date 08071300
16A	793062		CRANKSHAFT -Used Before Code Date 08071400
20	391483S		SEAL, Oil -(PTO Side)
22	692551		SCREW -(Crankcase Cover/Sump) (1-5/32)
24	222698S		KEY, Flywheel
25	699657		PISTON ASSEMBLY -(Standard) -Used Before Code Date 04111500
25	790908		PISTON ASSEMBLY -(Standard) -Used After Code Date 04111400
25	792532		PISTON ASSEMBLY -(.020 Oversize) -Used After Code Date 04111400
26	795134		SET, Ring -(.020 Oversize) -Used After Code Date 04111400
26	498680		RING SET-STD -(Standard) -Used After Code Date 92092800 -Used Before Code Date 03080400
26	498682		SET, Ring -(.020 Oversize) -Used Before Code Date 04111500
26	699658		SET, Ring -(Standard) -Used After Code Date 03080300 -Used Before Code Date 04111500
26	795132		SET, Ring -(Standard) -Used After Code Date 04111400
27	691588		LOCK-PISTON PIN
28	298909		PIN-PISTON/STD -(Standard) -Used Before Code Date 03080400
28	699659		PIN, Piston -(Standard) -Used After Code Date 03080300
29	699655		ROD, Connecting -(Standard)
32	691664		SCREW -(Connecting Rod)
33	296676		VALVE, Exhaust -(Grooved Stem-Includes Retainer)
34	296677		VALVE, Intake -(Grooved stem-includes Retainer)

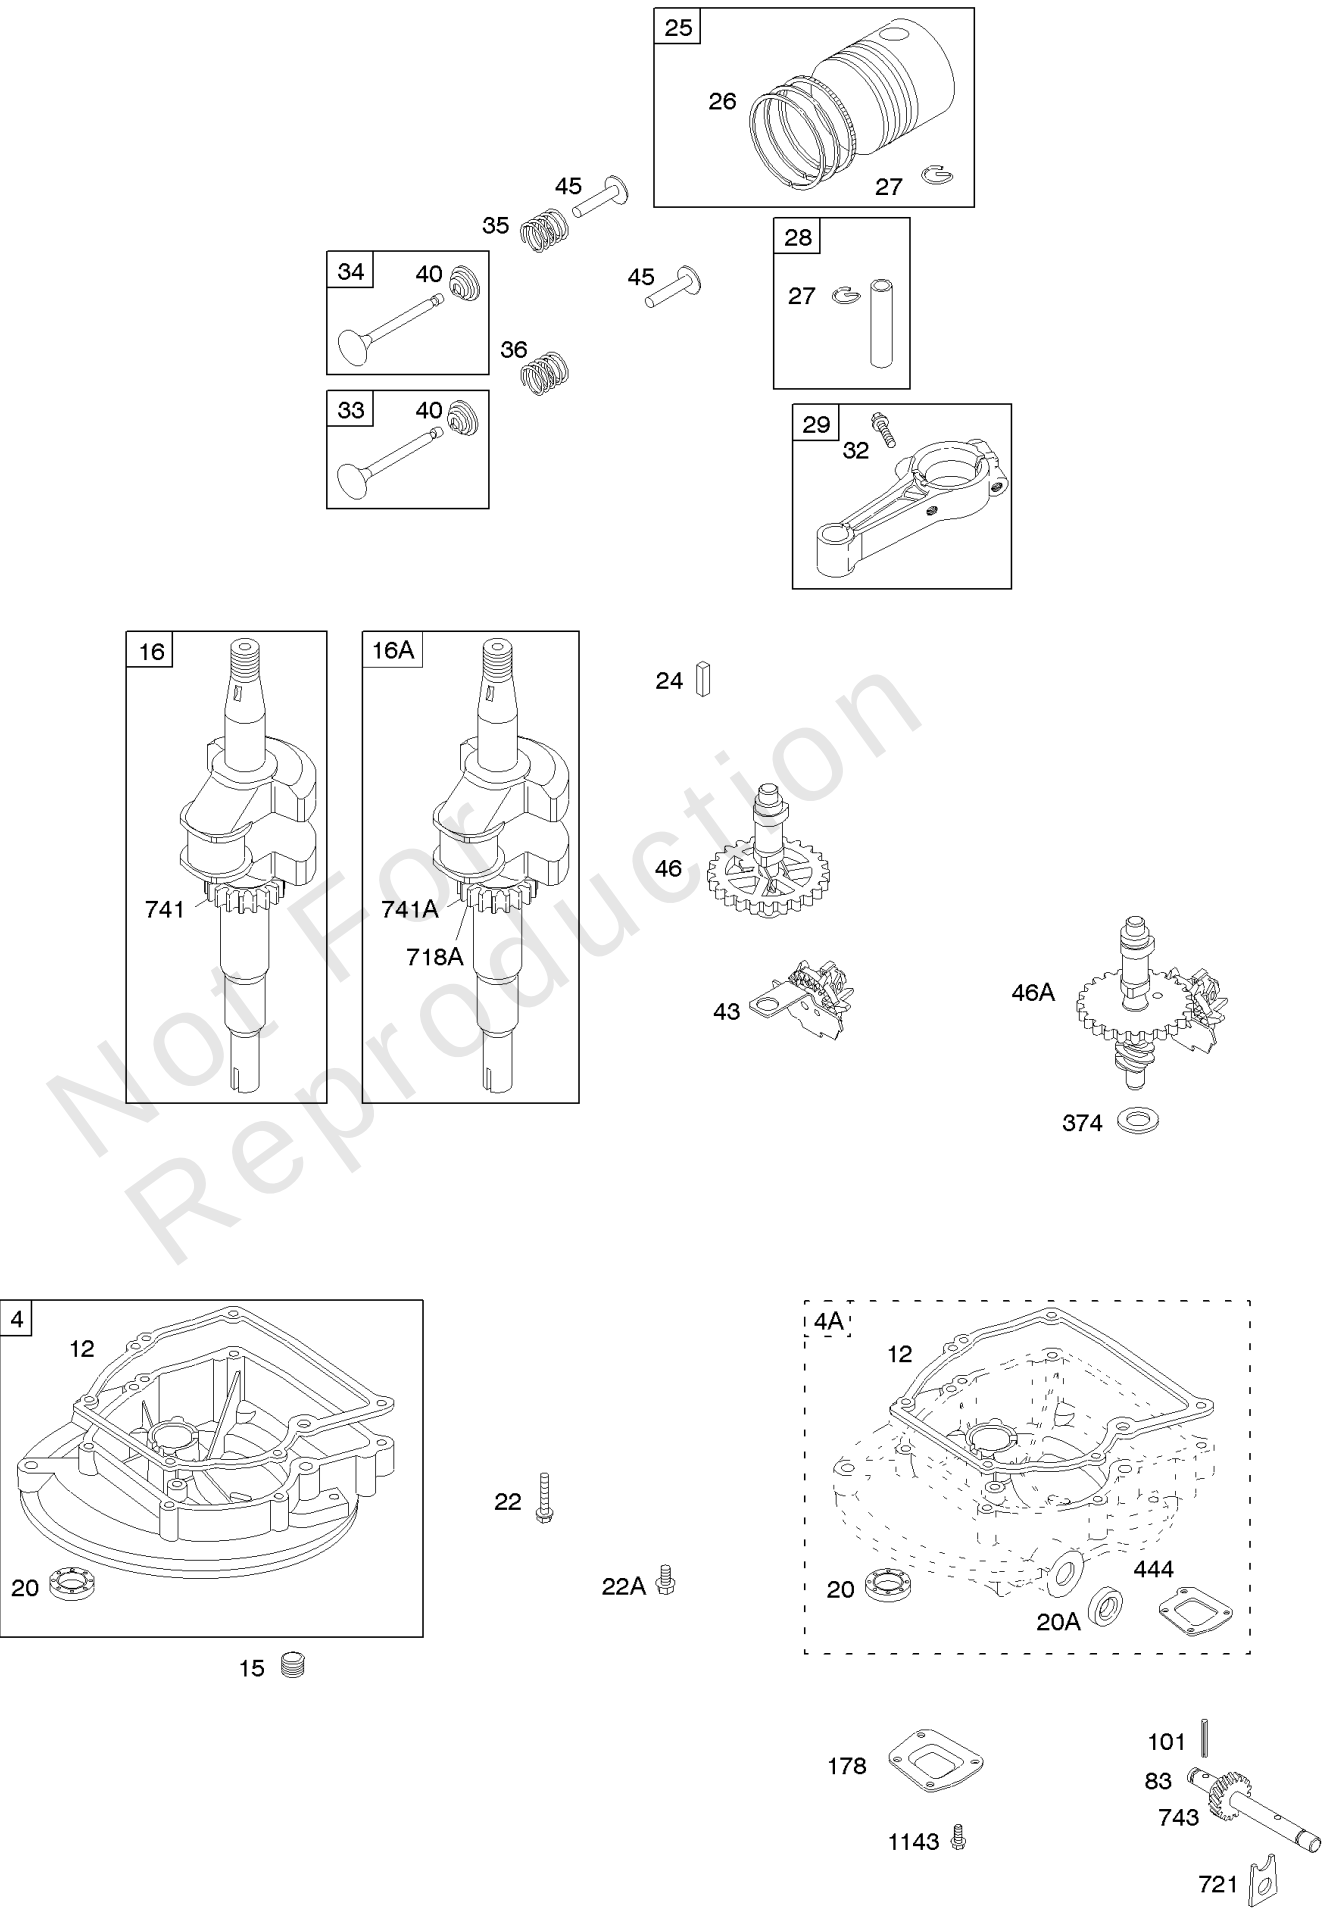 

Camshaft, Crankcase Cover/Sump, Crankshaft, Piston/Rings/Connecting Rod


REF NO	PART NO	QTY	DESCRIPTION
35	690520		SPRING-VALVE -(Intake)
36	690520		SPRING-VALVE -(Exhaust)
40	692194		RETAINER-VALVE
43	691983		SLINGER, Governor/Oil -Used Before Code Date 02110500
43	698690		SLINGER-GOVERNOR/OIL -Used After Code Date 02110400
45	691762		TAPPET, Valve
46	691998		CAMSHAFT
101	691623		PIN, Shaft -(Drive Gear)
178	690398		COVER, Drive Gear
444	691868		GASKET, Drive Gear Cover
718A	499047		PIN, Locating -(Crankshaft) -Used Before Code Date 08071400
721	690397		STOP, Shaft
741	796210		GEAR, Timing -Used After Code Date 08071300
741A	691805		GEAR, Timing -Used Before Code Date 08071400
1143	691141		SCREW -(Drive Gear Cover)

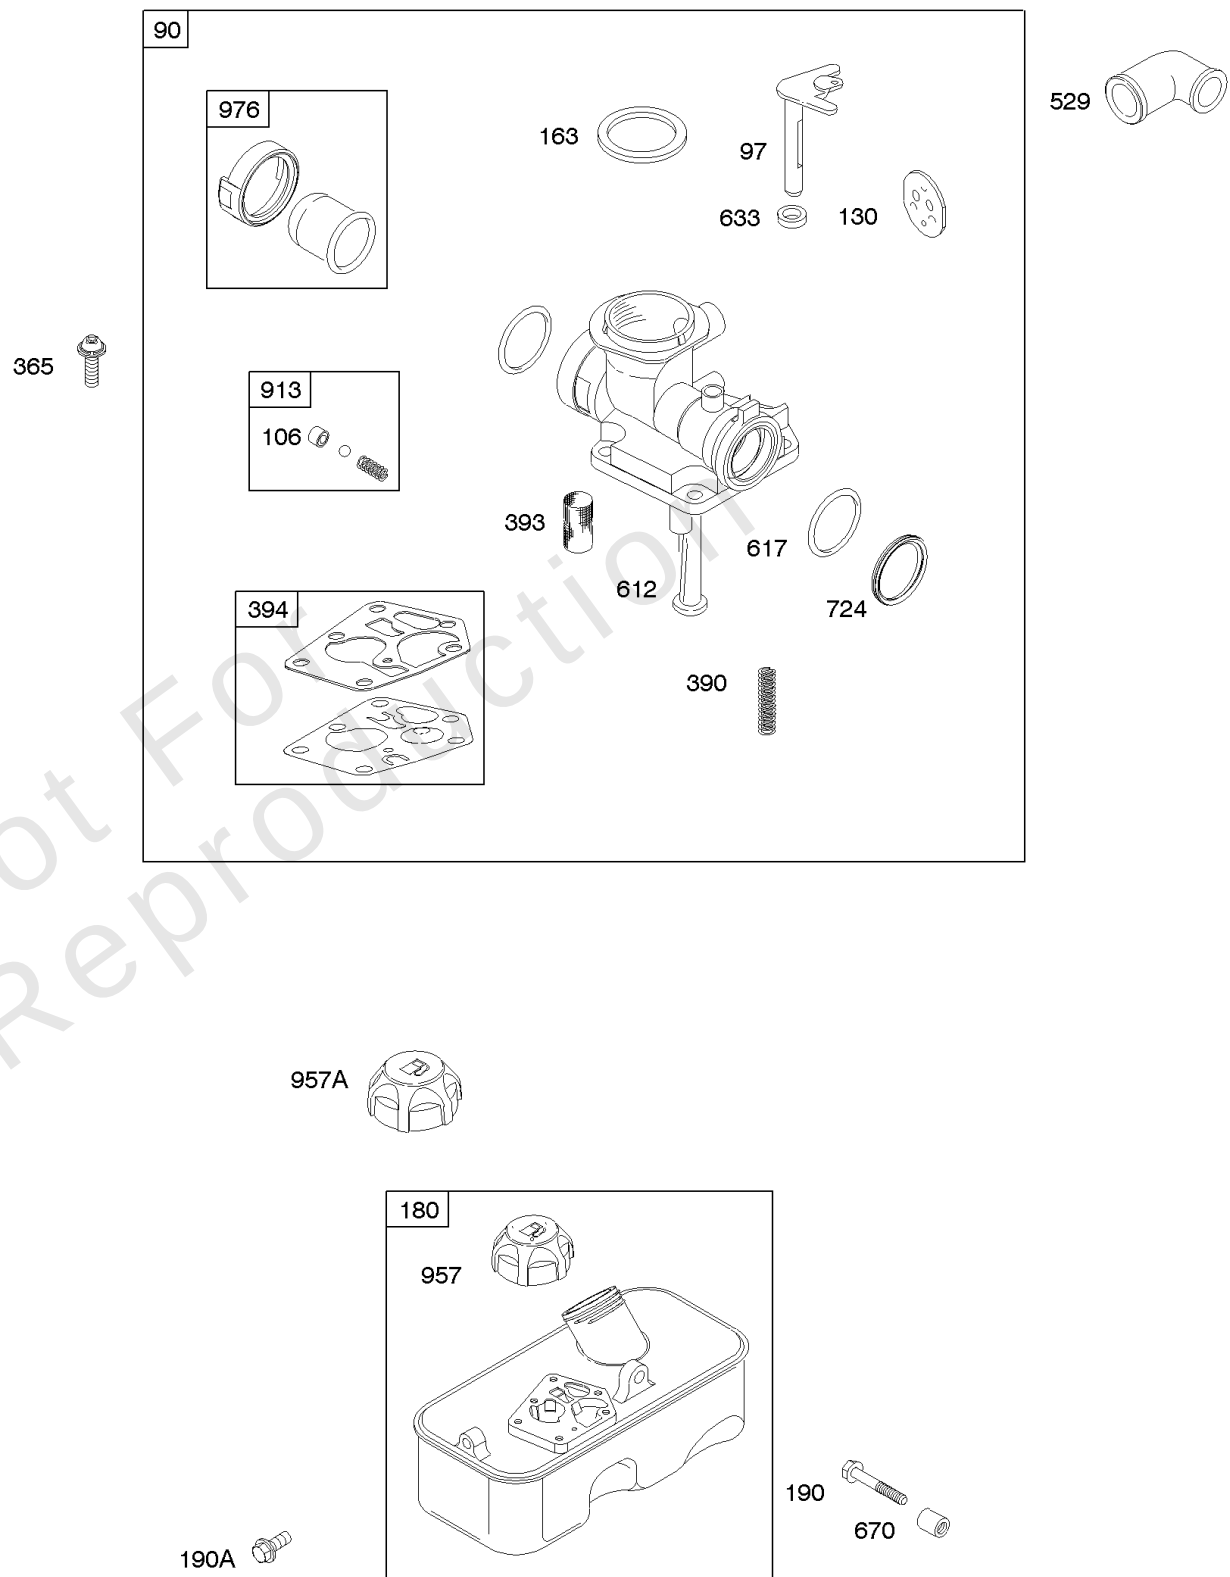 


Carburetor, Fuel Supply

REF NO	PART NO	QTY	DESCRIPTION
90	498809		CARBURETOR
97	691931		SHAFT, Throttle
106	691901		SEAT, Inlet
130	691190		VALVE, Throttle
163	271139S		GASKET, Air Cleaner -(Air Cleaner)
180	494406		TANK, Fuel -(Metal)
190	691640		SCREW -(Fuel Tank) (1 3/4)
190A	691108		SCREW -(Fuel Tank) (9/16" Long)
365	790029		SCREW -(Carburetor)
390	691839		SPRING-CHOKE DIAPH
393	691837		SCREEN, Carburetor
394	795083		DIAPHRAGM, Carburetor
529	692189		GROMMET
612	496046S		TUBE-PICK UP
617	270344S		SEAL, O-Ring -(Intake Manifold)
633	691321		SEAL-CHOKE/THR SHAFT -(Throttle Shaft)
670	691633		SPACER, Fuel Tank
724	697478		RETAINER, Seal
913	494409		SEAT, Valve
957	497929S		CAP, Fuel Tank -(Plastic)
976	694394		PRIMER-CARBURETOR

 
1058 OPERATOR'S MANUAL

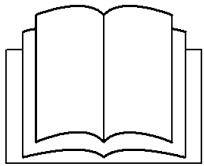

1330 REPAIR MANUAL


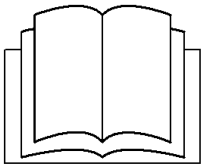 


1319 WARNING LABEL



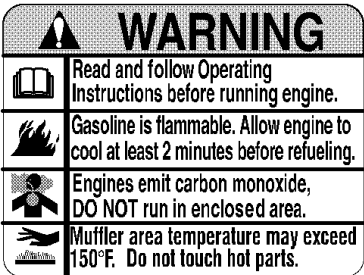 


REQUIRED when replacing parts with warning labels affixed.

  358 ENGINE GASKET SET






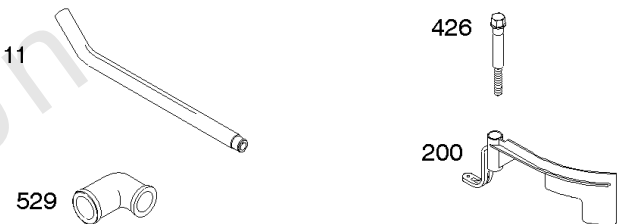
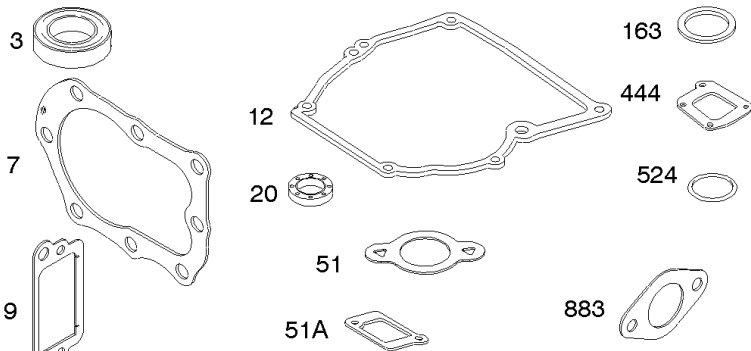


1095 VALVE GASKET SET

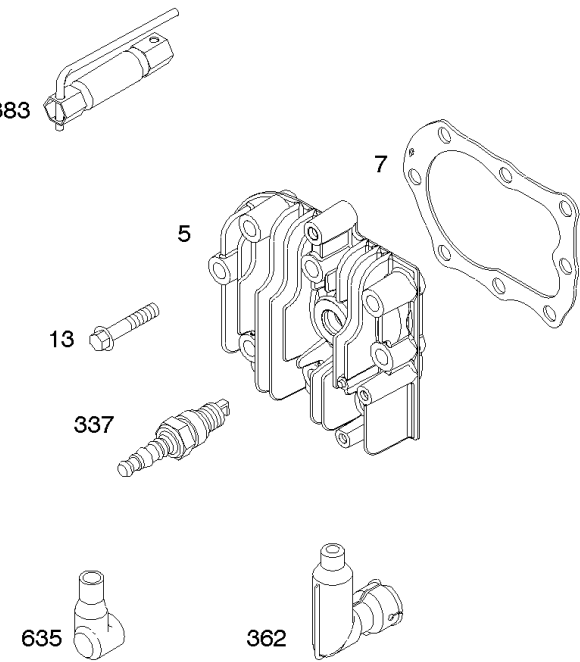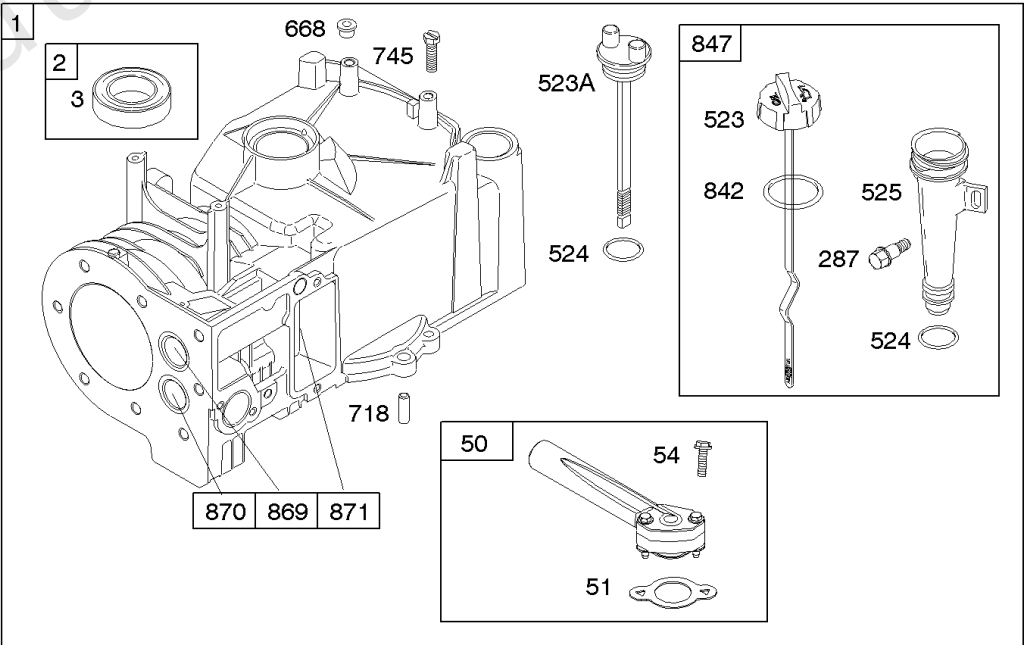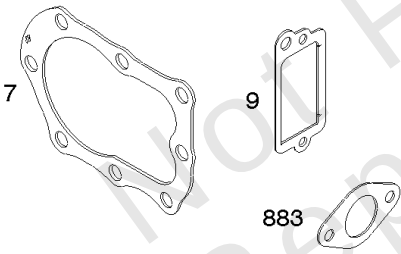   

Cylinder, Cylinder Head, Gasket Set - Engine, Gasket Set - Valve, Lubrication, Operator's

REF NO	PART NO	QTY	DESCRIPTION
1	699653		CYLINDER ASSEMBLY
2	399269		KIT, Bushing/Seal -(Magneto Side)
3	299819S		SEAL-OIL -(Magneto Side)
5	790169		HEAD, Cylinder
7	698717		GASKET-CYL HD
8	791781		BREATHER ASSEMBLY
9	695890		GASKET-BREATHER
10	691666		SCREW -(Breather Assembly)
11	691245		TUBE, Breather
12	270896		GASKET, Crankcase -(.009)
12	692218		GASKET, Crankcase -(.015)(Standard)
12	270895		GASKET, Crankcase -(.005)
13	691640		SCREW -(Cylinder Head)
20	391483S		SEAL, Oil -(PTO Side)
50	699644		MANIFOLD, Intake -Used After Code Date 03080300
50A	693446		MANIFOLD-INTAKE -Used Before Code Date 03080400
51	699649		GASKET, Intake -Used After Code Date 03080300
51A	270345S		GASKET, Intake -Used Before Code Date 03080400
54	691111		SCREW -(Intake Manifold)
163	271139S		GASKET, Air Cleaner -(Air Cleaner)
200	691912		BLADE, Governor
287	691002		SCREW -(Dipstick Tube)
337	697451		PLUG, Spark
358	794209		GASKET SET, Engine
362	793351		SHIELD-SPARK PLUG
383	89838S		WRENCH-SPARK PLUG
426	691107		SCREW -(Governor Blade) (2 Inches)
444	691868		GASKET, Drive Gear Cover
523	692040		DIPSTICK
523A	691913		DIPSTICK
524	691876		SEAL-O RING
525	691320		TUBE, Dipstick
529	692189		GROMMET
635	66538S		BOOT-SPARK PLUG -(Slip On Style)
668	692889		SPACER -(Cylinder)
718	690959		PIN-LOCATING -(Cylinder)
745	691146		SCREW -(Brake) (7/8)

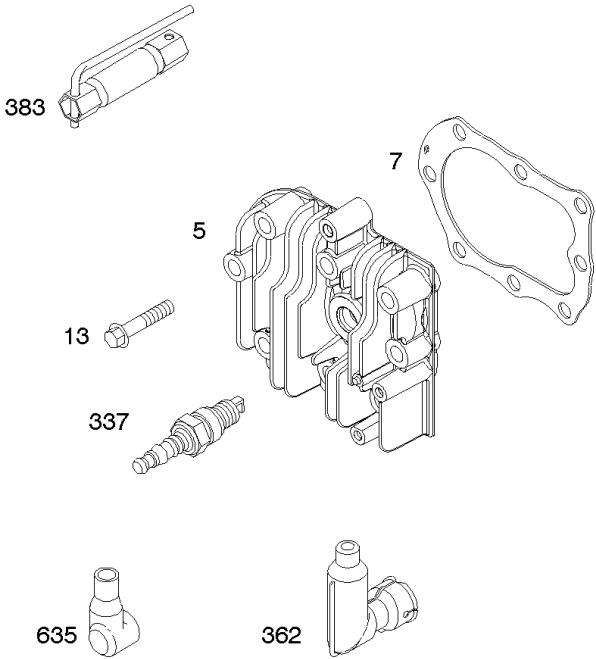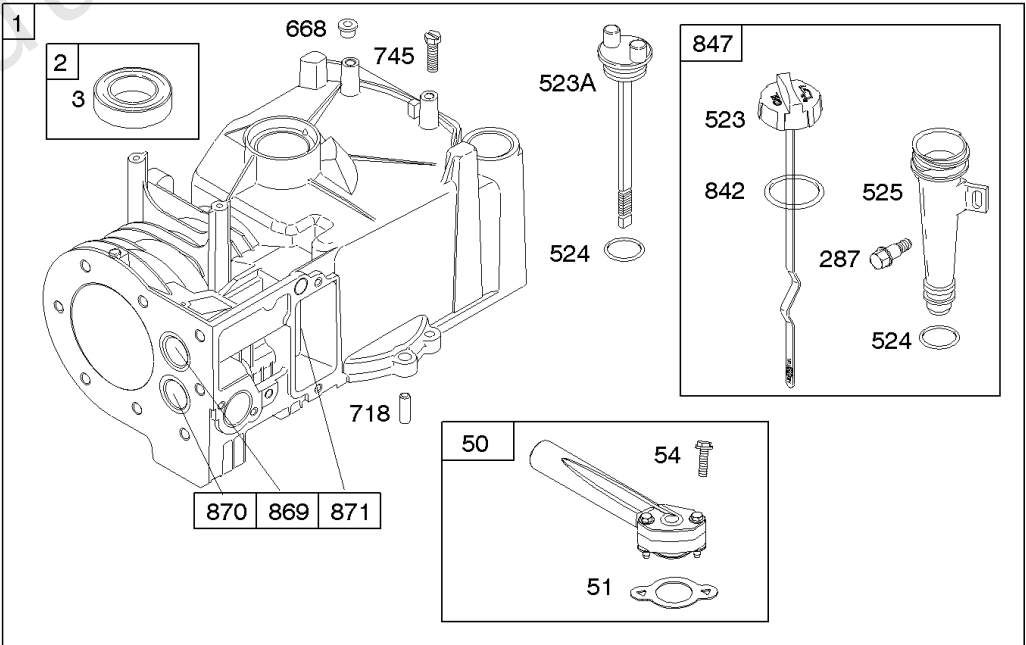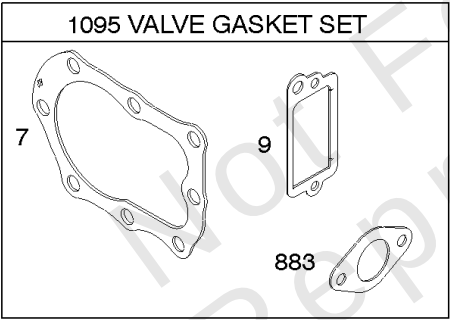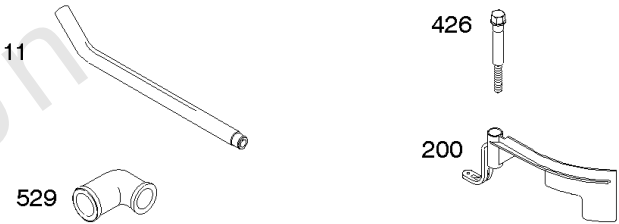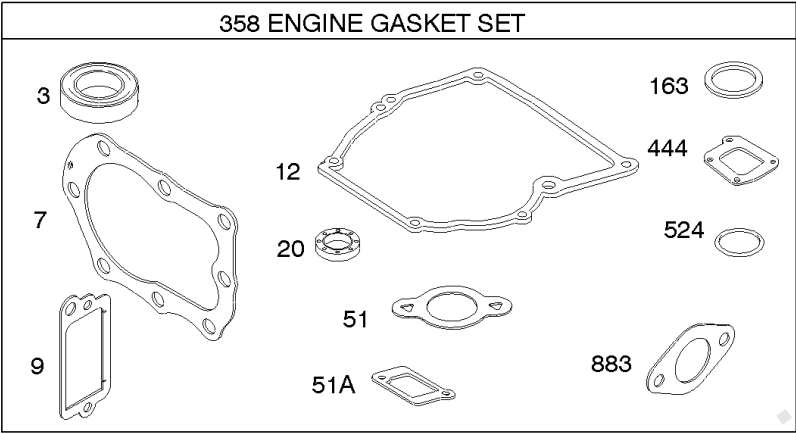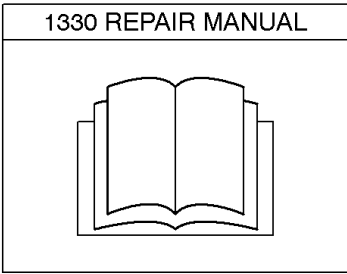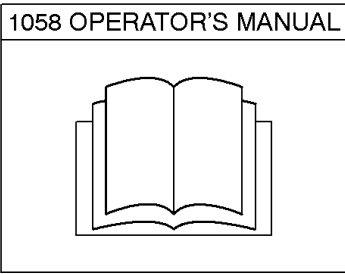       

Cylinder, Cylinder Head, Gasket Set - Engine, Gasket Set - Valve, Lubrication, Operator's

REF NO	PART NO	QTY	DESCRIPTION
842	691870		SEAL, O-Ring -(Dipstick Tube)
847	691440		DIPSTICK/TUBE ASSY
869	699641		SEAT, Valve -(Intake) -Used After Code Date 03080300
869	691701		SEAT-VALVE -(Intake) -Used Before Code Date 03080400
870	699642		SEAT, Valve -(Exhaust) -Used After Code Date 03080300
870	691702		SEAT, Valve -(Exhaust) -Used Before Code Date 03080400
871	231348		BUSHING-VALVE GUIDE -(Exhaust) -Used Before Code Date 03080400
871	699643		BUSHING, Valve Guide -(Exhaust) -Used After Code Date 03080300
871	63709		BUSHING, Valve Guide -(Intake)
883	691880		GASKET-EXHAUST
1058	277038		MANUAL, Operator's
1095	498526		GASKET SET, Valve
1319	794467		LABEL, Warning
1330	270962		REP MAN-1 CYL L-HD

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
--------	---------	-----	-------------

Not For Reproduction

