

Jabra Engage 55 - USB-C UC Convertible

How do I set my Jabra device as the default audio device on my Windows computer?

To manually set your Jabra device as the default audio device, follow these steps.

1. Open the Sound settings on your computer. For example, in the taskbar, right-click the **Sound** icon, and then click **Open Sound settings**.



2. In the **Output** and **Input** sections, select your Jabra device from the drop-down lists.
If you are using a Jabra wireless device, select the connected Bluetooth adapter, such as the Jabra Link 380.