

User manual



Top view of the Dyson V15 detect machine, showing cleaner head, wand, bin and main body.

Contents

In the box

Getting started

The LCD screen

Charging your machine

Changing your click-in battery

Caring for your floors

Emptying your bin

Cleaning your bin

Clearing blockages

Washing your filter

Washing your Laser Slim Fluffy™ brush bar

Clearing obstructions from your High Torque cleaner head with anti-tangle comb

Cleaning your tools

Clearing blockages from your Hair screw tool

Looking after your machine