

EN

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

DE

Mit Ihrer inspirierenden Bewertung wird COSTWAY konsistenter sein, um Ihnen EIN SCHÖNES EINKAUFSERLEBNIS, GUTE PRODUKTE und EFFIZIENTEN SERVICE zu bieten!

FR

Avec votre évaluation inspirante, COSTWAY continuera à fournir une EXPÉRIENCE D'ACHAT PRATIQUE, des PRODUITS DE QUALITÉ et un SERVICE EFFICACE !

ES

Con su calificación inspiradora, COSTWAY será más consistente para ofrecerle EXPERIENCIA DE COMPRA FÁCIL, BUENOS PRODUCTOS y SERVICIO EFICIENTE.

IT

Con la tua valutazione incoraggiante, COSTWAY sarà più coerente per offrirti ESPE-RIENZA DI ACQUISTO FACILE, BUONI PRODOTTI e SERVIZIO EFFICIENTE!

PL

Dzięki twojej opinii COSTWAY będzie mógł oferować jeszcze WYGODNIEJSZE ZAKUPY, LEPSZE PRODUKTY i SPRAWNIEJSZĄ OBSŁUGĘ KLIENTA.


US office: Fontana

UK office: Ipswich

DE office: FDS GmbH, Neuer Höltingbaum 36, 22143 Hamburg, Deutschland

FR office: Saint Vigor d'Ymonville

PL office: Gdańsk

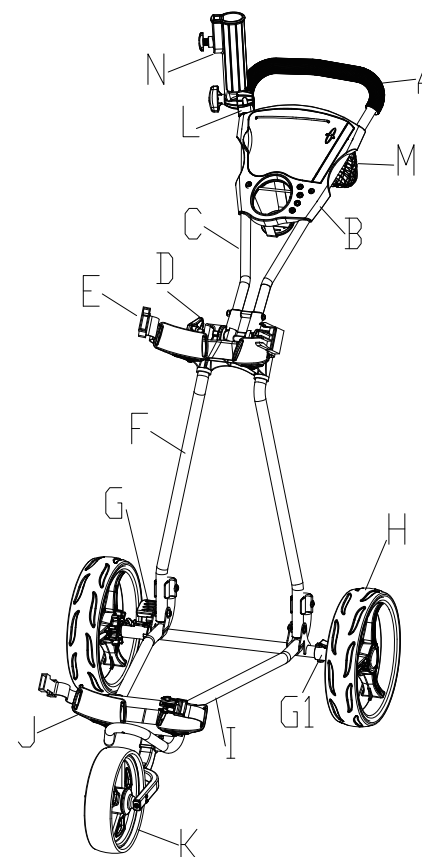


USER'S MANUAL

SP35778

Golf Push Cart/Golfwagen

PART LIST

- A Foam Handle
- B Scorecard Holder
- C Handle Tube
- D Adjustable Handle Mechanism
- E Upper Bracket
- F Upper Frame Set
- G Left Wheel Lock Mechanism
- G1 Right Wheel Lock Mechanism
- H Rear Wheel Set
- I Lower Frame Set
- J Lower Bracket Set
- K Front Wheel Set
- L Umbrella Holder Base
- M Storage Net
- N Umbrella Holder

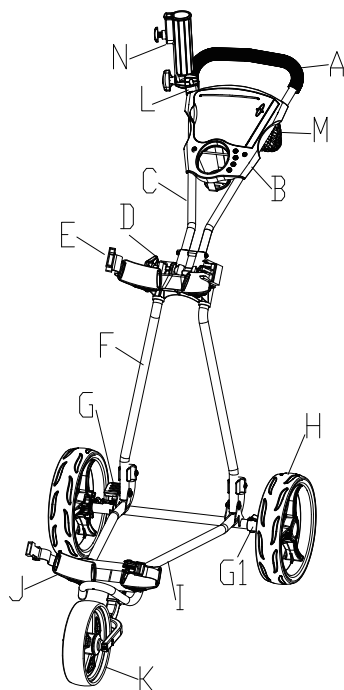

MAINTENANCE

To clean, wipe cart with a soft, dry cloth. Car polish may be used to maintain finish. Lubricate moving parts every 6 months.

Warning

For your own safety, please read and understand these warnings and keep this user guide for future reference.

Always make sure the cart is fully extended and locked before use.

Always make sure the cart is folded and locked properly before lifting or transporting.


Do not run while using this product.

Do not use accessories other than those designed for use with your carts. Keep all packing materials away from children and recycle where possible or where required by law.


Keep hands and fingers away from moving or sliding parts!

Assembly instructions


Install the front wheel set into the lower frame with the M6 * 40mm screw and nut as shown in Fig.1

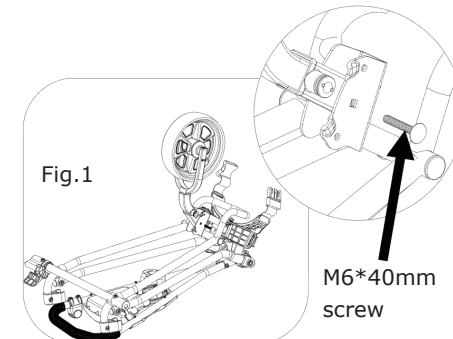


Install and insert the rear wheel sets into the wheel holes, then press the button towards down as shown in Fig.2

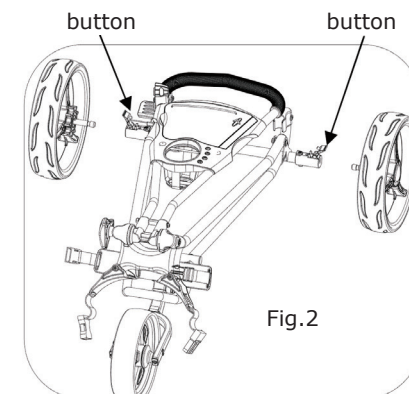


Unfold the upper frame and the handle tube, then lock the red buckle as shown in Fig.3

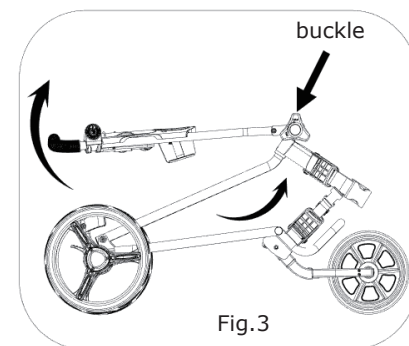



Push down the red brake pedal to stop the rear wheel and raise up to release the rear wheel as shown in Fig.4

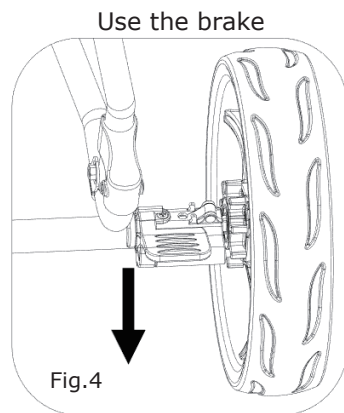


To put in use :
Simply attach the umbrella holder onto the cart as shown in Fig.5

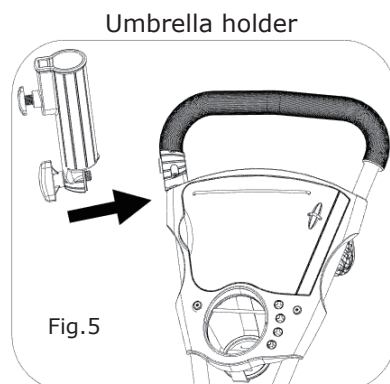

Press the red button to release the front wheel, then fold until the pin is inserted into the hole as shown in Fig.6 and Fig.7

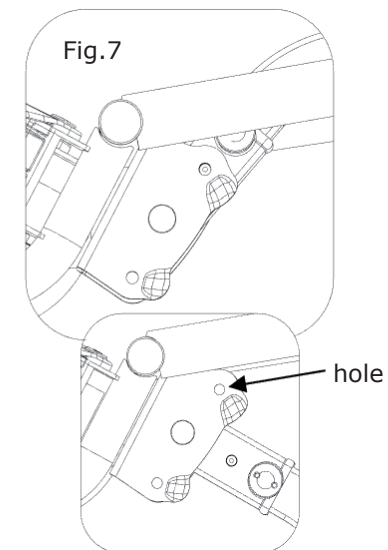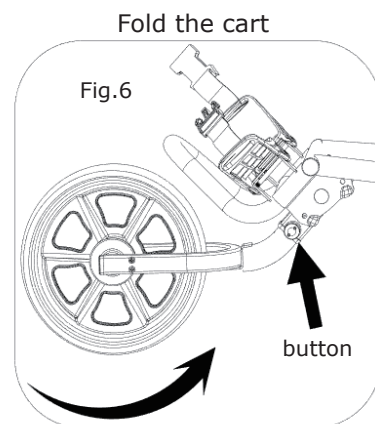


Release the red buckle, then fold the upper frame and the handle as shown in Fig.8

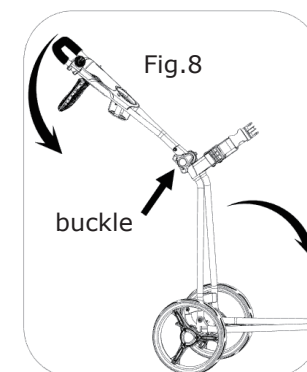


Front Wheel Adjustment Mechanism

1. If you find that the cart veers to the left or right during use, please refer to the following instructions to correct the problem. (Fig 1)

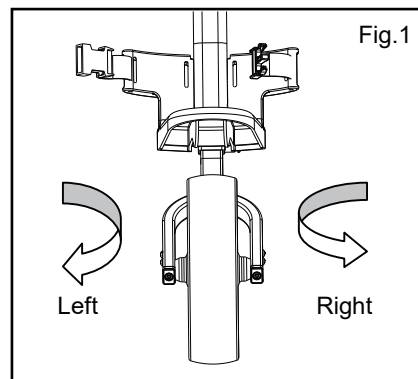

2.If the cart veers to the left, face the front wheel of the cart and use the Allen wrench provided to screw the right bolt counterclockwise or the left bolt clockwise until the front wheel is centered between the front fork.(Fig.2)

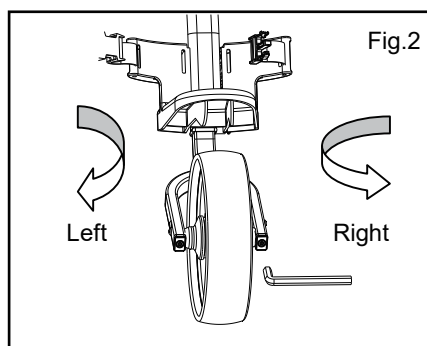

3.If the cart veers to the right, face the front wheel of the cart and use the Allen wrench provided to screw the left bolt counterclockwise or the right bolt clockwise until the front wheel is centered between the front fork.(Fig.3)

