

Turbo Handheld Fan -- Engine Slim

 
Please read this instruction manual carefully before using the product and keep it in a safe place.

Turbo Handheld Fan -- Engine Slim

Name	Turbo Handheld Fan -- Engine Slim
Model	DSHJ-S-2422B
Rated Voltage	5V =
Rated Input Power	5W
Battery	3600mAh(B)
Net Weight	149g
Size	132 × 63 × 35mm

Standards	GB 4706.1-2005 GB 4706.27-2008
-----------	-----------------------------------

PRODUCT VIEW

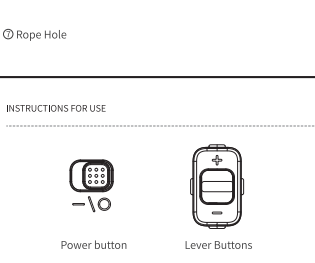


① Display Screen ② Lever Buttons ③ Handles


④ Air Inlet ⑤ Type-C ⑥ Power button

⑦ Rope Hole

 INSTRUCTIONS FOR USE



Power button

 

Lever Buttons

Power button

Toggle the power switch to control the fan on/off. Upon powering on, the digital display shows the battery level for 3 seconds before switching to the speed level. Toggle to (—) for power on and to (O) for shutdown.

Lever Buttons

After powering on, push this button up to increase the speed level. Hold the button to continuously increase the level up to 100. Push this button down to decrease the speed level. Hold the button to continuously decrease the level down to 01.

Note: Each time the level is adjusted, the display shows the level for 3 seconds, then switches to display the battery level for 3 seconds, and then returns to showing the level. If there is no operation for 5 minutes, the screen will turn off.

Charging display

a. When the charging cable is connected, the digital display shows the current battery level, and the battery icon lights up (blinking). If there is no operation for 5 minutes, the battery level display turns off, and the charging icon continues to blink. Once fully charged, the charging icon stays lit.

INSTRUCTIONS FOR USE

b. When using while charging: after selecting a speed level, the display shows the level for 3 seconds, and the battery icon lights up (flashes). The display then returns to show the speed level. If no operation is performed for 5 minutes, the screen turns off, but the battery icon remains lit.

c. When the battery is low (below 10%), the red percentage icon flashes. During charging, the green icon flashes slowly, and when fully charged, it stays solid green.

01 / Make sure that the power cord is pulled out of the USB port when cleaning or products are not used for a long time.

02 / Forced or violent pulling of USB power cord may lead to wire damage. Please pinch the plug and unplug it.

03 / When wiring, please pay attention to the position to avoid trip up.

04 / Do not twist, heavy pressure, over-tightly winding or process USB power cord by yourself.

PROCEDURE FOR REMOVING BATTERIES

1. Pry off the back cover.

2. Remove the battery holder from the mainboard and take out the battery.

*The battery must be removed before disposing of the appliance; The appliance must be powered off when the battery is removed; Batteries should be disposed of safely.

Important: Save These Instructions For Future Reference

Safety Notes (Please read carefully and follow strictly)

○ This product uses lithium battery, on memory function, too much or too much will affect the use of the product. Life, please charge in time and disconnect the power after full charge.

○ Do not use a power supply with an output other than 5V = 1A, as it may cause overheating or malfunction, and in severe cases, could lead to fire.

○ When the fan is working, the blades rotate at a high speed. Do not put your fingers into the fan to avoid danger.

 
 
 
○ Do not disassemble parts without permission, which may lead to product failure or damage.

○ This product is not a children's toy, children under 14 years old, please use under the care of a guardian.

○ Avoid being subjected to huge vibrations or impacts during use, and avoid falling the product off from high altitudes.

○ This fan is not waterproof, please do not use it if water enters the fan.

○ The battery should not be disassembled, hit, crushed or put into fire. If severe bulging occurs, do not continue to use. Do not place in high temperature environment.



eVatmaster Consulting GmbH
Bettinastr.30
60325 Frankfurt am Main, Germany
contact@evatmaster.com

GUARANTEE CARD

Enjoy the warranty service provided with this card, please preserve it carefully.

Thank you for purchasing this product, and the warranty expires after 12 months from purchase date. Please keep the product in good condition and fill in the information below for warranty.

Product model: Dealer name: Date of purchase:

Name: Contact phone number: Address:

Solution:

☐ Refund ☐ Replacement ☐ Repair

WARRANTY CONDITION

Please present this card when you require warranty service and fill in the necessary information. The warranty is valid for 12 months from the date of purchase.

WARRANTY SCOPE

This warranty covers quality issues arising from normal daily use without external force. We are not responsible for any damage or inconvenience incurred during the processing period. In principle, customers are not required to pay for items covered by the warranty policy. However, testing fees and charges for accessories may apply if the product is beyond the warranty period.

FREE MAINTENANCE WILL NOT BE PROVIDED UNDER THE FOLLOWING CIRCUMSTANCES

1. Damage Due to Misuse:

- Improper manipulation, destruction, or burning.
- Circuit compression or deformation.
- Outside particles entering the device.
- Dampness or modification/removal of the sealing tag.
- Any other visible damage caused by human actions.

2. Force Majeure:

- Damage caused by natural disasters, including but not limited to earthquakes, floods, typhoons or wars.

Manufacturer

Shenzhen BigCase Technology Co., Ltd.

1/F, Building E, Chengshishanhai Yunhui, No. 1067, Xuegang Rd, Bantian Street, Longgang District, Shenzhen, Guangdong Province, China

Tel : 400 9968 711

Designed by Sothing

sothing.net

SOTHING

CHECKER

DATE

SHENZHEN BIGCASE TECHNOLOGY CO., LTD

