 



STARLINK

|

STANDARD TO STANDARD ACTUATED MOUNT ADAPTER
INSTALL GUIDE

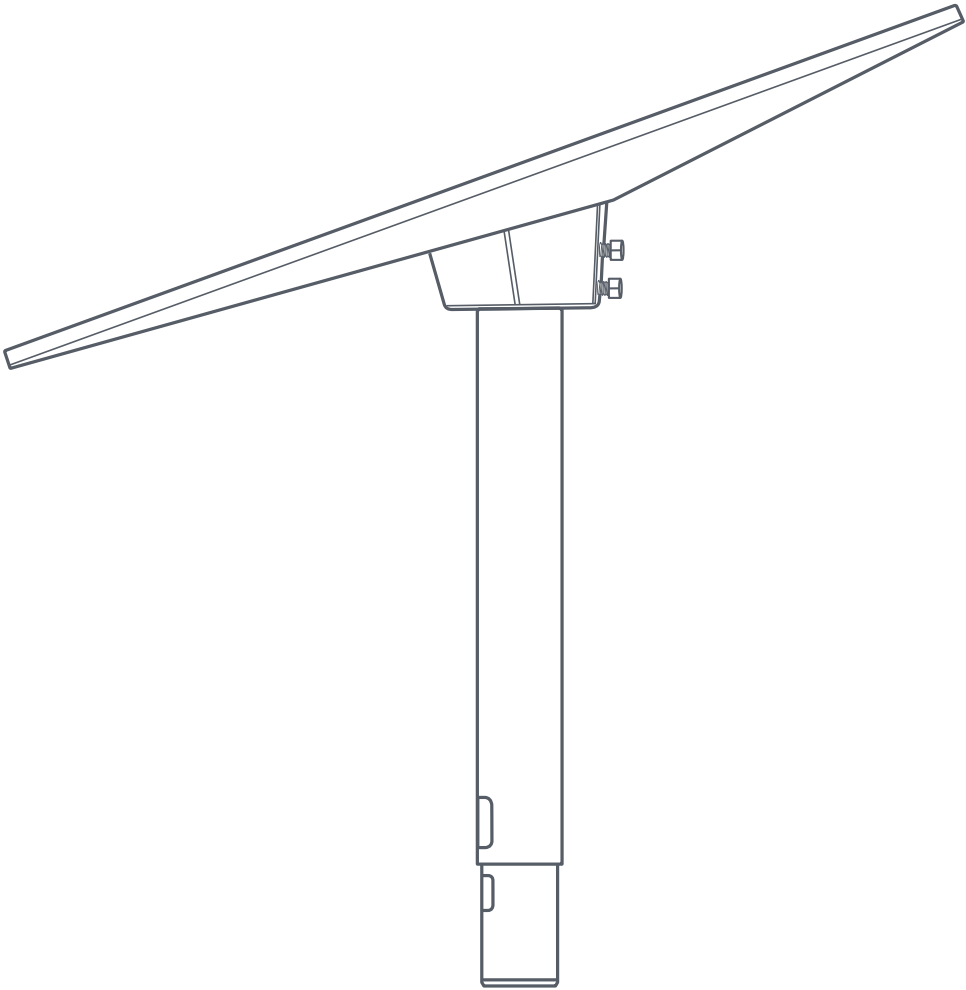

 What's in the Box

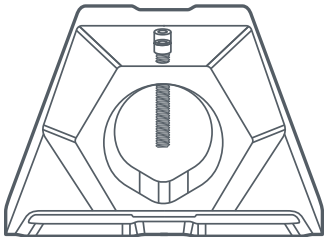


Pipe Adapter



Mast Tube



 Hex Key

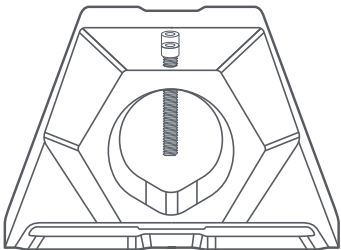


31 mm - 63 mm
(1.25 in - 2.5 in)

38.1 mm
(1.5 in)



231 mm
(9.09 in)

 
213 mm
(8.38 in)

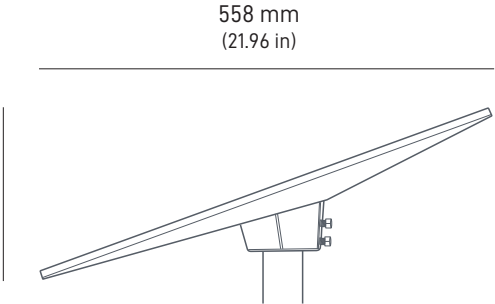

558 mm
(21.96 in)



1 | Download the Starlink App

 Scan the QR code to download the Starlink App.

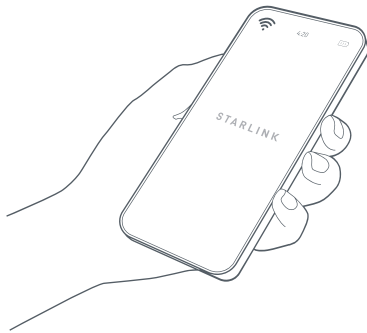



2 | Find Mounting Location

  Your Starlink needs a clear view of the sky so it can stay connected with satellites as they move overhead. Objects that obstruct the connection between your Starlink and the satellite, such as a tree branch, pole, or roof, will cause service interruptions. Use the obstruction tool in the App to ensure you have selected a suitable mounting location.

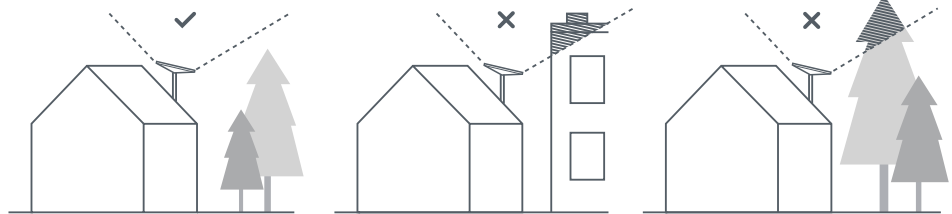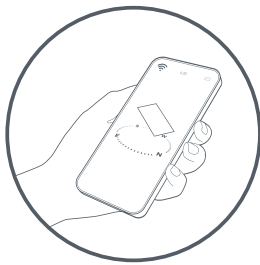


3 | Remove Kickstand

  Squeeze the release tab and pull it away from its fixed location.

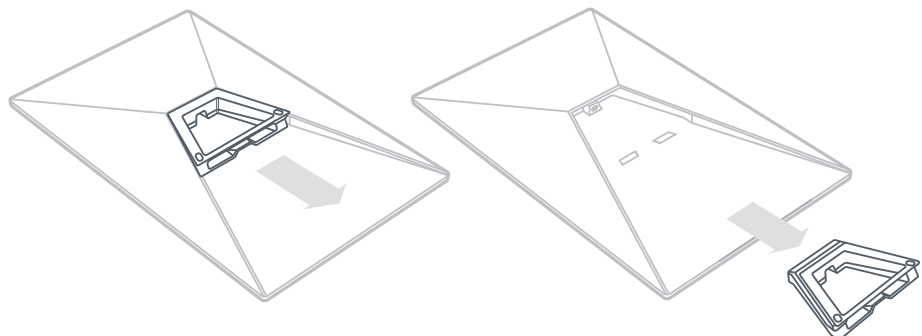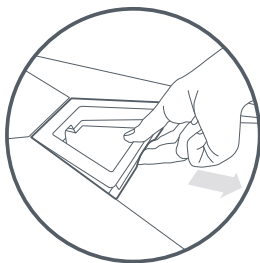

4 | **Route Cable Through Pipe Adapter**

 Route the Starlink cable through the opening in the pipe adapter and out the front end.

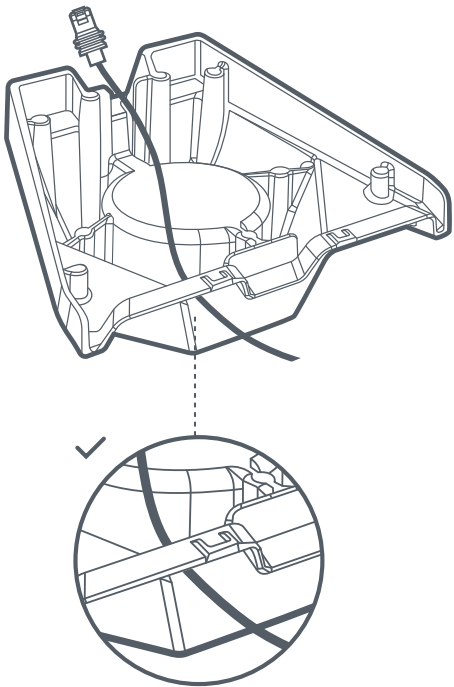


5 | **Plug in Cable and Install Pipe Adapter**

Plug the cable into your Starlink.

Ensure the plug is fully inserted such that the plug face is flush with the surface.

 
Next, slide the adapter in until it clicks into place.

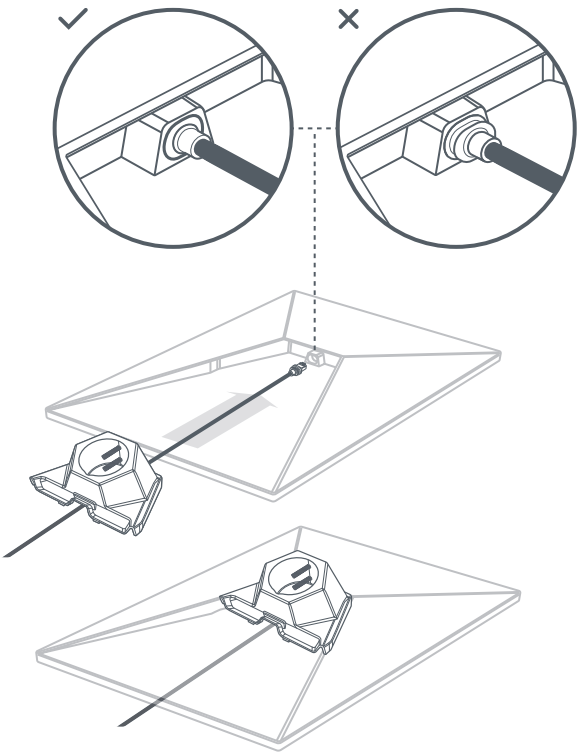

6 | Mount Starlink

Loosen the screws and slide the Pipe Adapter onto your mast tube. Temporarily tighten the screws to stabilize Starlink onto tube.

 
Connect the other end of the Starlink cable to router and plug in router power.

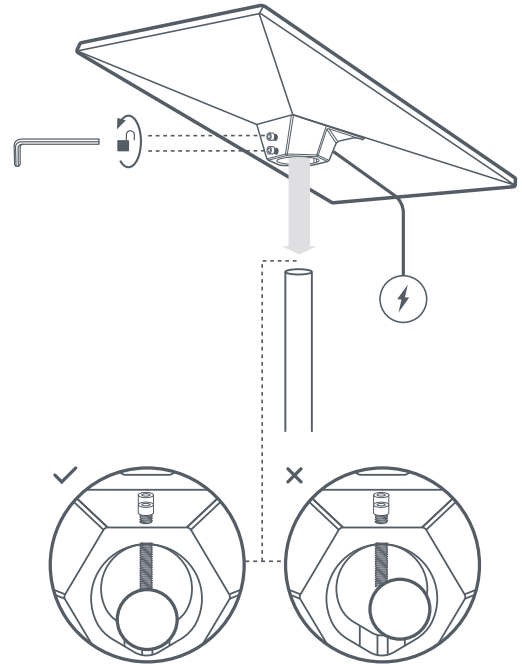

7 | Install Starlink into Mount

Slide the mast into your existing Standard Actuated Mount.

 The Standard Adapter Mount is compatible with Starlink
Standard Actuated Mounts: Short Wall Mount, Long Wall Mount,
Pivot Mount, Ground Pole Mount, Ridgeline Mount.

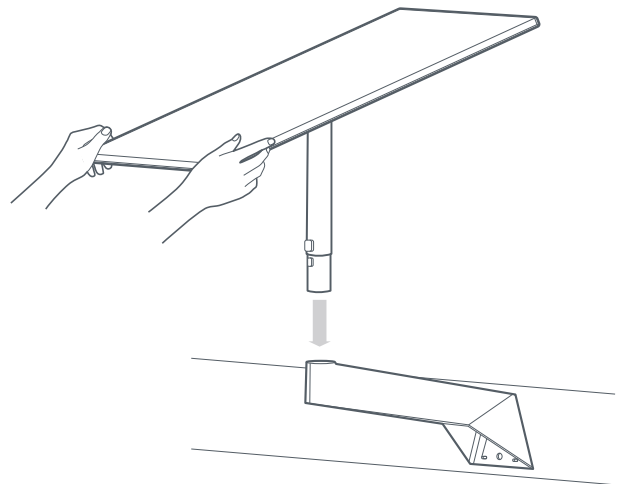

8 | **Align and Lock Your Starlink**

An alert on the App will show if you need to rotate Starlink to be properly aligned. Click the alert to use the alignment tool.

Tighten the screws on the Pipe Adapter to lock your Starlink in place. Ensure your Starlink is firmly attached.

