

18.5 Inch 1080P Portable Monitor User Manual



Email: support@uperfectmonitor.com



In order to ensure your safe use of this product, please read this manual carefully before using this product and keep it properly.



Email: support@uperfectmonitor.com

Table of contents

Chapter 01 Preparations

Welcome!

Checking the package contents

Monitor introduction

Product Appearance & Interface Function Introduction

The functions of the bracket & keyboard

Chapter 02 Specifications

Chapter 03 Connecting

TYPE-C signal transfer

Supported Devices & Models (Type-C)

HDMI signal transfer

Chapter 04 Setting Up(Windows10)

1. Extend Mode / Duplicate Mode/ Display Mode

1-1. Way1: Set on the device's Display Settings

1-2. Way2: Set via Windows key + P keyboard shortcut

2. Rotate the Screen

Chapter 05 Screen Adjustment

On-Screen Display Menu Introduction

OSD SETTING

Save settings

Chapter 06 Q&A

Chapter 07 Service Support

Chapter 01 Preparations

Checking the Package Contents



Portable Monitor



Power Adapter



Smart Cover



Mini HDMI to Standard HDMI Cable



Type-C to Type-C Cable *2



User Guide

 
Note:

•If any of the above items is damaged or missing, please

contact us immediately. (support@uperfectmonitor.com)

•The appearance of the components may differ from the images shown.

Monitor Introduction

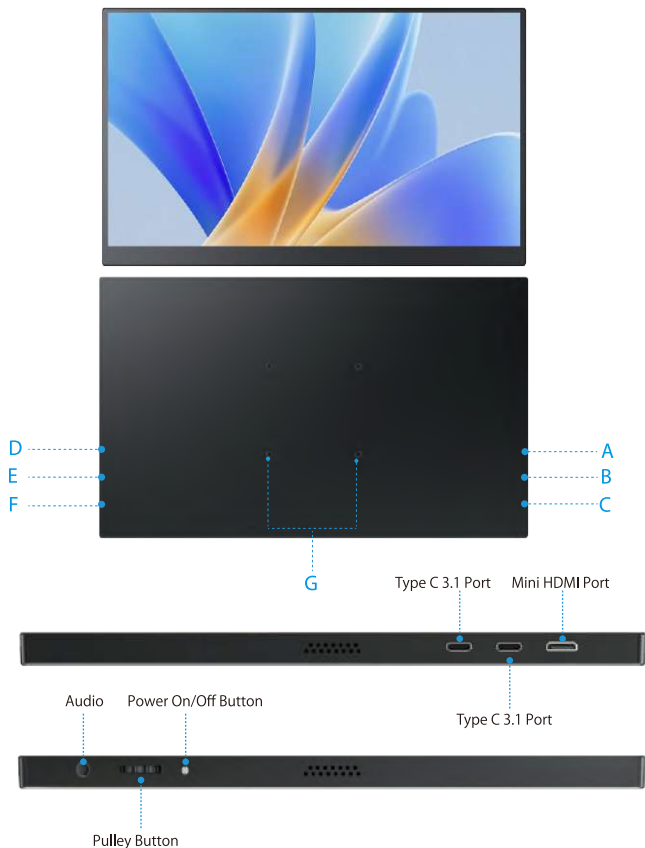

Product Appearance & Interface Function Introduction

A & B. Type C 3.1 Port

Full featured type c port. For signal and power transmission.

C. Mini HDMI Port

For Audio and Video Signal Transmission.

D. Power On/ Off Button

Long press to power off

Short press to power on or return

E. Pulley Button

Scroll the Pulley button up on the main interface to open the volume menu, then scroll up and down to adjust the volume.

Scroll the Pulley button down on the main interface to open the Brightness menu, then scroll up and down to adjust the brightness.

Press the Pulley button to enter the OSD (On Screen Display) menu. Scroll the Pulley button up and down in the menu to control the cursor, and press the Pulley button to Confirm.

F. Audio Port

 
Headphone/ Sound Box Extension Port.

G. VESA

4 M4*4mm holes.

Installing the stand case

A

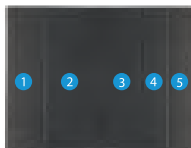

Step1: Place the holster as shown above, part "1" is magnetic.

B



Step2: Place the monitor as shown above, part "1" can be sticky.

C



Step3: Fold the Leather cases part "5" to part "4" as shown.

D



Step4: Stand up the monitor and adjust the angle



If you want an additional VESA stand, as shown below, please contact us via support@uperfectmonitor.com and we can ship it to you for free.

Chapter 02 Specifications


Color	Black
Model	M185T01
Resolution	1920*1080
Brightness	350 cd/m ²
Color Gamut	72% NTSC, 100% sRGB
Display Color	16.7M(8 Bit)
VESA	M4*4mm
Interfaces	Mini HDMI Port
	Type C 3.1 Port * 2
	3.5mm Audio Port
Panel Type	IPS

Chapter 03

Connecting

TYPE-C signal transfer

 Note: For a more stable power supply, it is recommended to use our original power adapter to power.

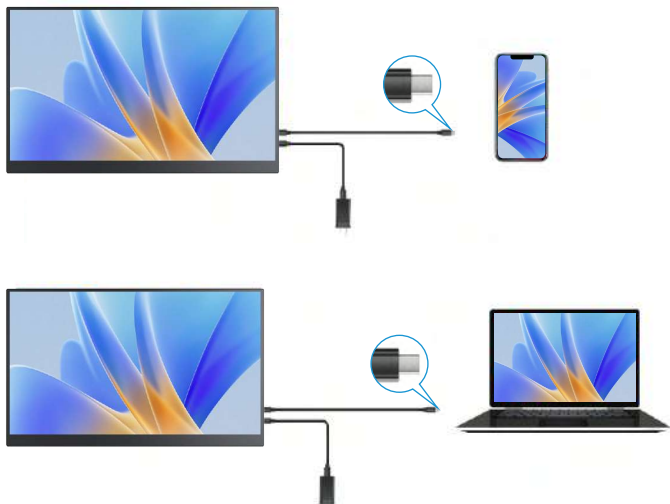

Supported Devices & Models (Type-C)

Laptop Model	
Brand	Model
Apple	Macbook 12"、Macbook 13" 2017、MacbookPro 2016/2017/2018、New Macbook Air 2018、iPad Pro 2018
Google	ChromeBook Pixels、PieBook Pen、MagicBook
Lenovo	YogaC930、Yoga 5 Pro、Yoga 6 Pro、ThinkPad XI Carbon2017、Miix 720、Legion Y7000/Y7000P/Y7000K
Dell	XPS13、XPS15、G3/G5/G7、Inspiron 5000/7000
HP	Pavilion X2、EliteBook Folio G1、EliteBook 1050 G1 Microsoft Surface Book2
ASUS	U306、U321 series、U4100、ROG series
Huawei	Matebook D、Matebook X、Matebook X Pro、Matebook E、Matebook 13
Razer	Blade Stealth
More Brands	Continuous update...



Note: Please check the Type C port of your PC/Laptop whether supports audio and video signal transmission(Thunderbolt3). If it is just a Type C for charging, you need connecting HDMI to transmit signal.

Mobile Phone Model	
Brand	Model
Samsung	S8、S8+、S9、S9+、S10、S10+、S10e、Note8、Note9
Huawei	Mate10、Mate10 Pro、Mate20、Mate20 Pro、Mate 20X、Mate P20、Mate P20 Pro、HonorNot10、Mate P30、Mate P30 Pro
More Brands	Continuous update...

Note: Please check the Type C port of your phone whether supports audio and video signal transmission (USB 3.1).

HDMI signal transfer

  Note: For a more stable power supply, it is recommended to use our original power adapter to power.

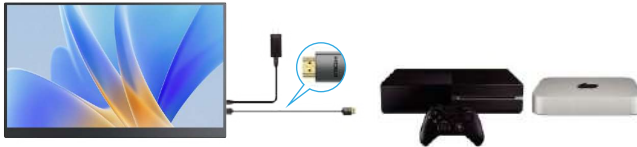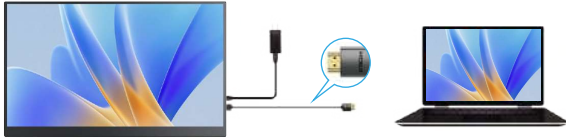

Note: If the Type-C port of your phone is not a full-featured Type-C port, or your phone is micro USB port, Lightning port, for example: Google Pixel 3, you need to buy the adapter as below. In order to enhance our customer experience, you can contact us, we will send you for free.




Chapter 04

Setting Up(Windows10)

Extend Mode / Duplicate Mode/ Display Mode

Way1: Set on the device's Display Settings

 
- A: Verify that your cables are connected properly to the new monitors.
- B: Right-click anywhere on your desktop and select Display settings to open the Display page.
- C: Scroll down to Multiple displays, then select an option from the drop-down list to determine how your desktop will display across your screens. For the largest work area, select Extend desktop.

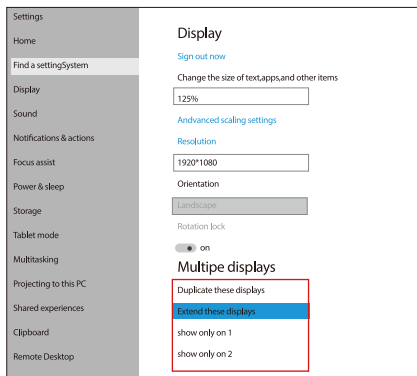

Note: If you cannot see the additional monitor(s) listed, click Detect. If does not work, try restarting your computer and do steps again.

Way2: Set via Windows key + P keyboard shortcut

 
- A: Verify that your cables are connected properly to the new monitors.
- B: Enter the "Windows" key and "P" keyboard at the same time.
- C: select an option from the drop-down list to determine how your desktop will display across your screens. For the largest work area, select Extend desktop.

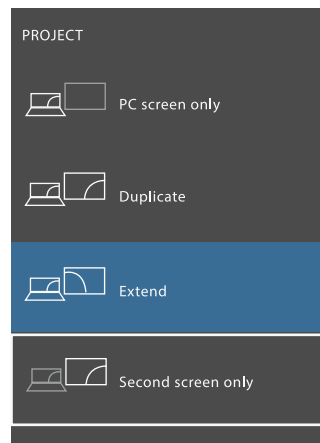

Note: If you cannot see the additional monitor(s) listed, click Detect. If does not work, try restarting your computer and do steps again.


Rotate the Screen

 - 1: Verify that your cables are connected properly to the new monitors.
- 2: Right-click anywhere on your desktop and select Display settings to open the Display page.
- 3: Under the "Select and rearrange displays" section, select the monitor that you want to adjust.
- 4: Under the "Scale and layout" section, use the Orientation drop-down menu to select Landscape or Portrait screen.

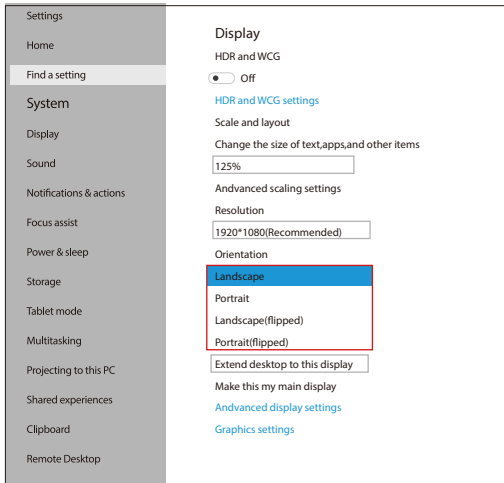


On-Screen Display Menu Introduction

 
PICTURE

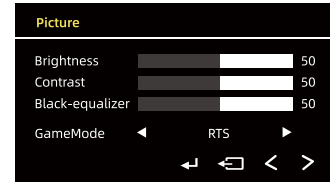


COLOR EFFECT

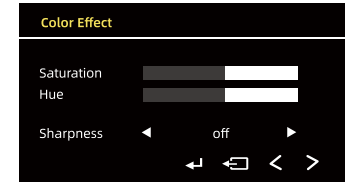 


INFORMATION

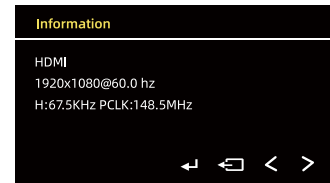 

RESET

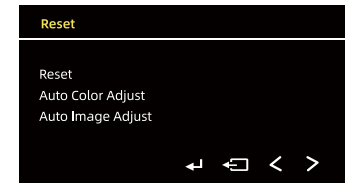 


ADVANCE

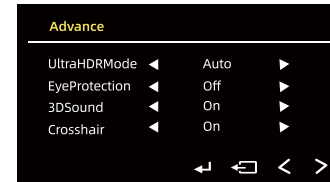 


OPTION



 TEMPERATURE

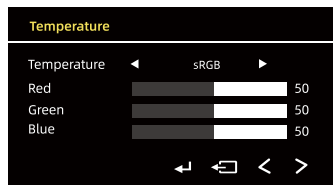

OSD SETTING

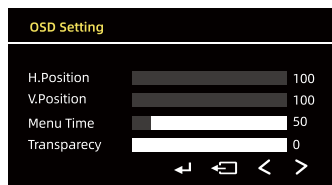 

Chapter 06

Q&A

Q: Abnormal conditions occurred - like the splash screen or spots when using the monitor.

A: 1. It is caused by an insufficient power supply. Monitor required large power support. Please use the attached genuine cable provided to power the monitor.
2. If use the mobile power bank to power the monitor, please confirm whether the mobile power bank is a PD power bank that has reached 30W or more. Please contact us if you need a power bank.
3. If the resolutions above do not work, please try another computer device. If it failed, please contact us for the replacement of the cable.

Q: The monitor fails to start and the screen is blank.

A: 1. Please TURN ON the power supply.
2. Please check whether the connection is correct. Please unplug the cable and reconnect. Please use the genuine cable and the power adapter.
Note: Most Samsung mobile phones can not power for the monitor, please power the monitor with an additional power adapter.
3. Please contact us if the troubleshooting above does not help.

Q: The display is TURN-ON, shows "NO SIGNAL" or "POWER SAVING".

A: 1. Please check if the mobile phone supports USB3.1./Thunderbolt 3. When you are using Type-C to Type-C to connect the monitor and the mobile phone. An HDMI adapter is required to transfer the signal if your mobile phone does not support USB3.1./Thunderbolt 3.
2. Please check whether the connection is correct. Please use the genuine cable provided.
3. Please try another computer. If it failed, please contact us for the replacement of the cable.

Q: The monitor is constantly restarting.

- A:** 1. It is caused by an insufficient power supply. Monitor required large power support. Please use the attached genuine cable provided to power the monitor.
2. If use the mobile power bank to power the monitor, please confirm whether the mobile power bank is a PD power bank that has reached 30W or more. Please contact us if you need a power bank.
3. If the resolutions above do not work, please try another computer device. If it failed, please contact us for the replacement of the cable.

Chapter 07

Service Support

Dear Customer,
Thank you for purchasing the Portable USB Monitor!
We offer 100% money back guarantee in 30 days and 90 days replacement, 12 month warranty for any issue, professional tech support to ensure no-worry service.
Any query or problem, please contact us via support@uperfectmonitor.com

