



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/-

Original	Replacement	Original	Replacement
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	CH -		CH- / Page-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Recall		Back / Return
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-





 +  Shift + Exit
/ Cancel /
Clear

 **Mandis**
shop
www.mandis.tv



Original	Replacement
	Power
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	[≡?]/Source
	0
	[≡i]/Info
	DMP
	Up
	EPG

Original	Replacement
	Left
	Enter
	Right
	Menu
	Down
	Exit
	Vol+
	List
	CH+
	Vol-
	CH-
	♥
	Sleep
	Index
	Back
	Red
	<<



