



按吸塑匹配盒子尺寸
(K2和K3彩盒刀模共用)
材质：250单粉对裱哑胶V槽


2024/10/05

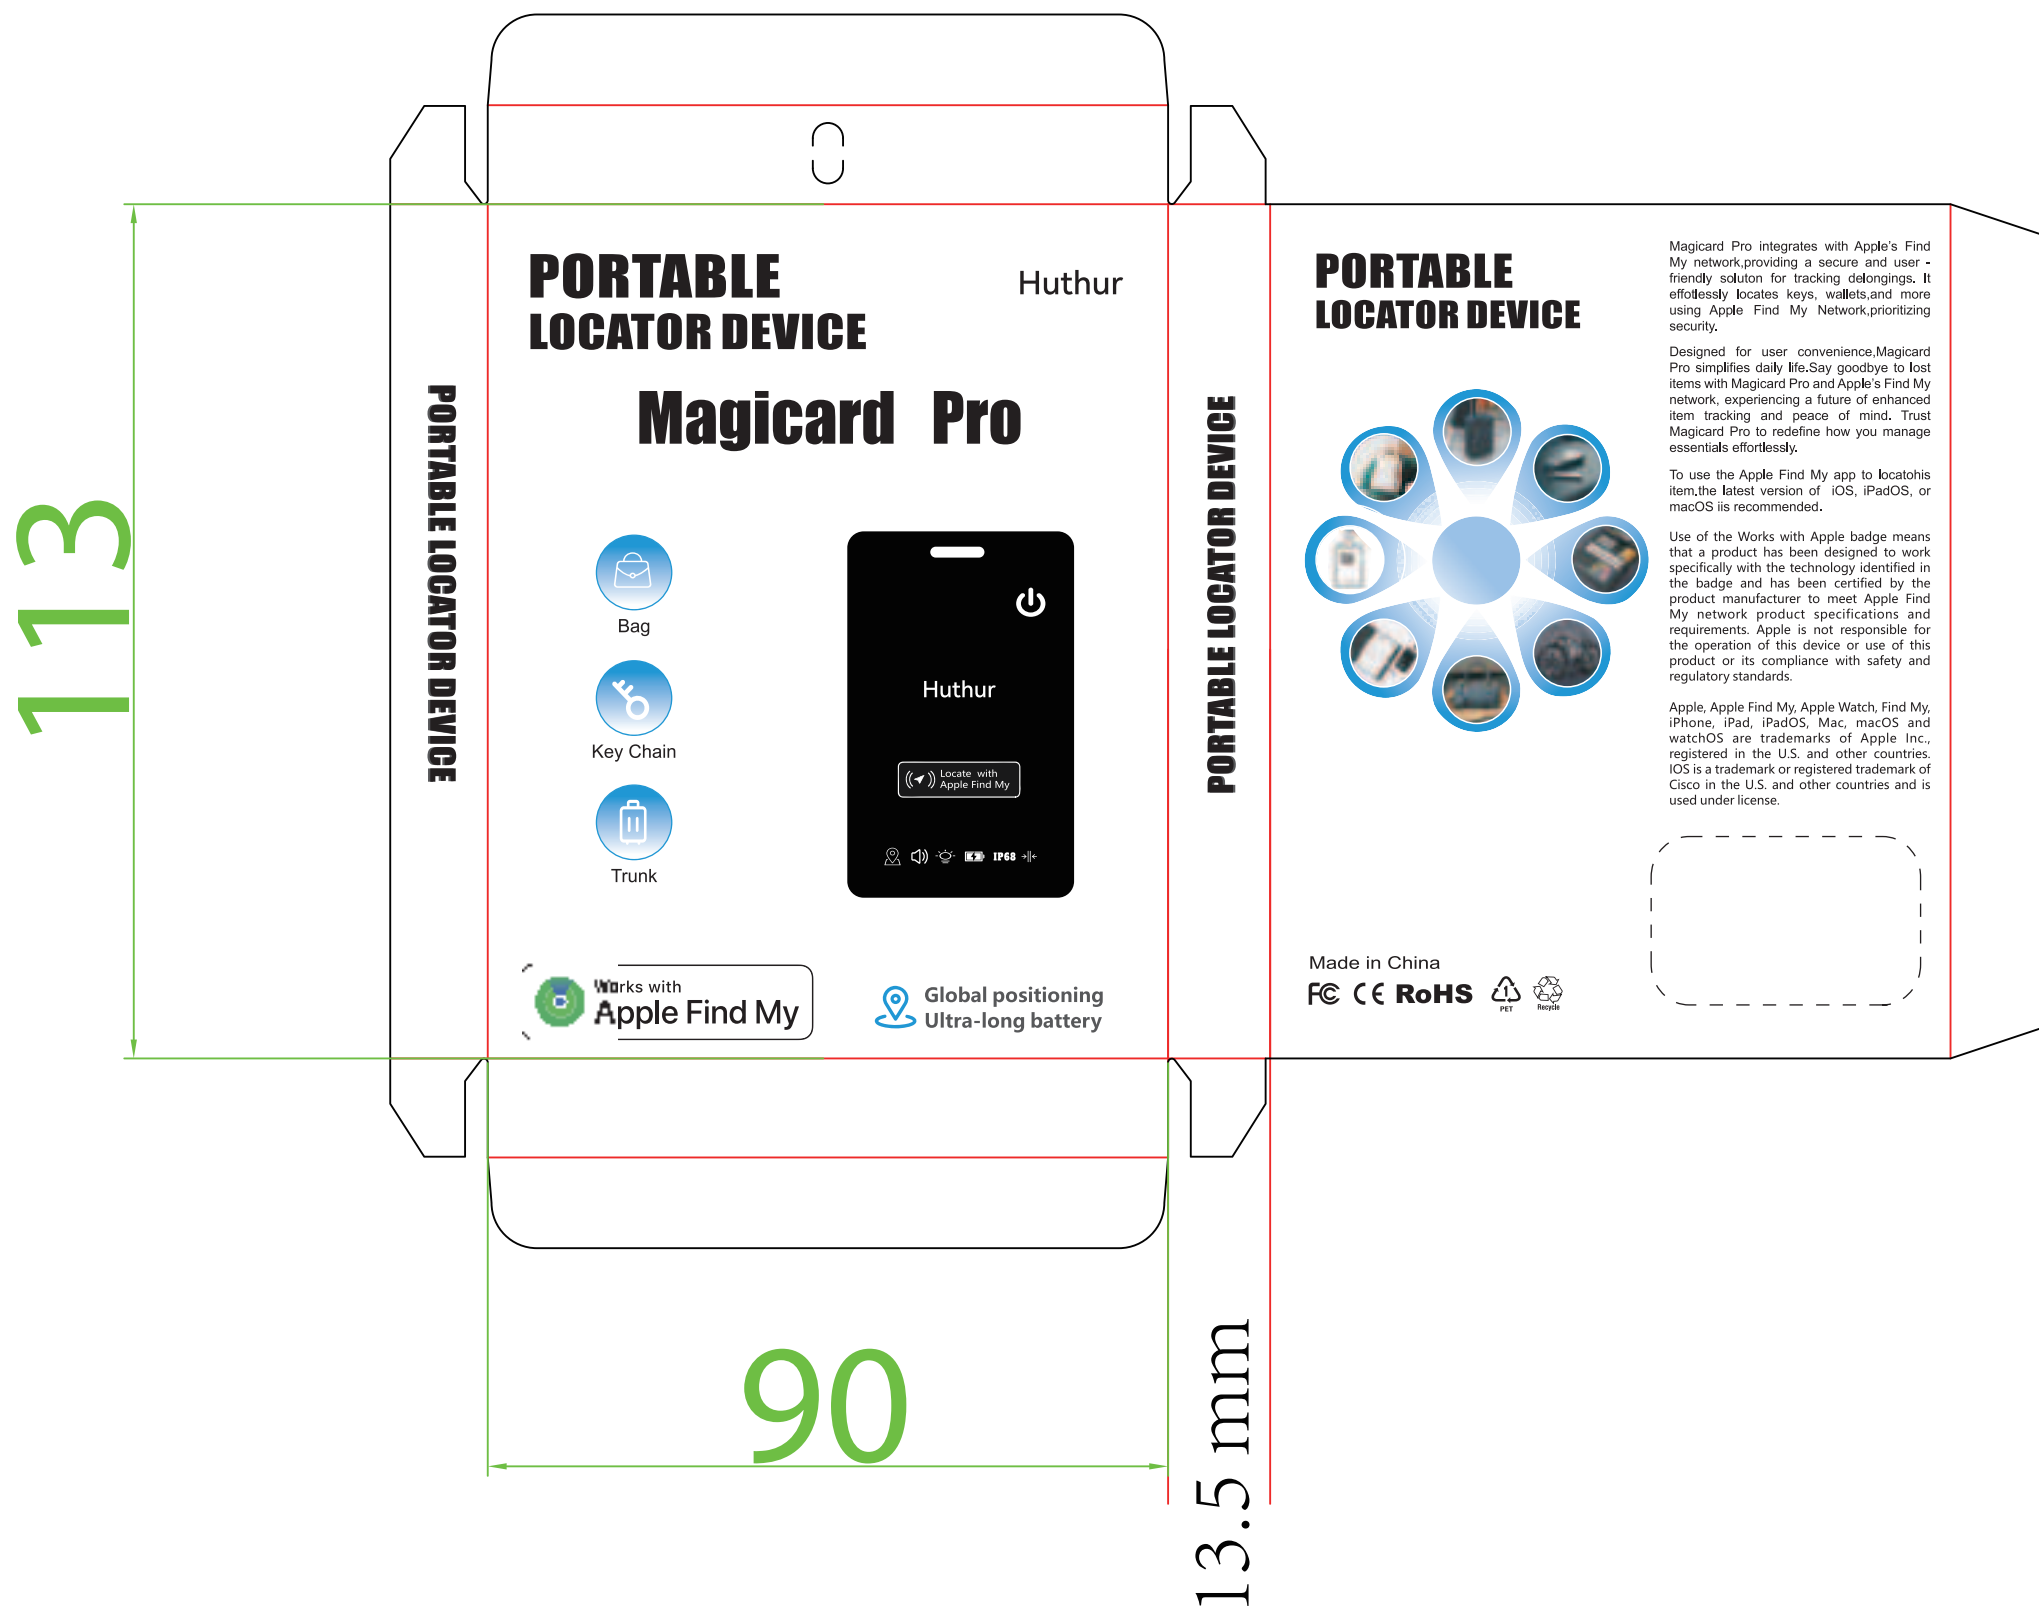

封面

<p>PORTABLE LOCATOR DEVICE</p> <p>Magicard Pro</p>  <p>Works with Apple Find My</p>	<p>Overview introduction</p> <p>Magicard Pro integrates with Apple's Find My network, providing a secure and user-friendly solution for tracking belongings. It effortlessly locates keys, wallets, and more using Apple Find My Network, prioritizing security.</p> <p>Designed for user convenience, Magicard Pro simplifies daily life. Say goodbye to lost items with Magicard Pro and Apple's Find My network, experiencing a future of enhanced item tracking and peace of mind. Trust Magicard Pro to redefine how you manage essentials effortlessly.</p> <p>Power On</p> <p>Hold the button (approximately 2s) and release until a single beep heard, indicating the device is powering on.</p> <p>Power Off</p> <p>Hold the button until you hear a single beep, followed by two consecutive beeps, and then three continuous beeps. Release the button after hearing the continuous three beeps (approximately 6 seconds), indicating the device is powering off.</p> <p>HOW TO PAIR</p> <p>Note: iOS or macOS with the latest version.</p>	<p>(Figure 1) (Figure 2) (Figure 3)</p> <p>1.1 Place the Magicard Pro next to your Apple device like iPhone.</p> <p>1.2 Turn on Bluetooth on iPhone and connect to Internet.</p> <p>1.3 Press the finder side button, hear one beep to power on.</p> <p>1.4 Open the 'Find My' app as shown in Figure</p> <p>1.5 In 'Find My' app, click on Add Item - Other Support Items. As shown in Figure 1</p> <p>1.6 Click 'Continue'. As shown in Figure 2</p> <p>1.7 Name your Finder and click 'Continue'. As shown in Figure 3</p> <p>1.8 Select emotions</p> <p>1.9 Click 'Continue', then click 'Finish' to complete.</p> <p>Battery</p> <p>Magicard Pro contains a rechargeable lithium battery.</p>	<p>Battery Charging</p> <p>2.1 Locate the wireless charging logo on the back of the card;</p> <p>2.2 Align it and place it on a charger that supports wireless charging;</p> <p>2.3 When the battery is fully charged, the FINDER indicator will turn off, accompanied by 3 beeps of Drip, Drip, Drip.</p> <p>ADDITIONAL TIPS</p> <p>3.1 Press and hold the button until you hear 1 prompt tone, followed by 2 consecutive prompt tones, and then 3 consecutive indicator tones. Continue to press for 5 seconds. When you hear a long indicator tone, release the button to restore the device to its factory settings.</p> <p>3.2 To remove the FINDER from your Apple devices, open the Find My app, select 'Items', find the device, and scroll down to click on 'Remove this device'.</p> <p>3.3 If the FINDER fails to connect to the Find My app, follow the instructions in section 3.1 to perform a factory reset, and then restart the pairing process.</p> <p>Important matters</p>	<p>The Magicard Pro contains delicate electronic parts, including a battery. To avoid damage, loss of function, or potential harm, please refrain from dropping, hitting, puncturing, crushing, disassembling, exposing it to extreme heat or liquids, or placing it in areas with a high concentration of industrial chemicals.</p> <p>WARNING: Do not swallow the battery; there is a chemical burn hazard</p> <p>Choking Hazard Warning</p> <p>The FINDER, its battery compartment door, the battery itself, and the case may pose a choking hazard or cause injury to small children. Please keep these items out of reach of young children</p> <p>Medical Device Interference</p> <p>The FINDER contains components and radios that emit electromagnetic fields, as well as magnets. These elements may potentially interfere with pacemakers, defibrillators, or other medical devices. To ensure safety, maintain a safe distance between your medical device and the FINDER. We strongly advise consulting your physician and the manufacturer of your medical device for information that is specific to your situation. If you suspect that the FINDER is interfering with your pacemaker, defibrillator, or any other medical device, discontinue its use immediately.</p>	<p>Important Handling Guidelines</p> <p>It's normal for the FINDER to show discoloration with regular use. To clean it, use a soft, dry, lint-free cloth. Avoid applying pressure with sharp objects on the rubber seal or the battery terminal contacts inside the device.</p> <p>Do not allow moisture to enter any openings or use aerosol sprays, solvents, or abrasive materials to clean the device.</p> <p>Legal notice</p> <p>Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.</p> <p>Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPods, Mac, macOS and watchOS are trademarks of Apple Inc., registered in the U.S. and other countries. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.</p>
--	--	---	---	---	--

封底

<p>便携式防丢器</p>  <p>Works with Apple Find My</p>	<p>概述介绍</p> <p>Magicard Pro与苹果的Find My网络集成，为追踪物品提供了一个安全且对用户友好的解决方案。使用 Find My 网络轻松定位钥匙、钱包等，并优先考虑安全性。Magicard Pro 专为方便用户设计，简化了日常生活。使用 Magicard Pro 和苹果的Find My网络告别丢失物品，体验增强物品防盗和安心的生活方式。相信 Magicard Pro 可以重新定义您轻松管理物品。</p> <p>开机</p> <p>短按功能按键（约2秒），听见1声提示音，表示设备开机。</p> <p>关机</p> <p>长按住功能按键，将依次听见1声提示音、连续的2声提示音、连续的3声提示音，此时松开按键（约6秒）。</p> <p>如何配对</p> <p>注：iOS或macOS为14.6以上版本。</p>	<p>(1) (2) (3)</p> <p>1.将FINDER放在您的苹果设备（如iPhone）旁边；</p> <p>2.在您的苹果设备（如iPhone）上打开蓝牙并连接到互联网；</p> <p>3.轻按一下FINDER按钮，听到一声蜂鸣声即可接通电源；</p> <p>4.打开“查找”应用程序，如图 所示；</p> <p>5.在“查找”应用程序中，点击添加物品-其他支持物品，如图1所示；</p> <p>6.点击“继续”，如图2所示；</p> <p>7.命名您的 Magicard Pro，然后点击“继续”，如图3所示；</p> <p>8.选择一个震动频率；</p> <p>9.点击“继续”，然后点击“完成”，即可完成配对。</p> <p>电池</p> <p>Magicard Pro 包含一块可充电的锂电池。</p>	<p>充电操作</p> <p>2.1找到卡片背面的无线充电标识；</p> <p>2.2将卡片对准在支持无线充电的设备上；</p> <p>2.3当电量充满后，Magicard Pro 指示灯会熄灭，并伴随有滴、滴、滴3声提示音。</p> <p>其他提示</p> <p>3.1长按按钮，直到听到1个提示音，然后是2个连续提示音，再是3个连续提示音，持续约5秒钟。当您听到长提示音时，松开按钮设备将恢复出厂设置。</p> <p>3.2要从您的苹果设备中删除 Magicard Pro，请打开“查找”应用程序，选择“物品”，查找设备，然后向下滑动点击“移除此设备”；</p> <p>3.3如果 Magicard Pro 无法连接到Find My应用程序，请按照第3.1中的说明，执行恢复出厂设置，然后重新启动配对过程。</p> <p>重要事项</p>	<p>Magicard Pro 包含精密的电子零件，包括电池。为避免损坏，功能失常或潜在危害，请避免跌落、撞击、刺穿、挤压、拆卸、暴露在高温或液体中，或将其放置在工业化化学品浓度高的区域。</p> <p>警告：请勿吞下电池；存在化学灼伤危险</p> <p>窒息危险警告</p> <p>Magicard Pro - 电池舱门、电池本身和外壳可能会造成窒息危险或对幼儿造成伤害。请把这些东西放在小孩够不着的地方。</p> <p>医疗器械干扰</p> <p>Magicard Pro 包含发射电磁场的组件和无线电。这些元件可能会干扰起搏器或其他医疗设备。为确保安全，请在您的医疗设备和 Magicard Pro 之间保持安全距离。我们强烈建议咨询您的医生和医疗设备制造商，以获取针对您具体情况的指导。如果您怀疑 Magicard Pro 干扰了您的起搏器或任何其他医疗设备，请立即停止使用。</p> <p>重要处理指南</p>	<p>Magicard Pro 在经常使用时出现变色是正常的。要清洁它，请使用柔软、干燥、无绒布。避免用尖锐物体对设备内部的橡胶密封件或金属端子施加机械应力。</p> <p>不要让湿气进入任何开口，也不要使用气雾剂、溶剂或研磨材料清洁设备。</p> <p>法律声明</p> <p>使用Works with Apple Find My徽章意味着产品已被设计为专门与徽章中确定的技术配合使用，并已通过产品制造商的认证。以确保 Apple Find My网络产品的规范和要求。苹果不对本产品的操作、本产品的使用或其是否符合安全和监管标准负责。Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPods, Mac, macOS和watchOS是苹果股份有限公司在美国和其他国家注册的商标。iOS是思科在美国和其他国家/地区的商标或注册商标。经许可使用。</p>
--	--	---	--	--	---

K2说明书，正反面折页5折6页

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.