



 
**EN** Instruction manual



**SMART** Fan & Air Purifier

01.358480.02.001

## Parts description

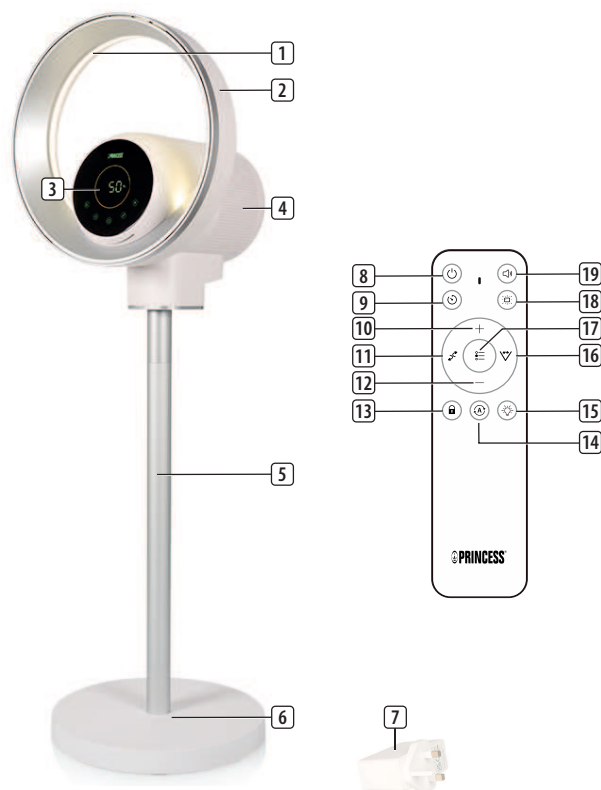

**IMPORTANT SAFETY INSTRUCTIONS - READ ALL INSTRUCTIONS CAREFULLY EVEN IF YOU ARE FAMILIAR WITH THE APPLIANCE**

- This product is intended for general domestic use only. Do not use the product for any other purpose.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not leave the product unattended while it is in use, especially when children are present.
- Always unplug the product from the electrical outlet when it is not in use.
- Always operate the product on a flat, level, steady, and stable surface to avoid it overturning.
- Do not hang or wall-mount the product.
- Always unplug the product from the electrical outlet when cleaning it.
- Do not place the product in or near an open window. Rain, snow, and other weather elements may create an electrical hazard.
- Do not plug/unplug the product into/from the electrical outlet with a wet hand.
- Never drop or insert objects into any opening of the product.
- Do not attempt to open any part of the motor housing, as a risk of electrical shock may exist.
- Do not allow the power cord to hang (i.e., over the edge of a table or counter) where it may be tripped over or pulled.
- Do not operate product if the power cord is cut, damaged, or if the wires are exposed.
- Do not immerse or expose the motor housing, power cord, or plug to water or other liquids.
- Do not put any stress on the power cord where it connects to the product, as the power cord could fray and break.
- Only use the adaptor supplied with the product.
- Do not operate the product if it has a damaged power cord or plug, malfunctions, is dropped, or damaged. Do not attempt to

EN

examine or repair this product yourself.

Qualified service personnel should perform any servicing.

- This product is intended for indoor, non-commercial, non-industrial, household use only.
- Do not use outdoors.
- To disconnect the product, set main switch to OFF then remove the plug from the outlet. Do not pull on the power cord when disconnecting.
- Ensure that the product is switched OFF and unplug from the supply mains before cleaning and maintenance.
- Do not move the product when it is in use.
- Do not run the power cord under carpeting or cover the power cord with throw rugs, runners or the like. Arrange the power cord away from traffic areas and where it will not be tripped over.
- Do not use this product with a programmer, timer or any other device that switches the product on automatically, since a fire risk exists if the product is covered or positioned incorrectly.
- Do not place any objects on/cover the air inlet or outlet. Make sure that the ventilation openings are free of dust, lint, hair or any other obstacles that could impair the air flow in/out.

#### **WARNING**

- Do not place the appliance near any power board or socket outlet.
- If the supply power cord is damaged, the power cord must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This product has not been designed for any uses other than those specified in this booklet.


#### **Safety Batteries**

- Do not expose the battery to high temperatures or direct sunlight. Never throw batteries into the fire. There is a danger of explosion!
- Keep batteries away from children. Batteries are not a toy!
- Do not open the batteries by force.
- Avoid contact with metallic objects.(Rings, nails, screws et cetera) there is a danger of short-circuiting!
- As a result of a short-circuit batteries may heat up considerably or even catch fire. this may result in burns.
- For your safety the battery poles should be covered with adhesive strips during transport.

- Do not touch a ruptured and/or leaking battery. If the liquid from the battery gets into your eyes, rinse your eyes as soon as possible with clean water, without rubbing your eyes. Immediately go to the hospital. If it is not treated properly, it can cause eye problems.
- Do not ingest battery, Chemical Burn Hazard;
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- The batteries contain materials, which are hazardous to the environment; they must be removed from the appliance before it is scrapped and they are disposed of safely

#### Battery installations:

EN

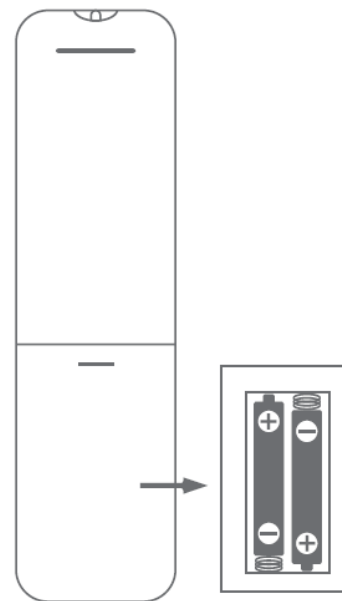 

*Illustration 1:* Open the battery socket at the back. Insert two new AAA 1.5V alkaline batteries. Align with polarity indicator markings (+/-) inside the battery compartment. Slide back the battery cover. Make sure the locking tabs click into place.

## PARTS DESCRIPTION

1. LED ring
2. Air outlet ring
3. Display and control panel
4. Air inlet
5. Aluminium support
6. Base
7. AC Adaptor
8. Power ON/OFF
9. Timer
10. Increase air speed
11. Swing ON/OFF
12. Decrease air speed
13. Child lock
14. Automatic mode
15. Atmosphere night light
16. Swing angle
17. Air mode
18. Display ON/OFF
19. Sound ON/OFF

## BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Never use abrasive products.
- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.

- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device.)

### How to assemble

#### 1. Assembling the fan

First place the main body on the foam from within the box. Remove plastic packaging and the parts.

##### Step 1: Install the fan air-outlet ring

 
1. Install the air-outlet ring to the main body of the fan.
2. Insert the fan air-outlet ring screw into the hole at the bottom of the air-outlet ring.
3. Use the wrench to clockwise tighten the fan air-outlet ring screw.

##### Step 2: Installing the pillar

4. Insert the aluminium support of the fan into the bottom of the main body of the fan.
5. Rotate the aluminium support clockwise until it is securely attached to the bottom part of the main body.

##### Step 3: Install the base

6. Install the aluminium support onto the fan base as shown in the figure. Make sure to align the connecting part on the base with the groove inside the aluminium support.
7. Insert the fan base bolt into the hole at the bottom of the base.
8. Tighten the base bolt clockwise by the wrench.

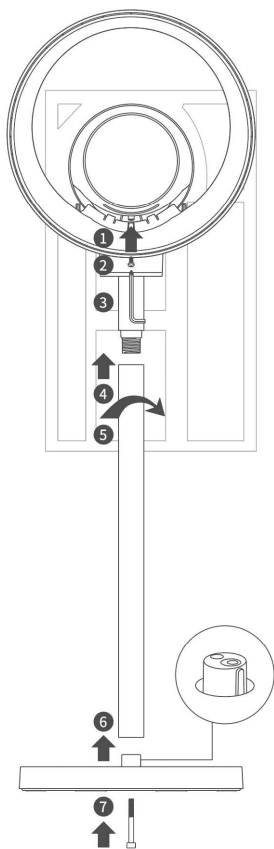


### 1. Installing the air filter

This product is equipped with a clean air filter that can purify the air. The filter must be installed into the main body before use.

**Step 1:** Rotate the air filter cover counter clockwise to remove the cover

**Step 2:** Put the air filter into the main body, as shown in the figure

 **Step 3:** Put the cover back on and rotate it clockwise to secure it

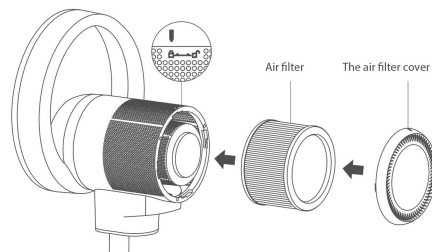


### Filter cleaning reminder

This product is equipped with a clean air filter, before use be sure to install it. The product has a memory function. After 720 hours of operation, the filter replacement light will turn on indicating that the filter must be changed. After replacement, long press the ON/OFF button of the remote for 5 seconds to reset the light.

### Control Panel and Display

 1. Automatic mode
2. Turbo mode
3. Sleep mode
4. Natural mode
5. Unit of temperature
6. Unit of humidity
7. Unit of PM2.5
8. Mode
9. Timer
10. Child lock
11. Power ON/OFF
12. Wifi
13. Replace air filter
14. Swing
15. Air speed

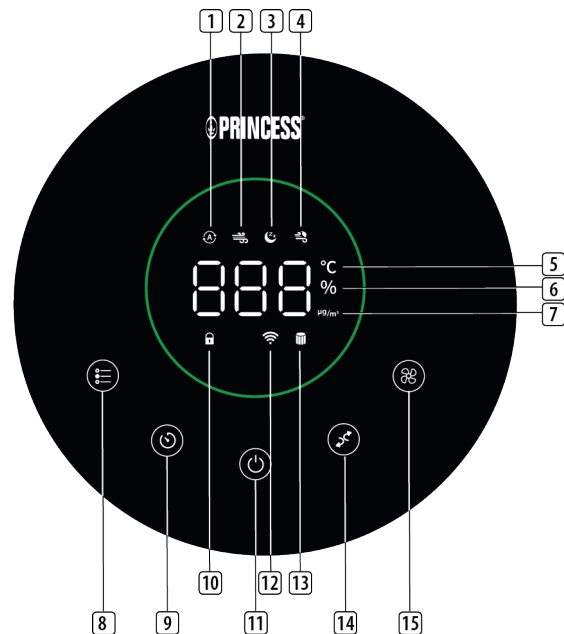




## USE

1. When using the fan, make sure that it is on a flat and stable surface. Damage may occur if it is placed on an incline or decline. Do not block the air inlet and outlet. Also make sure that there is no obstacle within 30 cm in front of the air outlet to avoid weakening of the air.
2. Adjust the air supply direction. Gently press forward/backward on the top part of the fan air-outlet ring. The ring can be adjusted to supply the output air upward or downward.
3. Insert the plug into a mains power outlet. Ensure that the voltage on the specifications plate is the same as in your home. The fan beeps once, indicating that it is connected to the power supply and is in the standby mode.


**NOTE:** The fan makes a “beep” every time when it is operated.
 
### Modes

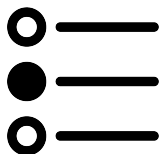

#### Mode

 - Press the Mode button to cycle through four airflow styles: “Automatic”, “Turbo”, “Sleep”, “Natural”. If you press again when the fan is in “Natural” mode, it will cancel any mode setting.

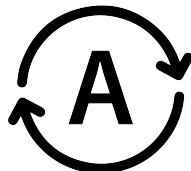

#### Automatic mode

- The fan automatically adjusts the airflow speed according to the real-time detected PM2.5 level:

|                     |       |        |        |         |
|---------------------|-------|--------|--------|---------|
| PM2.5 The numerical | 0-35  | 36-70  | 71-120 | 121-999 |
| Airflow speed       | 01    | 03     | 05     | 09      |
| Color of display    | green | yellow | orange | red     |



#### Turbo mode

- The airflow speed is set to the highest level.



#### **Sleep mode**

 
- The airflow speed and noise are reduced to the lowest level.



#### **Natural mode**


- The airflow speed switches between 3, 4, and 5 in turn.
- Press again when the fan is in "Natural" mode will cancel any mode setting. You may also press the Air Speed button to exit the current mode.

### **Button operations**

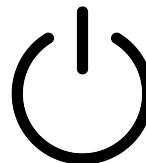

#### **Power ON/OFF**

 - When the fan is in standby mode, press the ON/OFF button to turn ON the fan in normal mode at the default fan speed. When the fan is in operation, press the ON/OFF button again to turn it OFF.

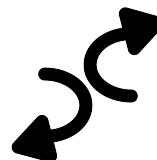

#### **Swing ON/OFF**

- Press this button to turn ON/OFF the horizontal oscillation of the fan.



### Swing angle

- When the fan oscillation is turned ON, press this button to switch between the four horizontal oscillation angle 30°, 60°, 90° and 120°. The current oscillation will be displayed. Please note that there will be no response if the fan oscillation is OFF.



### Timer

- Press this button to adjust the timer setting with 1-hour intervals. Each press will increase the timer by 1 hour. When the timer setting is 24 hours, you can press once again to return the setting to 0.



### Air speed +/-

- Press the +/- button to increase/ decrease the airflow speed.



### Sound ON/OFF

- Press this button to turn ON/ OFF the button pressing sound.



#### Display ON/OFF

- Press this button to turn ON/OFF the display screen light. When the screen light is OFF, only the WIFI symbol and power ON/OFF button will be displayed.



#### Child lock

- Press this button to turn ON/OFF the child lock. When the child lock is ON, all the buttons except the power ON/OFF and child lock button become invalid.



#### Ambient light

- Press this button to turn on the ambient light. There are 4 brightness.



#### USING THE DEVICE WITH PRINCESS HOME APP

- Download the correct version of the Princess Home app via our website [princesshome.eu/nl-nl/princess-home-app](https://princesshome.eu/nl-nl/princess-home-app) or use QR:



iOS™



Android™

### Pair your device to the Princess Home app

- Make sure your device is plugged in and turned off.
- Press and hold the Power on/OFF button for 5 seconds. The WIFI icon flashes.
- Open the Princess Home app.
- Select your country code, enter the cell phone number and tap "Get" to get a message containing the verification code.
- Enter the verification code in the message and tap "Log in" to log in to the App.
- Click "Add Device" to add a new device.
- Select the device you want to connect.
- Follow the instructions on the app to connect the device.
- When the fan is connected to the app, the WIFI icon lights up.
- To control your device with voice using a smart speaker please refer to the manufacturer's instructions on how to enable a skill through your device.

## ENVIRONMENT



■ This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.



Disposal of an exhausted battery.

To preserve natural resources, please recycle or dispose of the batteries properly.

Consult your local waste authority for information regarding available recycling and / or disposal options.

### Support

You can find all available information and spare parts at [www.princesshome.co.uk](http://www.princesshome.co.uk).



This product is only suitable for well insulated spaces or occasional use.

Wireless technology: Wi-Fi

Operating frequency: 2400-2483.5MHz

Max. radio-frequency power: 20dBm



**smartwares<sup>®</sup> Europe**  
Swaardvenstraat 65 | 5048 AV | Tilburg  
The Netherlands | [www.princesshome.eu](http://www.princesshome.eu)



**smartwares<sup>®</sup> Safety and Lighting Ltd.**  
West Point, Second Floor | Mucklow Office Park  
Mucklow Hill | Halesowen | West Midlands | B62 8DY  
United Kingdom | [www.princesshome.co.uk](http://www.princesshome.co.uk)