


### The first method

1. Turn on the machine and enter the BIOS by repeatedly pressing the "Delete" button.



2. Select to enter Chipset, select "South Cluster Configuration".

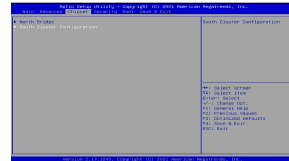

3. Enter "Restore AC Power Loss" and set it to "Power On".




4. Press F4 to save the settings, save the BIOS settings and enter the system for shutdown. After unplugging and plugging in the power supply again, test if you can achieve the function of automatic power on.

### The second method

1.Remove the bottom screws and open the bottom case. You can find the word mark "AT\_ATX" shown in the picture.



2. The "auto power on" function is in the off status while the cap locates at the white arrow side. See picture below.

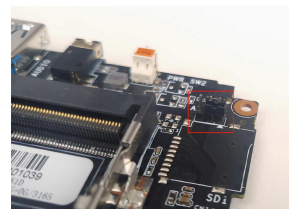

3. Move the cap to the side pin nearby and the "auto power on" function is set well.  
Refer to the picture

