

Jabra Engage 65 Stereo

How do I set a preferred softphone in Jabra Direct?


Prerequisites

• Jabra Direct - latest version

If you have multiple softphones installed, you can select a preferred softphone. Follow these steps.

- 1. Open Jabra Direct.
- 2. On the left menu, click **Settings**.
- 3. In **Softphone Integration > Preferred Softphone**, select your preference.

If your organisation has decided to manage the setting centrally, this will be indicated by a **Lock** icon.

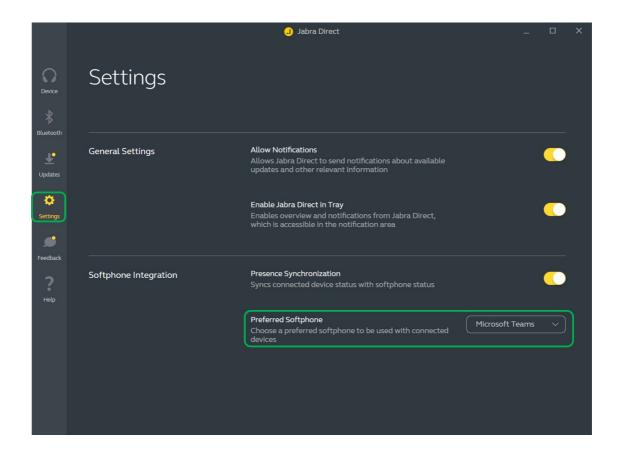



Note

Images and text are for guidance purposes only. Actual images and text may vary depending on the device connected and updates to the software.