

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-Reorient or relocate the receiving antenna.  
-Increase the separation between the equipment and receiver.  
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.


Thermal Receipt Printer

58MM Thermal Receipt Printer  
User Manual

Please keep use manual for reference

Product packaging list

Printer	1 PC
Power cable	1 PC
Power adapter	1 PC
Data connection line	1 PC
User manual	1PC
Paper roll	1Roll
Driver(Optional)	1PC

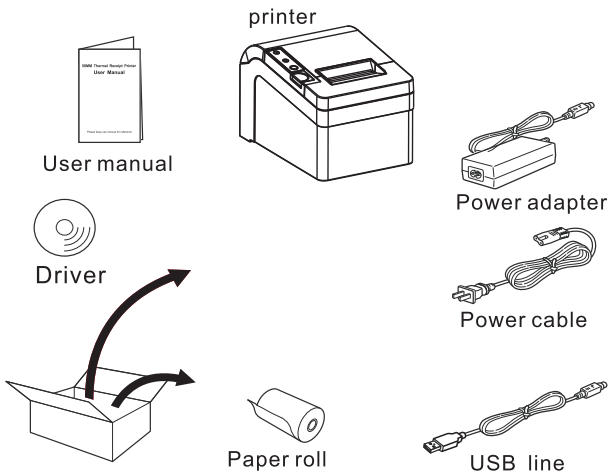


Paper roll loading

58mm thermal paper roll recommended to 58mm series printers.

The method of paper loading is as below:

- Open top cover.
- Drop paper roll in the hole as below.
- Pull the paper into the paper holder, the close top cover.
- Print one self-test to make sure paper correctly installed.

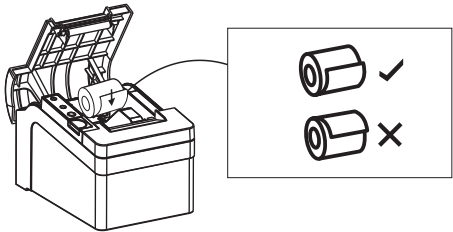

Printer function description

Button name,indicator LED light and function

- FEED button  
Press to FEED paper manually.
- Status indicator