

Merci d'avoir choisi le bande lumineuse à DEL Intérieur/extérieur intelligente de Monster Smart Illuminescence. Ce guide de démarrage rapide vous aide à configurer et à installer votre appareil.

INCLUS DANS LA BOÎTE

- Bande lumineuse murale festive RGBW
- Accessoires de montage mural x4 pièce
- Piquets de terre x2
- Cordon d'alimentation
- Guide de départ rapide

QU'AVEZ-VOUS BESOIN ?

- Téléphone cellulaire ou tablette sous Android® 6.0
- Marchalow ou supérieur / iOS 10 ou supérieur
- Routeur Wi-Fi avec une connexion Internet
- Wi-Fi 2.4 GHz 802.11n
- Tournevis à tête Phillips

Avant la configuration, assurez-vous que votre téléphone ou votre tablette est connecté au **réseau Wi-Fi 2.4 GHz** sur lequel votre bande lumineuse à DEL sera placée. Vous également vous assurer que la fonction de localisation est activée afin de localiser les dispositifs se trouvant à proximité.

CONSEIL : Connaître le nom et le mot de passe de votre réseau Wi-Fi? Écrivez-le maintenant si il est difficile de vous en souvenir.

RIEN D'AUTRE ?

Le cordon d'alimentation doit être connecté à une prise de type plaque de recouvrement à rapid et protégée par GFCI portant la mention "Wet Location" lorsqu'il est utilisé à l'extérieur.

CONSEIL : Conservez ces instructions pour consultation ultérieure.

embûle de puissance: 120V AC

INTÉRIEUR/EXTÉRIEUR BARRE BARRE LUMINEUSE MURALE FESTIVE RGBW

GUIDE DE DÉMARRAGE RAPIDE

MOW-1003-CAN - v2.0 05/24

COMMENCER

ÉTAPES 1

INSTALLER

ÉTAPES 2

ÉTAPES 3

ÉTAPES 4

ÉTAPES 5

ÉTAPES 6

INSTALLATION

ÉTAPES 7

COMMENT UTILISER

ÉTAPES 8

CONTRÔLE PAR APPLI: ÉDITION DES SCÈNES

CONTRÔLE PAR APPLI: SON RÉACTIF

PDF Adobe

MONSTER SMART ILLUMINESSENCE

INDOOR/OUTDOOR RGBW PARTY WALLWASHER LIGHT BAR

QUICK START GUIDE

MON7-1003-CAN - v2.0 05/24

GETTING STARTED

Thank you for choosing the RGBW Party Wallwasher Light Bar by Monster Smart Illuminescence. This **Quick Start Guide** will help you with setup and installation of your device.

WHAT'S IN THE BOX

- RGBW Party Wallwasher Light Bar
- Wall Mounting Accessories x4 pair
- Ground Stakes x2
- Power Cord
- Quick Start Guide

WHAT DO YOU NEED?

- Cellphone or tablet with Android™ 6.0 Marshmallow or higher / iOS 10 or higher
- Wi-Fi router with an internet connection
- Wi-Fi 2.4GHz 802.11n
- Phillips head screwdriver

Before setup, make sure your phone or tablet is connected to the **2.4GHz Wi-Fi network** that your RGBW Party Light Bar will be placed on. For easier pairing, turn on Location and Bluetooth to quickly find nearby devices.

TP: Do you know your Wi-Fi network name and password? Write it down now if it's hard to remember.

ANYTHING ELSE?

 
The power cord must be connected to a GFCI protected hooded flush type cover plate receptacle marked "Wet Location" while in use outdoors.

TP: Save these instructions for future reference.

Input: 120V AC

SETUP COMPLETE SETUP BEFORE INSTALLATION

Remove your RGBW Party Light Bar and all components from the box.

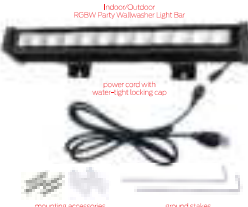

Indoor/Outdoor RGBW Party Wallwasher Light Bar

power cord with water-light locking cap

mounting accessories

 
ground stakes

It is recommended to first pair your device in a location close to your router BEFORE installation.

NOTE: If desired, you can operate the device with the controller and without pairing to Wi-Fi and without the app. Advanced features like color customization, scheduling, and voice control will not be available. (See "How To Use" on page 8)

STEP 1

Download the **MONSTER SMART** app from the App Store (for iPhone) or Google Play Store (for Android phones).



free download

STEP 2

Make sure your phone or tablet is successfully connected to the **2.4GHz Wi-Fi network** that your device will be placed on and **ensure that your Bluetooth is enabled**.

Open the **MONSTER SMART** app and create an account by following the on-screen instructions.



NOTE:

Most Smart devices only work on a **2.4GHz Wi-Fi network**. Many newer home Wi-Fi networks are mixed networks that are set to 5GHz by default (see AT&T, Verizon) and you may need to use AP pairing mode to connect. If you still have difficulty, contact your Internet Service Provider for assistance with 2.4GHz network setup.

STEP 3

Connect the power cord to the device and screw on the water-light locking cap until secure.



Plug the other end of the power cord in to a powered wall outlet. The light should turn on. If needed press the multifunction button twice to turn on the light.

Press and hold the multifunction button for 5-6 seconds to enter pairing mode. The light will begin blinking when it has entered pairing mode and is ready to pair.



STEP 4

Confirm the device is in pairing mode - LEDs are RAPIDLY blinking.

In the **MONSTER SMART** app, select the "+" in the upper right corner of the home screen to add a new device.



The app will detect the nearby Wi-Fi+BLE enabled device and ask if you would like to add it. Click "Go to add".



STEP 5

Confirm that the network displayed is your **2.4GHz Wi-Fi network**, then enter your Wi-Fi password and click "Confirm".



Once complete, your device will be connected to the network. Confirm or change the settings for your device and then click "Done". Your device is now set up and ready to use!



NOTE: This may take up to one minute.

You can now use the app to add voice control (see pg 10), adjust settings, create custom lighting effects, set schedules, and more!

INSTALLATION

The water-resistant RGBW Party Light Bar is perfect for adding dramatic lighting both indoors and outdoors. Ideal for everyday lighting as well as fun party lighting for special events.

 
STEP 1

Determine where you will install the RGBW Party Light Bar. Make sure the location is still within the range of your Wi-Fi network, and that it is close enough to a power source for the cord to reach without becoming a tripping hazard.

STEP 2

This product can be placed on a table or the floor, mounted on a wall, or staked into the earth outdoors.

- If mounting on the wall, ensure that the mounting screws go through the holes in the feet and into a stud in the wall.
- If a stud is not available, you must use the included anchors.
- If using outdoors, you can use the included yard stakes for added stability.
- The feet can slide left and right to align with your desired install location. Tighten each of the set screws to hold the position.




STEP 3

Adjust the position of the light to achieve the desired light angle. Tighten each of the set screws on the hinge to hold the position.

HOW TO USE

Your RGBW Party Light Bar can be easily controlled by the controller, using the **MONSTER SMART** app to access advanced and customizable lighting effects, or by using a compatible voice assistant product (see page 10).

 BUTTON CONTROL



GROUPING DEVICES

Your RGBW Party Light Bar is great to use in multiples, you can control each separately or easily group multiple lights together in the app to control them all as one. Click on the settings button in the upper right corner and then click **"Create Group"** to group your devices.



NOTE: Grouping different Monster Smart Illuminescence devices with different features may cause communication issues when selecting Scenes. For best results create groups of the same products. If you would like to group together different items, it is recommended to control using the Color settings only, rather than Scenes.

APP CONTROL: EDIT SCENES

The **MONSTER SMART** app gives you full control over all the functions of the RGBW Party Light Bar as well as the ability to edit preset scenes to create your own custom scenes. Below are some of the editable scene features for this device:



- RESET: reset to the default scene settings
- PICTURE: edit your scene thumbnail
- Name: edit your scene name
- COLORS: add or edit colors and arrange and adjust them as you wish
- Individual color adjustments
- TP:** Brightness 0% = "off" color
- TP:** Saturation 0% = white color
- MODE: choose between 3 color changing modes: Static, Pulse, and Flash
- SPEED: adjust the color transition speed
- SAVE: submit and save your scene!

APP CONTROL: SOUND REACTIVE

As the device is likely to be located at the perimeter of a room or a party, the sound reactive mode will react to sound collected by your phone's microphone. To use this feature please allow mic access when prompted in the app and leave the app running during use of this mode.

