


KETTLER

Assembly instructions

Swing

Item # 08382-700

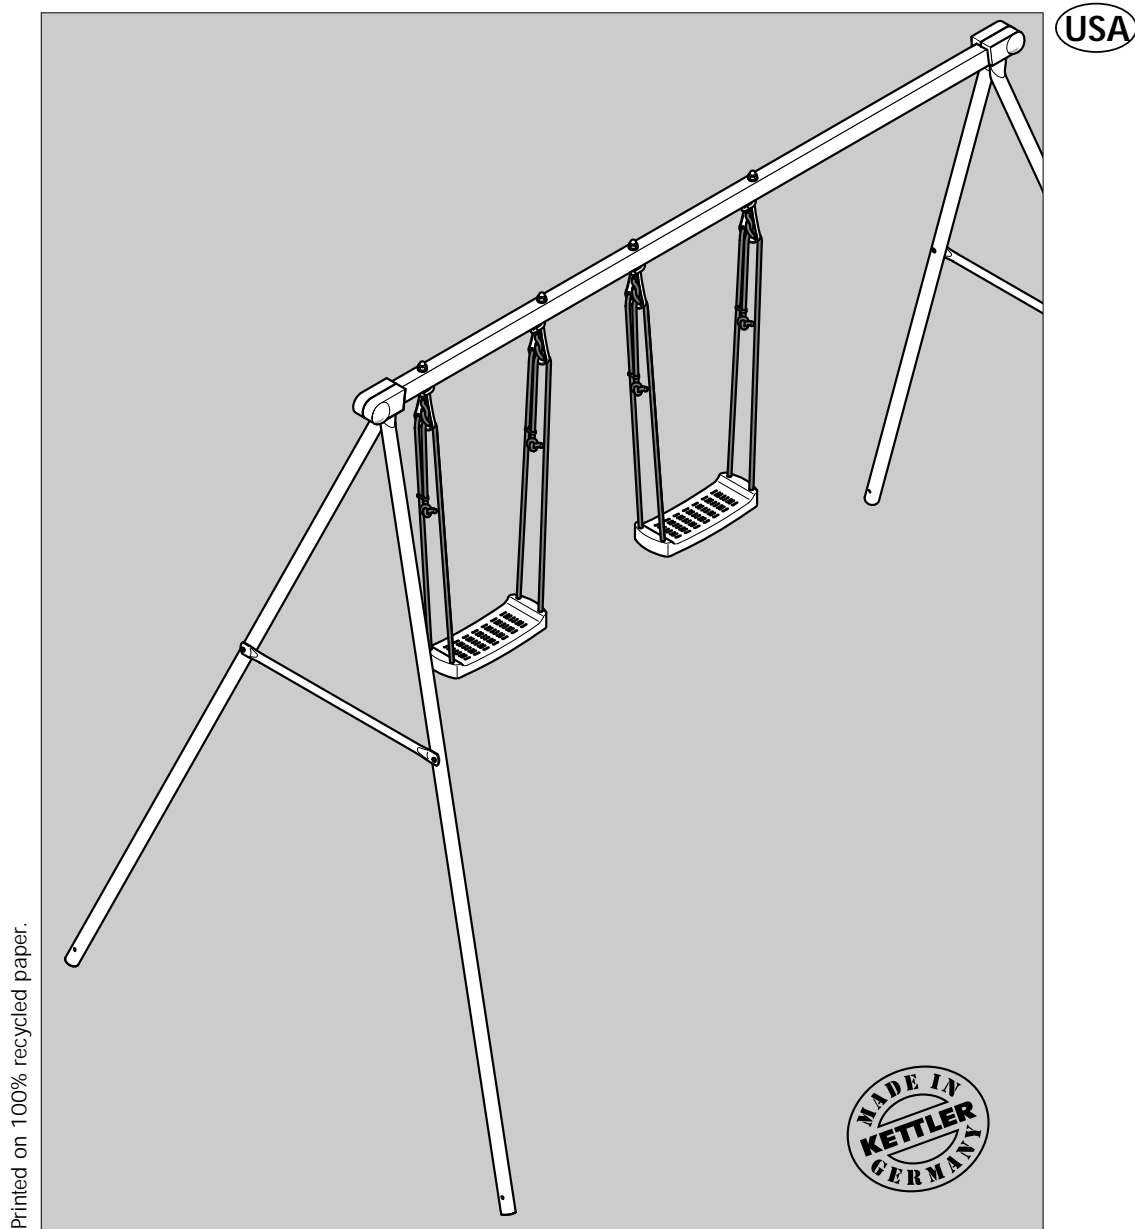

FREIZEIT MARKE KETTLER

Read these instructions carefully before assembling the product or using it for the first time. They contain important information for your safety and for the correct use and maintenance of this KETTLER product. Keep the instructions in a safe place for information or for ordering spare parts.

This KETTLER product has been designed in accordance with the latest standards of safety and subjected to constant quality monitoring. The data gained from this quality process is then incorporated in the development of our products. For this reason, we reserve the right to make changes in design and technology in order to offer our customers products of the highest standard of quality at all times. In spite of this, should you have any grounds for complaint, please contact your KETTLER dealer.

For your safety

- Observing the following statements and warnings reduces the likelihood of serious or fatal injury.
- This apparatus is to be used for its intended purpose only, that is: as a child's play apparatus, for use by maximum one child per seating place or per individual play apparatus (exception: the surfboard may be used by maximum two children concurrently). All other use is inadmissible and potentially dangerous. The manufacturer may not be held responsible for any damages caused as a result of any use other than as directed.
- This product is intended for use by children from ages 3 to 10.
- Mounting of the apparatus is permitted only in a private household outdoor environment. Any use in public or semi-public playgrounds or in schools is inadmissible.
- In choosing the location of the apparatus, ensure a sufficient safety distance (at least 7 ft/2m) from any obstacles (walls, fences, trees). The apparatus must not be mounted in the immediate vicinity of main passageways (paths, doorways, corridors). Observe the illustration concerning the safety area!
- Please bear in mind that there is always a potential danger of children injuring themselves while using swings, climbing frames, toy vehicles or similar equipment.
- The ground in the play and safety area should be level and consist of unbound, shock-absorbing ground material. A fall onto a hard surface can result in serious injury to the user.
- Pay attention to a sufficient distance to the ground of at least 16 inches of swing elements.
- The apparatus must stand firmly, safe from tilting or tipping. Pay particular attention: the apparatus must be set in concrete using the included ground anchors, strictly according to our illustration. The anchoring devices must be placed below the level of the playing surface to prevent tripping or injury resulting from a fall.
- Damaged components can endanger children and reduce the product life. Inspect all components in regular intervals twice a month during usage season, against possible damages and loose connections. Also check all coverings of bolts, sharp edges twice a month during usage season to be certain that they are in place.
- Before use always check that all screws and plug-in connections and respective safety devices fit correctly. It is particularly important at the beginning of the season.
- Damaged or worn parts must be replaced immediately and the apparatus is not to be used until

restored. In case of need, exclusively Original KETTLER replacement parts should be used.

- The device is safety tested.
- Improper repair or constructional changes (disassembly of original parts, attachment of unapproved parts, etc.) can result in danger to the user. Modifications to the apparatus, in particular to the suspension arrangement, are prohibited.
- Use of the apparatus is permitted for children of up to 110 lbs (ca. 14 years of age).
- Small children (up to about 36 months) must not use the seesaw alone; take care since it is possible that the child's strength is not sufficient to keep its own body weight in balance while he is playing.
- Please take care that the toy is only used by children with the appropriate abilities. Do not forget that you must ensure that it is operated safely.
- During extreme weather conditions, please check whether children can use the apparatus. If the solar radiation is very strong, the equipment may heat up, and at temperatures below the freezing point, it is possible that skin may freeze to the surface.
- Also check the equipment for foreign materials that could be potentially hazardous to the user.
- Verify that suspended climbing ropes, chains, etc. are secured at both ends and that they cannot be looped back on itself.
- Dress your children appropriately; sturdy shoes should be worn. Loose-fitting clothing is potentially hazardous while using this equipment.
- Instruct your children:
 - not to walk in front, between, behind or close to moving items;
 - not to twist swing chains, ropes, etc. over the top support bar;
 - to avoid swinging empty seats;
 - to sit always in the center of the seats;
 - not to get off equipment while it is in motion;
 - not to climb/use when the equipment is wet;
 - not to attach items to the playground equipment that are not specifically designed for use with this apparatus. Ropes, chains, etc. may cause risk of strangulation hazard!
- Remove plastic swing seats and take indoors or not to use when temperature drops below 32° F.

How to handle the swing

- **Attention:** Make sure that usage does not commence until the apparatus has been properly assembled and subsequently controlled by an adult.
- Instruct children on the proper handling of the apparatus and advise them of possible dangers.
- Remember that the children's natural play instinct and temper may lead to unforeseeable situations excluding a responsibility of the manufacturers.
- **Although dangers to children during proper use of the apparatus are highly unlikely, all play on the apparatus should be monitored by an adult.**
- For cleaning and care the swing only use environmentally friendly and no aggressive or corrosive agents. If repaint is needed only use lead-free paint.
- Regularly grease the moving parts with some drops of oil.

Instructions for Assembly

- Ensure that you have received all the parts required (see check list) and that they are undamaged. Should you have any cause for complaint, please contact your KETTLER dealer.

- Before assembling the equipment, study the drawings carefully and carry out the operations in the order shown by the diagrams. The correct sequence is given in capital letters.
- The fastening material required for each assembly step is shown in the diagram insert. Use the fastening material exactly as instructed. The required tools are supplied with the equipment.
- The equipment must be assembled with due care by an adult person. If in doubt call upon the help of a second person, if possible mechanically talented.
- Please note that there is **always** a danger of injury when working with tools or doing manual work. Therefore please be careful when assembling this apparatus.
- Ensure that your working area is free of possible sources of danger, for example don't leave any tools lying around. Always dispose packaging material in such a way that it may not cause any danger. There is always a **risk of suffocation** if children play with plastic bags!
- Bolt all the parts together loosely at first, and check that they have been assembled correctly. Tighten the locknuts by hand until resistance is felt, then **use wrench to finally tighten nuts completely against resistance (locking device)**. Then check that all screw connections have been tightened firmly. **Attention:** once locknuts have been unscrewed they no longer function correctly (the locking device is destroyed), and must be replaced.
- For technical reasons, we reserve the right to carry out preliminary assembly work (e.g. addition of tubing plugs).

List of spare parts

When ordering spare parts, always state the full article number, spare-part number, the quantity required and the S/N of the product.

Example order: Art. no. xxxx-xxx / spare-part no. 10100016 / 2 pieces / S/N.....

Important: spare part prices do not include fastening material; if fastening material (bolts, nuts, washers etc.) is required, this should be clearly stated on the order by adding the words „**with fastening material**“.

 **KETTLER International Inc.**

P.O. Box 2747 · Virginia Beach, VA 23450-2747




 



<http://www.kettlerusa.com>

 
 
 




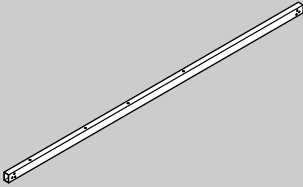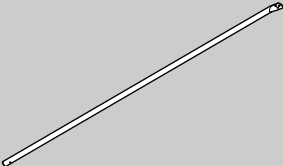


For parts and service ONLY call:

1-866-804-0440 or email


parts@kettlerusa.com

Checklist (contents of packaging)


	1	✓
	4	
	2	
	2	
	2	
	2	
	4	

 M6x50	4	
 M8x60	6	
 M8x50	4	
 M6	4	
 M10	4	
 M8	10	
 ø16	14	
 PVC ø16	4	
 PVC ø25	4	
	4	


1

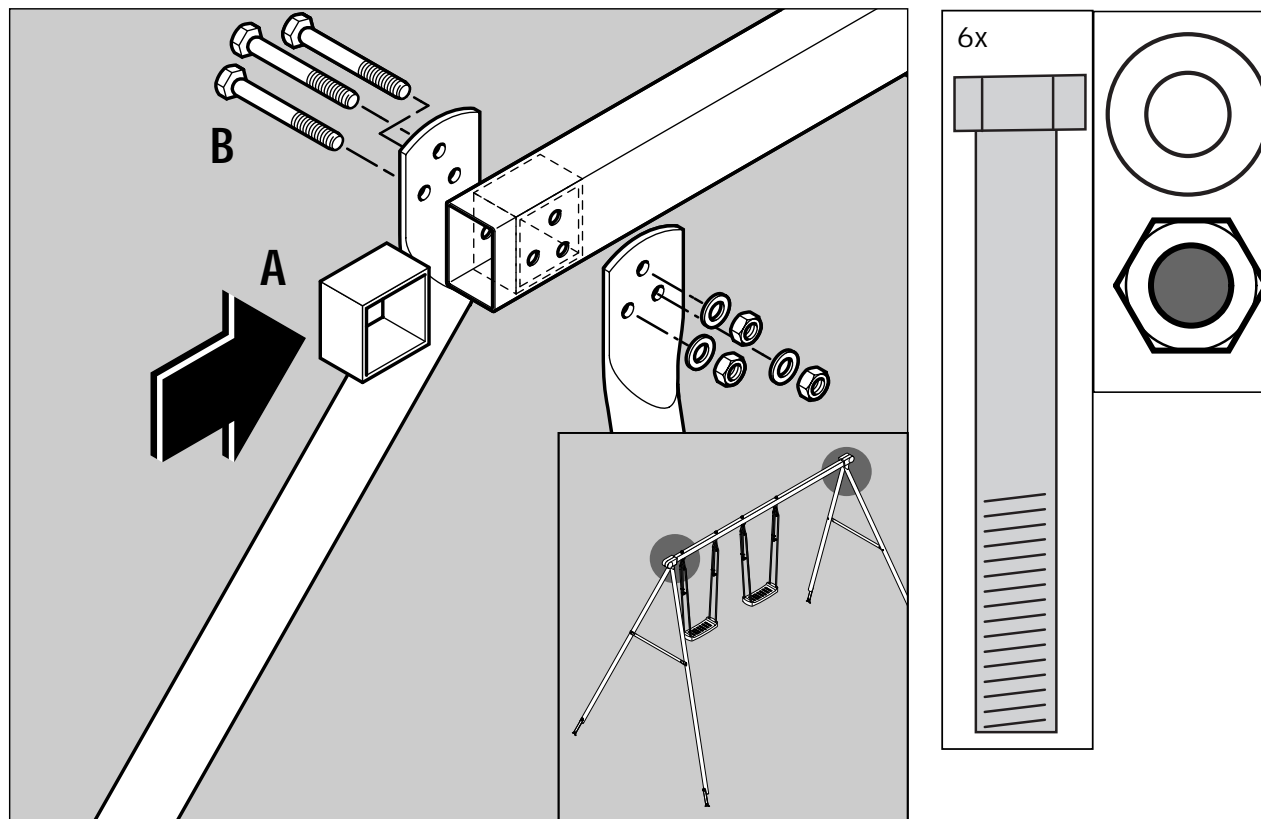


2

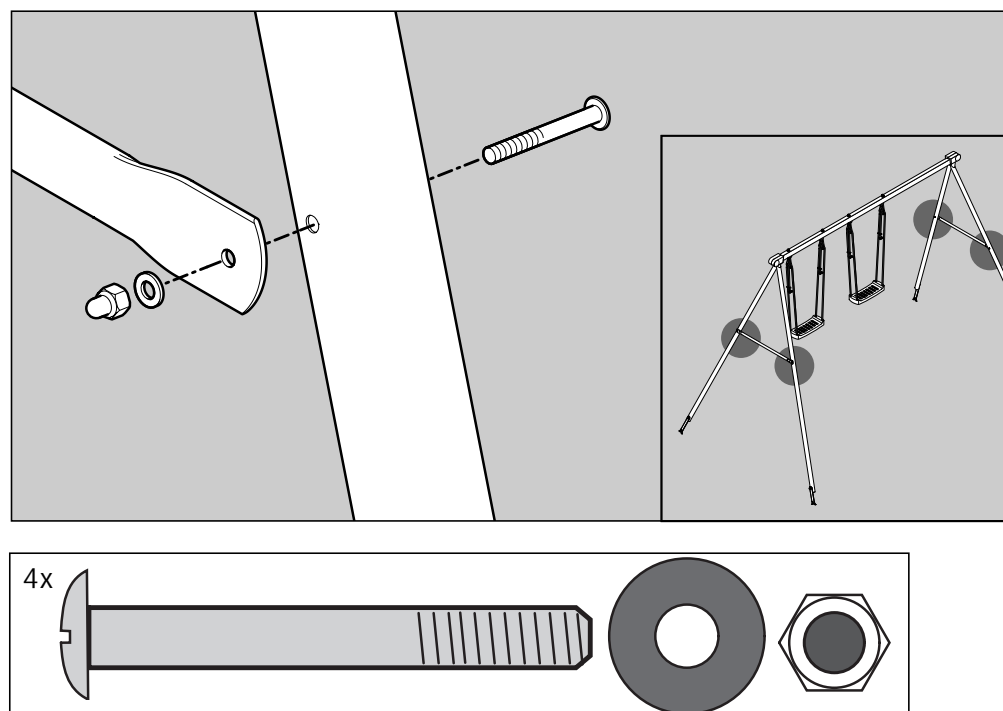



3

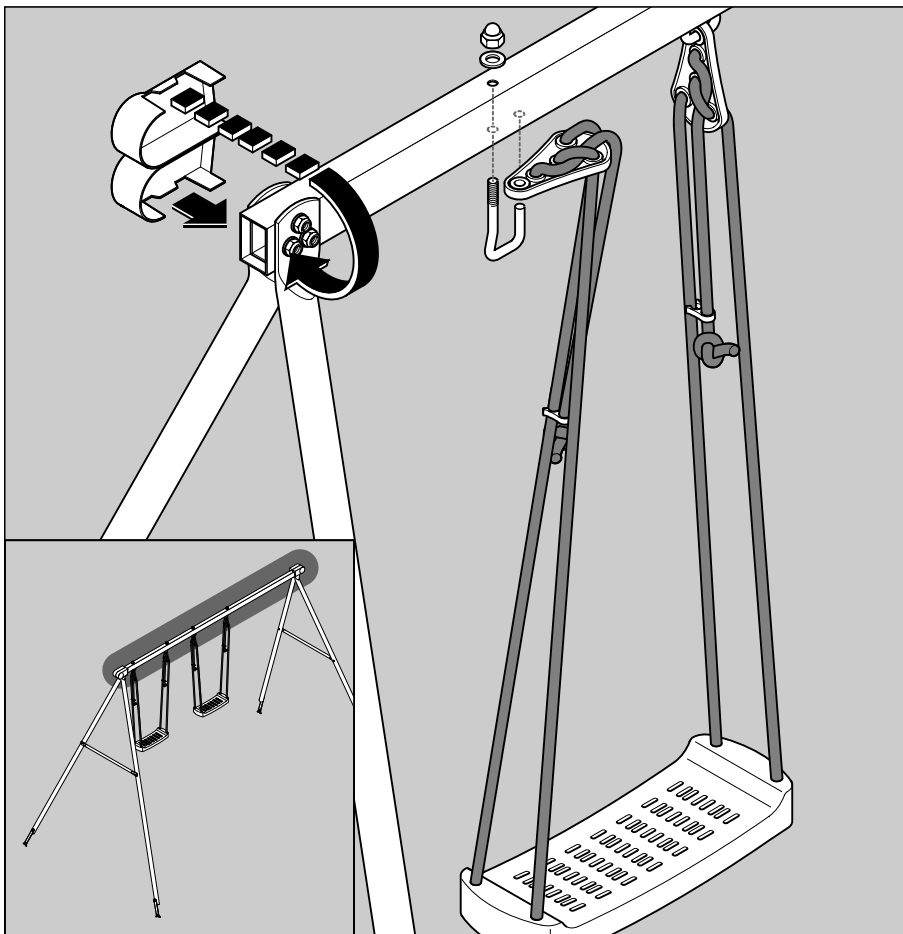


4x

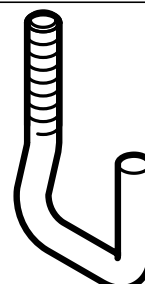





NOT ACTUAL SIZE


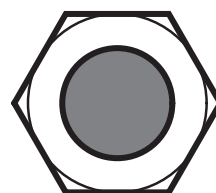
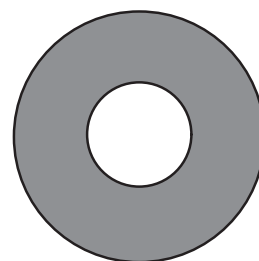


4

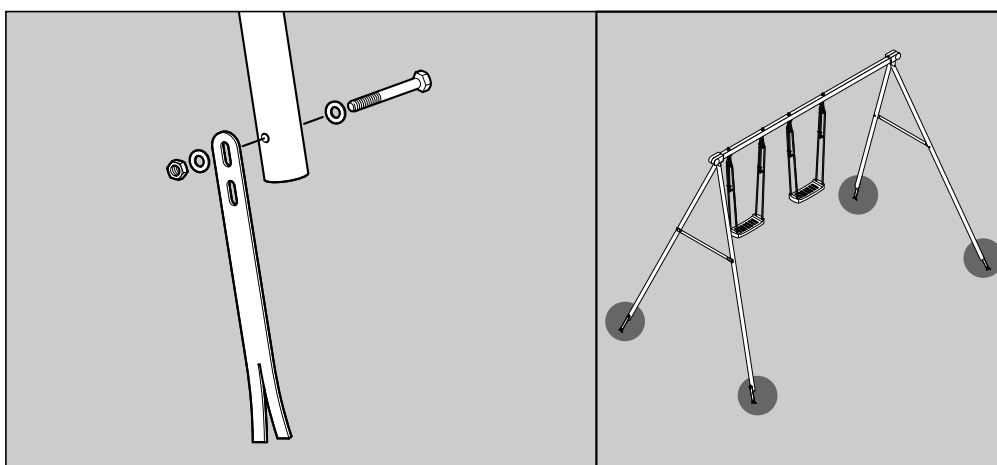


4x

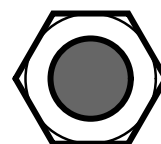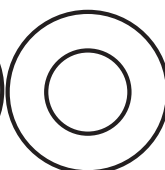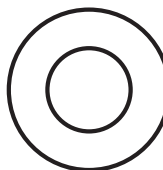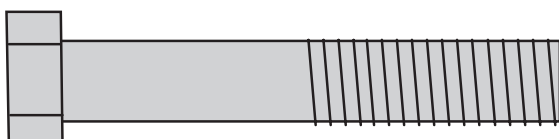

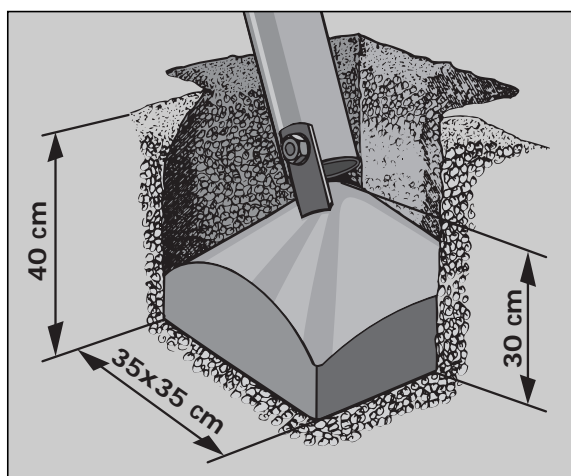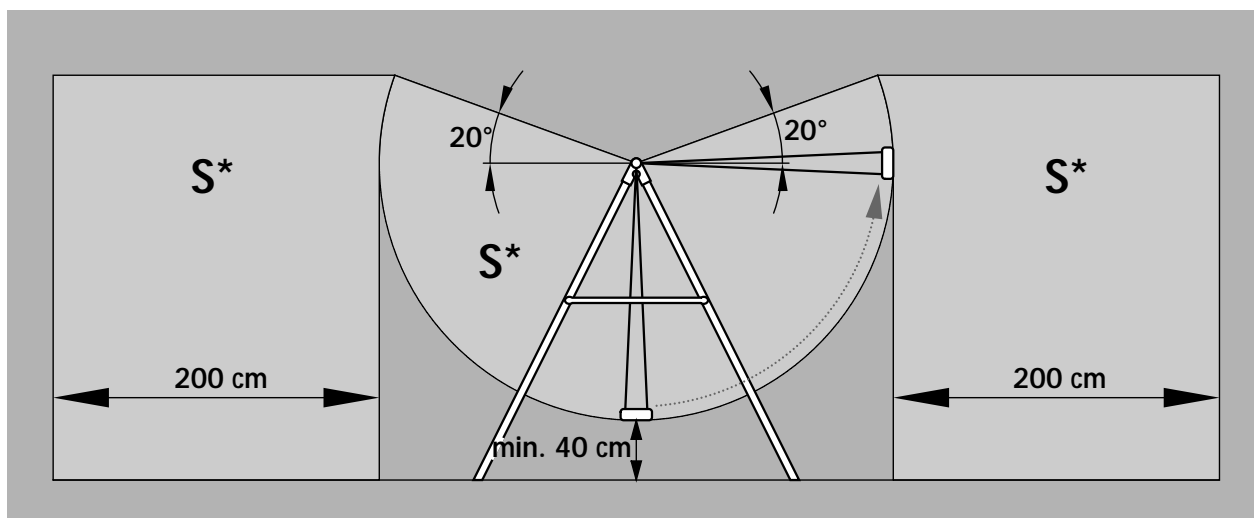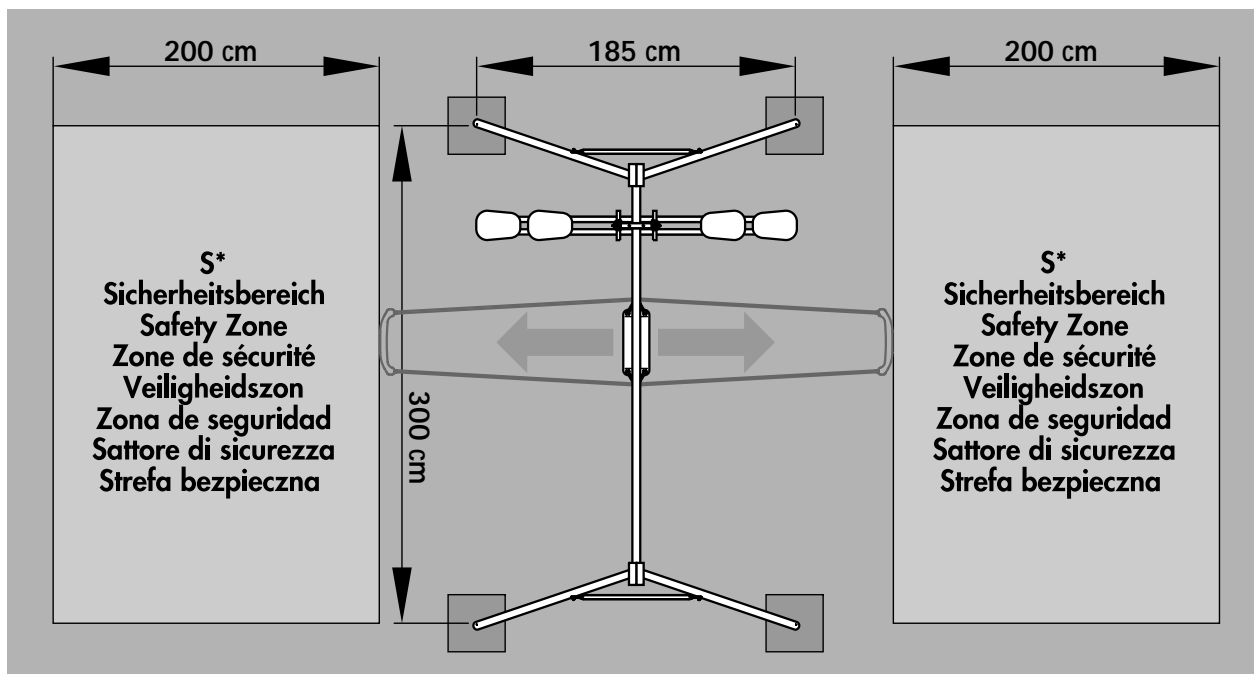

Spare parts drawing

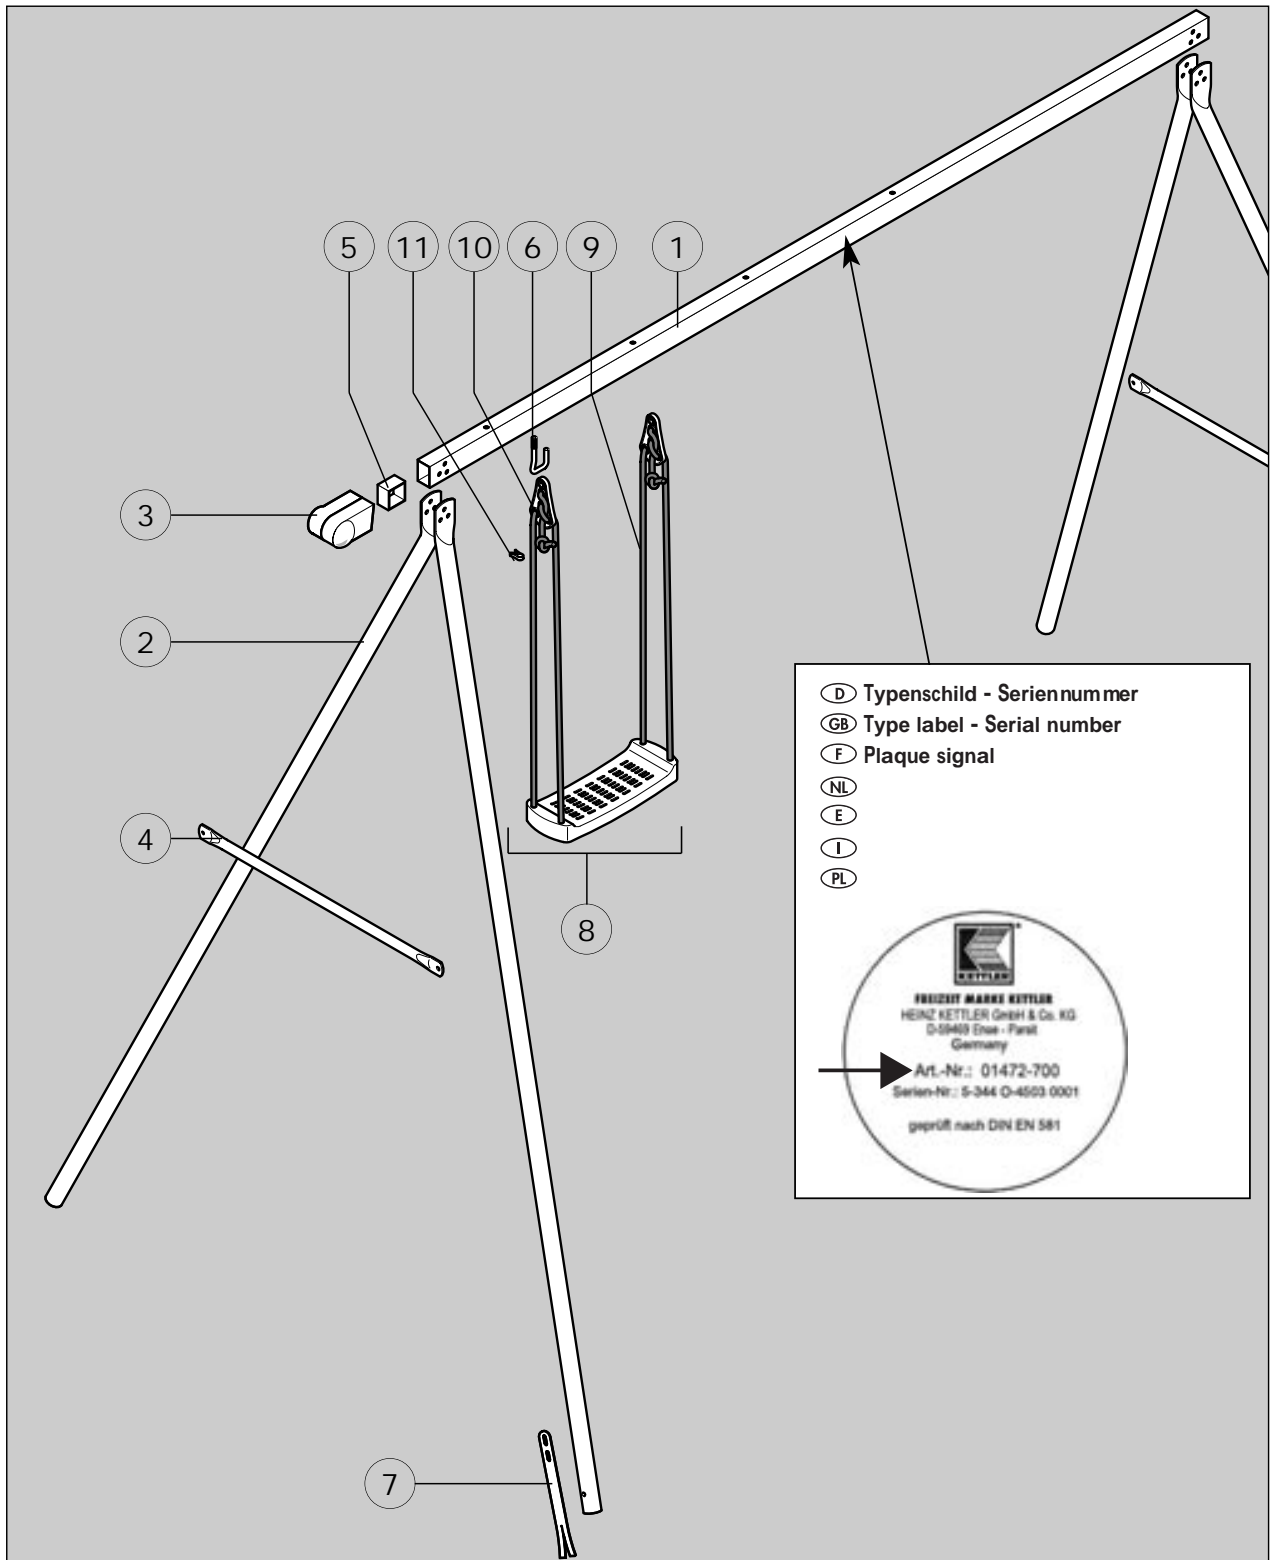

Spare parts list

pos.	description	qty	spare part # for 08382-700
1	main base tube	1	94211098
2	frame tube	4	94211111
3	main base tube covering	2	70130030
4	support tube	2	94210124
5	support tube for main base tube	2	97200975
6	L-hooks (ø10mm) w/fastening material	2	94281770
7	ground anchors (set)	2	94281114
8	swing seat (complete)	2	94280300
9	swing rope (complete)	4	73701035
10	rope bearing	4	70132194
11	clamp	4	70132195
12	hardware bag	1	94280123

Accessory assembly

