

Quick Start Guide

PowerXL™ products that excel **STUFFED WAFFLIZER PLUS**

See owner's manual for complete instructions and important safety information before using this product.

IMPORTANT: Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (only select accessories are dishwasher safe).



STEP 1

Ensure the appliance is closed, latched, and rotated onto its side so that the dual red/green Indicator Lights are facing straight upward. Plug the power cord into a 120V dedicated outlet. The red Indicator Light will light up to indicate the appliance is preheating. Wait for the appliance to finish preheating, indicated by the adjacent green Indicator Light lighting up.



STEP 2

Unlatch and open the appliance, being careful not to touch the interior. Add the first layer of batter, which should be as little as needed to cover the waffle prongs on the bottom of the appliance. After sitting for a few seconds, the batter will begin to rise a little.



STEP 3

Center the filling over the first layer of batter.



STEP 4

Cover with the remaining batter, filling up to about three quarters of the way to the top. **DO NOT** fill all the way to the top; this is overfilling and will cause leaking during the cooking process. **DO NOT** try to open the appliance during the cooking process.



STEP 5

Close and latch the appliance. Then, use the handle to flip the appliance over. After 5-7 minutes, the appliance can be opened to check on the status of the food. The appliance can be closed again to continue the cooking process for more well-done food. **DO NOT** try to open the appliance during the cooking process. Steam can build up while the batter is cooking.



STEP 6

When the food is done cooking, it can be removed from the appliance. Wear oven gloves/mitts before handling to protect against escaping steam. Unlatch and open the appliance. Then, use plastic/wooden/rubber utensils to carefully lift the waffle onto a plate. Do not use sharp metal utensils that may scratch the nonstick coating in the appliance.