



安装说明


Peerless Assassin 120 DIGITAL 系列

！安装前请先去除铜底保护膜


www.thermalright.com

配件清单

AMD AM4/AM5

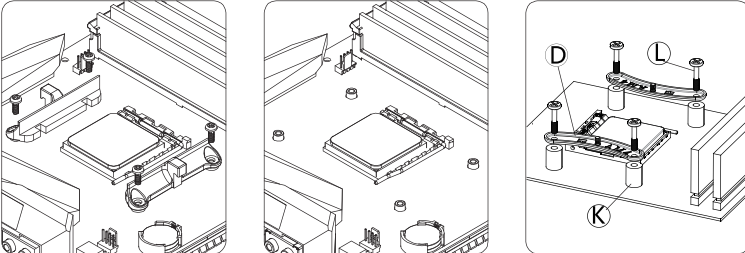


移除AMD原装塑胶支架，保留背板,使用AM4/AM5螺丝将支架锁紧到主板原配背板

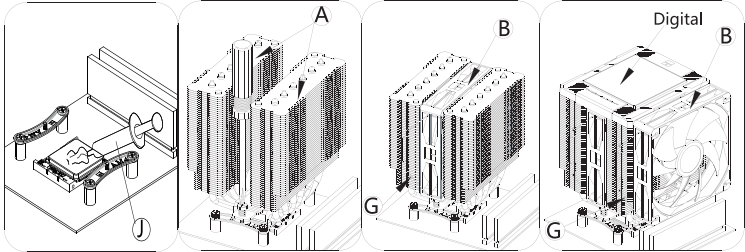


涂好导热膏，拿掉散热器上的数码屏，然后用螺丝刀锁好主体，取其中一个风扇对齐散热器鳍片高度用风扇线扣固定，将数码屏盖回散热器上，再用风扇扣将另一风扇对齐数码屏固定。

INTEL 115X/1200

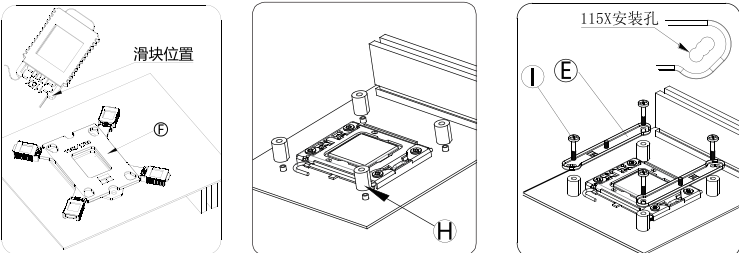


将背板【F】推到115X位置放置在主板背面,然后正面放置胶柱【H】,扣具【E】,再用螺丝【I】固定住扣具。

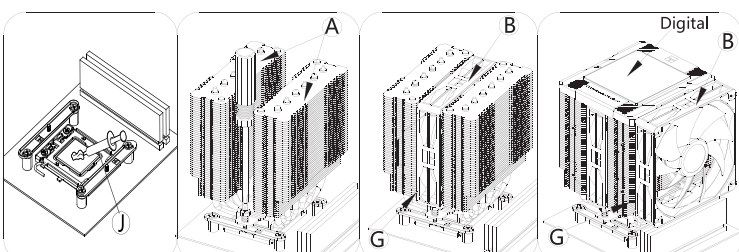


涂好导热膏，拿掉散热器上的数码屏，然后用螺丝刀锁好主体，取其中一个风扇对齐散热器鳍片高度用风扇线扣固定，将数码屏盖回散热器上，再用风扇扣将另一风扇对齐数码屏固定。

INTEL 1700/1851

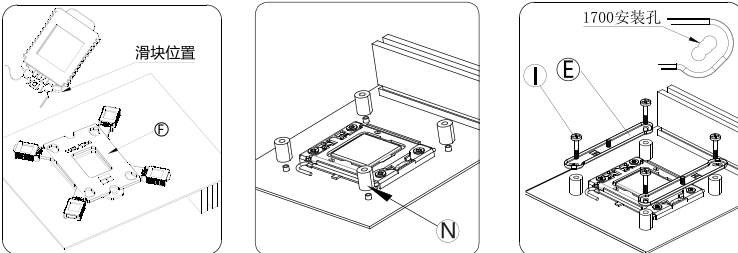


将背板【F】推到1851/1700位置放置在主板背面,然后正面放置胶柱【N】,扣具【E】,再用螺丝【I】固定住扣具。

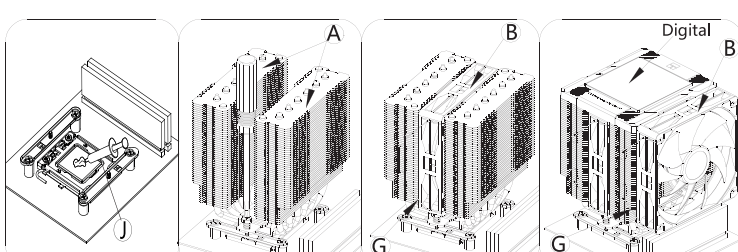


涂好导热膏，拿掉散热器上的数码屏，然后用螺丝刀锁好主体，取其中一个风扇对齐散热器鳍片高度用风扇线扣固定，将数码屏盖回散热器上，再用风扇扣将另一风扇对齐数码屏固定。

风扇接线

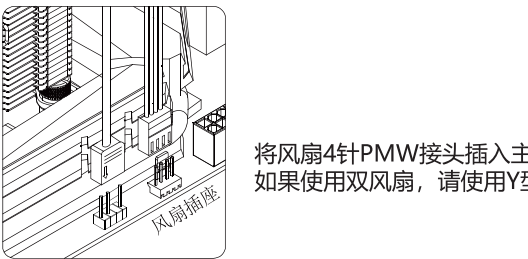


将风扇4针PWM接头插入主板CPU_FAN插座,如果使用双风扇,请使用Y型转接线。

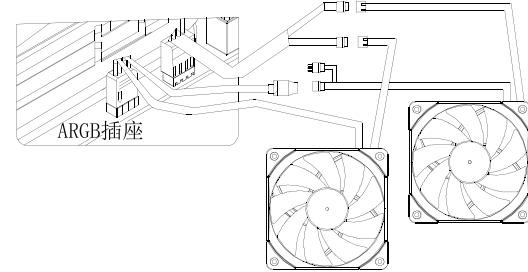

如果风扇有ARGB灯效, 请将ARGB 3针(5V) 插入主板对应ARGB灯效插座或者控制器, 多风扇之间可串联同步。

数码屏接线

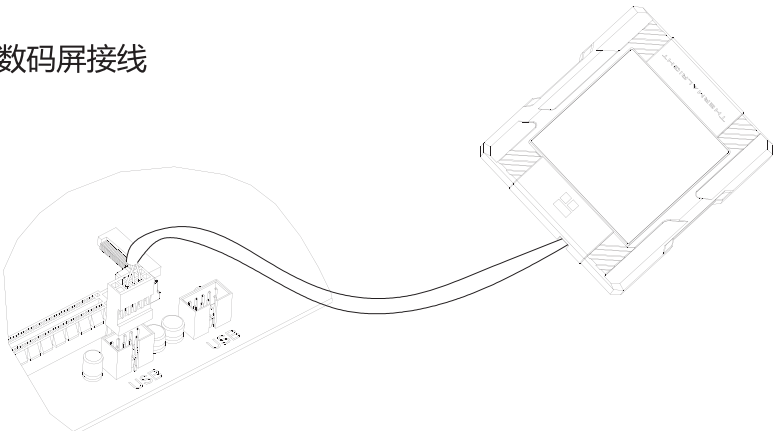

- 数码屏的供电和数据通信传输均由主板 9针USB接口提供。软件安装前请确认接线完整
- 软件可在官网下载: <https://www.thermalright.com.cn/support/download/> 解压并双击安装程序安装
- 桌面双击软件快捷方式图标运行软件
- 本液晶屏的实时数据监控/数据传输/开启关闭等功能均由软件控制。安装完成默认随电脑开机启动，并在任务栏常驻后台，请勿关闭/强制退出。



INSTALLATION GUIDE


Peerless Assassin 120 DIGITAL Series

Please remove protective sticker before install


www.thermalright.com

Parts List

AMD AM4/AM5

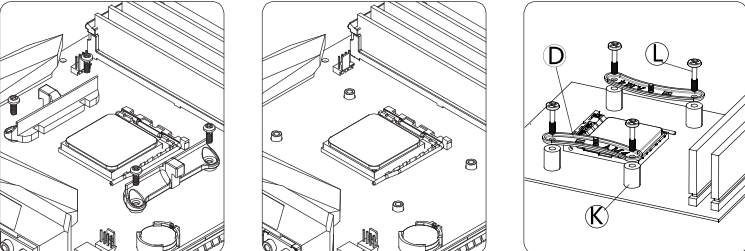


Remove AMD plastic brackets, KEEP the backplate, install AM4/AM5 metal brackets on AM4/AM5 spacers with AM4/AM5 screws.

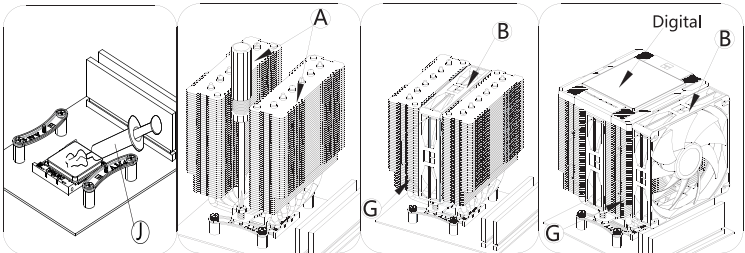


Apply thermal paste on CPU, install the heatsink with a screw driver, and install fans on heatsink with fan clips, Place LCD panel on top of heatsink.

INTEL 115X/1200

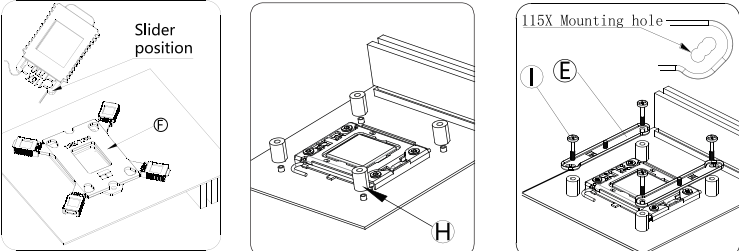


Adjust backplate mounting hole position, install backplate from back side of motherboard, place LGA115X/1200 spacer from front side, install intel brackets on spacers with intel screws.

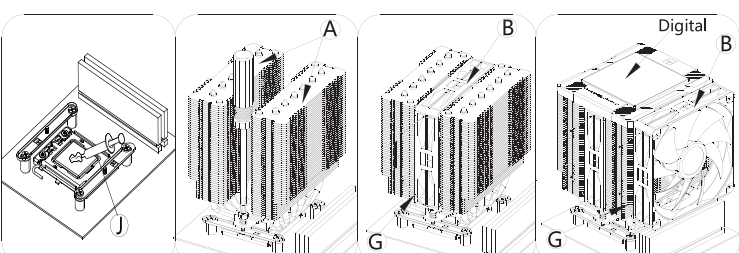


Apply thermal paste on CPU, install the heatsink with a screw driver, and install fans on heatsink with fan clips, Place LCD panel on top of heatsink.

INTEL 1700/1851

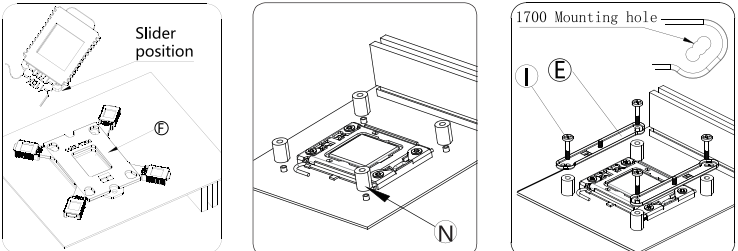


Adjust backplate mounting hole position, install backplate from back side of motherboard, place LGA1851/1700 spacer from front side, install intel brackets on spacers with intel screws.

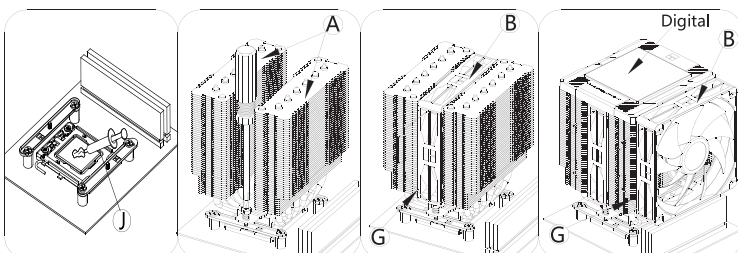


Apply thermal paste on CPU, install the heatsink with a screw driver, and install fans on heatsink with fan clips, Place LCD panel on top of heatsink.

Fan Wiring

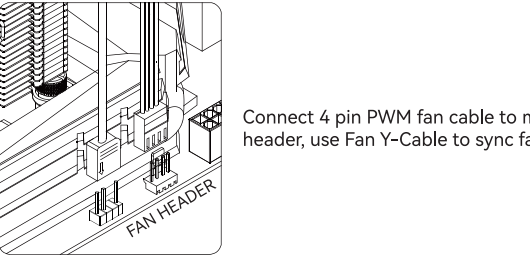


Connect 4 pin PWM fan cable to motherboard CPU_FAN header, use Fan Y-Cable to sync fan speed for dual fan setup.

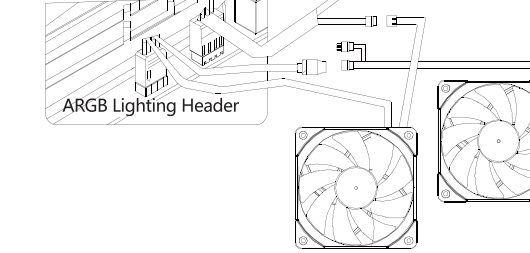

For Fans with ARGB lighting,To control the ARGB lighting , connect ARGB lighting cable (3-pin +5V) to motherboard ARGB lighting header or ARGB lighting controller,lighting effects can be sync by connecting fan lighting headers with each other

Digital display wiring

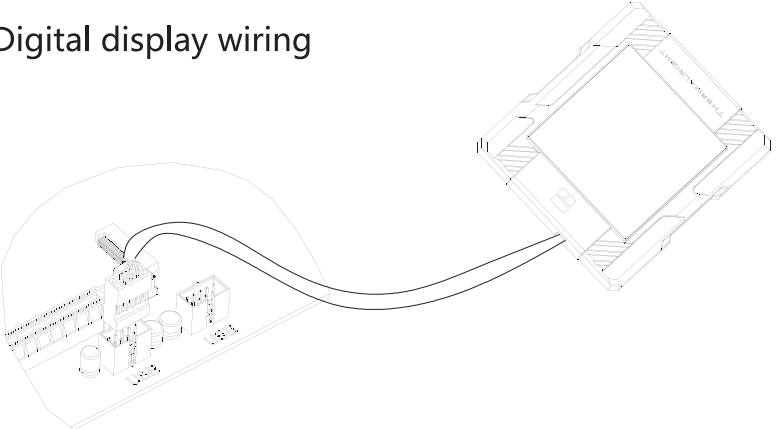

- Check USB cable connection between motherboard 9 pin USB2.0 socket and digital display.
- Download software at: <https://www.thermalright.com.cn/support/download/> Unzip setup file and start install by double click setup.
- After install completed, double click shortcut icon on desktop to run software.
- All functions on Digital screen are controlled by software, and software will startup at OS boot. Please do not exit the program.