

kogan

SOĞOĞÜFGÖXÜÖ

USER MANUAL



1. Packaging Accessories

①



②



③



④



⑤



- | | |
|----------------------|----------------|
| 1. Vehicle Camcorder | 2. Suction Cup |
| 3. Car Charger | 4. USB Cable |
| 5. Li-ion Battery | |

2.Product picture and Function



1. USB Slot
2. 5V Direct Current Slot
3. SD/MMC Card Slot
4. Speaker
5. Mount Hole
6. Microphone
7. Battery Cover
8. Lens
9. IR LED

10. Power ON/OFF Button with Charging Indicator(Red) ⑥

11. REC Button

With working Indicator (Blue)


12. 2.5inch LCD

13. Menu Button

14. Down Button

15.Up Button

16. Mode Button (Video/Camera/Playback)

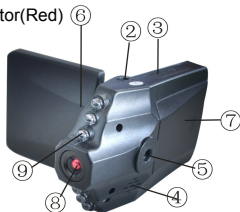

3.Operations

Two Power options:

a) Use Li-ion battery

DVR can be activated after it has been placed on the vehicle by pressing the **Power on/off** for 3 seconds and turned off by pressing it again.

Charging: connect with USB cable or car charger. The Power button indicator shows red and turns off when it is full.

b) Connect with Car Charger

DVR will record automatically when the car starts, then turns off and saves the last file when the car stops.

Note: Just 5V output voltage is required.

4.Operation steps



Step 1



Step 2



Step 3



Step 4

Step 1: Insert an SD memory card into the SD/MMC card slot.

Step 2: Install the mounting bracket into the mount hole, then put the suction cup into a suitable place. Adjust the location and direction.

Step 3: Using the car charger included, plug the unit into the charger port/cigarette lighter in your car.

Step 4: Power on the unit by holding down the "ON/OFF" button for 3 seconds. For specific parameter settings, please refer to the steps as shown below.

5.Function Information

A Video Mode

DVR will enter into default video mode when turned on. The recording file is saved on the SD/MMC Card. To stop recording by pressing REC. (When powered up with a battery-powered, press the record button to start recording)

B Camera mode

Turn on the DVR and press Mode Button to enter into the Camera mode. To take photo by pressing **REC** Button (the blue button next to power button)

C Playback Mode

Turn on the DVR and press Mode Button twice to enter into Playback Mode, Press Up or Down to select the previewed file, if it is a video file, it can play or stop by pressing REC Button.

D Delete

In the playback mode, press Menu button to enter into the delete interface.

Press Up or Down to select the previewed file. If it is video file, it can play or stop by pressing REC Button. If you want to delete it, press Menu button to enter into delete mode , and then select single, all or select by REC Button. Press UP/Down to Confirm and press Rec Button to delete. You can select Thumbnail mode to preview more files. Volume (from 1 to 8) and protect under the Playback Mode.

6.Setting Mode

Turn on the DVR and press Menu Button twice enter to the setting interface,

Confirm by REC Button and press Up/Down button for the following setting,

Press Menu Button again to exit after finished.

A Turn on the DVR and press Menu button twice enter into the setting interface. confirm by REC button and press Up/Down button for the following setting, press menu button again to exit after finished.

1. Format; Cancel/Execute
2. English, Française, Deutsch, Italiana, Español, Português, 繁體中文, 简体中文, 日本語, Русский
3. Auto Off; 1 Min/ 3 Min/ 5 Min/ Off
4. System Reset; Cancel/Execute
5. Light Frequency; 60HZ/50HZ
6. TV Output ; NTSC/PAL
7. Date Input ; Off/Set

B Turn on the DVR and press Menu button enter into the setting interface under the Video mode. confirm by REC button and press Up/Down button for the following setting, press Menu button again to exit after finished.

1. Size: VGA/QVGA/SXGA
2. EV: +2.0 +5/3 +4/3 +1.0 +2/3 +1/3 +0.0 -1/3 -2/3 -1.0 -4/3 -5/3-2.0
3. White Balance: Auto/Daylight/Cloudy/Tungsten/Fluorescent
4. Time Stamp: Off/Date Only/ Date&Time
5. Motion Detect; Off/on
6. Audio Mode; On/Off
7. Video time;3 Min/5 Min/10 Min/15 Min
8. Flip screen; Off/On
9. IR LED; On/Off

C Turn on the DVR and press Mode button enter into the Capture mode, press Menu button enter into the setting interface. Confirm by REC button and press UP/DOWN button for the following setting, press Menu button again to exit after finished .

1. Size; 12M/8M/5M/3M/2M/1.3M/VGA
2. Quality; Fine/standard/Economy
3. Scene Mode; Auto/Sport/Night/Portrait/Landscape/Backlight
4. EV; +2.0 +5/3 +4/3 +1.0 +2/3 +1/3 +0.0 -1/3 -2/3 -1.0 -4/3 -5/3-2.0
5. White Balance: Auto/Daylight/Cloudy/Tungsten/Fluorescent
6. ISO; Auto/100/200
7. Color;Standard/Vivid/Sepia/Monochrome
- 8, Saturation;High/Normal/low
9. Sharpness; Hard/Normal/soft
10. Preview; On/Off
11. Time Stamp; Off/Date only/Date& Time
- 12, Burst; On/Off

7.Download files

1. Connect DVR with computer via USB cable in the booted up state.
2. Removable disk will appear on "My computer"
3. The file is stored in Removable Disk/DCIM/100DSCIM.at the moment, the file of the DVR can be downloaded to the computer.

Note;

1. Please insert the SD/MMC card before recording.
2. This DVR records in cycle if you choose 3/5/10/15 minutes as storage time, When the memory is full, it will record from the beginning again and erase all the last files automatically, It will have 3 seconds to pause, it means events within those 3 seconds will not be recorded.
3. When the battery is low, "low battery" will appear on the LCD and power off will occur automatically after 20s.

8. Technical Specifications

1. Recording resolution: VGA/QVGA/SXGA
2. Video format: AVI
3. Loop Recording: 3/5/10/15 minutes
4. Power source: rechargeable battery or 12V/24V Car Charger
5. Support SD/MMC card (from 1GB up to 32GB)
6. Support video with sound
7. Out put: USB 2.0
8. Built-in reset function
9. 2.5 inch LCD can be swiveled 270 degree