

### 92mm





# **CATALOGUE**

ow to wear headphones correctly ————————————————————————————————————	3
roduct Introduction	8
ouch Operation ————————————————————————————————————	9
em list —	18
/arranty Statement —	21

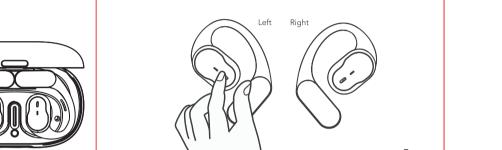

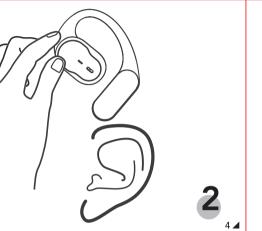

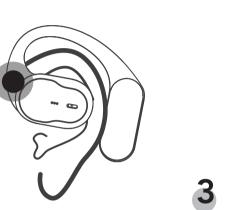

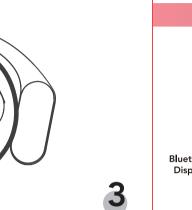



# Charging Reset Indicator Earphone charging indicator light

Speaker Diameter:  $\phi$ 14.2mm

Earphone Input: 5V=50mA

Type-c Interface

Charging Case Input: 5V --- 400mA Charging Case Output: 5V == 100mA Effective Distance: Approx. 10m Earphone Battery Capacity: 50mAh

Charging Case Battery Capacity: 400mAh Duration: Approx. 5.5 H (Earphone)

Frequency Respinse: 20Hz-20KHz Earphone Charging Time: Approx. 1.5 H

Microphone Sensitivity: -38dB±1dB Charging Time of the Charging Case: Approx. 2 H

"MINISO-BM22".Click the pairing name to pair.

· When the headset is turned on: White light flicker · When the headset is turned off: The white light turns on and

 Pairing status:The main ear white light flashing, and the auxiliary headphone light is off Auto power off: Put the Earphone in the charging case, close the charging case cover, the Earphone

· Connection successful: no light d on,The charging indicator light for the charging case

icator light goes off, and at the same time, the charging case

Charging of the Charging case: The blue light of the Charging case ndicator flashes.After being fully charged, the charging case indicator light turns from blue to white and stays on.

Automatic power on: The earphones are in the charging case, open the charging case cover, the Earphone will be powered on,

will be powered off, with the prompt sound of "Du"

Manual power off: Long press for 5 seconds,

the Earphone will be powered off, with the

with the prompt sound of "Du". Manual power-on: Long press for 3 seconds,

with the prompt sound of "Du".

prompt sound of "Du".

the Earphone will be powered on.

Music mode Phone mode

Play/Pause Call Answer/End

Double press the left ear: Volume decreases Double press the right ear:

## Wake up voice assistant

When using both ears, press and hold the left ear multi-function button for 2seconds to activate the voice assistant. When using one earphone, press and hold the le (or right) earphone for 2 seconds to activate the voice

## Phone mode

Press and hold the left (or right) ear multi-function button for two seconds: call rejection


Music mode Triple press on the left ear: Triple press on the right ear:
Previous song next song


## When both ears cannot pair, you need to clear all connected devices. Put the earphones back into the charging case and press and hold the reset button for 10 seconds to restore the factory settings.








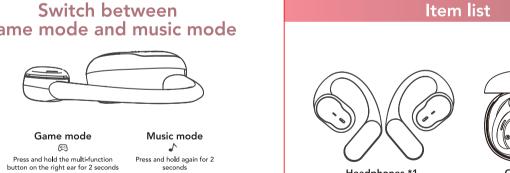

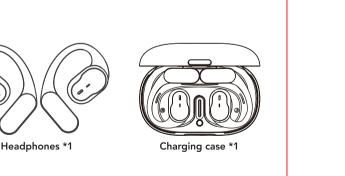

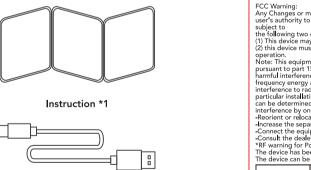

Charging cable \*1

## FCC ID: 2BHJR-BM22

e has been evaluated to meet general RF exposure requirement.

Company Name: MIRAMONT SOLUTIONS LLC Address: 34218 HOURGLASS ST, TEMECULA, CA 92592, United States Contact Name: Wenyi Wang Telephone No: (951) 401-3633

hanges or modifications not expressly approved by the party responsible for compliance could void th authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is

a following two conditions:

This device may not cause harmful interference, and
this device must accept any interference received, including interference that may cause undesired

Note: Ihis equipment has been tested and found to comply with the limits for a Class B digital device, ursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against rmful interference in a residential installation. This equipment generates uses and can radiate radio squency energy and, if not installed and used in accordance with the instructions, may cause harmful arference to radio communications. However, there is no guarantee that interference will not occur in a ticular installation. If this equipment does cause harmful interference to radio or television reception, which be determined by turning the equipment off and on, the user is encouraged to try to correct the ference by one or more of the following measures:

'ient or relocate the receiving antenna. ase the separation between the equipment and receiver.

et the equipment into an outlet on a circuit different from that to which the receiver is connected.

If the dealer or an experienced radio/TV technician for help.

device can be used in portable exposure condition without restriction.

1. The validity period of the three guarantees has exceeded;

2. Altering of the warranty cards and product code do not match the product itself; 3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage; Warranty statement:

. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident; . Zippers and tower buckles are damaged due to excessive force;

ourchase date shall be based on the sales invoice date; if the purchase date cannot be determined arranty period shall be calculated as thirteen(13) months from the product production date the warranty period shall be calculated as thirteen(13) months from the product production date.

If you want to apply for warranty, please call the product service hotline first and follow our instructions.

When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out. . If the product's original logo or label is changed or damaged, this warranty will be invalid. The completeness and appearance of the product and accompanying materials are not covered by the

MINISO Product service policy

## If you encounter a problem, please contact our customer service to solve it.

warranty. You should inspect the product on site when receiving it and raise objections to any

After-sales email: 7@hifi-earphone.com © Z RoHS (

This manual does not come with any form of warranty, position expression or other implication. The products, specifications and information mentioned inthis manual are for reference only, and the

due to quality defects under normal use within twelve(12) months from the date of your purchase (the

confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue

o be covered by the warranty for the remaining warranty period(a minimum of not less than 30 days).

Warranty Period"), and if it can be repaired, it will be repaired free of charge; If the manufacturer

to continue to enjoy the services included in the device content will be updated on the website at any time without prior notice. Electromagnetic interference: The following guarantee is made for the products attached to this document: If the product is damaged

ctronic devices: To avoid the effects of electromagnetic interference or configuration atibility, please turn off your Bluetooth device in accordance with regulations in places with

ications or modifications to this Bluetooth headset without permission, the user will lose the right

Guidelines for safe and effective use

Civil Aviation: After boarding the plane, please turn off your Bluetooth headset according to the flight attendant's instructions. It is strictly prohibited to use Bluetooth headsets during flight to avoid

e replaced with a new one-nowever, do not replace the battery by yourself. If the battery is not do properly, there is a risk of explosion. It can only be replaced by an after-sales service provide ame or equivalent type, battery usage. interference with the aircraft communication system.

Placement: It is recommended that when you are not using the Bluetooth headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury. Children:Do not let children play with Bluetooth headsets.Some of the small parts are detachable and may be swallowed and cause danger.

to live with