


6+

OPERATING INSTRUCTIONS AND PLAY


Contents

- 1 Pixie Cruiser Doodle
- 1 Remote control
- 1 sticker sheet
- 1 Pixie the dog
- 2 headlight eyelashes
- 3 wigs
- 4 washable markers

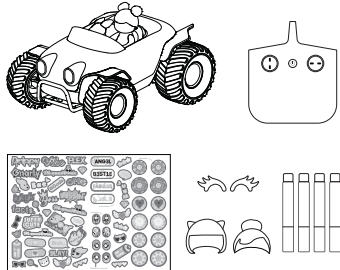

Battery Installation

Make sure the On/Off switch is set to 0.
Open the battery compartment and insert 6 AA 1.5V batteries (not included).
Replace the cover.
Use a tool to press and hold the battery release button on the back of the remote control. Slide down the battery cover. Insert 3 AAA 1.5V batteries as indicated in the diagram. Slide the battery cover back into place securely.

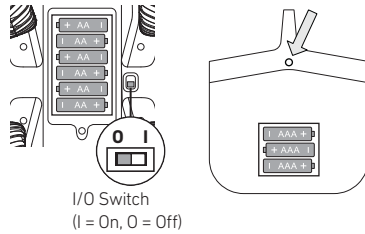

I/O Switch
(I = On, 0 = Off)

Use Alkaline batteries for best performance.


Play

1. Use the included markers and stickers to begin designing your dream vehicle!
2. To remove the dog and driver's head, turn counterclockwise and pull upward. To replace the wigs, just pull it out and insert the new one into the hole on the head.
3. To power on the remote control, press the power button once. The power LED will light up gradually.
4. To power on the vehicle, flip the power switch located on the bottom of the vehicle from 0 to I.


Note: If there is no input for 5 minutes, both the vehicle and remote control will automatically shut off.

Customize


1. Doodle and create custom art on your car using the included washable markers. **IMPORTANT:** Draw on the car only with the included washable markers. Markers, pens, paints, and other writing tools not included may permanently stain or damage the car.
2. Cap each washable marker immediately after use.
3. To avoid smudging your design, wait several minutes for the ink to fully dry.
4. Plug the washable markers into the slots in the rear of the car with the caps facing out for fun multicolor tailpipes.
5. Add a wig to the driver or swap out wigs.
6. Finish decorating your car by applying the reusable decals.
7. To try new designs, carefully peel off the reusable decals and then wipe the car clean using a soft, non-abrasive moist cloth. Use only water and ring out the cloth thoroughly to avoid drips. Wait for the car to dry before starting your next design.

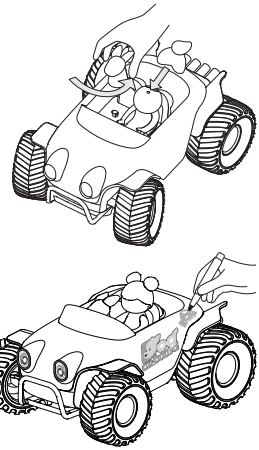


Reverse

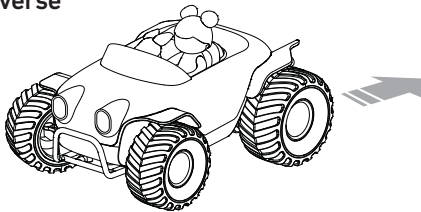


Push the throttle lever backwards.

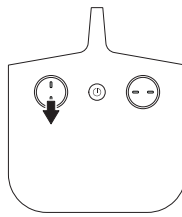


Forward

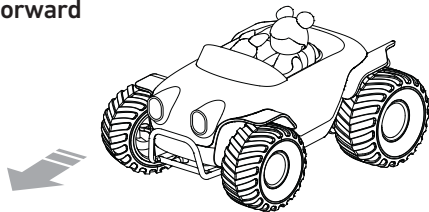


Push the throttle lever forwards.

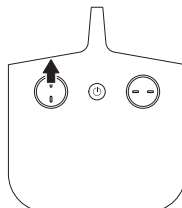


Turn Left

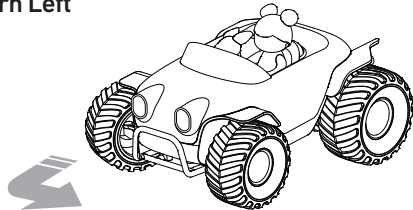


Push the throttle lever forwards and press the steering lever to the left.

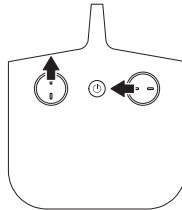


Turn Right

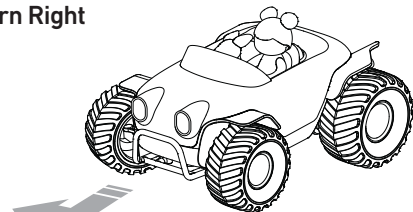


Push the throttle lever forwards and press the steering lever to the right.

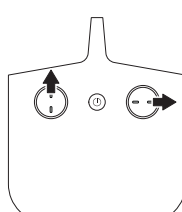


Drift Left

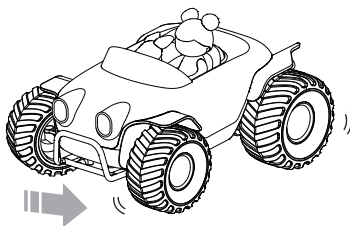


If the vehicle tends to drift to the left, move the trimmer (beneath the vehicle) to 'R' to adjust the steering.

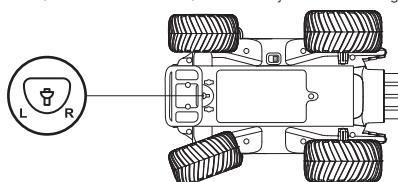

Drift Right

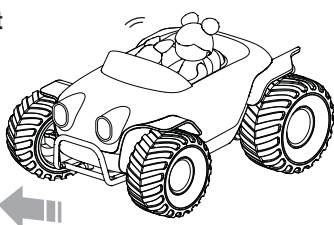

If the vehicle tends to drift to the right, move the trimmer (beneath the vehicle) to 'L' to adjust the steering.

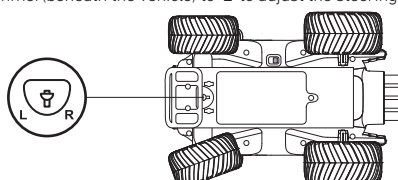

SAFETY PRECAUTIONS

- Parents: please read the instructions with your children before using the product for the first time.
- Stop the vehicle with the remote control before picking it up.
- Keep hands, hair and clothing away from moving parts when the toy is operating.
- Do not use the vehicle with the radio control in the street. Avoid collisions with people, animals and furniture.
- The wires are not to be inserted into socket-outlets.

BATTERY WARNING:

- Do not recharge non-rechargeable batteries.
- Rechargeable batteries must be removed before recharging. (For replaceable battery)
- Rechargeable batteries are only to be charged under the adult supervision.
- Do not mix different types of batteries or new batteries with old batteries.
- Only use batteries of the recommended type or an equivalent type.
- Take care to respect the + and - polarities when inserting batteries.
- Used batteries must be removed from the product.
- Do not short-circuit the power terminals.
- Do not mix alkaline batteries, standard batteries (carbon-zinc) and rechargeable batteries.

CARE AND MAINTENANCE:

- Always remove the batteries from the toy if it is not used for a long time.
- Wipe the toy gently with a clean cloth.
- Keep the toy away from direct sources of heat.
- Do not immerse the toy in water, as this could damage electronic components.
- Replace batteries when they become less powerful.
- Operation temperature 5 - 35°C.

SAFETY CIRCUIT:

During use, the internal power in the electric circuit can get quite high (for example during a 360 spin). In such a case safety circuit will shut down the vehicle for approximately 1 minute. During this period the vehicle will not respond to signals from the transmitter. This is not a defect but a safety measure to protect the electronic circuits. After this period, the vehicle will resume normal operation.

WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE):

When this device reaches the end of its life, please remove all batteries and dispose of them separately. Take electrical devices to a collection centre for electronic equipment and household appliances. Other components can be disposed of with household waste.

The use of the product may be disrupted by electromagnetic interference. If this is the case, switch the device off and on again following the instructions in the user manual. If the functions are not reset, move to another location.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

© 2023 MerchSource, LLC. Irvine, CA 92618. All rights reserved.

Model No.: 1017614

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.

WARNING:
CHOKING HAZARD - Small Parts.
Not for Children under 3 years of age.

Printed in China

**FOR CUSTOMER SUPPORT,
PLEASE CALL**

1-800-374-2744