

# BUTURE

## User Manual

**VC50** Cordless Vacuum Cleaner



# Language

---

English	01~17
Deutsch	18~34
Français	35~51
Español	52~68
Italia	69~85
日本語	86~102

# Content

---

<b>1. WARNING</b>	<b>2</b>
<b>2. PACKAGE LIST</b>	<b>3</b>
<b>3. KNOW THE PRODUCT</b>	<b>4</b>
3.1 Product Details	4
3.2 Digital Touch Screen	5
3.3 Accessories Function	5
<b>4. PRODUCT ASSEMBLY</b>	<b>6</b>
4.1 Install Vacuum Cleaner	6
4.2 Install the Machine	6
4.3 Charging Wall Mount Installation	7
<b>5. HOW TO USE</b>	<b>8</b>
5.1 Charging	8
5.2 Operating	9
<b>6. MAINTENANCE</b>	<b>11</b>
6.1 Main Body Cleaning	11
6.2 Wash Dust Cup and Filters	12
6.3 Brush Roller Cleaning	14
<b>7. SPECIFICATION</b>	<b>15</b>
<b>8. TROUBLESHOOTING</b>	<b>15</b>
<b>9. WARRANTY</b>	<b>17</b>

# 1. WARNING

 

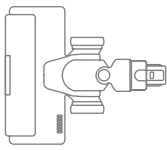 



 
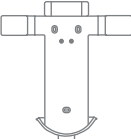 
 


Thank you for purchasing the BUTURE VC50 cordless vacuum cleaner. Before using this machine, please read the following safety warning first and take safety protection measures to avoid malfunctions caused by improper operation.

- ① This BuTure appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by a responsible person concerning use of the appliance to ensure that they can use it safely.
- ② Suitable for dry locations only. Do not use or store outdoors with wet surfaces. Do not handle any part of the plug or appliance with wet hands. Store properly in a dry place indoors.
- ③ Do not use a damaged cable or plug. If the device or charger does not work properly, dropped, damaged, missed or dropped into water, please contact tech-support@ibuture.com , BuTure after-sales team for support.
- ④ Do not vacuum flammable or combustible liquids, such as petrol, or use in areas where liquids may be present.
- ⑤ Turn off the power switch before plug or unplug the adapter.
- ⑥ Do not vacuum anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- ⑦ Do not use without filters or dust cup to avoid damaging the motor and contaminating the air. Wash hands after using the vacuum cleaner.
- ⑧ FIRE WARNING: Do not place this product on or near a cooker or any other hot surface and do not incinerate this appliance even if it is severely damaged. The battery might catch fire or explode.
- ⑨ Unplug the charger from the power outlet before performing routine cleaning or maintenance.
- ⑩ Battery leaks may occur under extreme conditions. If any liquid gets on your skin wash quickly with soap and water. If liquid gets into your eyes, rinse with water for at least 15 minutes immediately. Seek medical attention immediately.
- ⑪ Charge the unit with the charger we provided.
- ⑫ Avoid using this product to vacuum hard, sharp objects, as this may cause damage.

**Note:** The vacuum cleaner adopted thermal protection technology to prevent overheating, will stop working when the item is over-heated.

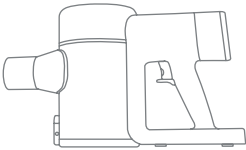
## 2. PACKAGE LIST

 Please check and confirm the accessories and parts according to the following sheet before using.


 <p>Main Body*1</p>	 <p>Adjustable Extension Tube*1</p>		 <p>Motorized Floor Brush*1</p>
 <p>Long Crevice Nozzle *1</p>	 <p>2 in 1 Upholstery Brush*1</p>	 <p>Extra Hepa Filter*1</p>	 <p>Charger*1</p>
 <p>Charging Wall Mount*1</p>	 <p>Extra sponge Filter*1</p>	 <p>Cleaning Brush*1</p>	 <p>Quick User Guide*1</p>

## 3. KNOW THE PRODUCT

### 3.1 Product Details

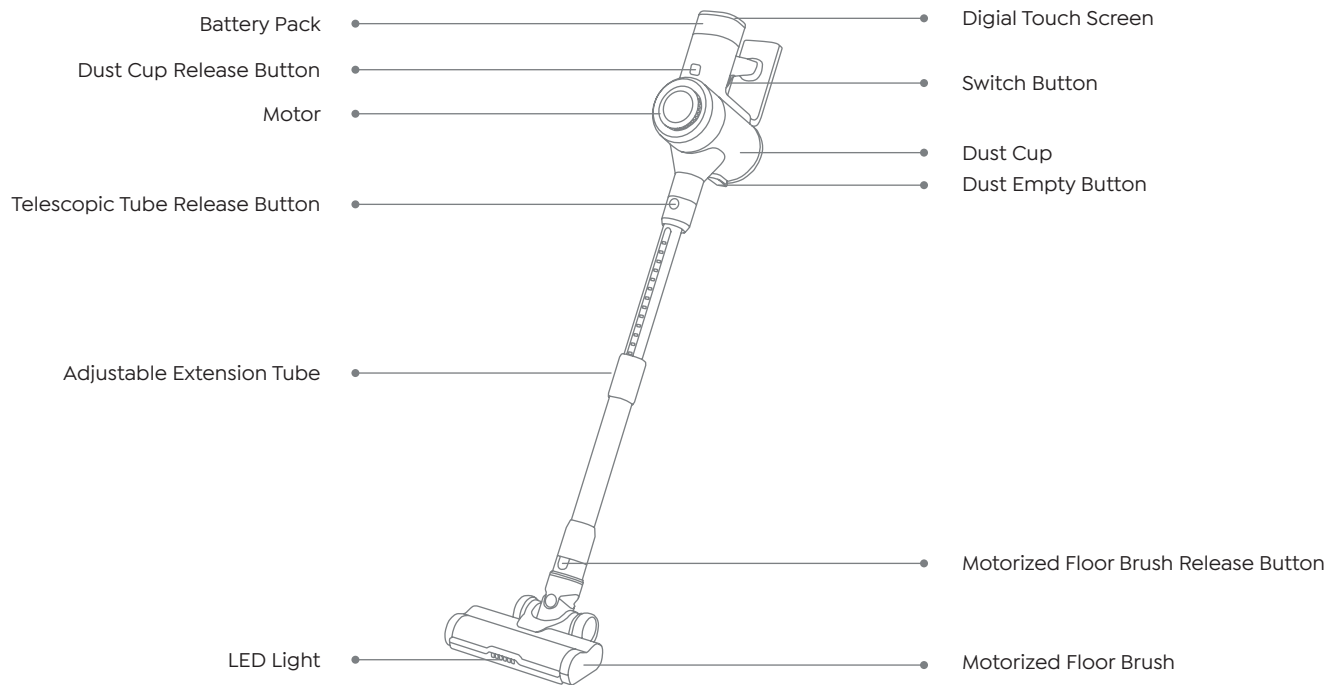

## 3.2 Digital Touch Screen

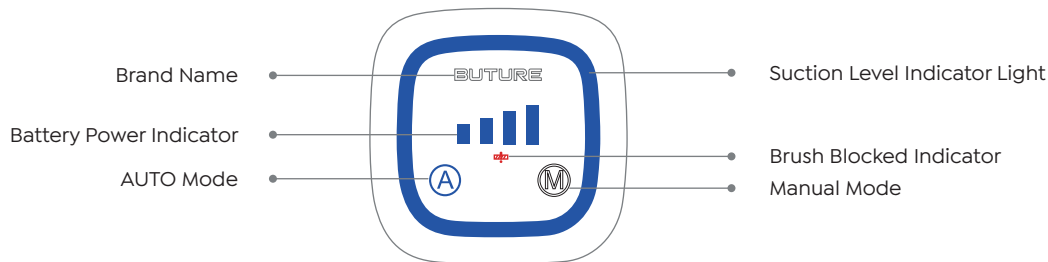 

## 3.3 Accessories Function

### 2 in 1 Upholstery Brush

Easy to snap-on design, can help you remove dust and hair on the carpet.



### Mini Cleaning Brush

Remove hair, rubbish, and micro dust on the accessories or filters.



 
### Long Crevice Nozzle

Remove dust on the hard-to-reach areas like windows, bed feet, gaps between sofa, etc.




### Charging Wall Mount

Fix the vacuum cleaner and accessories on the wall hanger for easy storage and charging.

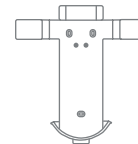


## 4. PRODUCT ASSEMBLY
 
### 4.1 Install Vacuum Cleaner

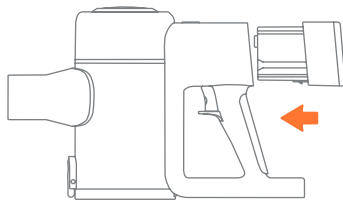


### 4.2 Install the Machine
 
#### 1. Directly Install Cleaning Accessories

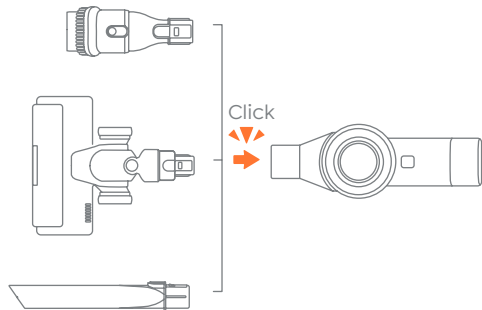


#### 2. Install Extension Tube & Cleaning Accessories

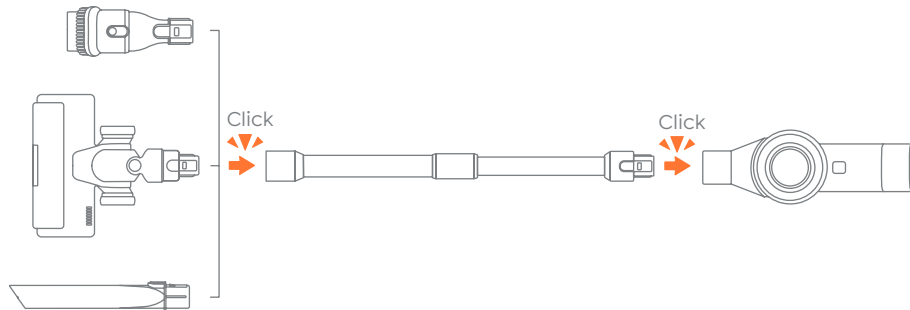 



### 4.3 Charging Wall Mount Installation

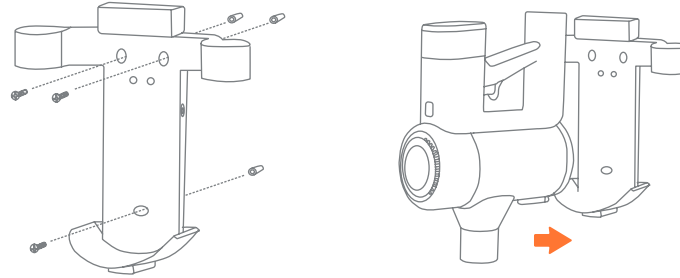 

#### **WARNING**

- Please make sure there is no gas, water, or electrical cables and wires behind the mounting area.
- To avoid the dock dropping down, please make sure it must be installed firmly.
- Store appropriately indoors in a dry place. Do not expose the machine to sunlight or freezing temperature. Recommended temperature range: 39.2°F (4°C)-104°F(40°C).

## 5. HOW TO USE

 
### 5.1 Charging




- When using a new battery or using it for the first time after long-term storage, please fully charge the battery first.
- When storing and not using the vacuum cleaner for a long time, please ensure that it is charged and discharged at least once every three months.

#### • Charging Methods


##### ① Charge the battery directly

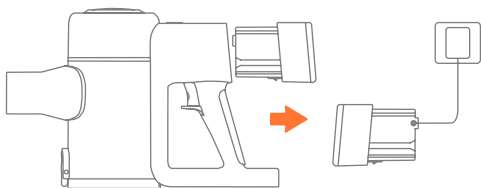

##### ② Charging with Wall Mount

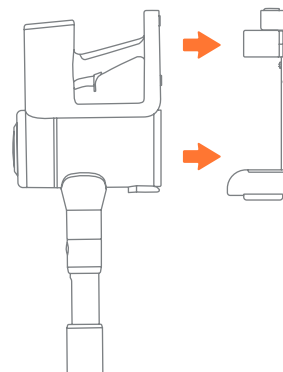 

## Battery power indicator

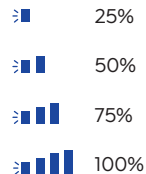 

**Charging:** Light will flash blue cyclically and indicate the remaining power.

**Full Charge:** Light will always on.

## 5.2 Operating

 


### Before each use, make sure that

- The battery is fully charged, and fixed in place.
- The dust cup and filters are cleaned, and fixed in place.

## Start To Work


Press the switch button to turn it on and it will start MANUAL Mode.

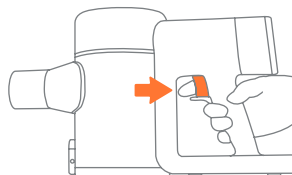


## • Select Cleaning Mode

### ① MANUAL Mode

 
Touch the "M" on the display screen to switch between three suction gears of MIN-MID-MAX. The corresponding indicator of suction level is: MIN= blue, MID= purple, MAX= red.

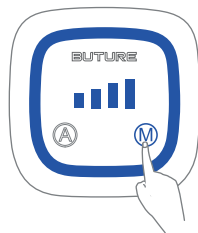

MIN Mode

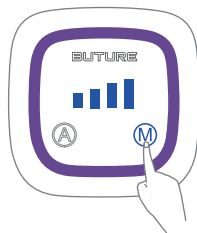 

MID Mode

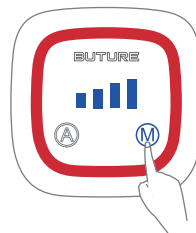 


MAX Mode


### ② AUTO Mode

 Press the "A" button to switch to AUTO mode.

In AUTO mode, the Automatic Load Sensor system automatically changes the motor speed and suction level between carpets and hard floors for energy-efficient powerful cleaning.

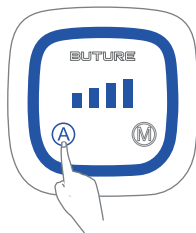


 Blue Light : AUTO mode on

 White Light : AUTO mode of

### ③ Abnormal Indicator ▲

 When the red light flashing (about 5s) and the motorized floor brush does not work, the motorized floor brush/telescopic tube/dust cup is blocked, please clean it promptly.

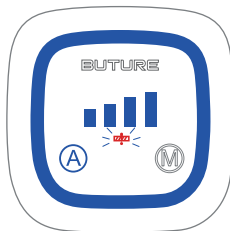


## 6. MAINTENANCE

Tip: Please clean the vacuum cleaner regularly to extend its lifespan.

### 6.1 Main Body Cleaning

 - Turn off the power before cleaning the body.
- Please use a neutral detergent, wipe the body with half-wet cloth.
- Please avoid sun exposure and store in a cool and dry place.

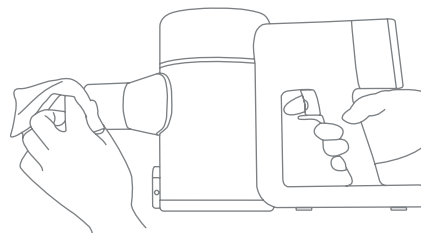


## 6.2 Wash Dust Cup and Filters

### ① Empty Dust Cup

- When using, if the garbage in the dust cup exceeds MAX Line, please empty it in time.




 - Press the dust empty button to empty the dust.

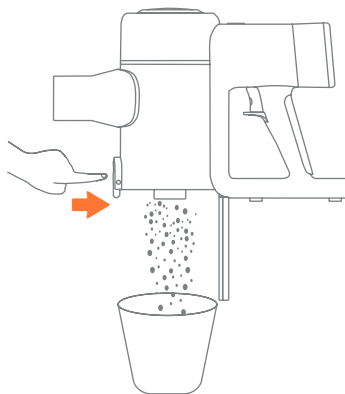


## ② Remove Dust Cup and Filters

 
- Remove dust cup from main body.

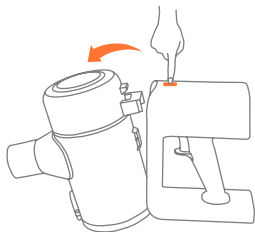

 - Rotate clockwise to remove the stainless steel filter.

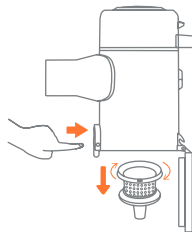


- Remove HEPA filter from main body.

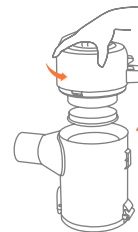 


## ③ Clean and install dust cup/Filters

 - Clean dust cup and filters with water. Make sure that the dust cup and filters have dried before use.

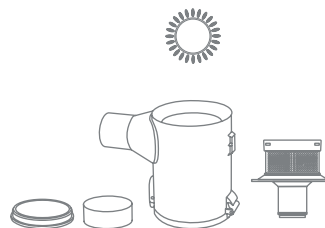

- Installation steps:

 
1. Twist the stainless steel filter counterclockwise and put it into the dust cup.
2. Put in a sponge strainer.
3. Plug the HEPA filter into the motor.
4. Twist the dust cup clockwise to connect it to the motor.

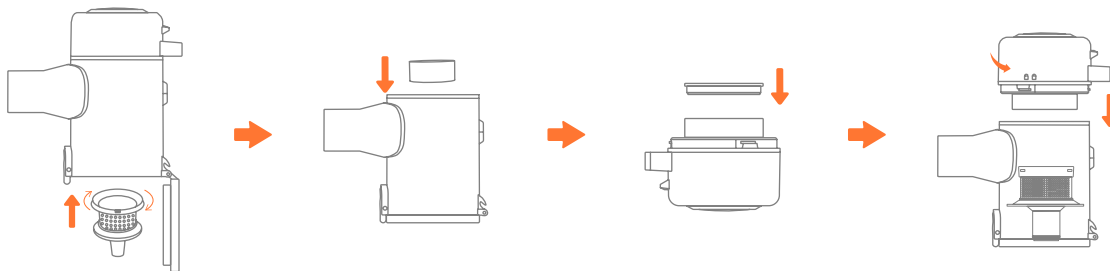

## 6.3 Brush Roller Cleaning

**Tip:** After long periods of use, the bristle may be jammed by hair or similar build-up. It's recommended to clean the brush roller periodically to ensure efficient operation and maintain suction.

 - ① Press the release button upwards to remove the brush roller.
- ② To take out the brush roller, and to remove any hair or fibers that have been wrapped around the brush roller. Using the brush cleaning tool to sweep away the trash on the roller.
- ③ The brush roller is washable. Before replacing, check that the brush roller is completely dry.
- ④ Press the brush roller to the brush head and hearing the sounds of locking.

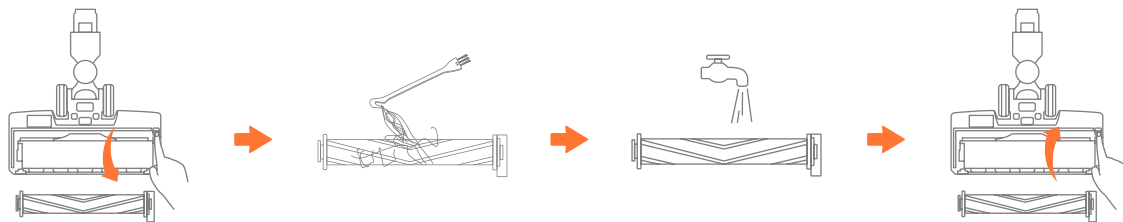



## 7. SPECIFICATION

Product	Cordless Vacuum Cleaner
Model	VC50
Rated Voltage	DC 25.9V
Battery Type	Li-ion
Cleaning Mode	AUTO & MANUAL

## 8. TROUBLESHOOTING

NOTE: If vacuum still does not operate properly, contact Customer Service.

 [tech-support@ibuture.com](mailto:tech-support@ibuture.com)

ISSUE	CAUSE	SOLUTION
Vacuum cleaner not work	• The product is out of power.	• Please fully charge the product before using it.
	• Automatic protection triggered by high temperature caused by blockage.	• Clean the dust suction port or the HEPA filter, and restart it after cooling down.

ISSUE	CAUSE	SOLUTION
No suction or light suction	Dust cup is full, suction port of the machine is blocked or filter is clogged.	Empty dust cup and clean filters (See Emptying the Dust Cup and Cleaning the Filters sections).
Battery Indicator does not light when charging	<ul style="list-style-type: none"> <li>• Main body and adapter are not connected properly.</li> </ul>	<ul style="list-style-type: none"> <li>• Check whether the adapter is plugged in.</li> </ul>
	<ul style="list-style-type: none"> <li>• Battery is fully charged and no more charging.</li> </ul>	<ul style="list-style-type: none"> <li>• Can be used normally.</li> </ul>
Can not charge	<ul style="list-style-type: none"> <li>• The battery temperature is too high or too low.</li> </ul>	<ul style="list-style-type: none"> <li>• Leave the vacuum and battery to cool for at least 45 minutes, until they return to room temperature.</li> </ul>
	<ul style="list-style-type: none"> <li>• Charging indicator does not light up.</li> </ul>	<ul style="list-style-type: none"> <li>• Charger is not plugged in.</li> </ul>
The red brush roller Indicator flashes	The brush roller is blocked.	Remove any string, carpet fibers, or hair that may be wrapped around the brush roller.
Power indicator flashes red	Motor may have protection functions such as over-temperature/under-voltage.	Clean the whole machine until it return to room temperature. If the Power Indicator still flashes blue, please contact us. <a href="mailto:tech-support@ibuture.com">tech-support@ibuture.com</a>

## 9. WARRANTY

### 9.1 The 2-Year Warranty

- Our BuTure machine has a 2-year warranty against original defects in material and workmanship, when used for private household purposes in accordance with the BuTure Instruction Manual. To extend the warranty to 3 years, please contact [tech-support@ibuture.com](mailto:tech-support@ibuture.com) in time to activate.
- This warranty provides, at no extra cost to you, all labor and parts necessary to ensure your machine is in proper operating condition during the warranty period.

### 9.2 What is covered?

Only applies to purchases made from authorized retailers of BuTure.  
This warranty will only be valid if the machine is used in the country in which it was sold.

### 9.3 How to claim?

Please keep your proof of purchase. To make a claim under our warranty, you need to provide your original purchase receipt with the purchase date and order number on it.

If your machine is not functioning properly, or you still have any questions after reading this manual carefully, please feel free to contact us, we will reply to you in 24 hours and try our best to provide you with a satisfactory solution.

**Email our Customer Service : [tech-support@ibuture.com](mailto:tech-support@ibuture.com)**

## Federal Communication Commission Interference Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

# Declaration of Conformity

We (Manufacturer is responsible for this declaration)

Ekoo Electronic Co.,Ltd.

(Company name)

B09,block B,f2,bldg.b,runfeng Pioneer Park,no.973, minzhi Avenue, Minzhi St., Longhua, Shenzhen, CN.(Company address)

Declare under our sole responsibility that the product

Trade name:BUTURE

Equipment: Vacuum Cleaner

Model No. : VC50

To which this declaration relates is in conformity with the essential requirement set out in the Council Directive on the Approximation of the laws of the Member States relating to LVD Directive(2014/35/EU) & EMC Directive(2014/30/EU) & RoHS(2011/65/EU) product is responsible to affix CE marking, the following standards were applied:

EN 60335-2-2:2010+A11:2012+A1:2013

EN 60335-1:2012+A11:2014+A13:2017+A1:2019+A14:2019+A2:2019

EN 62233:2008

EN 55014-1:2021

EN 55014-2:2021

EN IEC 61000-3-2:2019+A1:2021

IEC62321-3-1:2013

IEC62321-4:2013

IEC62321-5:2013

IEC62321-6:2015

IEC62321-7-1:2015

IEC62321-7-2:2017

IEC62321-8:2017

Full Name: George.wang

Signature: George.wang

Position: Approbation Manager

Place/Date: Shenzhen,China/Jun.27-2022

