

GET TO KNOW YOUR DRYER


Model 289

Retractable cord control

Cool shot button

2 heat/speed settings

Dual voltage

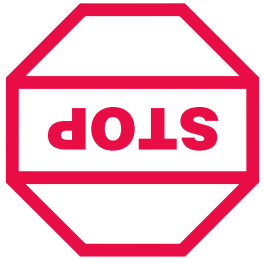

This message about...

GROUND

FAULT

CIRCUIT

INTERRUPTERS

...can save a life!

IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI*NOW!

Your local electrician can help you decide which type is best for you – a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. National Electrical Code now requires GFCIs in the bathrooms, garages, and outdoor outlets of all new homes.

WHY DO YOU NEED A GFCI? Electricity and water don't mix. If your hair dryer falls in water while it's plugged in, the electric shock can kill you... even if the switch can cut breaker won't protect you in this position, the dryer operates in all available heat and speed settings.



A GFCI can save your life! Compared to that, the price is small! Don't wait...install one now!

*A GFCI is a sensitive device that reacts immediately to a small electric current leak by stopping the electricity flow.

ADDITIONAL INFORMATION

FOR DUAL-VOLTAGE DRYERS

For use in the U.S.A., the voltage selector switch should be placed in the 125 position. For use in several countries overseas, the voltage selector may need to be placed in the 250 position. Confirm the voltage available at each overseas location before using the appliance. For connection to a 250 volt supply, use an attachment plug adapter or the proper configuration for the power supply receptacle.


For 125 Volt Operation
Flick the dual voltage switch to the 125 position. First put the HI-LO switch into LO. Flick the dual voltage switch to the 250 position. At 250 while set at LO, the dryer operates only at high speed with high heat. **Do not attempt to operate the HI-LO switch or change to 125 when operating on 220-250V. The switches must be set and remain in the LO and 250 positions.** A plug adapter may be necessary in certain countries.

For 250 Volt Operation
Flick the dual voltage switch to the 125 position. First put the HI-LO switch into LO. Flick the dual voltage switch to the 250 position. At 250 while set at LO, the dryer operates only at high speed with high heat. **Do not attempt to operate the HI-LO switch or change to 125 when operating on 220-250V. The switches must be set and remain in the LO and 250 positions.** A plug adapter may be necessary in certain countries.

CAUTION

Blocked or clogged air intake vents will cause the dryer to overheat. If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the unit or the heat cycles off, unplug the cord and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short. Inspect the cord frequently for damage. **Stop use immediately if damage is visible or unit stops or operates intermittently.**

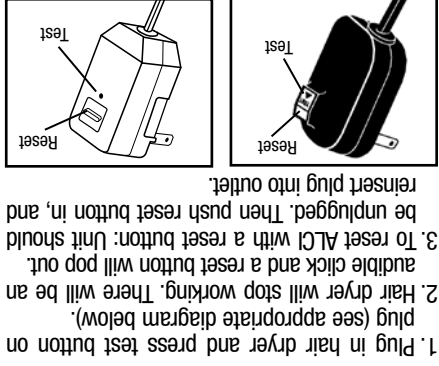

hair dryer to an authorized Conair service center.

Remove plug from outlet and allow the dryer to cool. Push reset button in and reinsert plug into outlet. Dryer should function normally, if not, return to an authorized Conair Service Center for examination and repair.

IMPORTANT SAFETY INSTRUCTIONS

KEEP AWAY FROM WATER BEFORE USING

1. Always unplug appliance immediately after using.

2. Do not use while bathing.

3. Do not place or store appliance where it can fall or be pulled into a tub or sink.

4. Do not place in, or drop into, water or other liquid.

5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING

1. This appliance should never be left unattended when plugged in.

2. This appliance should not be used by, on, or near children or individuals with certain disabilities.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

3. Use this appliance only for its intended use as attachments not recommended by the manufacturer.

4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to Conair for examination and repair.

5. Keep the cord away from heated surfaces. Do not pull, twist, or wrap line cord around dryer.

6. Never block the air openings of the appliance or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.

7. Never use while sleeping.

8. Never drop or insert any object into any opening or hose.

9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

10. Do not use an extension cord to operate dryer.

11. Do not direct hot air toward eyes or other heat-sensitive areas.

12. Do not place appliance on any surface while it is operating.

13. While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.

14. Do not use with voltage converter.

OPERATING GUIDE

1. Plug in hair dryer and press test button on plug (see appropriate diagram below).

2. Hair dryer will stop working. There will be an audible click and a reset button will pop out.

3. To reset ALCI with a reset button: Unit should be unplugged. Then push reset button in, and reinsert plug into outlet.

4. If ALCI is not functioning properly, return hair dryer to an authorized Conair service center.

5. It is important that if immersion occurs, this unit be brought to a service center. Do not try to reset.

6. Be sure to repeat test every time you use hair dryer to confirm ALCI is operational. Should the dryer go off and the ALCI reset button pop up during use, this could indicate a malfunction in the dryer.

Remove plug from outlet and allow the dryer to cool. Push reset button in and reinsert plug into outlet. Dryer should function normally, if not, return to an authorized Conair Service Center for examination and repair.

1. Plug in hair dryer and press test button on plug (see appropriate diagram below).

2. Hair dryer will stop working. There will be an audible click and a reset button will pop out.

3. To reset ALCI with a reset button: Unit should be unplugged. Then push reset button in, and reinsert plug into outlet.

4. If ALCI is not functioning properly, return hair dryer to an authorized Conair service center.

5. It is important that if immersion occurs, this unit be brought to a service center. Do not try to reset.

6. Be sure to repeat test every time you use hair dryer to confirm ALCI is operational. Should the dryer go off and the ALCI reset button pop up during use, this could indicate a malfunction in the dryer.

Remove plug from outlet and allow the dryer to cool. Push reset button in and reinsert plug into outlet. Dryer should function normally, if not, return to an authorized Conair Service Center for examination and repair.

1. Plug in hair dryer and press test button on plug (see appropriate diagram below).

2. Hair dryer will stop working. There will be an audible click and a reset button will pop out.

3. To reset ALCI with a reset button: Unit should be unplugged. Then push reset button in, and reinsert plug into outlet.

4. If ALCI is not functioning properly, return hair dryer to an authorized Conair service center.

5. It is important that if immersion occurs, this unit be brought to a service center. Do not try to reset.

6. Be sure to repeat test every time you use hair dryer to confirm ALCI is operational. Should the dryer go off and the ALCI reset button pop up during use, this could indicate a malfunction in the dryer.

Remove plug from outlet and allow the dryer to cool. Push reset button in and reinsert plug into outlet. Dryer should function normally, if not, return to an authorized Conair Service Center for examination and repair.

1. Plug in hair dryer and press test button on plug (see appropriate diagram below).

2. Hair dryer will stop working. There will be an audible click and a reset button will pop out.

3. To reset ALCI with a reset button: Unit should be unplugged. Then push reset button in, and reinsert plug into outlet.

4. If ALCI is not functioning properly, return hair dryer to an authorized Conair service center.

5. It is important that if immersion occurs, this unit be brought to a service center. Do not try to reset.

6. Be sure to repeat test every time you use hair dryer to confirm ALCI is operational. Should the dryer go off and the ALCI reset button pop up during use, this could indicate a malfunction in the dryer.

Remove plug from outlet and allow the dryer to cool. Push reset button in and reinsert plug into outlet. Dryer should function normally, if not, return to an authorized Conair Service Center for examination and repair.

LIMITED TWO YEAR WARRANTY

Conair will repair or replace, at our option, your appliance free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on the shipping instructions. In the absence of a receipt, the warranty period shall be 24 months from the date of manufacture.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

DRYING BASICS
1. Shampoo and condition hair with products of your choice. Rinse thoroughly. Towel blot hair to remove excess moisture. Section hair. Using the dryer along with your styling brush, direct hot air through a section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct airflow at hair not scalp.

2. Keep dryer's air intake vents unobstructed and free from hair while drying.

3. To avoid over-drying, do not concentrate heat on any one section for any length of time.

4. For quick touch-ups, between shampoos, dampen hair with a mist of water before styling with the dryer.

5. When using your dryer to create curls and waves, dry hair almost completely on a warmer temperature setting, then finish styling with the cool shot feature to close hair shaft and lock in style.

1875 WATT cord keeper™ STYLER



CONAIR® PROFESSIONAL RESULTS AT HOME

CONAIR® CORD-KEEPER™ 1875 DRYER. UNIQUE FEATURES GIVE YOU PROFESSIONAL STYLING POWER.

1. Power 1875 watts of drying power.

2. Two heat/speed settings allows for precision styling.

3. Cool shot button locks in style.

4. Folding handle when creating a super-round brush (approximately 2" in diameter), hold hair taut in each section and bend ends slightly under retracts into the handle.

5. Retractable cord for easy storage.

6. Dual voltage perfect for worldwide travel.



CONAIR CORPORATION Service Department 7475 N. Glen Harbor Blvd Glendale, AZ 85307 ©2012 CONAIR CORPORATION

Model 289 Instruction & Styling Guide

CONAIR® CORD-KEEPER™ 1875 DRYER. UNIQUE FEATURES GIVE YOU PROFESSIONAL STYLING POWER.

1. Power 1875 watts of drying power.

2. Two heat/speed settings allows for precision styling.

3. Cool shot button locks in style.

4. Folding handle when creating a super-round brush (approximately 2" in diameter), hold hair taut in each section and bend ends slightly under retracts into the handle.

5. Retractable cord for easy storage.

6. Dual voltage perfect for worldwide travel.

