


Driver Installation

1


The screenshot displays the CTaiot website interface. On the left, a vertical list of product models is shown, each with a small image and a label: CT221B, CT220B, CT230B, CT221D, CT220D, and CT428S. The CT221B model is highlighted with a red circle and a blue circle containing the number '2'. To the right, the 'Software Download' section is visible. It features two main categories: 'Windows' and 'Mac'. Under 'Windows', there are buttons for 'Software' and 'Print Driver'. Under 'Mac', there are buttons for 'Software' and 'Print Driver'. The 'Print Driver' button under the 'Mac' category is circled in red and labeled with a blue circle containing the number '3'. A red arrow points from the 'Print Driver' button under 'Mac' to the 'Print Driver' button under 'Windows'. Below the 'Software Download' section, there is a 'Documents' section with a button labeled 'Instructions for Use'.

1. Computer login <https://ga.ctaiot.com/>
2. Select the product model
3. Click on Print Driver

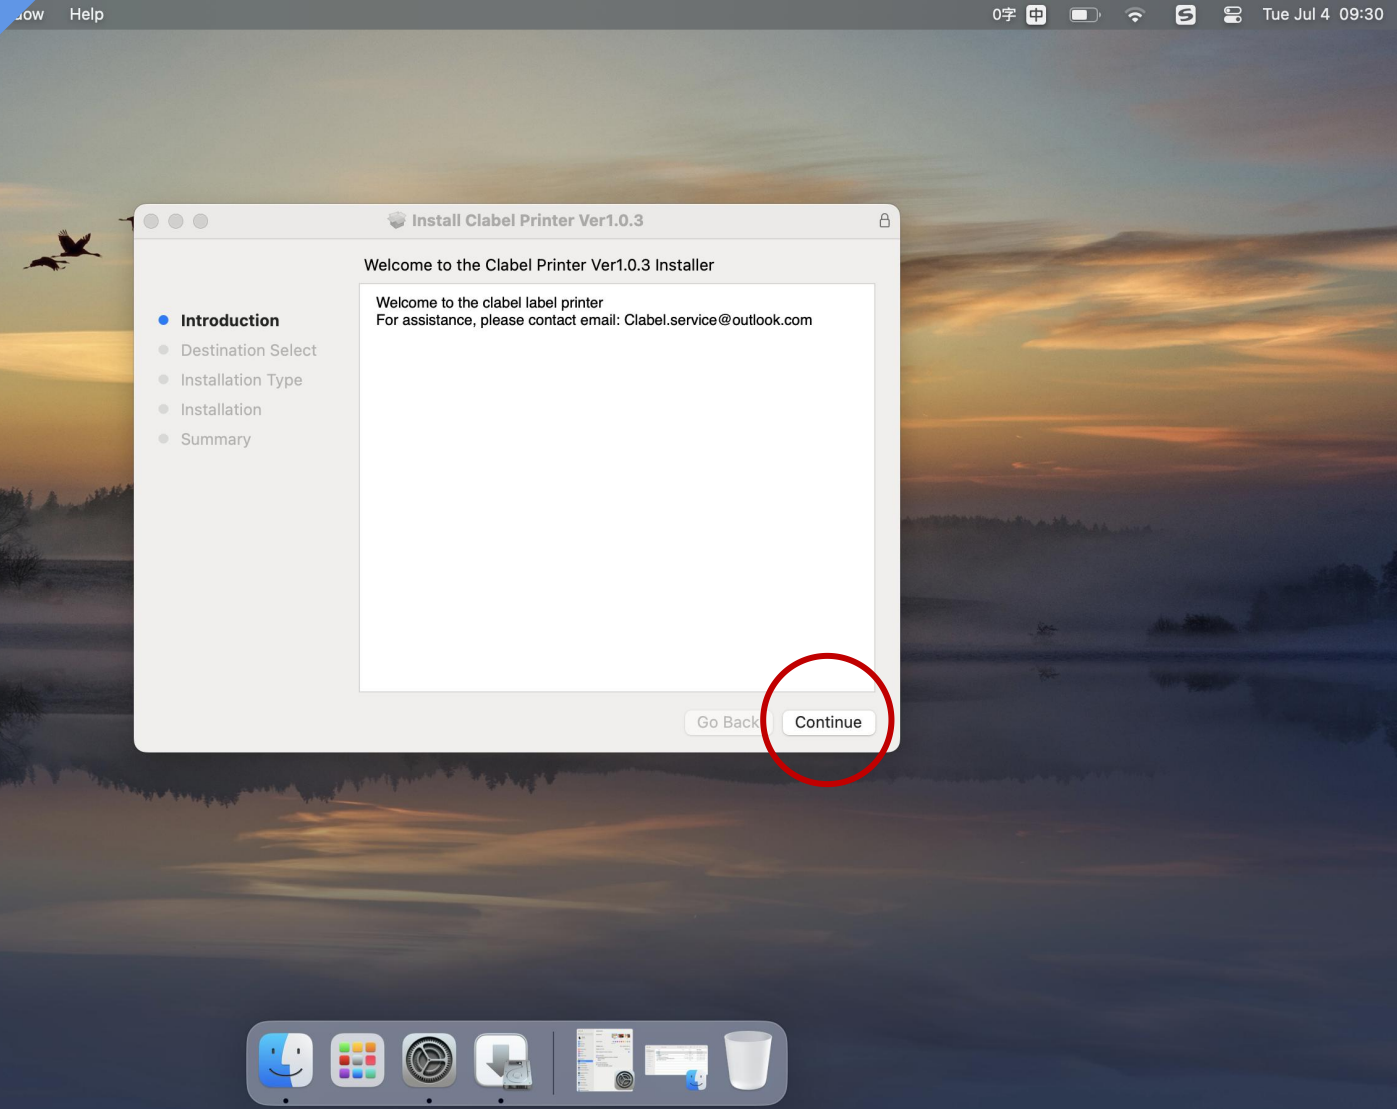


1. Before installation, please turn on the printer and connect it to the computer with a data cable
2. Double click the driver installation package, click continue

3

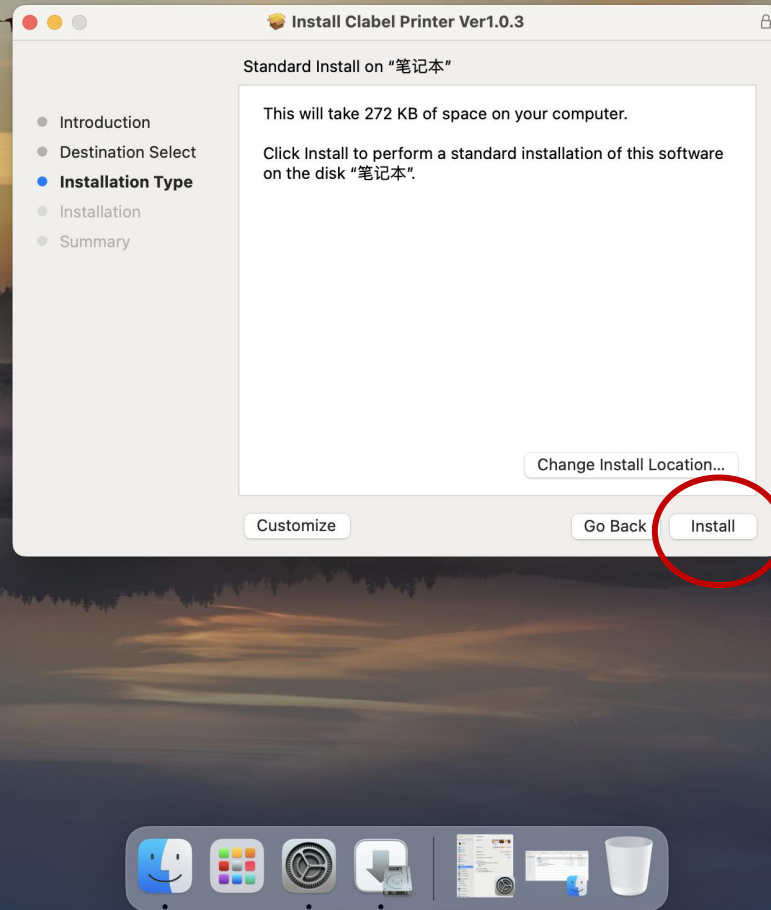


Click to install

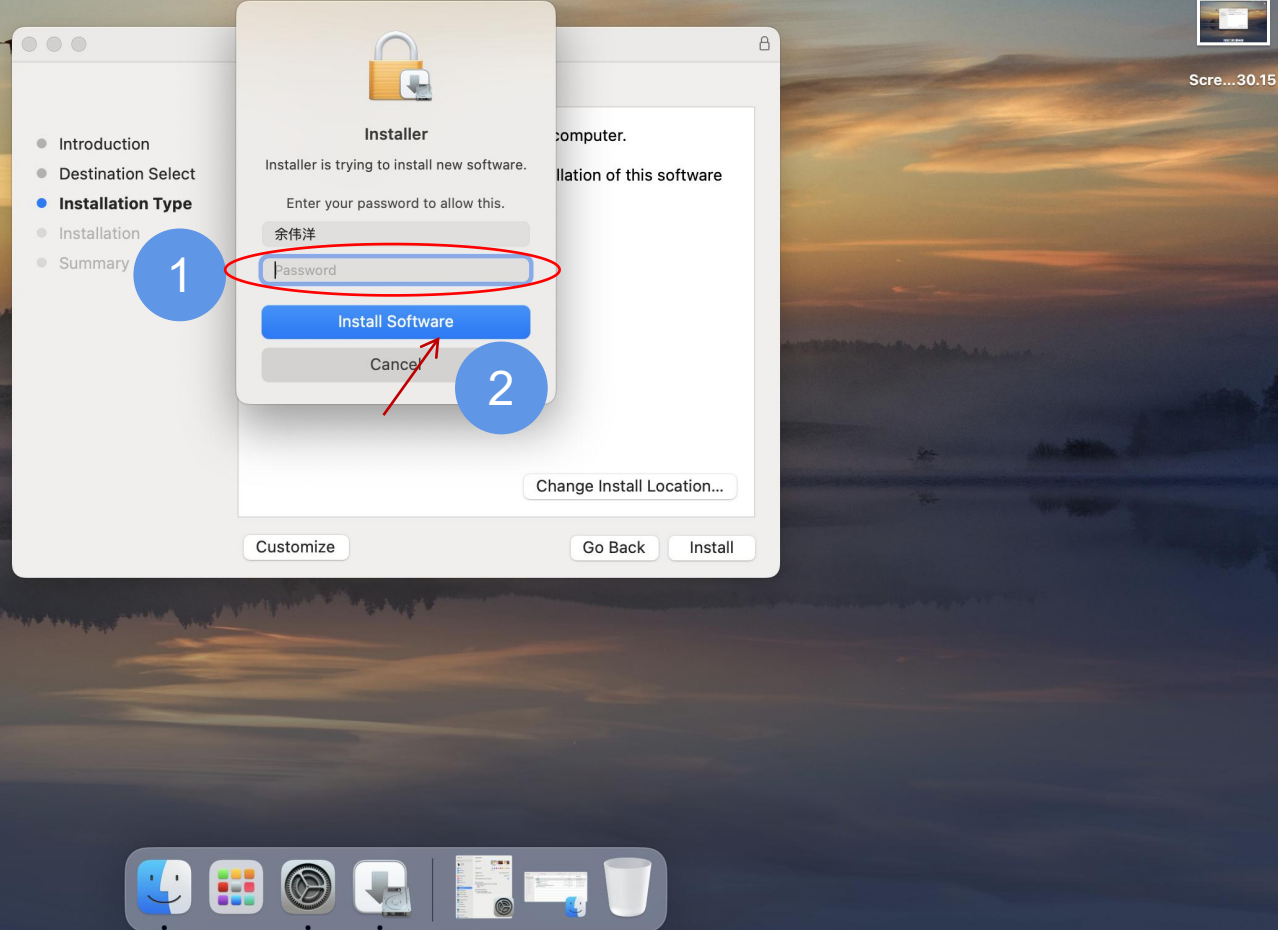


1. Enter your computer password
2. Click to Install Software


5

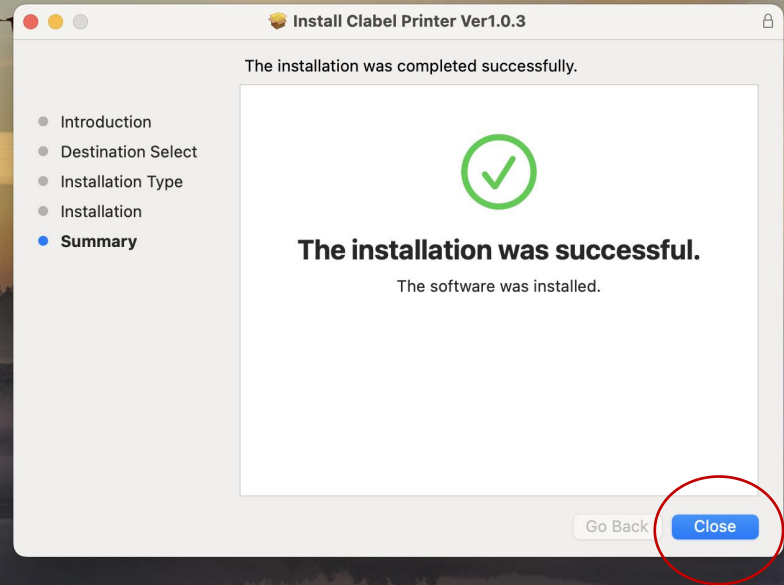


The installation was successful

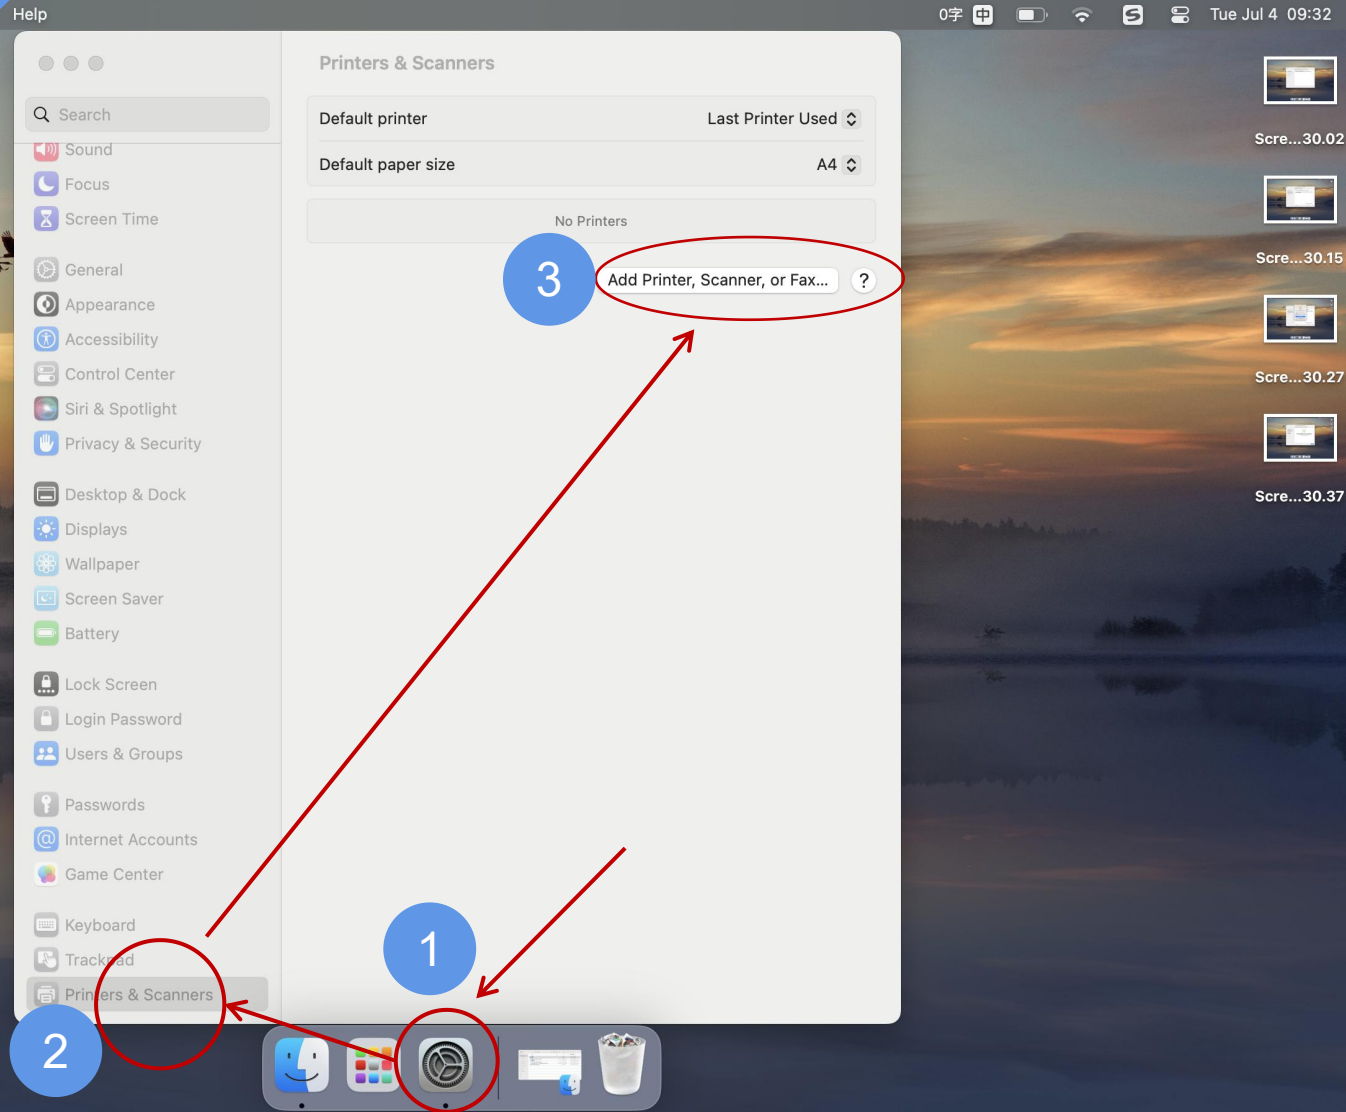

1. Click on the computer settings icon and go to Settings
2. Click on Printers and Scanners
3. Click Add printer scanner or fax machine

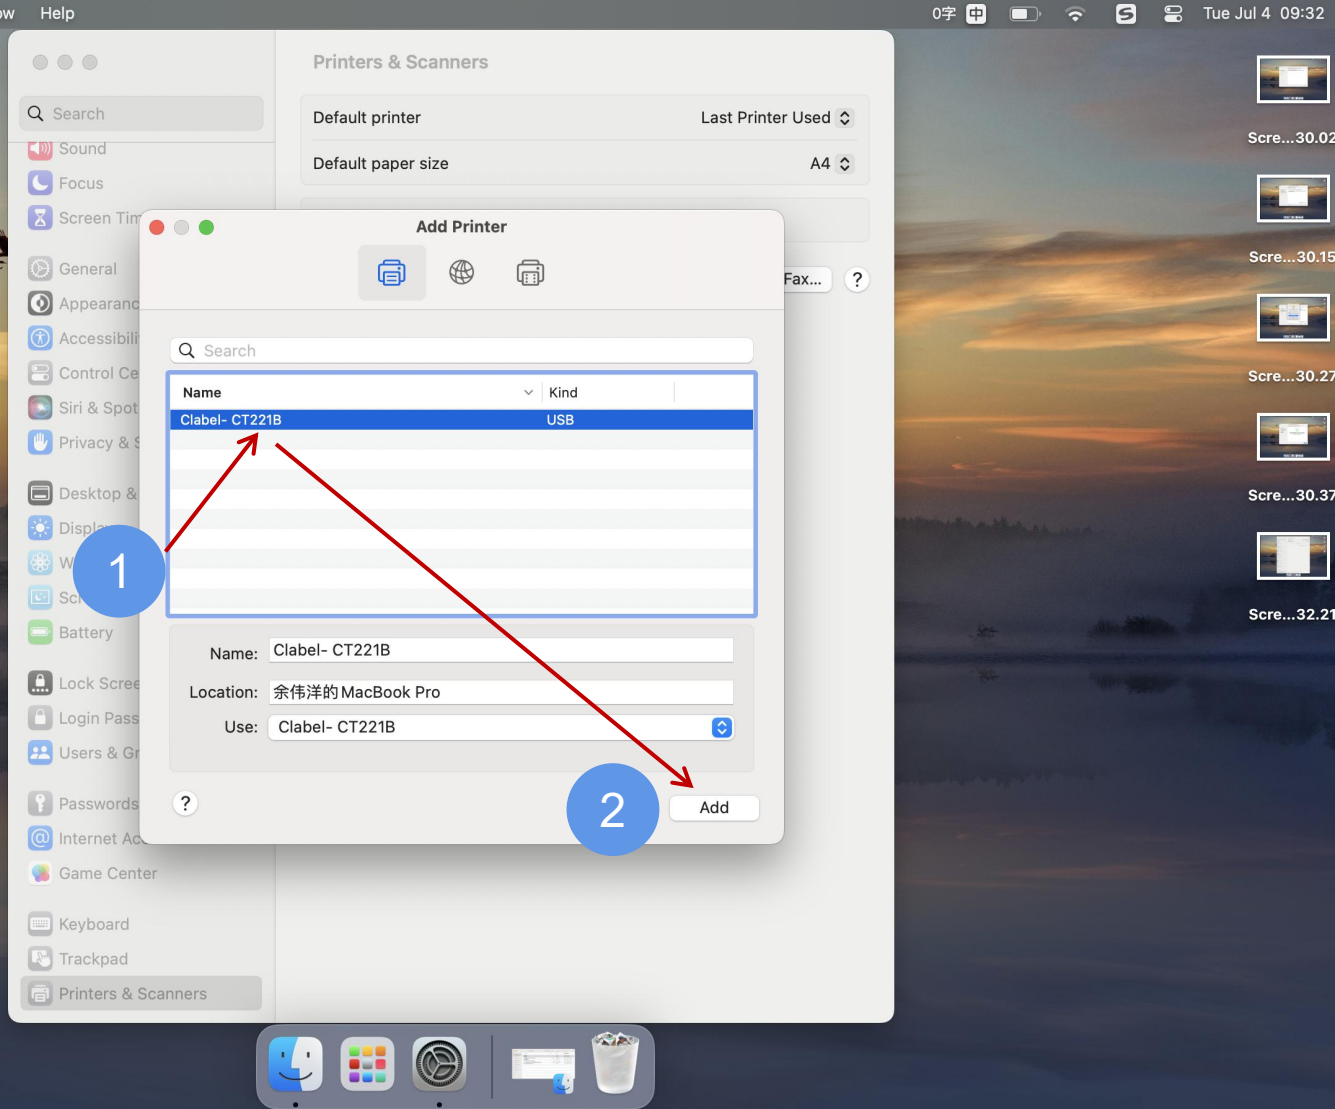



1. Select the printer that appears in the list and check the printer model you need to install
2. Click Add
3. PS: If the printer does not appear in the list, please check if the printer is on and connected to the computer successfully, or add the printer manually (page 9)

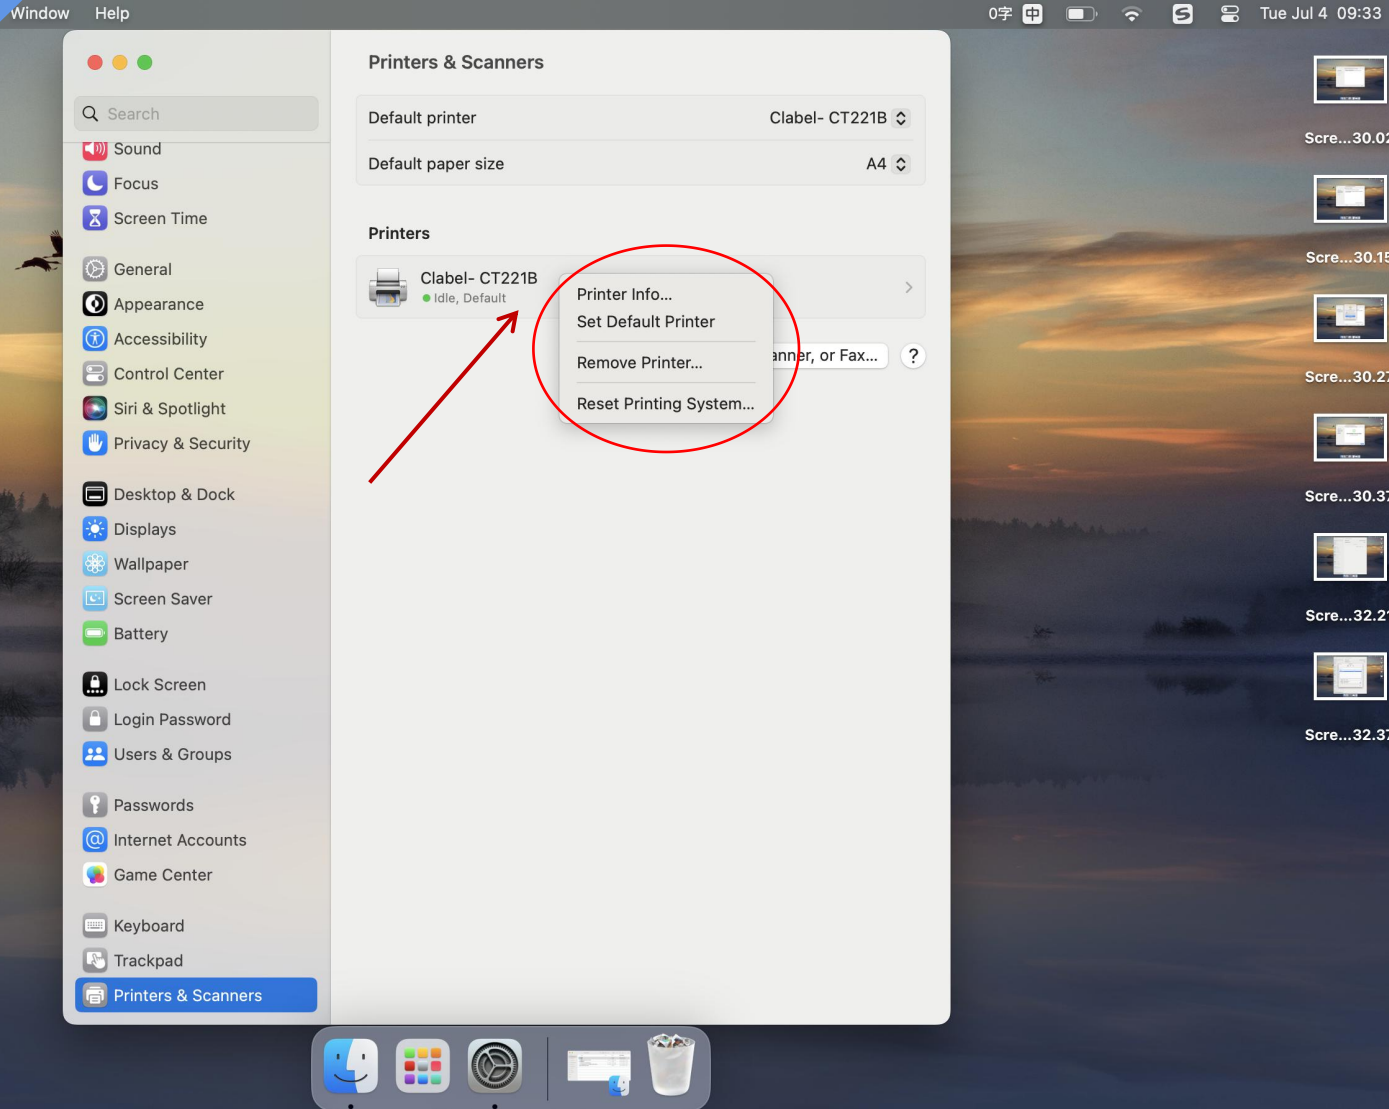

After the driver was install successfully, right mouse click to set more settings for the printer driver.

9


Manually add a printer

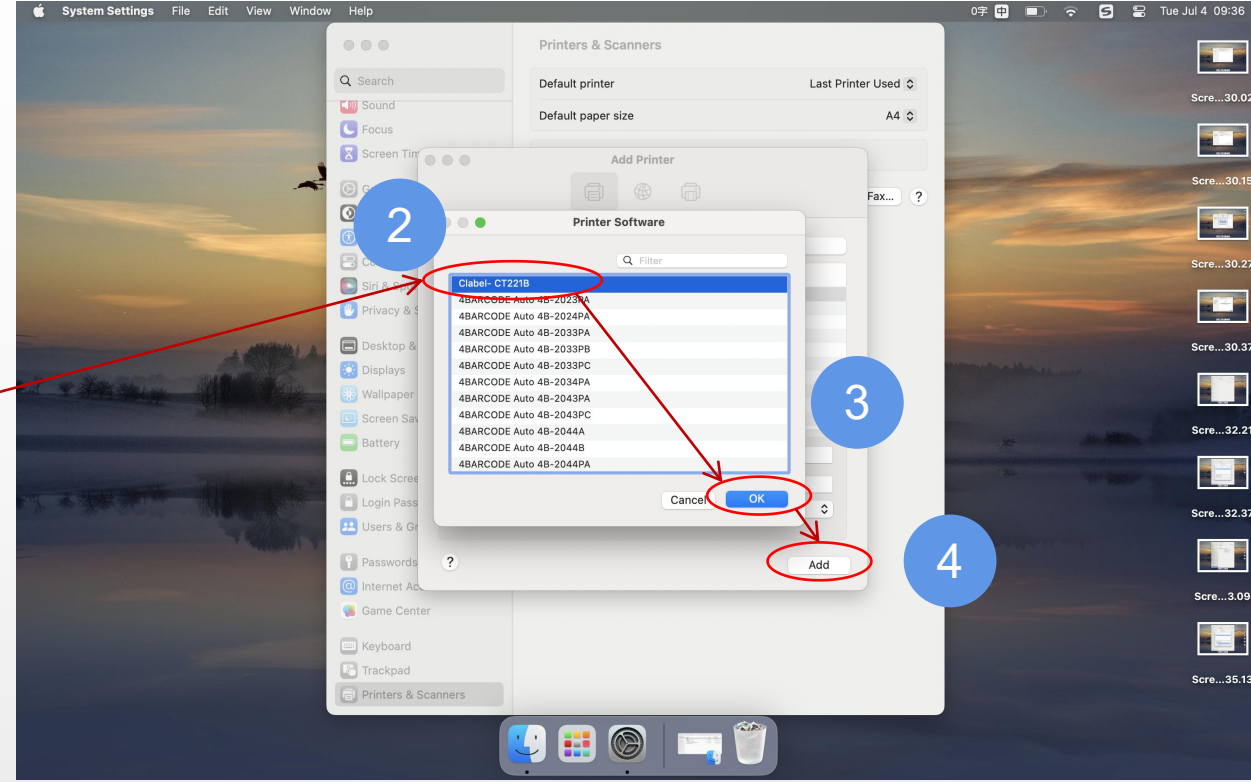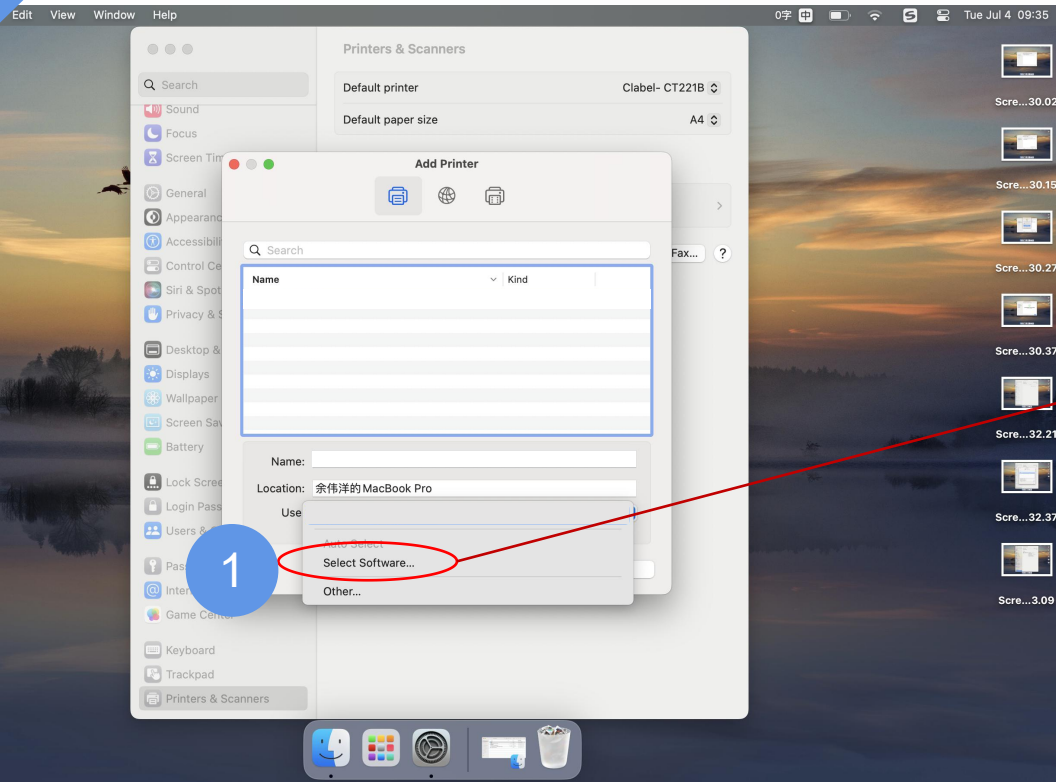

1. Click on Select Software
2. Select the printer model you need to install
3. Click OK
4. Then click Add


**Editing software
installation and
printing**

1

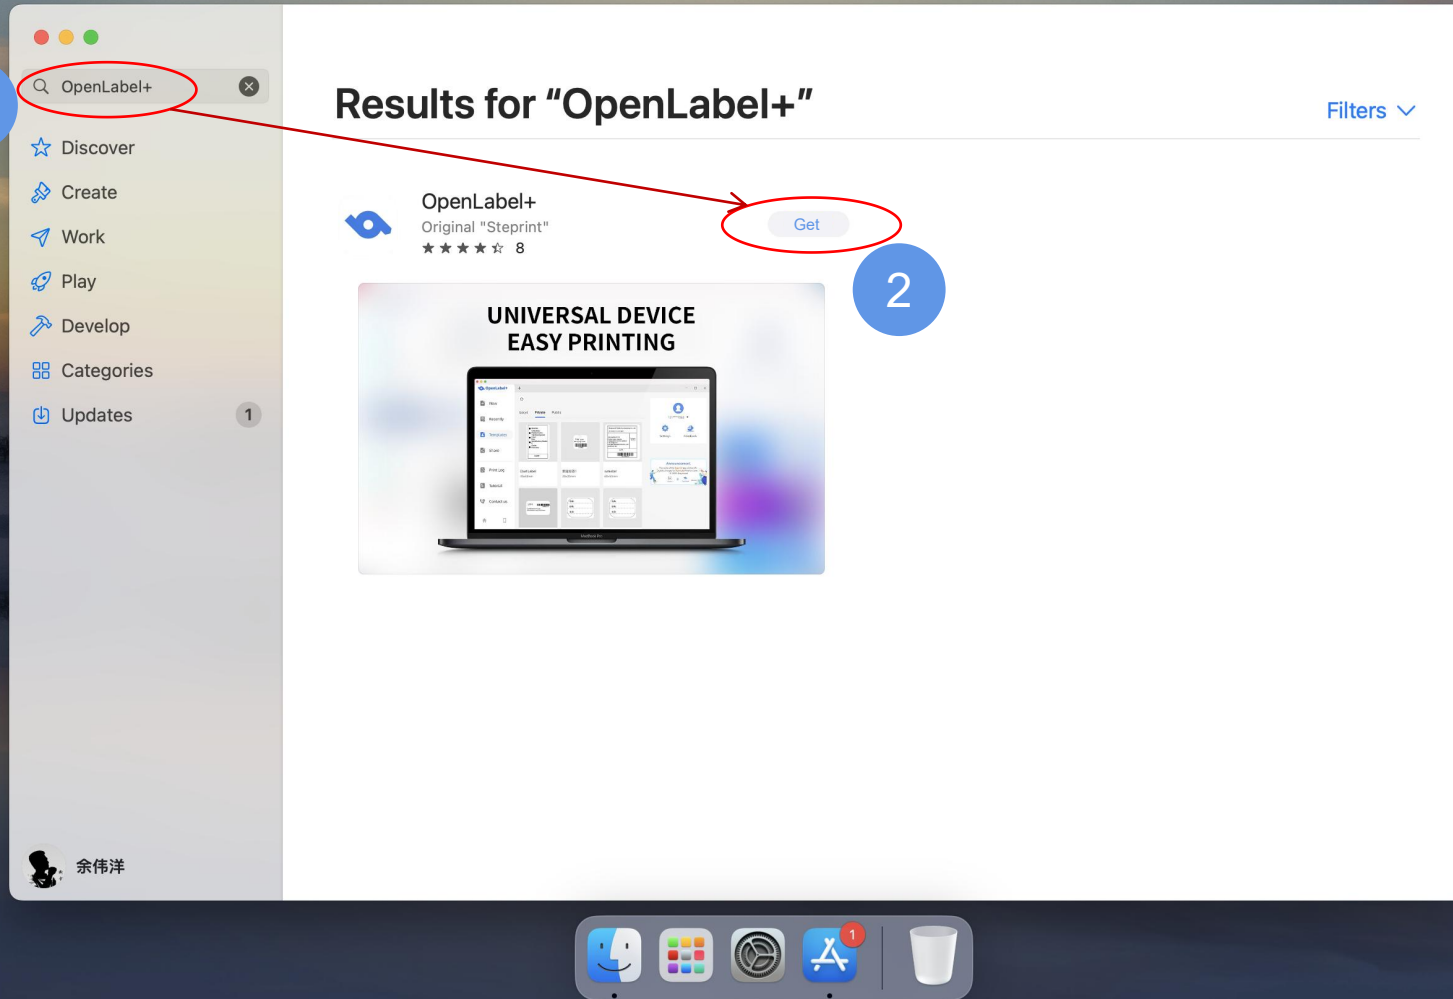


Install OpenLabel+ editing software from the App Store

2

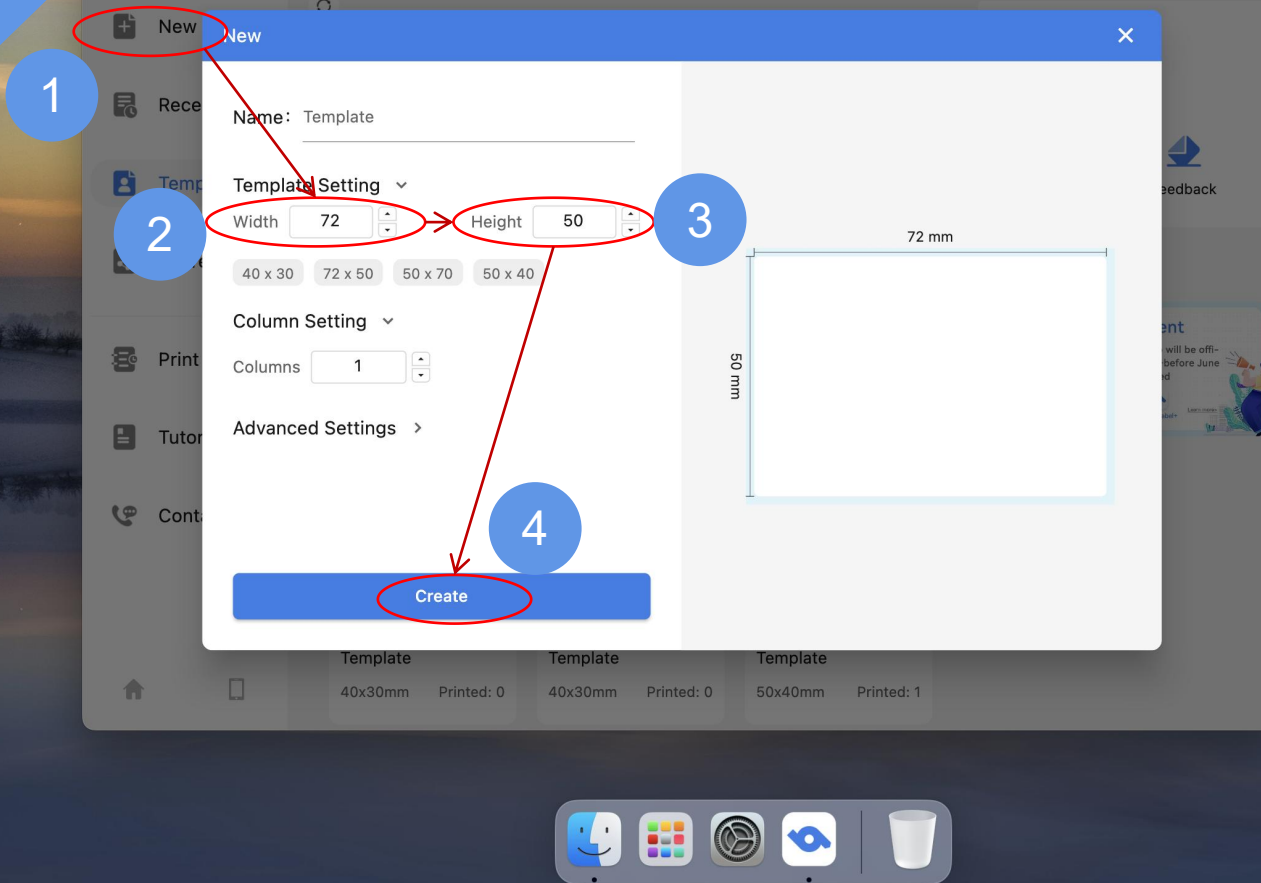


1. Open the editing software and click on New Label in the upper left corner
2. Enter the label width and height
3. Click Create

3

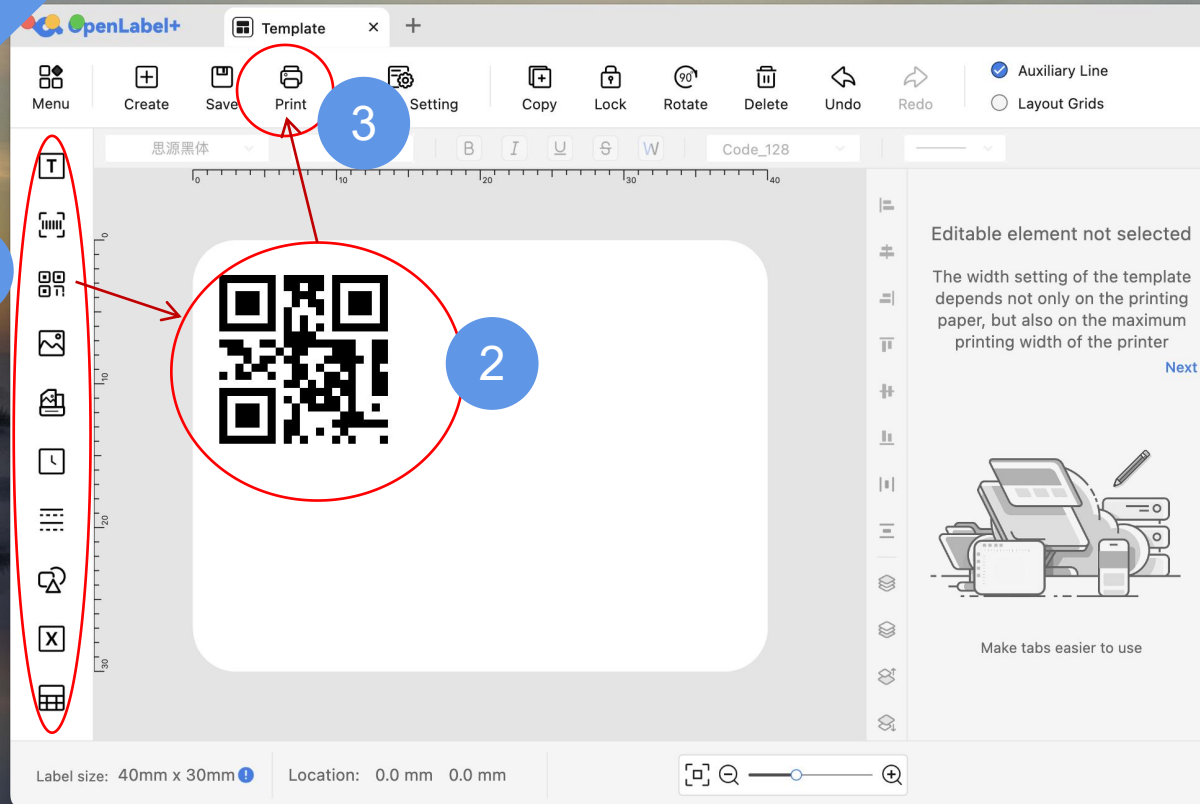


1. Select the contents you want to print from the left add to the artboard
2. Click on Print

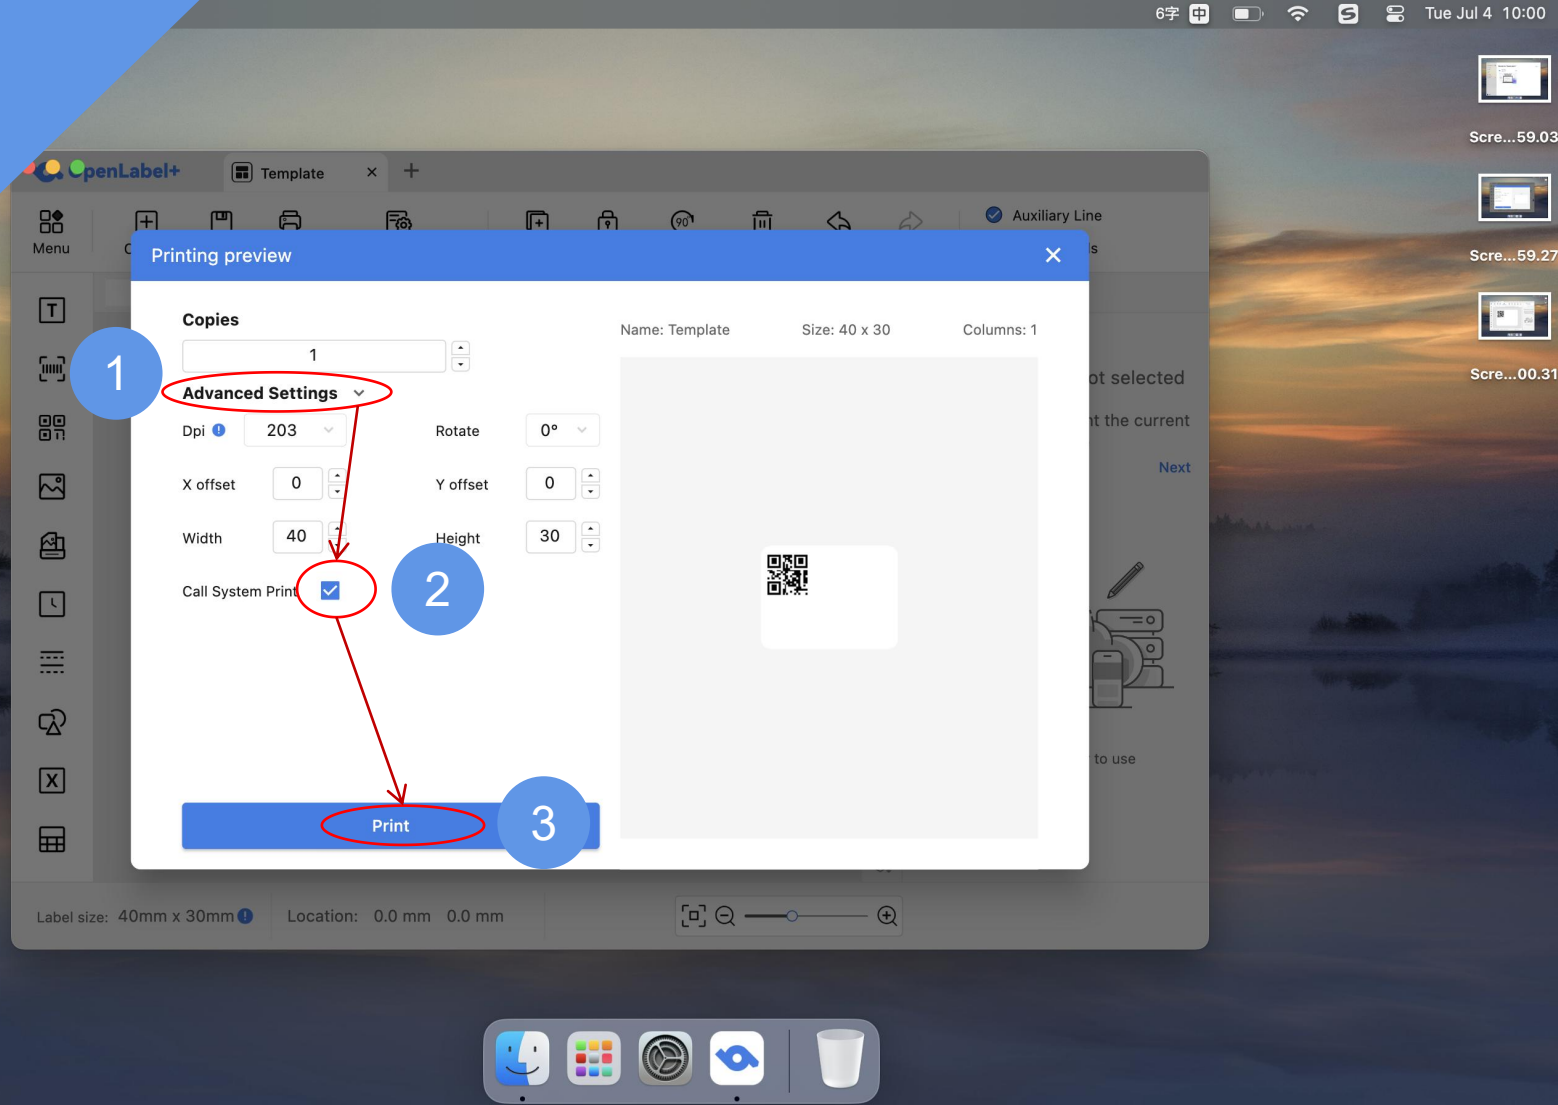

1. Expand Advanced Settings
2. Check the box to invoke system printing
3. Click on Print

5

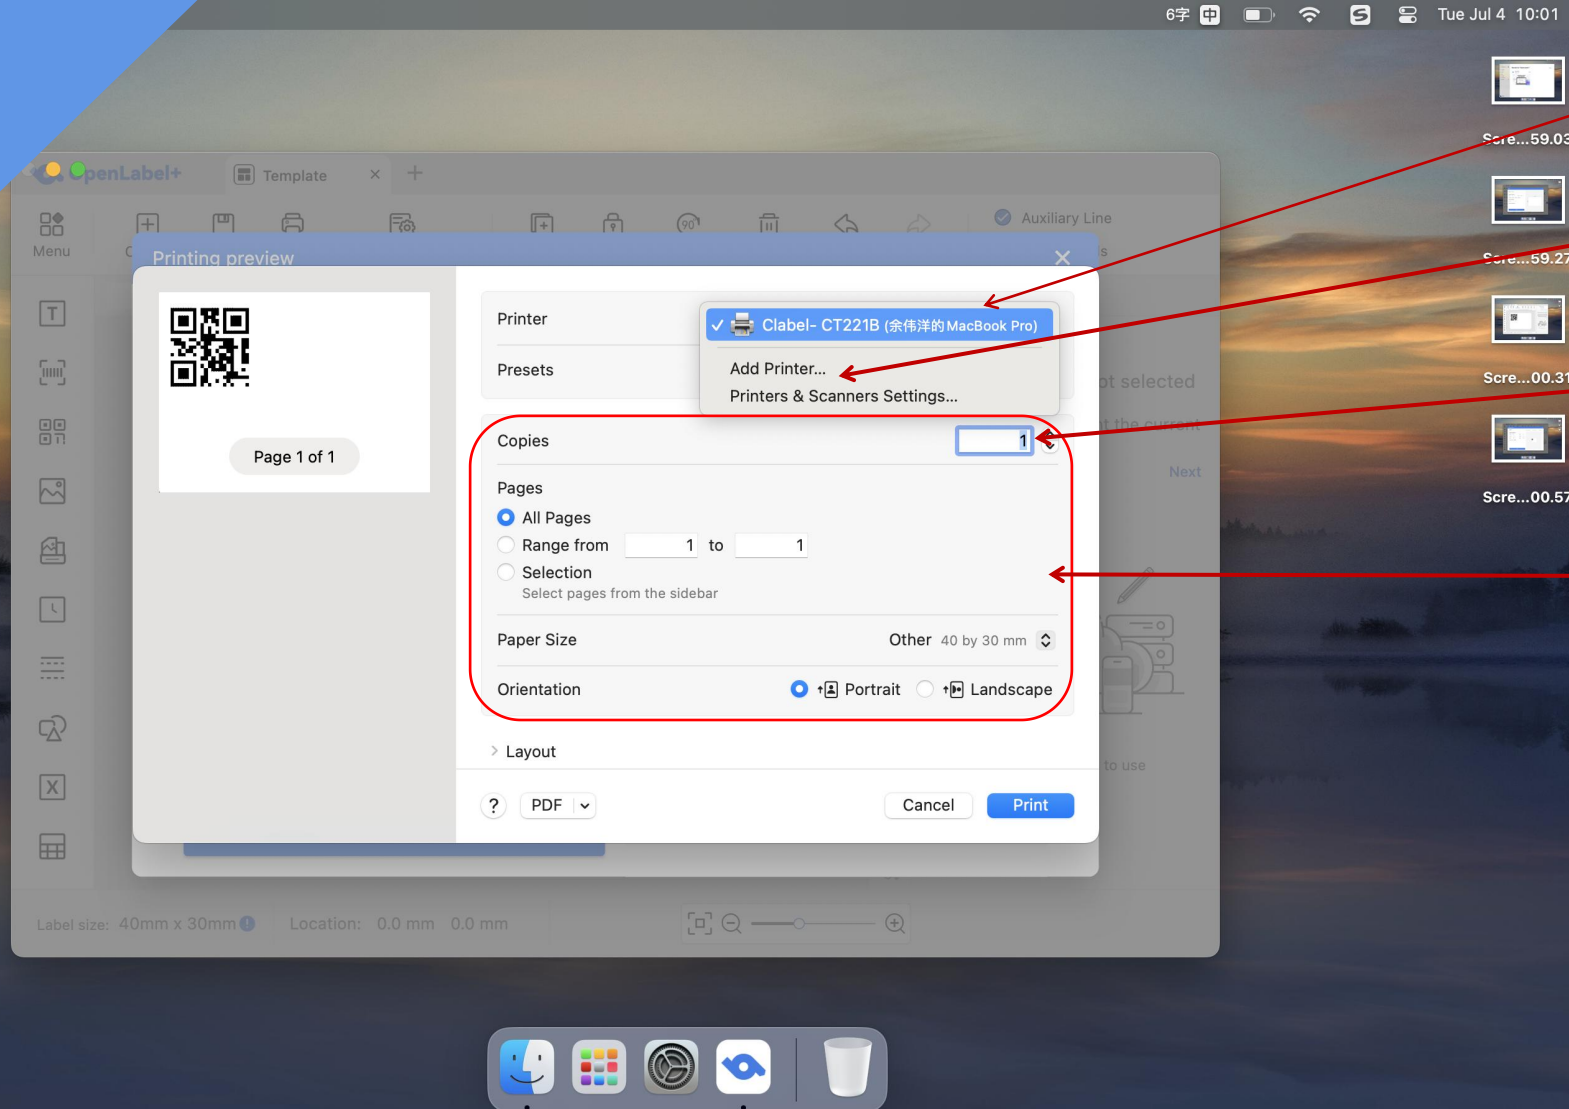


You can choose which printer driver to use for printing

Install other printer drivers

Enter the number of copies to be printed


This area is a self-contained feature of the MAC system and does not require much to set up

5

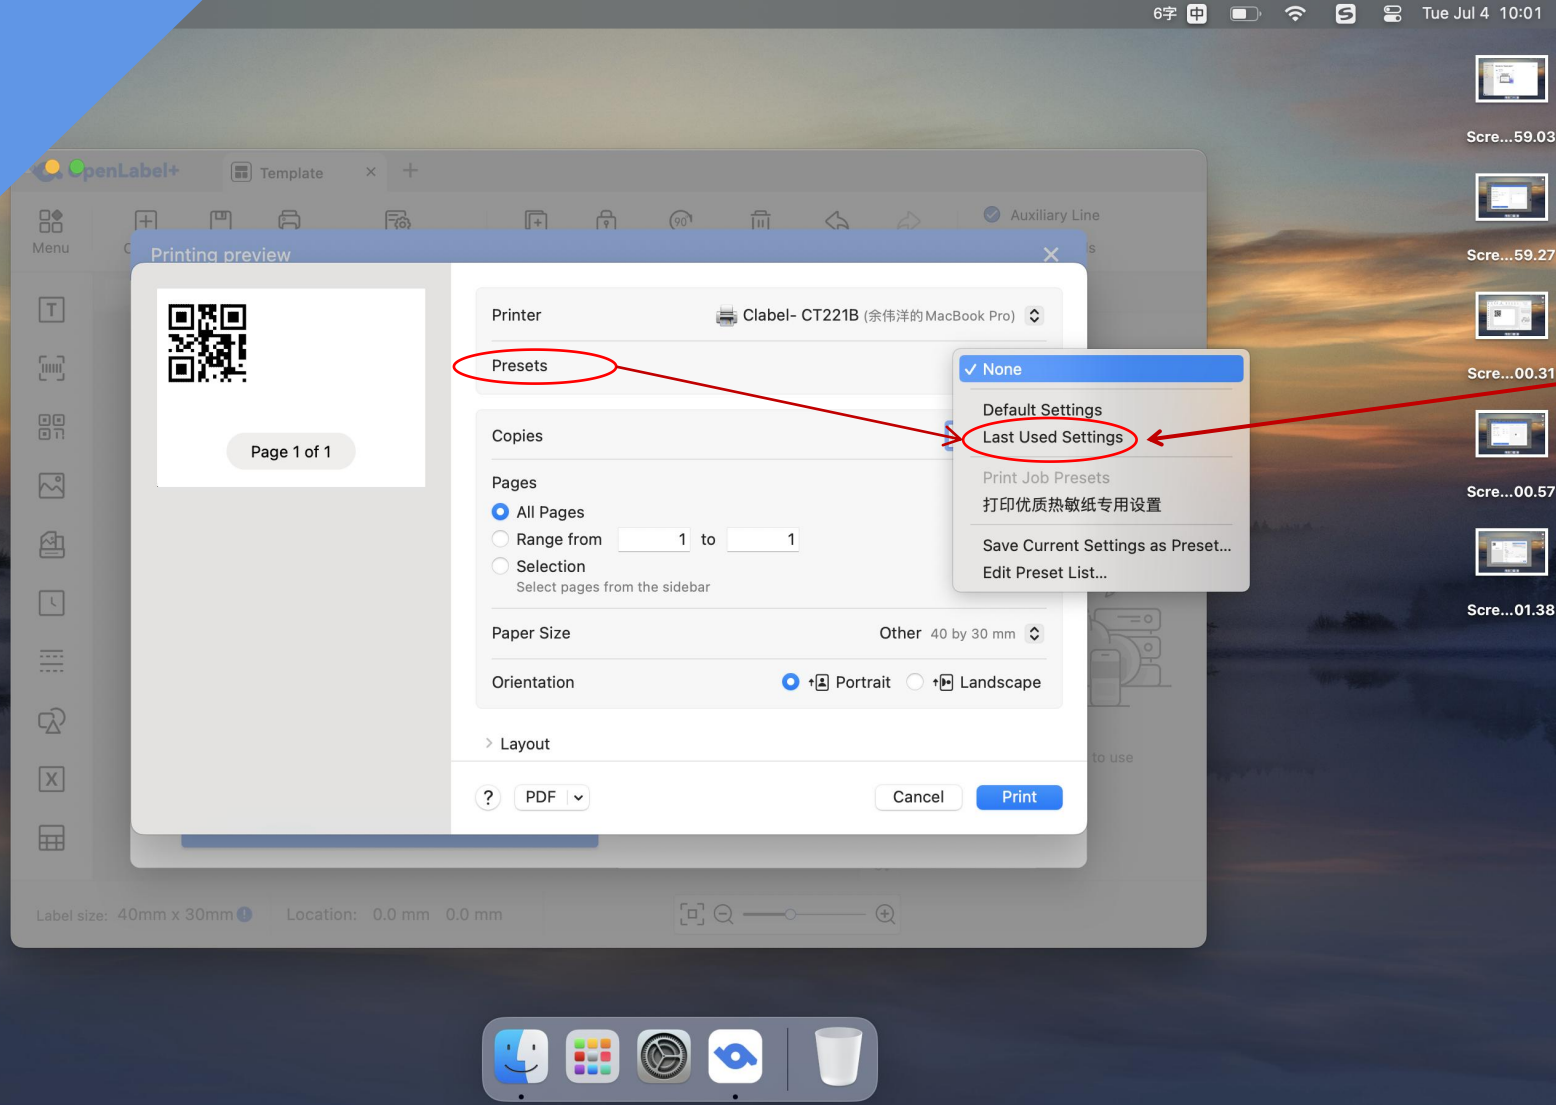


Select the last used settings to ensure that the printer settings take effect each time

5

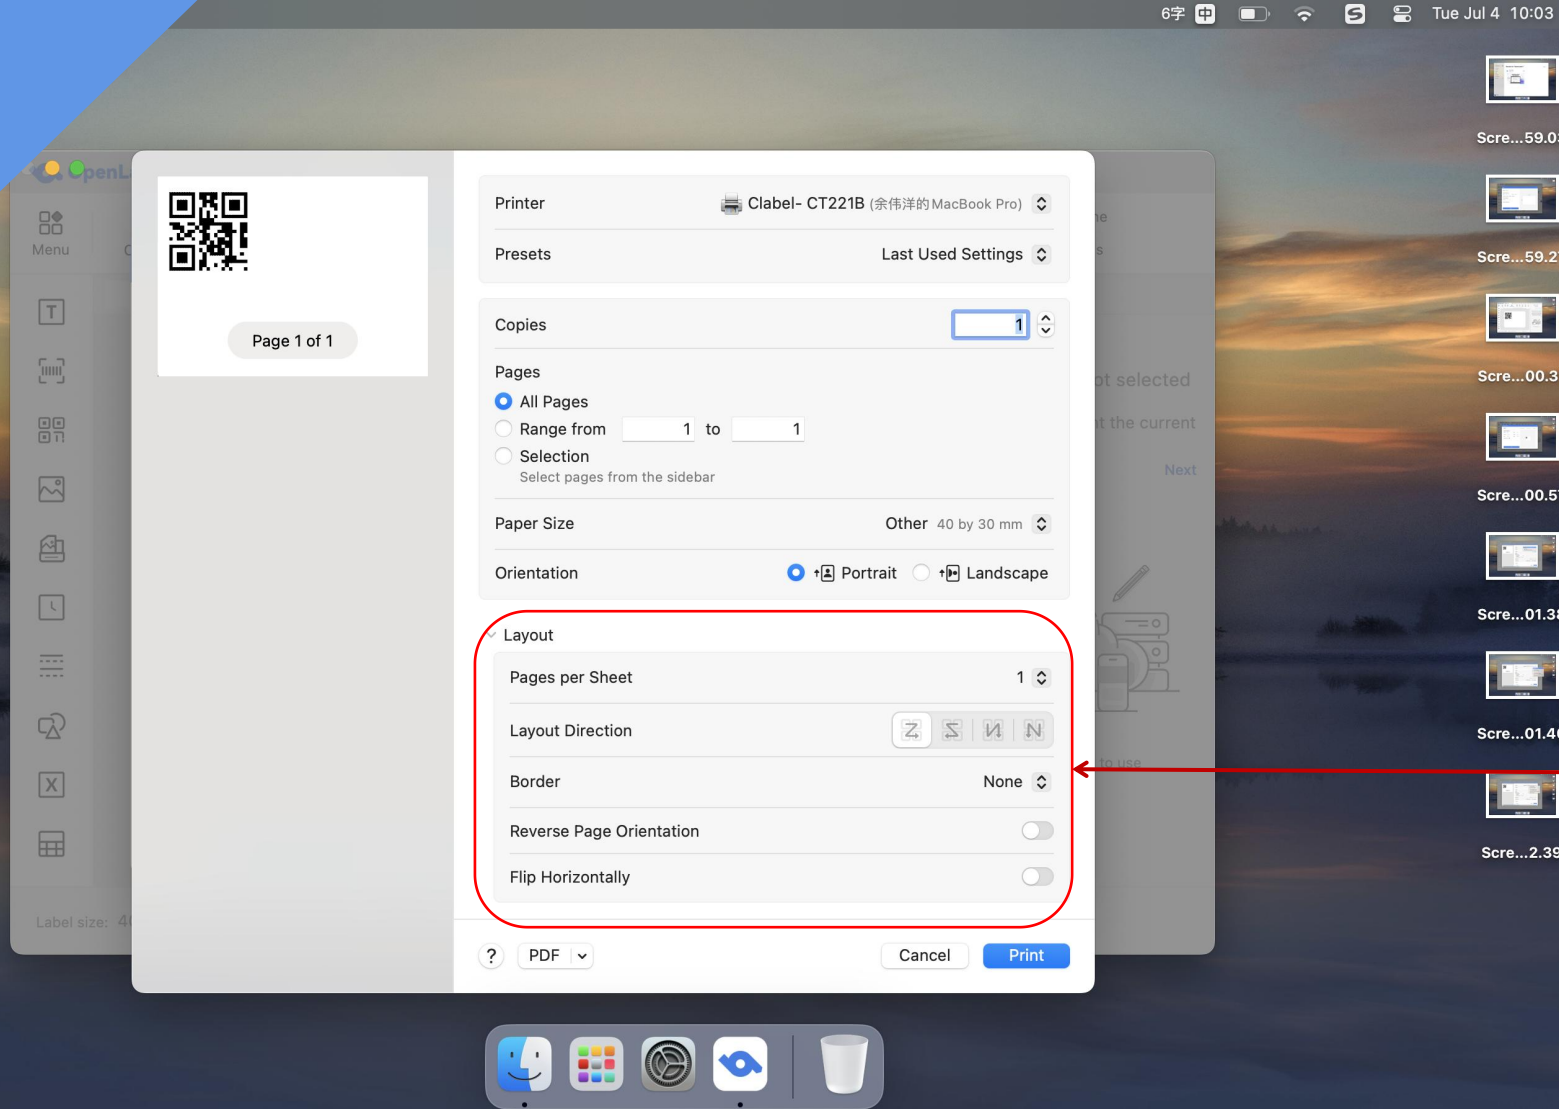


This area is a self-contained feature of the MAC system and does not require much to set up

5

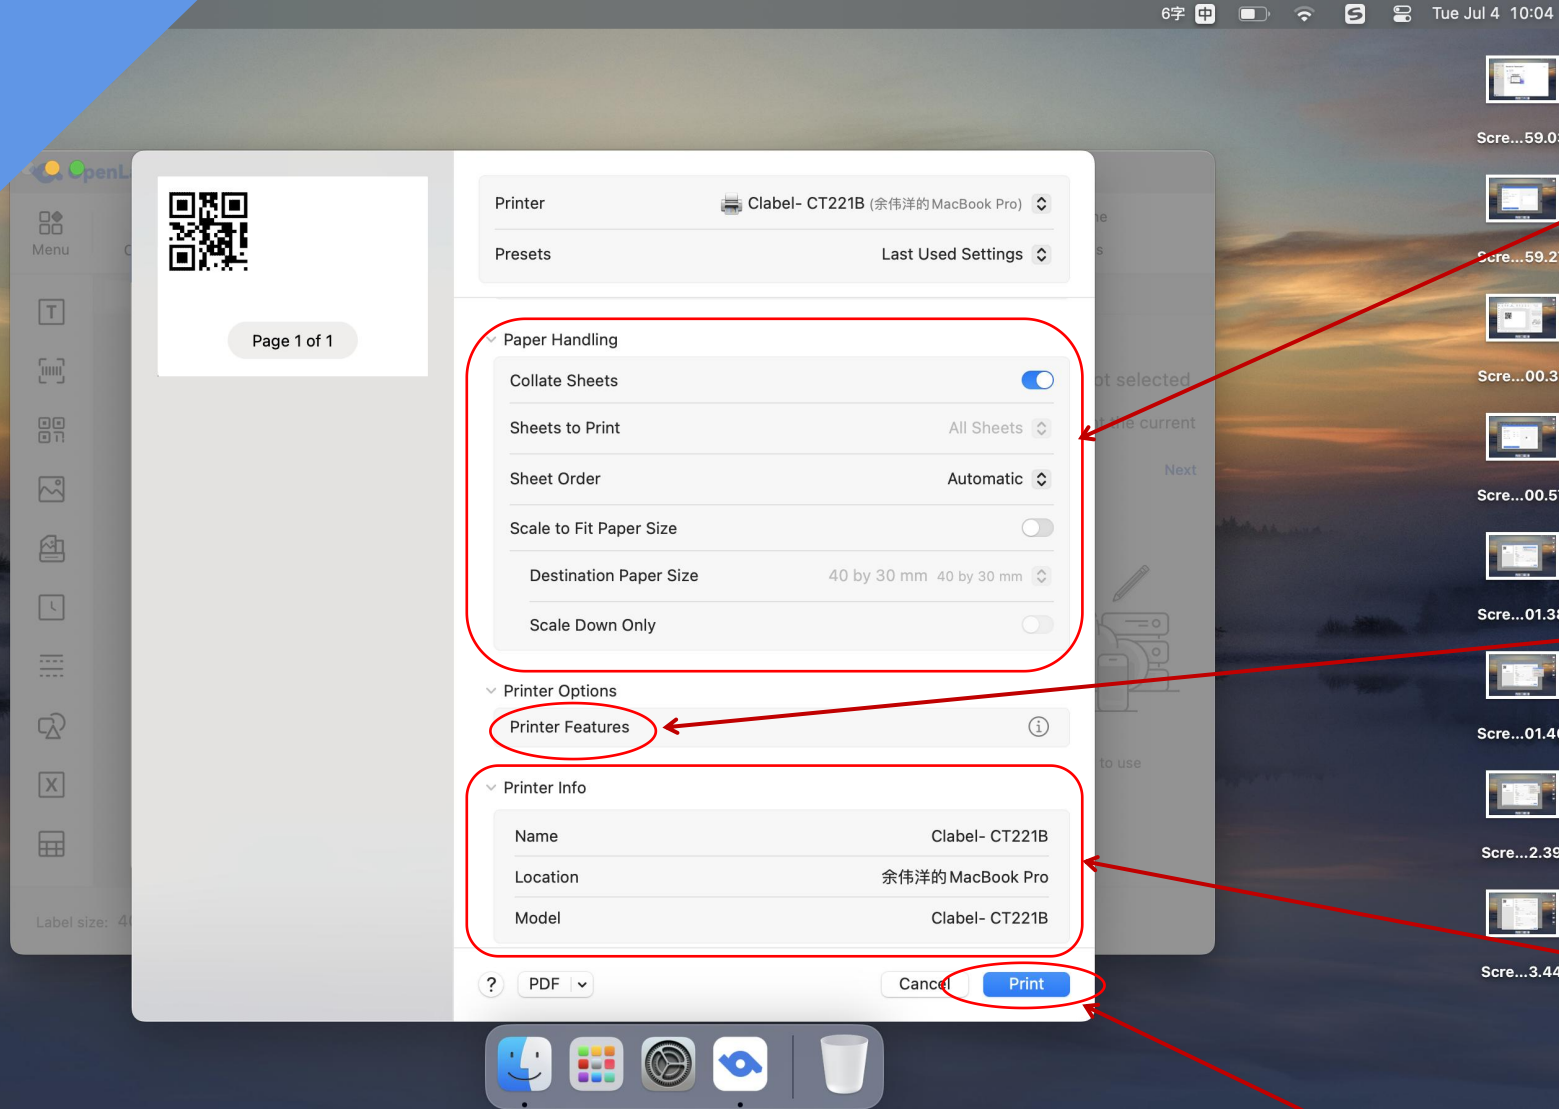

This area is a self-contained feature of the MAC system and does not require much to set up

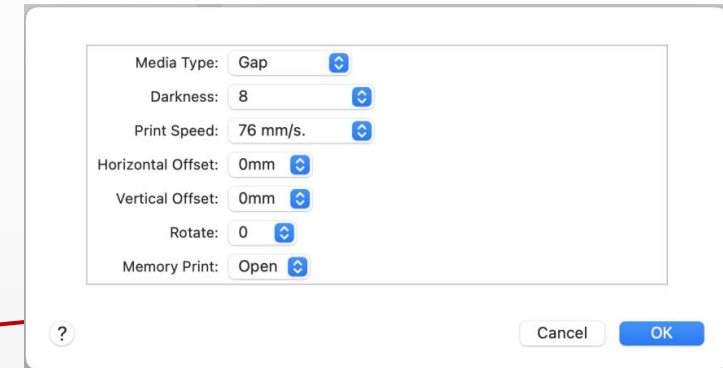


Make more settings for the printer driver here

This area is a self-contained feature of the MAC system and does not require much to set up

Click on Print after confirming that there are no errors

How should I set it up?

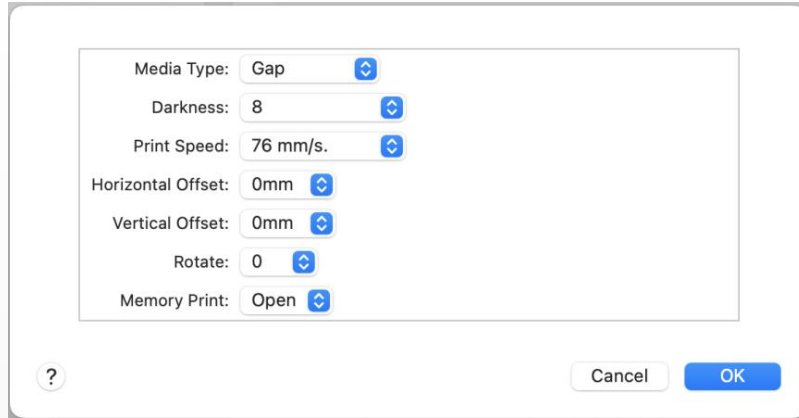

A screenshot of a printer settings dialog box. The dialog has a white background and a thin gray border. Inside, there are seven settings, each with a label, a value, and a small blue square icon with a white downward arrow. The settings are: Media Type: Gap, Darkness: 8, Print Speed: 76 mm/s., Horizontal Offset: 0mm, Vertical Offset: 0mm, Rotate: 0, and Memory Print: Open. At the bottom left is a small circle with a question mark. At the bottom right are two buttons: 'Cancel' and 'OK'.

Media Type:	Gap
Darkness:	8
Print Speed:	76 mm/s.
Horizontal Offset:	0mm
Vertical Offset:	0mm
Rotate:	0
Memory Print:	Open

Buttons: ? Cancel OK

Paper Type

Function: make the printer identify the labels correctly and ensure the content print in the correct position

Gap paper: translucent gap positioning marks between labels

Black label paper: black stripes between labels

Continuous paper: without any positioning marks

Note: Please check your paper type and select correctly, wrong selection will lead to inaccurate positioning and the content will not be printed on the correct position

Print Density

Function: When the print effect is too deep or too shallow, you can adjust the depth of the print content

1~15 levels can be adjusted, the higher the value, the thicker the print

Print Speed

Function: Allows you to adjust the printer to print faster or slower

Provide multiple gears adjustment

PS: 1. Reduce the printing speed to make the printing effect clearer 2. Do not set the speed beyond the limit of the printer, otherwise the setting is invalid

Horizontal Shift

Introduction: When you turn on memory printing, the printer will store the memory of the label after printing a label, you can click the paper away, the printer will automatically reprint a memory of the label, when you turn off memory printing, then the single paper away, the printer will go a blank label

Portrait offset

Function: You can adjust this parameter to move the content down a few millimeters when the printed content is slightly offset from its vertical position.

10mm adjustable range

Content Rotation

Function: Make the print content rotate according to the setting direction

Provides 0°, 90°, 180°, 270° adjustment

Memory printing

Function: You can choose to turn on or off this function

Introduction: When you turn on memory printing, after printing a label, the printer will store the memory of the label, you can click the paper away key, the printer will automatically reprint a memory of the label, when you turn off memory printing, then the single paper away key, the printer will go a blank label