


SAMSUNG

# Unpacking and Installation Guide

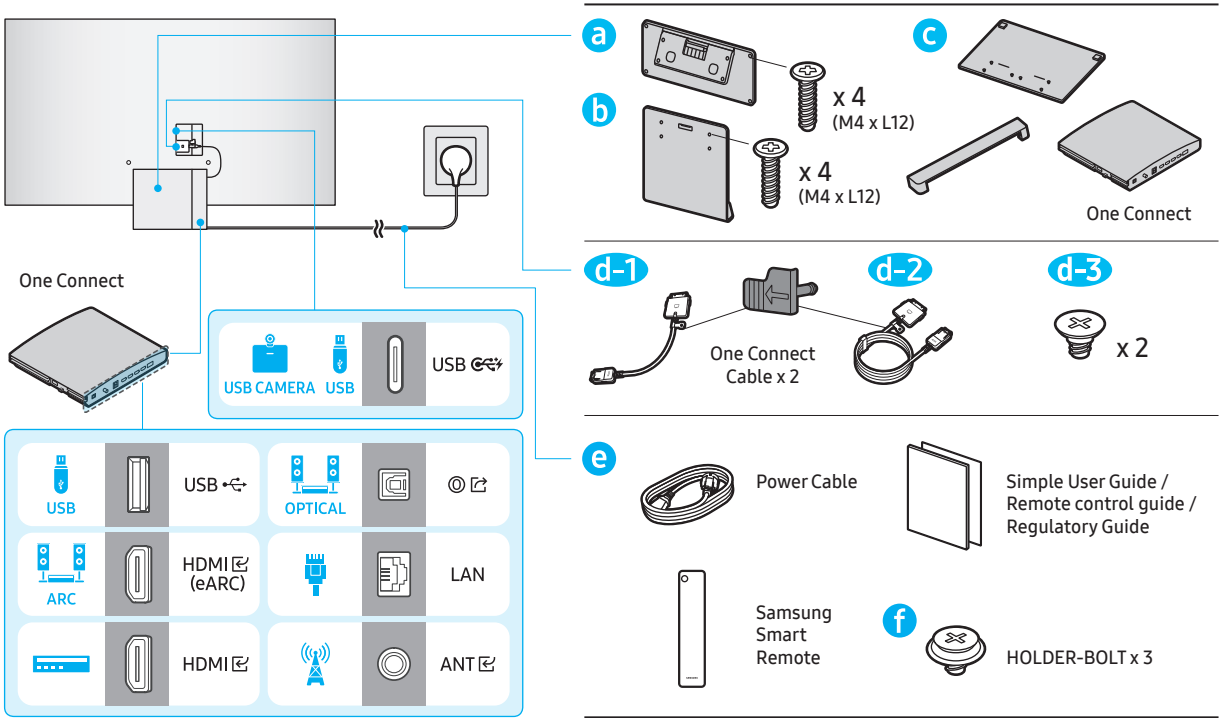

Scan this QR code with your smart phone to see helpful videos.

1

2

3

4

5

6

7


8

d-3



x 2



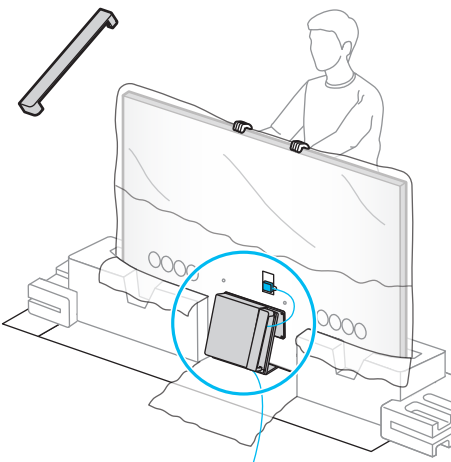







ARC




HDMI (eARC)




ANT

1

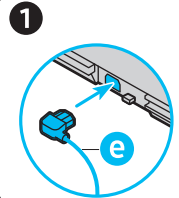


2


d-3

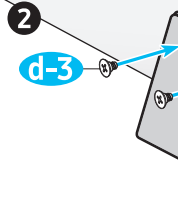


3

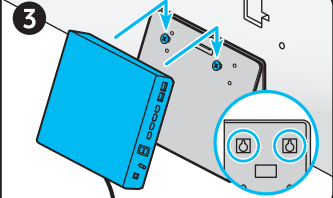


4

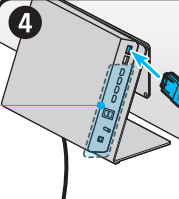


5

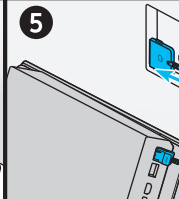


6

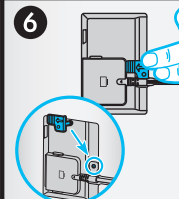

7

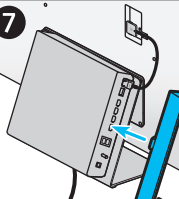


8

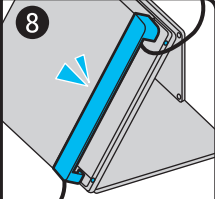

9





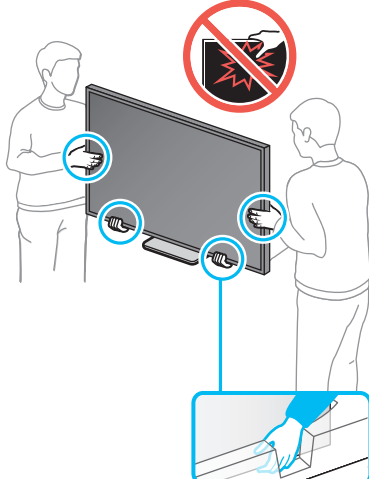








10

d-1



d-2




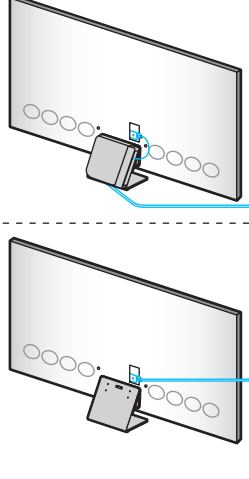


15 cm  
6 inches






 





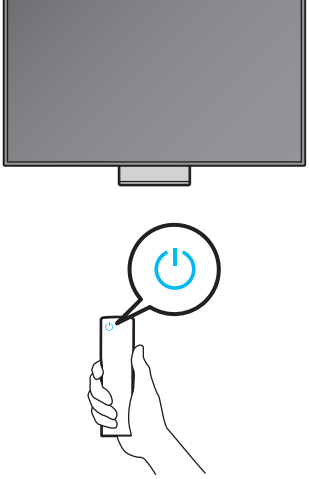

\* When installing the TV as wallmount, You can place the One Connect Box as shown below.

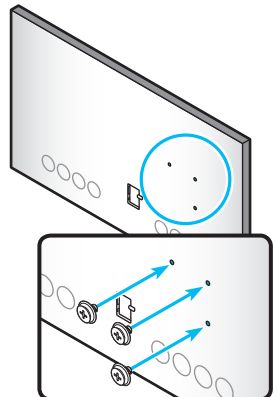

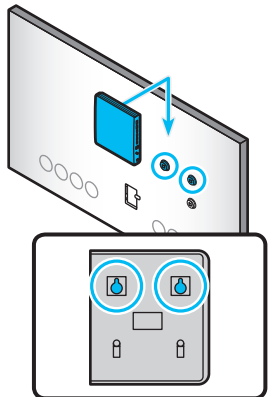


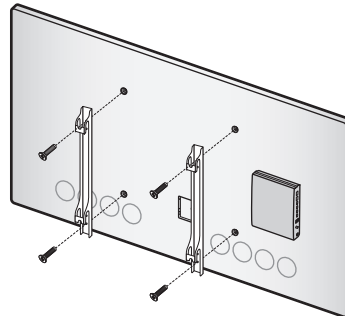







HOLDER-BOLT x 3

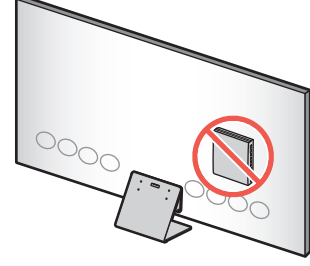





When installing the TV as stand, Don't place the One Connect Box on back of the TV.

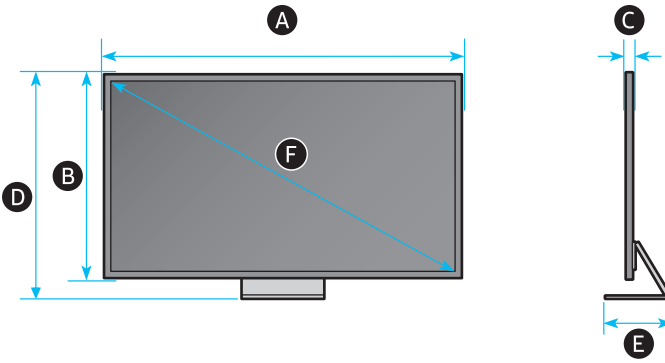

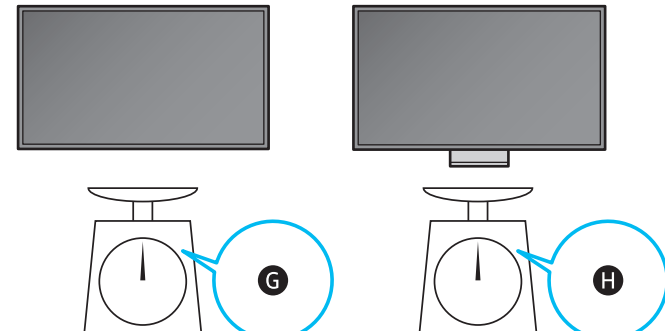

|        | A           | B           | C          | D           | E           | F           | G         | H         |
|--------|-------------|-------------|------------|-------------|-------------|-------------|-----------|-----------|
| 77S95D | 67.6 inches | 38.7 inches | 0.4 inches | 41.3 inches | 11.3 inches | 76.8 inches | 62.2 lbs  | 88.2 lbs  |
| 77S95F | (1716.6 mm) | (984.1 mm)  | (11.2 mm)  | (1048.1 mm) | (286.4 mm)  | (28.2 kg)   | (28.2 kg) | (40.0 kg) |

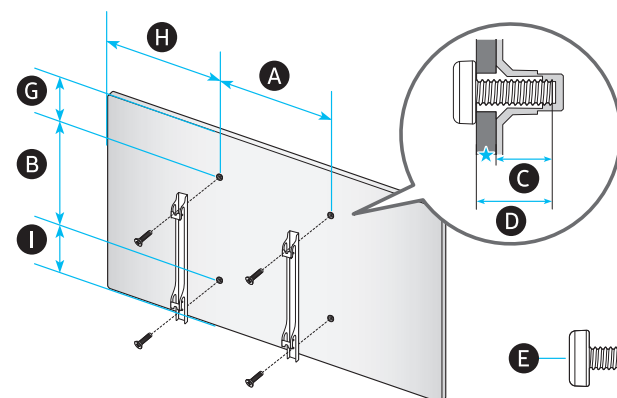

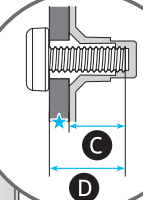







|        | VESA<br>A x B (mm) | C (mm) | D     | E x 4 | F (mm) | G (inches) | H (inches) | I (inches) |
|--------|--------------------|--------|-------|-------|--------|------------|------------|------------|
| 77S95D | 400 x 400          | 5-6    | C + ★ | M8    | 1.25   | 12.5       | 25.9       | 10.3       |
| 77S95F |                    |        |       |       |        |            |            |            |

★ : Wall-Mount Bracket