
XIOOMI Portable Blender User Manual

Read this manual carefully before use, and retain it for future reference.

Product Overview

This is a rechargeable blending product featuring high performance and easy portability.

This product uses a high-speed motor and a long-lasting battery, which can squeeze juice and make drinks quickly and easily, making light food life simpler and happier.

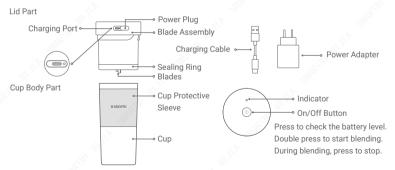

Safety Instructions

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This product is not a toy and it contains small parts, please keep it out of reach of children to prevent choking or other hazardous situations caused by accidental swallowing of small parts.
- · This product is for personal and household use only. Do not use it for any commercial purposes.
- The product works for 40 seconds each time. After working three times continuously, it needs to cool
 down for five minutes before being used again.
- Do not open the cup while using the product, so as to prevent from being scratched by the rotating blades.
- Do not use the blender in abnormal environments, including but not limited to dangerous environments, such as strong magnetic interferences, high temperatures, flammable or explosive gases, to avoid explosion or fire.
- Do not start the product when the blade assembly and the cup are not tightened to prevent the cup from falling off and the blades working exposed, causing personal injury.
- · Idling is prohibited, otherwise the product may be damaged.
- Only charge with a power adapter that meets the input parameters of this product. Insert the power plug
 promptly after charging, to avoid damage to the product due to water intrusion.
- Do not disassemble or repair the product by yourself. If this product works abnormally, please contact the
 after-sales service team.

- It is strictly prohibited to operate this product in an abnormal way, including disassembling, squeezing, puncturing, short-circuiting this product, and throwing it into fire or exposing it to an environment with temperatures above 50°C.
- · Do not operate this product unattended, to avoid it falling from the work surface and causing damage.
- Disconnect the charging cable when using and cleaning the product. Do not touch the blades directly
 with your hands to avoid being cut. Operate with care when installing the cup sealing ring, to avoid cutting
 the sealing ring.
- When the product produces smoke, unusual noise or gives off an odor, press the on/off button immediately
 to stop working and contact the after-sales service team.
- If the blender is not started and there is no indicator light displayed after double pressing the on/off button, please connect it to the power adaper for 1 minute to activate the its built-in hardware security protection.
- Before discarding the product, the battery must be removed first. Before removing the battery, power off
 the product and separate it from the charging cable to ensure that the product is not charging. Then
 carefully remove the cup and the blades, and saw out a groove with a depth of about 3 mm from the on/off
 button panel, which is about 3 mm away from the charging port. Use a flat-head screwdriver to pry open
 the button panel, take out the battery from the blade assembly, and then the battery should be safely
 disposed of.
- · Children shall be supervised not to play with the appliance.
- · Be careful when handling the sharp cutting blades, emptying the cup and during cleaning.
- Be careful if hot liquid is poured into the blender as it can be ejected out of the appliance due to a sudden steaming.
- Always disconnect the blender from the adapter if it is left unattended and before assembling, disassembling or cleaning.

- Do not allow children to use the blender without supervision.
- Switch off the appliance and disconnect from adapter before changing accessories or approaching parts that move in use.
- WARNING Always operate the blender with the lid or the guard in position as indicated in the instructions.
- This appliance contains batteries that are only replaceable by skilled persons.
- WARNING: For the purposes of recharging the battery, only use the detachable supply unit
- < A520-050100U-EU2> provided with this appliance.
- There is a potential injury from misuse.
 WARNING! Never use the product close to a water source.

WARNING! Stop using the product when damaged.

DH detachable power supply part


Press the on/off button indicator to show the current battery level

Indicator status	Current battery level	
Stays white for two seconds and then turns off	20-100%	
Breathes orange two times and then turns off	2-19%	
Blinks orange rapidly (error blinks) two times and then turns off	Less than 1%	

Note: The product can be used for 12 times (taking apple juice as an example) after being fully charged.

How to Use

 - Fully charge the product before using it for the first time. When charging, the indicator will continue to breathe white. Once fully charged, the indicator will stay on for 30 seconds and then turn off.
- · The sealing ring is detachable for cleaning. Dry and install it back in place after cleaning.



1. Wash the fruits, peel, shell and core them, and cut them into small pieces with a volume of approximately 1 cm³.

Pour the cut fruits into the cup and add an appropriate amount of water. Be careful not to exceed the 300 mL maximum water level marked on the inner wall of the cup.



3. Close the cup lid and tighten it clockwise so that the cup lid is aligned with the positioning mark on the cup.



4. Double press the on/off button on the top to start juicing, hold the cup upside down in your hand and shake it up and down.

Care & Maintenance

- It is necessary to clean the cup, the blade assembly, and the cup sealing ring in time after usage to avoid
 solidifying and deteriorating of residues, making it difficult to clean or producing odor. When the product
 is not used for a long time, charge it at least once every two months and store it after fully charged to
 avoid damage to the battery.
- After repeated use, the cup and silicone parts may become stained as the pigments from fruits and vegetables condense on the inner wall of the cup, which is normal.

- Do not put the product into a high-temperature or high-voltage environment such as a dishwasher or disinfection cabinet for cleaning. When cleaning the product, do not immerse it in any liquid. This product can be rinsed with water.
- When cleaning the blades, wipe them with a brush or cloth. Do not touch it directly with your hands to
 avoid cuts.
- Ensure that the power plug is installed in place and there are no foreign objects or liquids around the charging port before cleaning the blade assembly.
- The cup sealing ring can be removed for cleaning. When reinstalling, be careful to avoid the blades to
 prevent the cup sealing ring from being cut by the blades.
- Dry the parts thoroughly and install them in place after rinsing with water.
 Frequent use will help keep the product in good working order.

Specifications

Name: Xiaomi Portable Blender

Capacity: 300 mL Item Dimensions: 82 x 82 x 197 mm

Item Dimensions: 82 × 82 × 197 mm Input: 5 V=1 A

Rated Power: 45 W

IP Rating: IPX6

Power Adapter:

Input Voltage: 100-240 V a.c.

Rated Power: 5.0 W

Model: XMZZB01PL Net Weight: Approx. 531 g

Battery Rated Capacity: 1300 mAh

Operating Voltage: 7.4 V=

Operating Temperature: 0°C to 40°C Single Working Duration: 40 seconds

Rated Output: 5 V=1 A

Rated Frequency: 50/60 Hz

07

Recipes

Recipe Name		Ingredients	
Apple juice		Apples: 120 g (small cubes of 1 cm³), water: 180 mL	
Orange juice	SIM	Oranges: 120 g (peeled, small cubes of 1 cm³), water: 180 mL	
Banana milk	W III	Bananas: 120 g (peeled, small cubes of 1 cm³), milk: 180 mL	SIMPLIME.
Mango yogurt		Mangos: 50 g (peeled, small cubes of 1 cm³), yogurt: 180 mL	
Blueberry yogurt	smoothie	Blueberries: 100 g, yogurt: 100 mL, ice cubes: 50 g (small cubes	of 1.5 cm³)

Notes:

- Double press the on/off button to start. During the process of blending ingredients, shake the product up and down for better smashing effect.
- It is prohibited to add ingredients or liquids over 40°C for blending.
- The total amount of ingredients and liquids in the cup should not exceed 300 mL, and the ratio of ingredients to liquids is 2:3.

Troubleshooting

Errors	Possible Causes	Solutions	
	The blade assembly and the cup are not installed in place.	Tighten the cup, and the indicator will stay white for one second and then turn off.	
The blender is not	The battery level is low.	Fully charge the blender before use.	
working or the indicator blinks orange.	The blades are stuck in ingredients.	Unscrew the cup to remove large pieces of ingredients or shake the blender.	
	• The power adapter is not disconnected when the blender is started.	Disconnect the power adapter before use.	
	Automatic protection is enabled after a long continuous working time.	Cool down naturally (approx. 15 minutes) before use.	
The blender leaks.	*The blade assembly and the cup are not installed in place. *The blade assembly and the cup are not one second and then turn off. *The blade assembly and the cup are not one second and then turn off. *The blade assembly and the cup are not one second and then turn off.		
- 1111	The cup sealing fing is not installed properly.	and pay attention to the nort and back side	
The blender does not work smoothly.	• The ingredients are too big and too many in total.	• Reduce the ingredients added or cut them into smaller pieces.	
The blender suddenly stops working.	• The battery level is too low.	Fully charge the blender before use.	
	The ingredients are too big and too many in total.	Reduce the ingredients added or cut them into smaller pieces.	
	Automatic protection is enabled after a long continuous working time.	Cool down naturally (approx. 15 minutes) before use.	

The specific materials the product is made out of are as follows:

	Food Contact Material	Usage
Plastic	PCTG	Cup
	ABS	Blade Assembly
Metal	304 Austenitic Stainless Steel	Motor Shaft
	06Cr19Ni10	Blades
Wetai	303 Austenitic Stainless Steel Y12Cr18Ni9	Blade Shaft
Rubber	Fluororubber	Sealing Ring
Silicone	Silicone Rubber	Cup Sealing Ring

Manufactured for: Xiaomi Communications Co., Ltd.

Manufactured by: Shenzhen Pinlo Innovation Industrial Co., Ltd.

(a Mi Ecosystem company)

Address: Suite 408-ò3B, Building 2, Block M-10, Ma Que Ling Industrial Zone, Ma Ling Community, Yue Hai Street, Nanshan District, Shenzhen, China

For further information, please go to www.mi.com

User Manual Version: V1.0

Warranty Notice

As a Xiaomi consumer, you benefit under certain conditions from additional warranties. Xiaomi offers specific consumer warranty benefits which are in addition to, and not instead of, any legal warranties provided by your national consumer law. The duration and conditions related to the legal warranties are provided by respective local laws. For more information about the consumer warranty benefits, please refer to Xiaomi's official website https://www.mi.com/global/support/warranty. Except as prohibited by laws or otherwise promised by Xiaomi, the after-sales services shall be limited to the country or region of the original purchase. Under the consumer warranty, to the fullest extent permitted by law, Xiaomi will, at its discretion, repair, replace or refund your product. Normal wear and tear, force majeure, abuse or damage caused by the user's negligence or fault are not warranted. The contact person for the after-sale service may be any person in Xiaomi's authorized service network, Xiaomi's authorized distributors or the final vendor who sold the products to you. If in doubt please contact the relevant person as Xiaomi may identify.

The present warranties do not apply in Hong Kong and Taiwan.

Products which were not duly imported and/or were not duly manufactured by Xiaomi and/or were not duly acquired from Xiaomi or a Xiaomi's official seller are not covered by the present warranties. As per applicable law you may benefit from warranties from the non-official retailer who sold the product. Therefore, Xiaomi invites you to contact the retailer from whom you purchased the product.

WEEE Disposal and Recycling Information



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

EU Declaration of Conformity



We, Shenzhen Pinlo Innovation Industrial Co., Ltd., hereby, declares that this equipment Type Blender XMZZB01PL is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address: httpp://www.mi.com/global/service/support/declaration.html
For detailed e-manual, please go to www.mi.com/global/support/user-guide

EU REP.

Xiaomi Technology Netherlands B.V. Prinses Beatrixlaan 582, 2595BM, The Hague, The Netherlands contact@support.mi.com

Importer: Beryko s.r.o.

Pod Vinicemi 931/2, 301 00 Plzeň

www.beryko.cz



