


ATS-1

Sectional Door Openers Quick Operation Guide

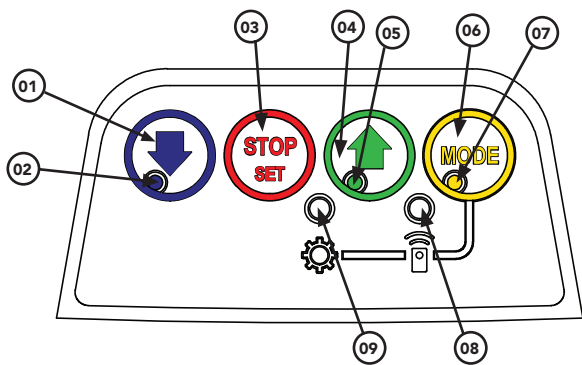

Button	Function
01	Close
02	Close indicator
03	Stop / Set
04	Open
05	Open indicator
06	Mode
07	Status indicator
08	Remote status indicator
09	Adjustment indicator


automatic
TECHNOLOGY

TO DISENGAGE THE OPENER




tip

It is recommended to disengage the door with the door in the closed position.

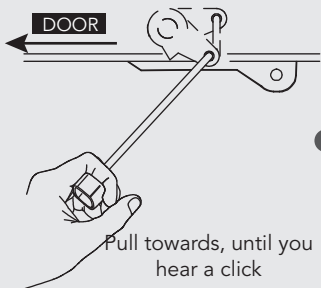

Pull towards, until you hear a click

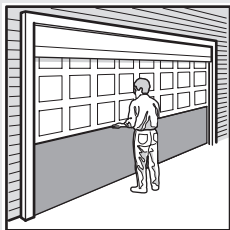


Manually operate door



CAUTION: When the opener is manually disengaged, the door is no longer locked. To lock the door manually, re-engage the opener after the door is closed.

TO ENGAGE THE OPENER

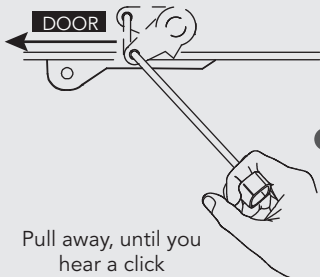

Pull away, until you hear a click



Press to test



CAUTION: Do not use the string handle as a mechanism to open the door. Failure to comply may cause serious injury.



The opener can only be operated from remote controllers that have been programmed into its memory. Up to 64 remotes can be programmed.

STEP ONE



Switch power on

STEP TWO



Press repeatedly



till remote LED lit

STEP THREE



HOLD

Opener flashes & beeps



HOLD for 3 sec

RELEASE

HOLD for 3 sec

Release both buttons

STEP FOUR



Press to test

REMOTELY CODING A REMOTE CONTROL



Remotely coding works when you have a pre-coded remote control and are in range of the opener.

STEP ONE



Take a pre-coded remote and press the button to duplicate

STEP TWO



Use a pen,
HOLD for 2 sec
the middle button
through the
coding hole

STEP THREE

Opener flashes & beeps



Take new remote

HOLD for 3 sec

RELEASE

HOLD for 3 sec

RELEASE

STEP FOUR

Opener stops flashing & beeping



Press to test



Battery Type: 1 x CR2032.

STEP ONE



Check Light Status Table



HOLD

Light Status

Battery

Solid

OK

Flashing

Replace

No light

 
Replace

STEP TWO



Use screwdriver to remove screws and open

STEP THREE



Use non-metallic object to push out.



WARNING!: The battery is hazardous and must be kept out of reach of children. The battery can cause severe or fatal injuries within 2 hours or less if swallowed or placed inside any part of the body. If you suspect the battery has been swallowed or placed inside any part of the body, SEEK IMMEDIATE medical attention.

Main Light = Service / Warning Indicator:
Requirements for a service and user warnings are indicated after operation by the main light repeatable flashing OFF a number of times followed by a pause.
The below table identifies the issues and remedies

	Issue	Remedy
1	Normal operation (door is fully open)	
2	PE is preventing door from moving	Clear away any obstructions. Test Door. If unable to move the door and suspect beam is faulty, enter Safety Beam Emergency Close by pressing and holding a pre-coded transmitter button until the door closes.
3	Wireless PE battery is low	Change PE Battery
4	Maintenance is due after pre-set number of cycles.	Contact dealer to arrange service.
5	Standby battery is faulty	Contact 1300 769 850 within Australia for assistance.
6	Door was obstructed	Clear away any obstructions and test door opens/closes correctly. (if the door is damaged, contact a door professional)
7	Motor overloaded or stalled	Contact dealer to arrange a door service.

Preventative servicing of your garage door and opener, is important. Your garage door is made up of numerous moving parts designed to lift and lower your door safely and efficiently.

Ongoing preventative servicing ensures that your door continues to function within factory specifications, greatly reduces the risk of failure and repair bills down the track and ensure you maintain your Warranty.



Refer to the installation manual for monthly testing procedures in Section 13 to ensure garage door is fit for use available [HERE](#) 

Online warranty details are available [HERE](#) 

If the opener needs a service please call the dealer who installed the garage door opener (their contact details are usually on a sticker on the back of your garage door).

For product assistance, general enquiry or more information, please visit:
automatictechnology.com/au
or call 1300 133 944.