 


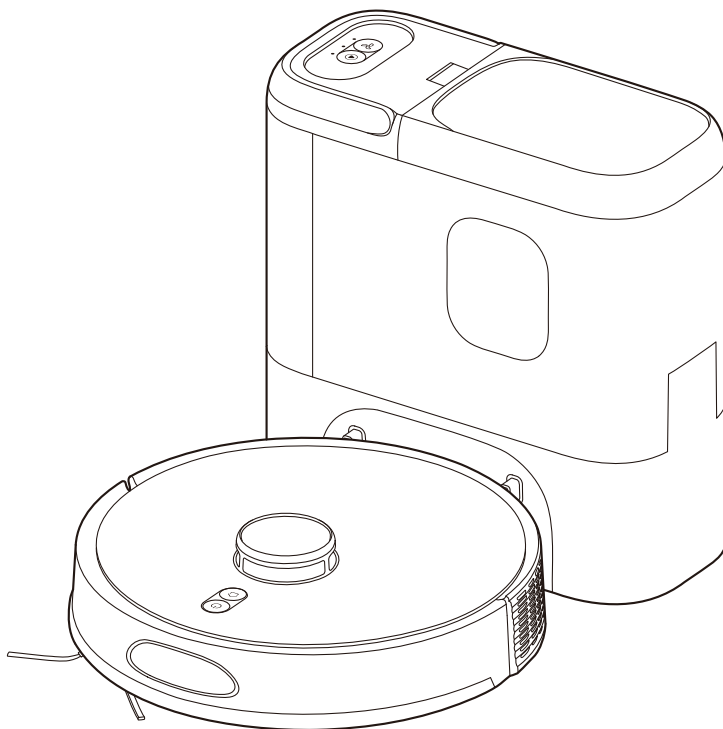

# User Manual

Please read the user manual carefully before use and keep it properly.



**Email: [CS@teendow.com](mailto:CS@teendow.com)**

\*Please read the manual carefully before using the product and keep it properly.



# Welcome

**Welcome to use Robot Vacuum Cleaner. We hope you can have a pleasant experience!**

**If you have any questions or suggestions, you can contact us through the contact information provided at the bottom of the robot, and we will try our best to solve the problem for you.**

\* Specific product details may differ from those shown here.

# Table of Contents

<b>1. Safety Instructions</b>	Important Safety Instructions	01
	2.1 What's in the Box	04
<b>2. Product Overview</b>	2.2 Product Anatomy(including Buttons and Indicators)	05
	3.1 Important Tips Before Use	09
<b>3. Installation</b>	3.2 Get Started	09
	4.1 Main Functions	12
	4.2 Mopping Function	14
<b>4. Operation Instructions</b>	4.3 Vacuuming Function	16
	4.4 Network Functions	17
	4.5 Other Functions	17
	5.1 Routine Maintenance	18
<b>5. Maintenance</b>		
	Basic Parameters	22
<b>6. Declarations</b>	Energy Saving and Battery	23



# 1. Safety Instructions

Before using the product, please follow the following basic safety precautions:

- Read all the contents of the manual carefully and follow the steps indicated in the manual to use the product.
- Keep the manual properly for future reference.
- If you need to transfer the product to a third party for use, please enclose the instruction manual with the product.
- Any operation inconsistent with the instructions in the instruction manual may cause serious personal injury or damage to the product itself.
- If the instruction manual is lost, please contact the local dealer or contact the customer service to obtain the electronic version of the instruction manual.

## Important Safety Instructions

### Use Restrictions

- This product may not be used by persons with physical, sensory, mental or intellectual disabilities and those without relevant experience and knowledge, including children, unless supervised or instructed by a guardian to ensure that they can use this product safely.
- Do not allow children to use the product as a toy. Please supervise children and pets to keep them away as much as possible when the product is working. Do not use the product in the room where infants sleep.
- This product may contain small parts and accessories. Please keep the product and accessories out of the reach of children, so as to prevent children from accidentally disassembling or damaging the product or its accessories, or swallowing small parts, which may cause suffocation or other dangers.
- Children are forbidden to play with the product bags as this may lead to suffocation.
- Do not place the roller brush cleaning tool in an area where children can reach it.
- This product is only used for floor cleaning in the home environment. Do not use it outdoors (such as open balconies), non-floor surfaces (such as sofas), commercial or industrial environments.
- Do not use the product in suspended environments (such as duplex floors, open balconies, furniture tops) without protective fences.
- Before use, please hang up the ground cable at home to avoid dragging the cable when the robot is running.
- Please put away the fragile articles and sundries (such as vases, plastic bags, etc.) on the ground to avoid the damage of valuables in the house caused by the obstruction of the robot in operation or slight collision.
- The charging base should be placed against the wall on a flat surface, kept away from open flames, heat sources, water, narrow spaces or areas where the robot may be suspended, so as to prevent the function of the product from being affected.
- Moving the charging base away will cause the robot to fail to recharge normally while the product is operating.

- Do not use above 40 ° C, below 0 ° C or in the presence of any liquid or viscous substances on the floor.
- Do not use the product in a humid environment (such as a bathroom, etc.)
- Do not use the product to clean burning objects (such as unextinguished cigarette butts, etc.) and flammable and explosive objects (such as lighters, gasoline, color matching agent and toner used in printers or copiers, etc.).
- Do not use the product for cleaning shag carpets (some dark colored carpets may not clean properly).
- Do not let the product absorb hard or sharp objects (such as decoration waste, glass, nails, etc.), otherwise the robot and the ground may be scratched.
- Before cleaning the entire house, it is recommended to perform a local area test in your home to ensure that the product will not scratch or damage the floor.
- When the robot is working, pay attention to keeping the hair, fingers and other parts of the human body or pets away from the dust suction port or the rotating position of the brush head of the robot to avoid injury.
- Do not put any objects such as children and pets on the stationary or moving product. Do not sit or stand on the robot and charging base.
- To prevent knocking down, please inform other people in the room when this product is operating.
- Do not invert the product when placing it. Do not use the cover plates such as the front cover, the front bumper, and the laser ranging sensor protection cover as handles for handling.
- Please clean or maintain the robot and charging base in the state of shutdown or power-off.
- Do not touch the power plug or the product when your hands are wet, otherwise this may cause electric shock.
- Do not wipe or rinse any part of the product except the washable parts with a wet cloth or any liquid, and after daily cleaning, the washable parts should be fully dried before installation and use.
- Please use this product according to the instruction manual. Any loss and injury caused by improper use shall be borne by the user.
- Please do not use the product if the robot and accessories of the product are damaged. Contact the customer service department of our company. This product shall not be disassembled, repaired, or modified by anyone other than our designated or authorized service technicians.

## Battery and Charging

- Do not use batteries, adapters or power cords, charging bases of any third-party. This product can only be used with the battery, adapter, or power cord and charging base supplied with the robot. Failure to do so, product damage, electric shock, or fire due to high voltage may be resulted in.
- It is forbidden to disassemble, repair or modify the battery or charging base without permission.
- Do not place the charging base near a heat source, such as heating radiator.
- Do not touch wires, sockets, or power adapters with wet hands.

 
- Do not wipe or clean the charging contacts with a damp cloth or wet hands.
  - If the power cord is broken or fractured, please stop using it immediately and purchase or replace it through official channels.
  - If you need to transport this product, please make sure that the robot is turned off, and it is recommended to pack it in the original packaging box.
  - If the product will not be used for an extended period, please turn off the robot after it is fully charged and store it in a cool and dry place. Charge it at least once every three months to avoid over discharge of the battery.
  - Please use it under the condition that the power supply voltage conforms to the voltage value marked on the charging base. If the use area is vulnerable to thunderstorms or unstable power supply voltage, it is recommended to take appropriate protective measures.
  - It is prohibited to use with any type of power converter, otherwise the warranty will become invalid immediately, and may pose a danger.
- 
- If it becomes necessary to replace the robot battery, please contact our customer service department. If the wrong type of battery is used for replacement, it may cause a safety accident.
  - In case of battery leakage, be careful not to let the liquid stick to the skin or clothes. Wipe it immediately with a dry cloth and send it to the recycle bin or designated maintenance point. Do not discard it indiscriminately.
  - Turn off the power switch before removing the battery.
  - The battery must be removed when scrapping this product. Please dispose of the old batteries properly, and do not discard the waste battery at will. Batteries contain harmful substances that are harmful to the environment. Please put them into the specified recycle bins according to the local environmental protection regulations.

### Laser safety information


- This laser distance sensor complies with the class 1 laser product standard of IEC 60825-1:2014 and does not emit dangerous laser radiation. However, for better safety, please avoid your family (especially children and pets) from looking directly at the laser emitter at close range.

## 2. Product Overview

### 2.1 What's in the Box

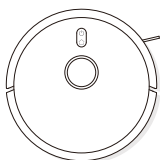

Robot Vacuum  
(Robot)

 


Side Brush (x2)



Cleaning Brush  
(Built in the  
Robot's dust box)



 
Mopping combo  
module  
(Mop installed)

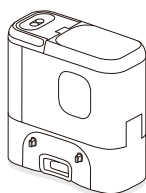

Auto-empty  
Charging Base  
(Charging Base)



 
Power cord

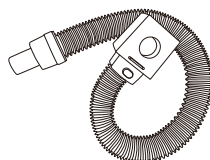


Hose assembly



 
Nozzle



Quick Start Guide

 

Additional  
Filter (x1)

 

Dust Bag (x2)



Hair Clippers



Open Comb



Thinning Comb




Pet Foot Brush

## 2.2 Product Anatomy (including Buttons and Indicators)
 
### A) Robot Vacuum

Top View

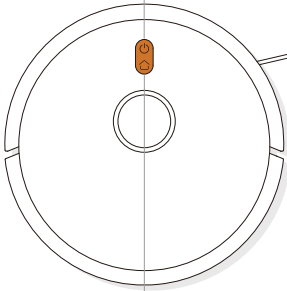

#### Buttons

⏻ Power button

- **Turn On/Off** : Press and hold for 3 seconds to power on or off.
- **Auto Cleaning** : After power-on, short press start Auto Cleaning.

🏠 Recharge button

- **Recharge** : Press to start recharging.
- **Manual Emptying** : Press to start manual dust collection during charging.

⏻ + 🏠

- **Reset Wi-Fi** : Press and hold both button for 3 seconds to reset Wi-Fi.

\* Press any button to pause while cleaning or recharging.

 
 
#### Robot status indicator

**White** : Normal power

**Orange** : Low power

**Red** : Error

**Pulsing White/Orange** : Charging

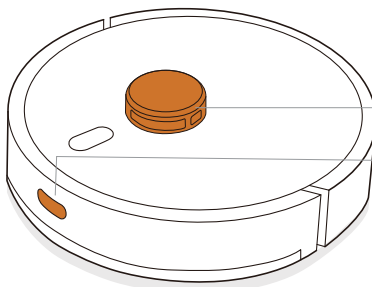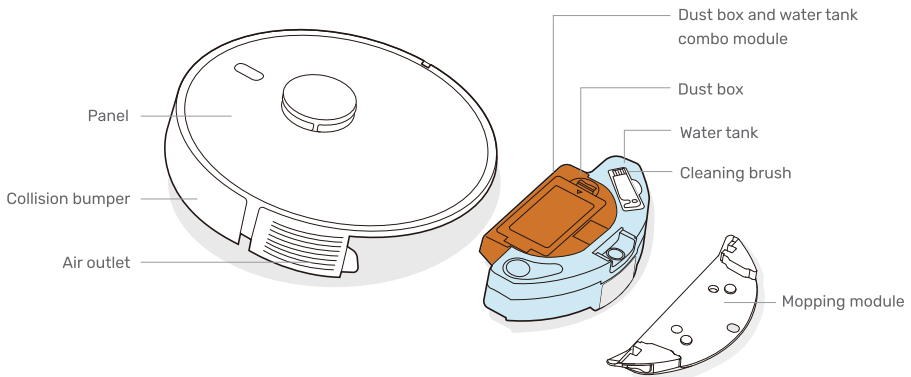

#### Main sensors

 
Laser distance sensor

Recharge sensor

## Bottom View


## Main sensors

Cliff sensor



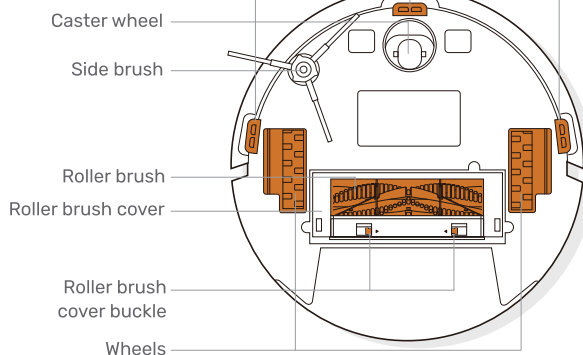


Recharge sensor


 
Charging contact pins

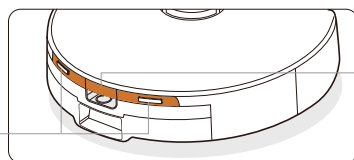


## Dust Box and Water Tank Combo Module

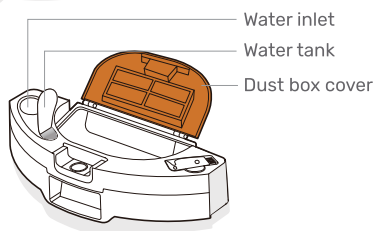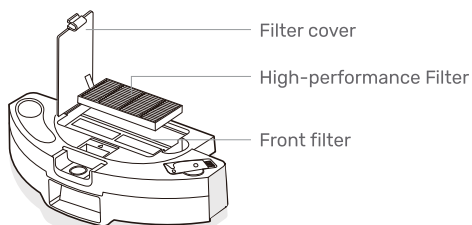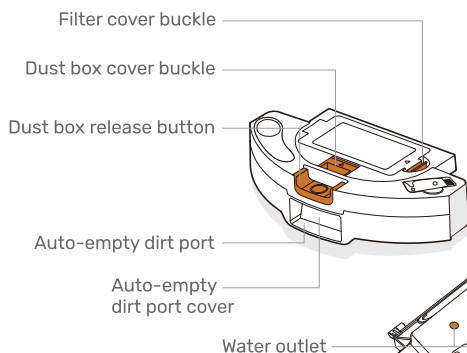   

## Mopping combo module

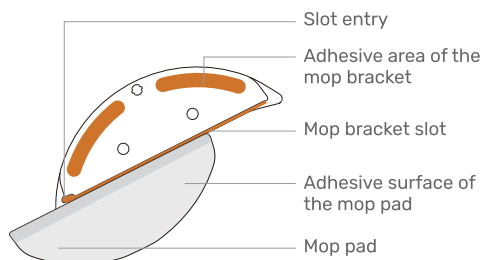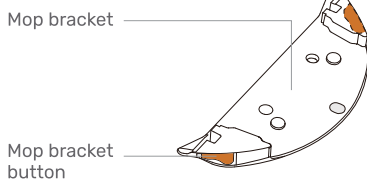  

Front View

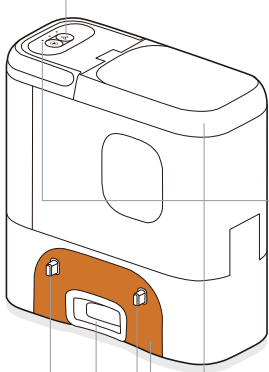 

**Buttons** (available when the detachable vacuuming module is removed)

**Suction level button:** Short press to switch between suction levels (3 levels switchable in a cyclic way)

**Start/Pause button:** Short press to start or pause

**Charging base status indicator** (in power-on state)

**Solid White:** Connected to the power, but the robot is not on the charging base\*

**Light off:** The robot is attached to the charging base / Standby Mode

**Flashing White (x3):** Starting / Finished work indication

**Solid Red:** Dust bag installed out of position or inverted

**Flashing Red:** Error

\* When being separately used after removal:

The current suction level is indicated by the number of indicator, lights which will turn on in a sequence from bottom to top.

\* Extinguishes after 10 minutes into standby mode

 
Top cover

Charging base location beacon

Charging contacts

Charging base dirt port


Side view

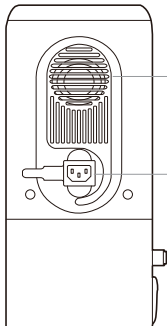


Air outlet of charging base

Power cord

 Top view

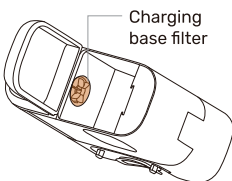


Charging  
base filter

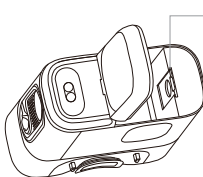 

Dust bag  
guide rails

 
Bottom view

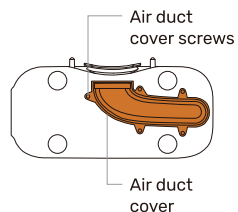


Air duct  
cover screws

Air duct  
cover

 Detachable Vacuuming Module

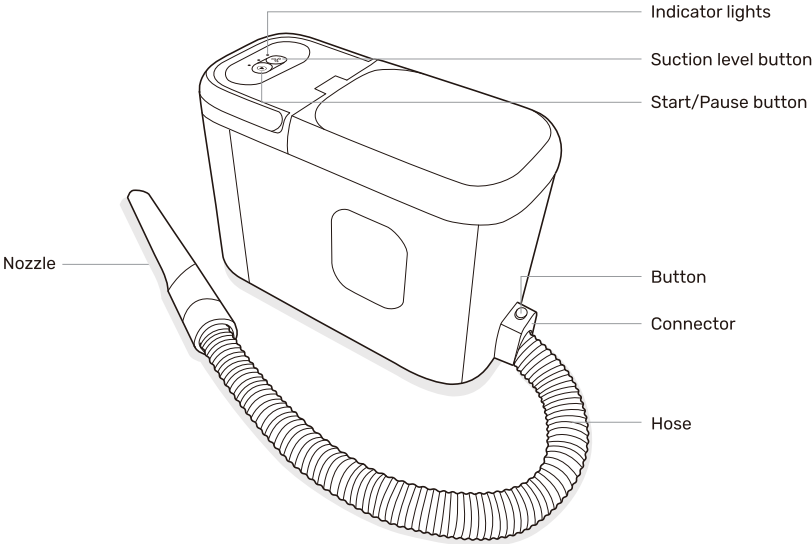

Base:

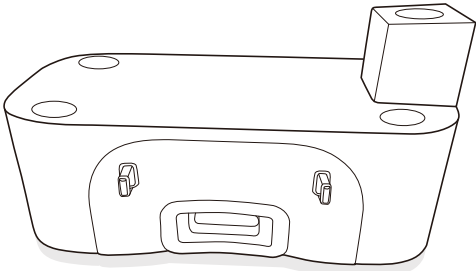 





## 3. Installation

### 3.1 Important Tips Before Use

 
#### Prepare your home environment

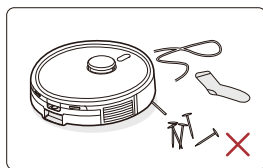

 - 1 Clean up any debris or wires on the floor that may entangle the Robot before use, and remove easily fallen, fragile, valuable, and potentially hazardous items. Avoid personal or property damage caused by being entangled, stuck, dragged or knocked down by the robot.

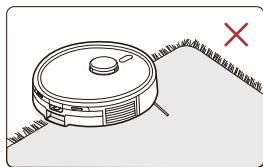

 
- 2 Fold the fringed edge of the decorative carpet underneath to prevent it from entangling the Robot. Avoid carpets that are very dark in color or thicker than 12.7mm.

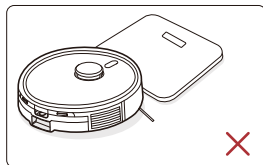

- 3 The Robot may climb onto objects less than 20mm in height. If possible, remove these objects.



 - 4 If the Robot is used in a suspended environment or a dangerous area such as a fireplace or an exhaust port, please use a solid physical barrier to prevent the robot from accidentally falling or entering to cause personal or property damage.

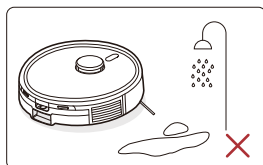


- 5 Make sure the Robot is kept away from wet areas and viscous substances during cleaning.

- 6 Please observe the robot patiently and assist in dealing with some minor problems during the first few runs of the robot. During the first run, you may encounter some situations that require additional adjustment, such as getting stuck or avoiding clean places, which will make the robot run more smoothly in the future.


### 3.2 Get Started
 
#### 1) Remove protective items

Before use, please remove the protective strip or film on the robot to ensure the normal usage.

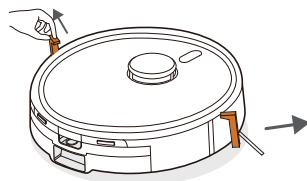

## 2) Install side brush

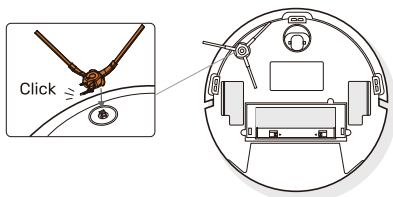 


## 3) Place the charging base, connect the power supply and charge the robot

- 1 Connect the power cable and organize the power cables with the cable ties.

**Note:**

 - Power cable on your floor may entangle the robot, resulting in power failure or jamming of the robot.

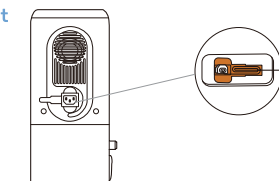


- 2 Place the charging base and power it on.

- Place the charging base in an easy-to-access position for the robot.

**Note :**

 - Ensure that no objects are placed within 1.5m in front of the charging base and 0.5m from both sides.
- Do not cover the signal transmitting area of the charging base with any object.
- Avoid direct sunlight, which will affect the recharge effect.

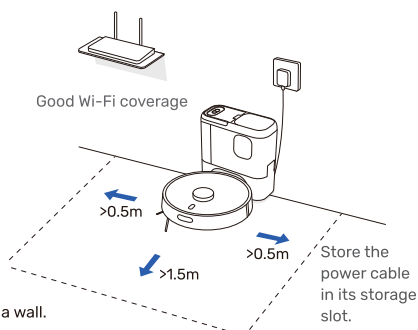

- Place the charging base on a level, non-slip, hard surface and against a wall.

**Note :**

- To avoid recharging failure caused by position change, do not put the charging base on a carpet or blanket.

- Always connect the charging base to the power supply. Ensure that it is located in a place with continuous Wi-Fi network and good network performance.

**Note :**

 
- Always keep the charging base plugged in, otherwise the robot will not return automatically.
- To return to the charging base smoothly after cleaning, it is recommended to start cleaning from the charging base. Do not move the charging base during cleaning.

- 3 Connect the robot to the charging base and turn it on.

- After connecting to the power supply, attach the robot to the charging base by aligning the charging contact pins. The robot will turn on automatically.

**Note :**

- When the battery level is insufficient to turn on the robot, place the robot on the charging base for a period of time, and the device will turn on automatically.
- If the robot is not on the charging base, press and hold the power button for 3 seconds to turn it on.

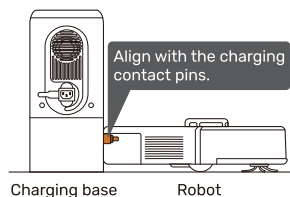

- 4 Fully charged.

- Fully charge the robot before first use.

**Note :**

- It is recommended to charge the robot for at least 4-6 hours before the first use. The robot will not start or return for recharge without enough power.



#### 4) Connect to mobile client

**Note :**

 
- Make sure your smartphone is running iOS 9.0 (or above) or Android 5.0 (or above).
- Make sure the 2.4GHz band wireless signal is enabled on your wireless router, and the signal is strong.
- To ensure better connection quality, please turn on the Bluetooth of your mobile phone.

① Download the app.

- Search for "Teendow" application in the app store of the mobile phone. Then download and install it.

② Reset Wi-Fi.

- Press and hold both buttons (⏻ Power button and 🔌 Recharge button) at the same time for 3 seconds until you hear the voice prompt. The two indicator lights of the robot start to flash slowly, indicating that the robot is ready for pairing.

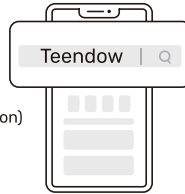


③ Add a device.

- Open the app and follow the prompts to register or log in to your account.
- Go to the home page of the app. Tap "+" in the upper right corner of the page to enter the "Add Device" page.
- Follow the on-screen instructions to connect with the robot.

**Note :**

 - Only the 2.4GHz band is supported for the Wi-Fi connection.
- Due to the upgrade of the application, the actual operations may be different from the above description. Please follow the instructions in the current application.
- If the network distribution fails, please reset the Wi-Fi and repeat the above operations.

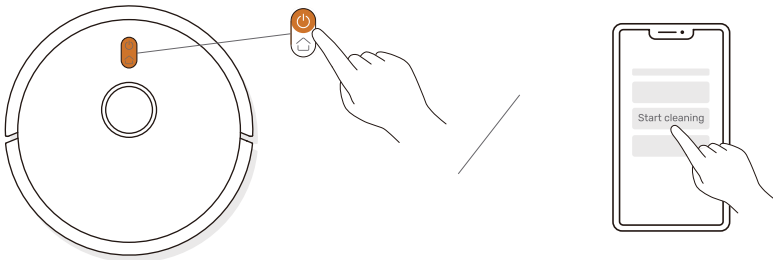

#### 5) Start cleaning



## 4.Operation Instructions

### 4.1 Main Functions

#### ● Turn on/off


- Press and hold  Power button for 3 seconds to turn on the robot. After the power indicator lights up for a period of time, the robot enters the standby state. Press and hold  Power button for 3 seconds to turn off the robot.

 


**Note :**

- The robot cannot be turned off during charging.

#### ● Start Cleaning (Auto cleaning)


- Press  Power button to start cleaning. After startup, the Robot will leave the charging base to generate a map via auto scanning, intelligently determining its cleaning route and dividing the space into a number of areas. The Robot will carry out cleaning in an “arch” pattern following the identified cleaning route along the wall to complete cleaning in every area.

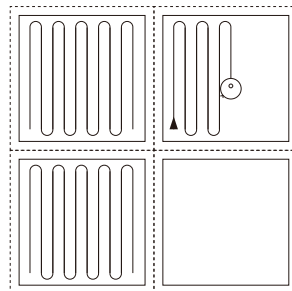

**Note :**

- If the battery is too low to start cleaning, charge the robot first and then start cleaning.
- If the power is insufficient during the cleaning, the robot will automatically return to the charging base for charging. When the power is sufficient, the robot will resume cleaning from where it left off.
- Please tidy up all wires on your floor (including the power cable of the charging base) before cleaning to avoid recharge failure and damage to the items or wires caused by dragging during cleaning.
- Do not move the charging base during cleaning, and make sure that the charging base is connected to the power supply, otherwise the robot may not return normally.

#### ● Pause/Resume/Sleep


- When the robot is working, press any button to pause it, and press  Power button to continue cleaning.
- If the standby exceeds 10 minutes, the robot will automatically enter the sleep mode. The indicator will turn off in the sleep mode. Press any button to wake up the robot in the sleep mode.



**Note :**

- If the robot is put back to the charging base for charging, the cleaning task will be ended.
- When continuing to clean, please keep the robot to start in the original position and direction to avoid path disorder.
- The robot does not go to sleep while charging.
- Automatic shutdown when sleep time exceeds 6 hours.

#### ● Recharge

- Auto mode: When the cleaning is finished or the battery is insufficient, the robot will automatically return to the charging base for charging.
- Manual mode: In the pause mode, press  Recharge button to start recharging, or the mobile phone client commands recharging.



**Note :**

- If the device does not find the charging base, please manually put the robot back to the charging base for charging.
- The indicator light will pulse while or pulse orange when the device is charging.

#### ● Map management

##### Create a Smart Map:

When there is no map at the beginning of the cleaning task (such as the first cleaning, after resetting the smart map, etc.), the robot will create a new smart map. In order to generate a complete floor plan, please follow the following operations:

- Open the door for robot to map each room in auto cleaning task.
- Remove any objects that may be blocking or jamming the robot.
- Do not move the charging base or disconnect the power supply after smart map created.

## Real-time Mapping

- Real-time Mapping helps you know the cleaning path and environment easily. A smart map will be built after cleaning. The smart map will be updated in real time during each cleaning to ensure normal navigation.

## Relocalize and Remap:

When the location of the robot or charging base is moved or the surrounding environment changes significantly, the robot will attempt to relocalize and possibly remap to match the surrounding environment. The details are as follows:

- If the relocalize is successful, the robot resumes cleaning.
- If the relocalize fails in spot cleaning, zone cleaning, and room cleaning modes, the robot will terminate the task.
- If the relocalize fails in the auto cleaning mode, the robot will remap to ensure providing normal navigation for the new cleaning, but the map setting information such as no-go zone and room dividers will be lost.

### Note :

 
- Make sure that the robot starts each cleaning from the charging base.
- Do not move the robot frequently during cleaning. If moved, place the robot back to its original location.

## Spot cleaning (only set via the app)

- Use the remote control page of the app to start the spot cleaning. The robot will clean a rectangular area of 1.5m x 1.5m with itself as the center. After the cleaning, the robot will automatically return to the starting point.

### Note :

- Start spot cleaning when there are other tasks, which will directly end the previous cleaning task.

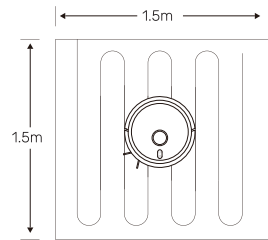


## Zone cleaning (only set via the app)

- Using the app, you can set one or more temporary zone on the smart map for zone cleaning. The robot will clean the set zone and automatically return to the charging base after cleaning.

### Note :

 - To use this function, you need to finish creating the smart map on the robot before you can use zone cleaning function.
- After starting cleaning, the robot may enter the area outside the designated area. Please pay attention to clearing the ground obstacles around the designated area. This function can not play a role of safety isolation.

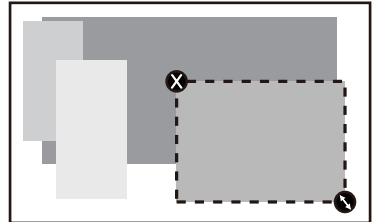


## Room cleaning (only set via the app)

- Using the app, you can select one or more rooms on the smart map for room cleaning. The robot will clean the selected rooms, and automatically return to the charging base after cleaning.

### Note :

 - To use this function, you need to finish creating a smart map on the robot and set the dividers before you can use the room cleaning function.
- After starting cleaning, the robot may enter the area outside the designated area. Please pay attention to clearing the ground obstacles around the selected area. This function can not play a role of safety isolation.

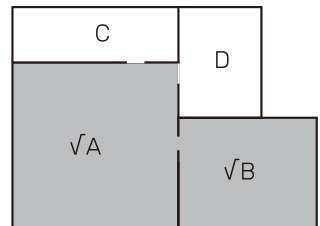

## Scheduled cleaning (only set via the app)

- You can schedule cleaning in the app. The robot will automatically start the task at the specified time and automatically return to the charging base after cleaning.

### Note :

- When performing other cleaning tasks, if the scheduled cleaning is triggered, the previous cleaning task will be ended directly.

### ● Suction level (only set via the app)

- For best cleaning effect, select different suction levels according to your needs.
- The greater the suction, the shorter the cleaning time and higher the noise.

### ● Auto-boost (only set via the app)

- During the cleaning, the robot will automatically increase the suction power if it detects that stronger power is need to ensure the best clean, such as thick carpets and hard-to-clean messes.
- This function will reduce cleaning time and increase the noise level. If this function disturbs you, you can choose to turn off this function in the mobile client.

### ● Auto-empty dirt

- Auto emptying:
  - After cleaning, the robot will return to the charging base, and the robot will automatically empty the dust box according to the emptying frequency set in the app.
  - The emptying frequency can be adjusted in the app.
- Manual emptying :
  - When the robot is connected to the charging base, you can press the recharge button of the robot to start manual emptying.



#### Note :

- The noise during auto-empty dirt is relatively loud. Please pay attention to the impact of noise on daily life.
- If auto emptying is not needed, disable this feature in the app.

### ● Vacuuming

- A detachable vacuuming module can be removed from the base separately and activated by pressing the Start/Pause button for vacuuming purpose.
- The suction level can be adjusted through the suction level button in a cyclic way, and the current level can be identified by the number of illuminated indicator lights.

## 4.2 Mopping Function

### ● Mopping

- Users may achieve mopping function by installing the mopping combo module and filling the dust box and water tank combo module with water.
- Once the mopping combo module is installed, the Robot will automatically activate its mopping function. Users can set the water flow rate on the mobile phone client and set mopping only during the cleaning process.

#### ① Fill the water tank with water

 
 
 
- Remove the dust box and water tank combo module
- Unplug the water tank, and plug it back after refilling



#### Note :


- Do not use detergent and disinfectant to avoid corroding the water tank and blocking the outlet pipe.
- Filling with hot water is prohibited, which otherwise may lead to deformation of the water tank.

- Reinstall the dust box and water tank combo module

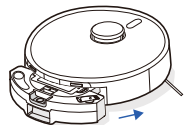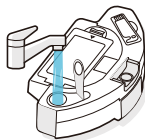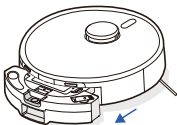


#### ② Mop installation

 - Wring out the fully soaked mop until no water drops are present. Place the mop bracket on the reverse side, insert the mop pad along the mop bracket slot. Then, affix the mop securely.

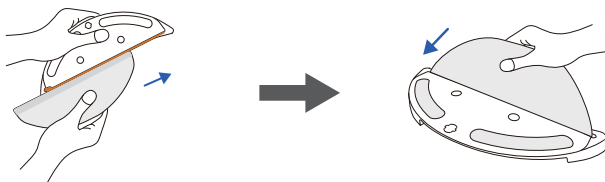

### ③ Install the mopping module

 - Push the mopping module with the mop pad installed in parallel along the back of the Robot Vacuum, and install it in place when a "click" sound is heard.

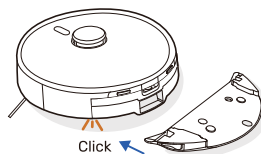


### ④ Start cleaning

- The mopping function is activated when starting cleaning task.

### ⑤ Remove the mopping module

 - After Robot cleaning, press the pause key, and press the buttons on both sides and take out the mopping module backwards.

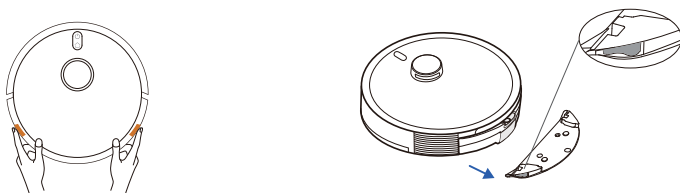

- After the Robot completes mopping, please remove the mop combo module and cleaning mop in a timely manner during charging or out of service, and also drain the water tank to avoid odor or mildew.

### ⚠ Note :

- Do not use the mopping function if the Robot is left unattended.
- Do not leave the wet mopping combo module at an area for a long time, which otherwise may lead to floor damage due to exposure to over-moisture.
- The Robot using the mopping combo module may operate at a less capability in overcoming the hurdle height. Thus, operators shall closely check for any jamming.
- The mopping function is only applicable to the clean floor without stubborn stains or liquid. If there are coffee stains, ink stains and other colored stains on the floor, do not use the mopping function to avoid floor contamination.
- The mopping function acts ideally on smooth and hard floors, and it may not work well on uneven tiles, floors covered with a lot of wax or rough surfaces. Under such circumstances, the Robot may not successfully complete mopping as it may be jammed or slid.
- It is prohibited to mop on the blanket.
- For the purpose of optimum mopping effect, it is advised to clean the floor with Robot 3 times before mopping.

 
### ● Water flow rate adjustment

- For the purpose of optimum mopping effect, users may set any water flow level on a case-by-case basis.
- The higher the water flow level, the less time in completing mopping at one time.
- Closely check for water makeup for optimum mopping effect.

## 4.3 Vacuuming Function


### 1. Remove the vacuuming module

- Remove the vacuuming module from the charging base using its handle.

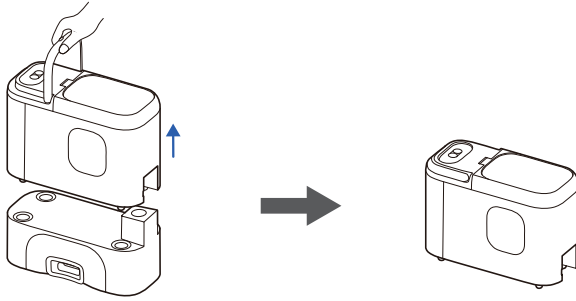

### 2. Connection and removal of the hose assembly

 - Press the button on the hose assembly connector to connect it to the detachable vacuuming module, and then install the crevice nozzle on the other side of the connector hose.
- When the vacuuming task is finished or there is a need for auto-empty dirt, disconnect the hose assembly connector by pressing the button on it, and store the hose properly for future use.

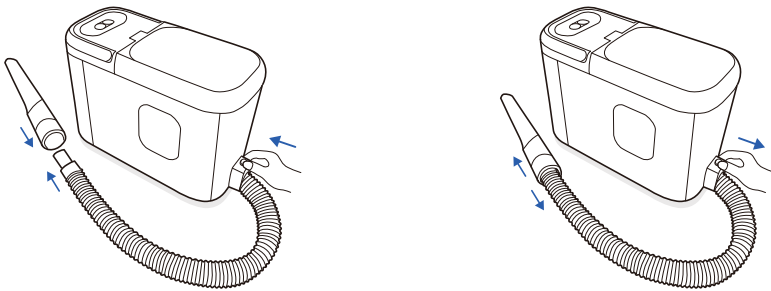

### 3. Start/Pause

- The detachable vacuuming module can be activated by pressing the Start/Pause button after being removed. When not in use, it can be paused by the Start/Pause button and then placed back to the base.



### 4. Suction Level Adjustment

 
- Different levels are available to suit your specific needs using the suction level button. To switch from Level 3 to Level 1, press the suction level button again. The suction level is currently switched in a cyclic way, and the corresponding number of indicator lights will illuminate as you switch between different levels.



## 4.4 Network Function

### ● Reset Wi-Fi

- If your mobile phone cannot connect to the robot (such as configuration or password change of your router), try to reset Wi-Fi and reconnect to the network.
- Press and hold  Power button and  Recharge button at the same time for 3 seconds until you hear the voice prompt. The indicator light starts to flash slowly, indicating that the robot is ready for pairing.
- For detailed Wi-Fi setup instructions, refer to "Installation > Connect to mobile client" in this manual.

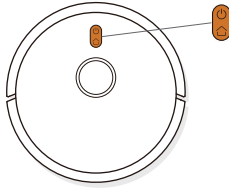

### ● Mobile client functions

- You can remotely control the robot through the mobile application.
- With the app, you can access more features such as scheduled cleaning, find my robot, reviewing the status, cleaning records, etc.
- For detailed Wi-Fi setup instructions, refer to "Installation > Connect to mobile client" in this manual.



#### **Note :**



- Due to the continuous development and upgrading of the app, functions and details may be slightly adjusted. Please refer to the actual version.

## 4.5 Other Functions


### ● Find my robot

- If the robot is stuck somewhere, you can find it through the "Find my robot" in the app.

### ● Force Restart system

- When the button does not respond or cannot be turn off, please try to restart the system.
- When not charging, press and hold  Power button for 10 seconds to force shutdown, and then press and hold  Power button for 3 seconds to turn on.

### ● Restore factory settings

- If the system cannot be used normally after restarting, please try to restore the factory settings.
- When not charging, press and hold  Recharge button for 15 seconds until the prompt tone is heard.
- The robot will clear all information and settings. At this time, the user needs to reconfigure the settings (including the network settings).

# 5. Maintenance and Troubleshooting

## 5.1 Routine Maintenance

**Note:** Please turn off and unplug the power cable before cleaning and maintaining the product. For the best performance, refer to the following table for routine maintenance.

Parts	Maintenance frequency	Replacement frequency
Dust box	Monthly	-
Filter	Weekly	Every 3 months
Roller brush	Monthly	Every 6-12 months
Roller brush cover	Monthly	Every 3-6 months
Side brush	Monthly	Every 3-6 months
Water tank	After every use	-
Mopping combo module	After every use	-
Mop pad	After every use	Every 3-6 months (or badly worn)
Caster wheel	Monthly	-
Wheels	Monthly	-
Sensors	Monthly	-
Charging contact pins and charging contacts	Monthly	-
Dust bag	Monthly	Depending on the situation of full dust
Hose assembly	Monthly	Every 6-12 months
Charging base filter	Monthly	-
Charging base dirt port	Monthly	-
Charging base air duct	In case of blockage	-



**Note :**

- If pets are kept, the frequency of parts maintenance should be increased to twice per cycle.
- The replacement frequency may vary depending on the actual situation. If visible or abnormal wear occurs, replace the parts.

 
### 1) Clean dust box and filter

- 1 Press the dust box release button to remove the dust box and water tank combo module.
- 2 Open and empty the dust box.
  - Use a cleaning brush to gently clean the inner cavity of the dust box, the front filter part.
- 3 Close the dust box cover, press the filter cover buckle to open the filter cover, and take out the filter.
- 4 Thoroughly rinse the filter with clean water.
- 5 Completely dry the filter and then put it back on.




**Note :**

- Be sure to dry the filter thoroughly before use to ensure normal operation and service life.
- Do not put the incomplete dust box into the robot, so as to avoid mistakenly triggering the cleaning, which will block the air duct of the robot or damage the fan.
- Do not touch or wash the dust box with water.

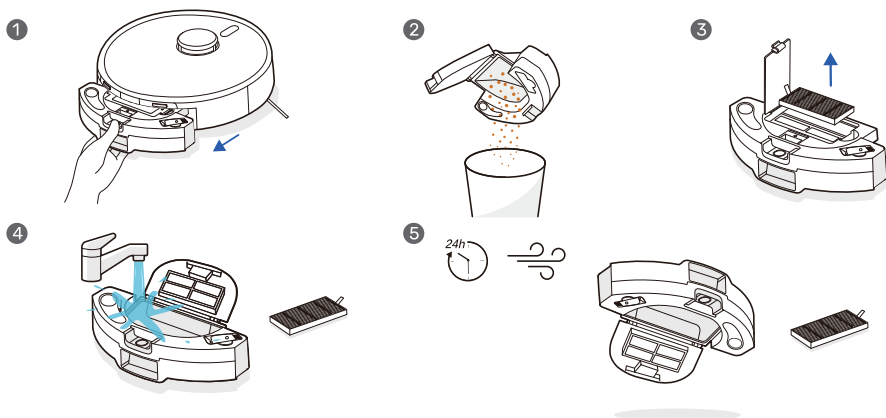


## 2) Water tank cleanup

 - ❶ Press the dust box release button to remove the dust box and water tank combo module.
- ❷ Unplug the water tank and drain the tank.  
- For further cleanup, refill and plug the tank, and shake the chamber inside the tank and drain water.
- ❸ Dry the water tank and put it back.

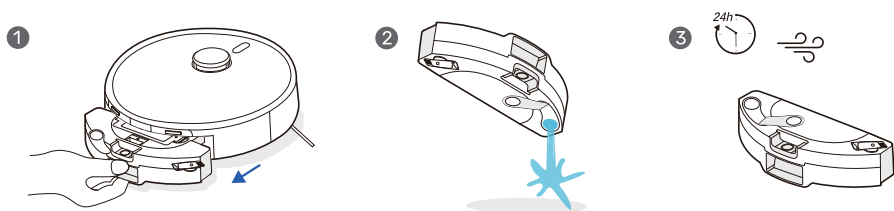


## 3) Mopping combo module cleanup

 - ❶ Press the mopping module buttons to take out the mopping module.
- ❷ Remove the mop pad from the mop bracket.
- ❸ Wash the mop pad and hang it to dry.

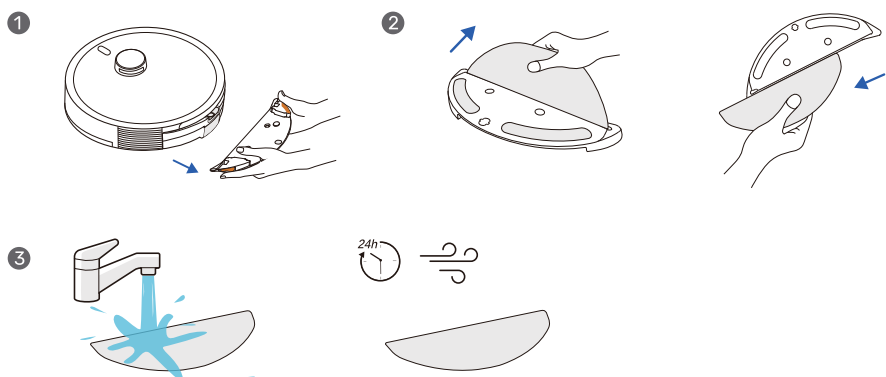


#### 4) Clean roller brush and roller brush cover

 - 1 Press and hold the roller brush cover buckle on both sides inward, and take out the roller brush cover and the roller brush.
- 2 Cut off the hair entangled on the roller brush with the blade of the cleaning brush.
- 3 The roller brush bearing on the side of the roller brush can be removed to clear any hair wound in the gap.
- 4 Clean the dirt on the roller brush cover.
- 5 Install the roller brush and roller brush cover back on.

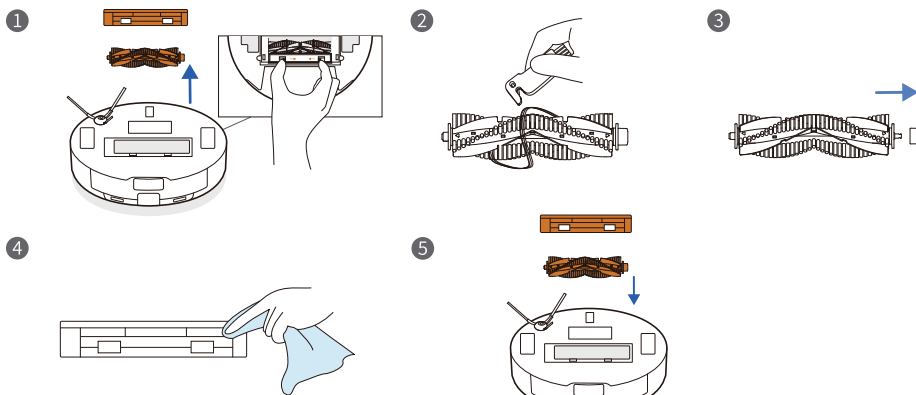



#### 5) Clean the side brush

 - 1 Pull out the side brush.
- 2 Clean the side brush with a cleaning brush and install it back.




#### 6) Clean caster wheel

  - 1 Pry out the caster axle and pull out the caster body with a small screwdriver and other tools
- 2 Clean the hair and dirt from the caster axle and caster body, and then reinstall and press it tightly.

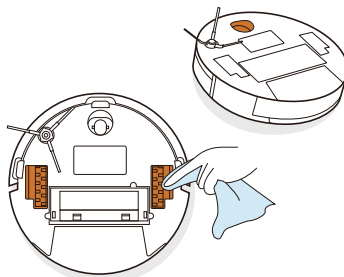

#### 7) Clean wheels

 - 1 Wipe and clean the wheels with a soft dry cloth.

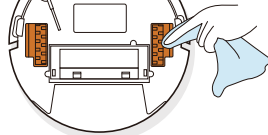


#### 8) Clean sensors, charging contact pins and charging contacts

- 1 Wipe and clean with a soft dry cloth.

##### ⚠ Note :

 - There are sensitive electronic components inside the product, so please wipe them with a soft dry cloth when cleaning.
- Do not use wet rags to prevent water damage.

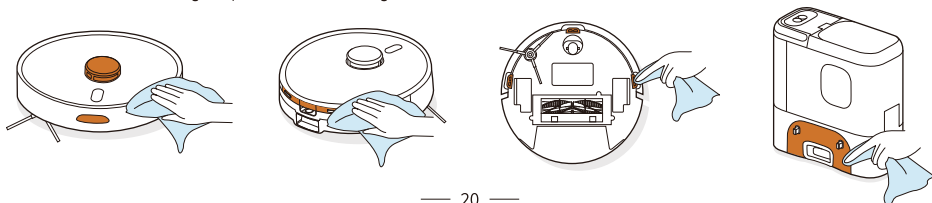

## 9) Replace dust bag of auto-empty charging base, and clean auto-empty dirt port and filter

When the dust bag is full, replace the dust bag according to the indicator light of the auto-empty charging base.

 
It is recommended to check and replace the dust bag regularly.

- 1 Open the top cover of the auto-empty charging base.
- 2 Pull up the handle of dust bag to take out the dust bag.

### ⚠ Note :

- When taking out the dust bag, the clip of dust bag handle will automatically close the dust bag to effectively prevent dust leakage.

- 3 Discard used dust bags.
- 4 Wipe the filter inside the bucket and the auto-empty dirt port outside with a soft dry cloth.
- 5 Install a new dust bag. push the clip along the guide rail.
- 6 Close the top cover of charging base.

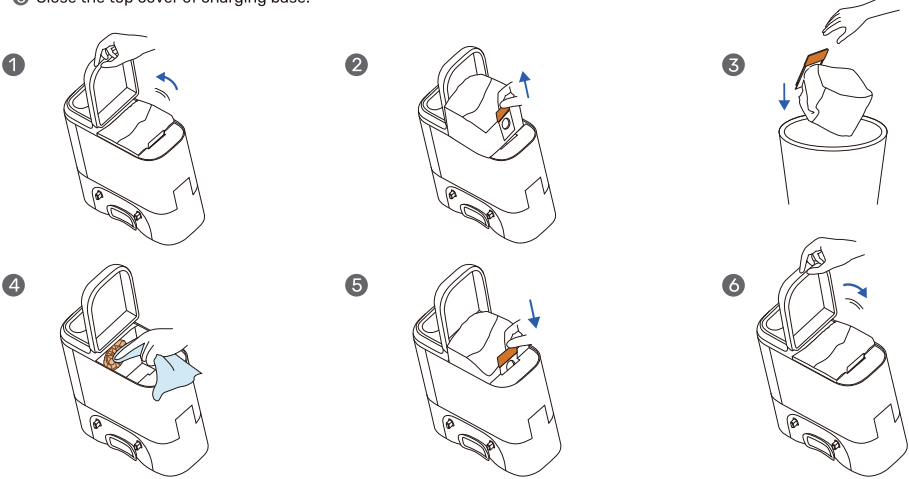

## 10) Clean the air duct

 
If the air duct is blocked, clean it according to the following steps.

- 1 Put a soft cloth on a flat surface, and then lay the auto-empty charging base back and flat with the front side facing up.

### ⚠ Note :

- Do not place the auto-empty charging base upside down to avoid damaging the top decorative ring and dust bag cover.

- 2 Unscrew the air duct cover screws with a screwdriver and take out the air duct cover.
- 3 Check whether the air duct is blocked by dirt and clean it.
- 4 Reinstall the air duct cover back with a screwdriver.

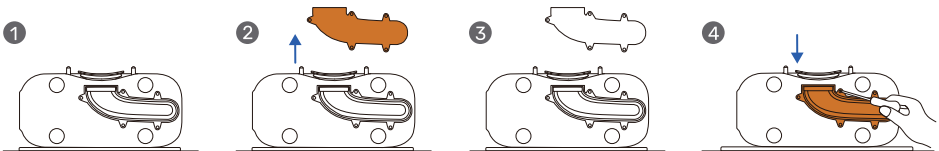

## 11) Clean the hose assembly

- 1 Clean residual dust or hair inside the hose.
- 2 Air dry the hose assembly for future use.

## 12) Clean the nozzle

- 1 Clean residual dust or hair inside the nozzle.
- 2 Air dry the nozzle for future use.

## 6. Declarations

### Basic Parameters

	Robot Vacuum and Mop
Product name	Robot vacuum
Rated voltage	14.4V/14.76V $\overline{\text{---}}$
Input power	24V $\overline{\text{---}}$ 1A MAX
Rated power	30W
Charging time	<6 hours
Wireless connection	Wi-Fi IEEE 802.11b/g/n 2.4GHz


Auto-empty charging base (US)	
Product name	Auto-empty charging base
Rated input	120VAC
Rated output	24V $\overline{\text{---}}$ 1.5A
Rated frequency	60HZ
Power	750W

Auto-empty charging base (EU\UK)	
Product name	Auto-empty charging base
Rated input	220 ~ 240VAC
Rated output	24V $\overline{\text{---}}$ 1.5A
Rated frequency	50/60Hz
Power	850W

Apple, the Apple logo, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the U.S. and other countries. Google, Google Play, the Google Play logo, and Android are trademarks of Google LLC. Amazon, Alexa, and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

# Energy Saving and Battery

## Holiday energy saving mode

- On the charging base, press and hold  Recharge button for 10 seconds until a tone is heard, at which time the holiday energy saving mode is activated.
- Under the holiday energy saving mode, the network, scheduling and other functions will be turned off, and the robot will enter the low-power mode to save energy.
- The function is ended only when the robot is moved out of the charging base or any button is pressed.
- The automatic dust collection charging dock also needs to be unplugged and powered off to exit the holiday energy-saving mode of the automatic dust collection charging dock.

## Remove the battery (for disposal)

- This is for discarding of the product and is not a daily operating instruction
  - The chemical substances contained in the built-in lithium-ion battery of this product may cause pollution to the environment. Please remove it before scrapping and hand it over a professional battery recycle bin for centralized treatment.
1. Allow the robot to run to a low battery state that cannot be cleaned without touching the charging base.
  2. Press and hold Power button for 3 seconds to turn off the robot.
  3. Remove the screws at the bottom of the robot with a screwdriver, and remove the bumper and middle shell in turn.
  4. Remove the motherboard and battery cover.
  5. Press the clip to pull out the connector plug and remove the battery.
- When removing the battery, make sure that the battery is used up as much as possible and operate safely with power cut off.
  - Please remove the whole battery pack together. Do not damage the battery pack shell to avoid short circuit or leakage of dangerous substances.
  - If the battery has exudation and is accidentally touched, please wash it with plenty of water and seek medical advice in time.



**Email: CS@teendow.com**

\*Please read the manual carefully before using the product and keep it properly.



**SUCCESS COURIER SL**  
CALLE RIO TORMES NUM. 1, PLANTA 1, DERECHA,  
OFICINA 3, Fuenlabrada, Madrid, 28947 Spain



**MADE IN CHINA**

Adress: Block A, Xinghe World Building, Bantian Street, Longgang  
District, Shenzhen