 


# HORA

## POWER BANK USER MANUAL GAR159

 
- ① LED Display
- ② LED Lights
- ③ Output port USB AF 5V $\sim$ 2.1A
- ④ Input port Type-C 5V $\sim$ 2A
- ⑤ ON/ OFF Button
- ⑥ Output IP Cable 5V $\sim$ 2.1A
- ⑦ Input USB AM Cable 5V $\sim$ 2A
- ⑧ Output Type-C Cable 5V $\sim$ 2.1A
- ⑨ Output Micro Cable 5V $\sim$ 2.1A

\*Long press the On/ Off button  
1.5s to open the flashlight.

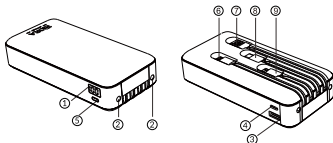


### PRODUCT SPECIFICATIONS

Model	GAR159
REF	GAR159
Charge Capacity	20000mAh 3.7V 74Wh
Port	IP/Micro/Type-C/USB-AF
Input	5V $\sim$ 2A
Total Output	5V $\sim$ 2.1A 10.5W Max
Size	143.17*67.87*34.72mm
Weight	



 Use the USB AM cable or the Type-C Port to charge the power bank.



You can use charging cables(Type C, IP, Micro) to charge multiple devices at the same time.

## RECOMMENDATIONS

1. Portable batteries generate heat when charged, and should always be charged in a well-ventilated place. Do not charge it on pillows, blankets or flammable surfaces.
2. Keep this device away from hot surfaces, direct sunlight, fuels, moisture, water, or other liquids.
3. Do not disassemble, open, incinerate, paint, or insert external objects into the battery.
4. Do not subject the battery to mechanical shocks such as extrusion, bending, puncturing, and rolling. Avoid dropping heavy objects on this device.
5. Do not expose the battery to a short-circuit environment or store it in a place that is easily shorted by conductive materials.
6. Do not operate the battery if it has been wet or damaged, to prevent a short-circuit explosion and injury. Contact the authorized dealer.
7. Children should always be supervised when using the battery.

## WARNING

The charge cell in this battery can cause some damage to the environment. Dispose of battery waste properly.

Jinxuan Electronics (Shenzhen) Co., Ltd.  
A901, Building A, Galaxy WORLD, Bantian Avenue, Longgang District,  
Shenzhen, China

1Hora is committed to providing quality products. Our reliability does not end with the sales. 1Hora warrants this product against defects in material or workmanship. For 12 months from the original date of purchase.

**TERMS**

---

The warranty covers only the original parts of the equipment (original equipment configuration) and the replacement and labor generated in the preparation process.

1. The warranty card is valid only if it is properly filled out and presented with a proof of purchase consisting of an original invoice or sales note indicating the date of purchase, the dealer's name, model number and serial number.
2. The company undertakes to repair or replace the products and their defective parts at no additional charge to the buyer.

**THIS WARRANTY IS NOT VALID IN THE FOLLOWING CASES**

---

A) When the product has been damaged by accident, disaster, neglect, transportation, misuse, abuse by failure to observe the warnings indicated in the user manual, and by modification or connection of an incompatible device to the device, or does not meet technical specifications.

B) When the product has not been operated in accordance with the accompanying instructions for use.

C) When the product has been altered or repaired by persons not authorized by Jinxuan Electronics (Shenzhen) Co., Ltd.

Product: \_\_\_\_\_ Brand: 1Hora

Date of purchase: \_\_\_\_\_

Reseller Name: \_\_\_\_\_

Reseller address: \_\_\_\_\_ Phone: \_\_\_\_\_

Buyer address: \_\_\_\_\_ Phone: \_\_\_\_\_

Jinxuan Electronics (Shenzhen) Co., Ltd. in no event shall be liable for any damages, including lost profits or other consequential damages, resulting from the misuse or inability to use such equipment.

