


### **INCLUDED**

- Webcam
- · Instruction manual

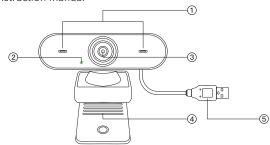

1. Mic

4. Clip

2. LED

5. USB connector


3. Lens

### SETTING UP YOUR WEBCAM

This webcam can be positioned on your monitor or laptop using the clip, or placed on your desktop.

### CLIP ONTO A MONITOR

Hold the webcam in one hand and open the clip base with your other. Mount the webcam, making sure the foot on the clip base is flush with the back of your monitor.

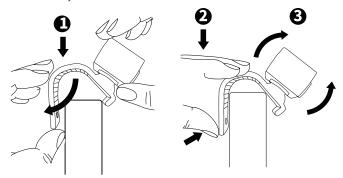

### CONNECT THE WEBCAM

Plug the webcam into USB port on your computer. Wait approximately 1 minute for the webcam to install automatically.

# MAKE A VIDEO CALL

Both you and the person you are calling must have a web camera, a video call app, a computer with speaker and mic or a headset (this webcam has built-in microphone) and an Internet connection.

NOTE: Check your video call app requirements. (Requirements may vary between different applications but usually a minimum of 2Mbps upload speed is required).

## Note:

The green LED will be ON when the webcam is in use.

#### MANUAL FOCUS

Turn the focusing ring clockwise or counter-clockwise to adjust the focus manually.



#### **TROUBLESHOOTING**

## Camera not recognized

Go to Control Panel>System and Security>System>Device Manager. Select USB 2.0 camera as the default.

# Confirm video call app is using USB webcam

Use the app to review the following:

Under Audio select USB 2.0 camera microphone.

Under Video select USB 2.0 camera.

#### Camera does not work on social media app

Change the default camera in the app settings to USB 2.0 camera.

#### CARE AND MAINTENANCE

- Store in a cool, dry place
- DO NOT pull or twist cable to avoid damaging the camera
- Clean only with a dry, soft, lint-free cloth

## **SPECIFICATIONS**

Sensor type: CMOS Video resolution: 1920x1080

Capture screen: 1920x1080 (maximum)

Image: Supports dynamic and static image capture

Lens: High-definition 5P lens

Frame rate: 30FPS

Focal range: Above 20mm



# THE SOURCE - WARRANTY

The Source warrants that this product will be free from defects in materials and workmanship for a period of twelve (12) months from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

