


Mary Had a Little Lamb

Let's Get Ready Baby Shark Rain, Rain, Go Away

Itsy Bitsy Spider Jack Be Nimble If You're Happy and You Know It The Wheels on the Bus

Here's a list of songs we can sing together:

Playtime Songs

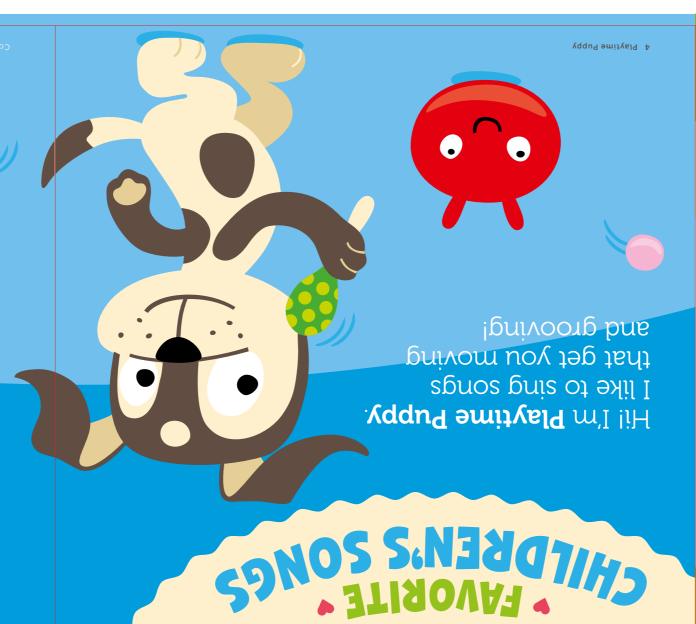

Skip back and forth

How to charge your Toniebox

The LED lights up orange when the battery is low.

Even a Toniebox needs a little rest and relaxation sometimes.

The LED will glow green when the battery is sufficiently charged.

To skip back and forth between chapters, hold your Toniebox with one hand and tap on its side with the other. To fast-forward or rewind,



Before you can use your new Toniebox, you must first set it up. Set up your Toniebox and start listening



The Toniebox makes listening easy.

Using the Toniebox is so simple:

How to turn your Toniebox on

Pinch one of the ears with your thumb and forefinger or place the box on its charging station.



Playing and pausing

When the light on your Toniebox turns green, place a Tonie on top. Want to pause the story or song? Just remove the Tonie from the Toniebox. When you place your Tonie back on, it will pick back up from the same spot as long as another Tonie hasn't been played in between.

YOU CAN SET THE

MAXIMUM VOLUME

and much more

IN YOUR

TONIE-ACCOUNT!


How to turn the volume up and down

Pinch the big ear to turn up the volume of the Toniebox. Use the little ear to turn it down.



LED display overview

The Toniebox has different LED indicators. Here's a brief overview:

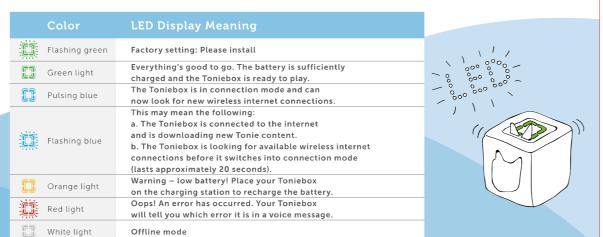



troubleshooting

Toniebox

Using your

Toniebox

Setting up your

sound (approximately 10 seconds).

Tip 2: Reset the Toniebox to its factory settings

As a last resort, you can reset your Toniebox to its factory settings. To do this, turn both the Toniebox and its connected charging **station upside down.** Press both ears of the Toniebox Warning: By resetting your Toniebox to factory settings, all network connections, contents and settings will be deleted.

Tip 3: Check the support code word

In the event of a more complex problem, your Toniebox will provide a code word. You can find out what it means and how to resolve the problem by calling our support line at **877-MY-TONIES** (877-698-6643)

or by visiting **support.tonies.com**









