

ACTIVESHOP[®]

INSTRUCTIONS FOR USE

Glow MX6 / MX3 countertop treatment lamp



Importer:
ACTIVESHOP Sp. z o.o.
8b Graniczna St., building
DC 2a 54-610 Wrocław,
Poland
www.activeshop.com.pl

 
CE

Technical data:

Model	HD-M3X	HD-M6X
Input voltage	220-240V 50Hz	220-240V 50Hz
Input voltage	12V 2A	24V 1,5A
Power Max	20W	36W
Color	3000/4500/6000K	3200-5600K
CRI	RA>90	RA>90
Lumen	1800LM	2800LM
Dimensions	400 x 200 x 40mm	580 x 190 x 445mm
Weight	1,4 kg	4,6 kg

Construction and mounting of HD-M6X lamp


1. Screw the lower part of the tripod (part D) into the base. Then screw the upper part of the tripod (part C) into the lower part (part D).

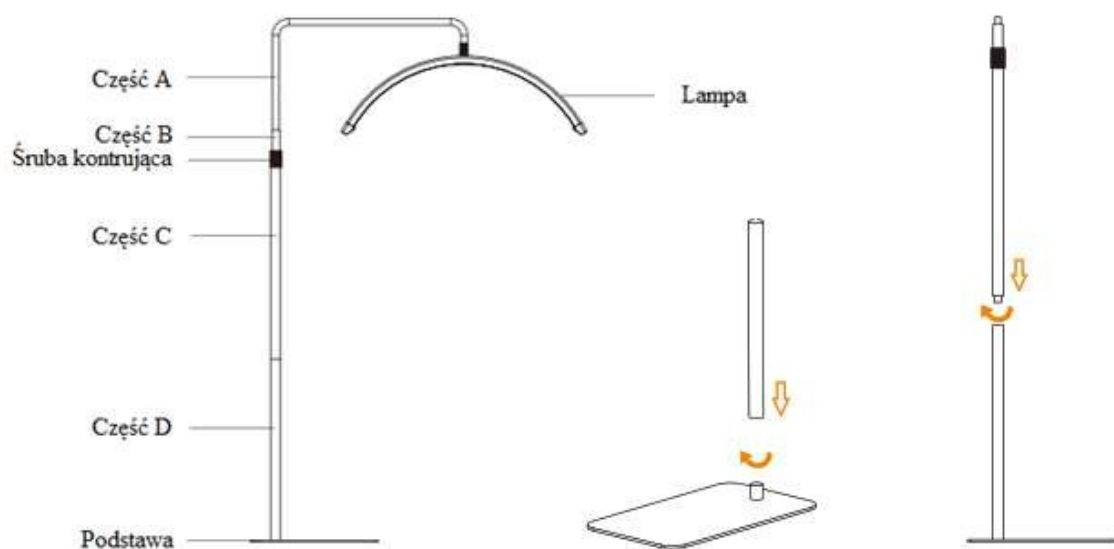


2. Mounting the Lamp to the Tripod

- Loosen the mounting screw.
- Pull part B out of part C.
- Twist part A with part B.
- Insert part B into part C.
- Tighten the mounting screw.
- Connect the cables to provide power.

 Note: Positioning the dock lamp nicely over the tripod foot provides the most stability for the lamp.

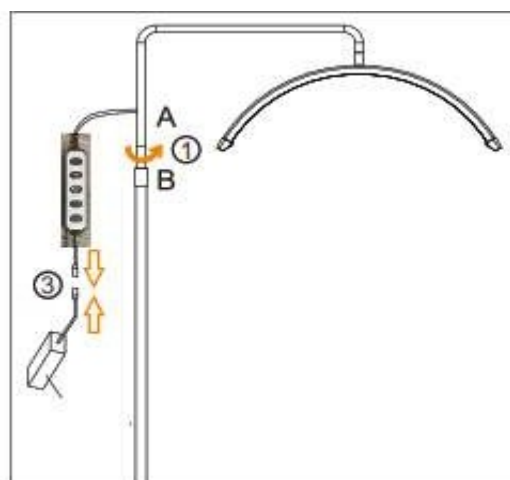

 
Construction and installation method of HD-M3X lamp

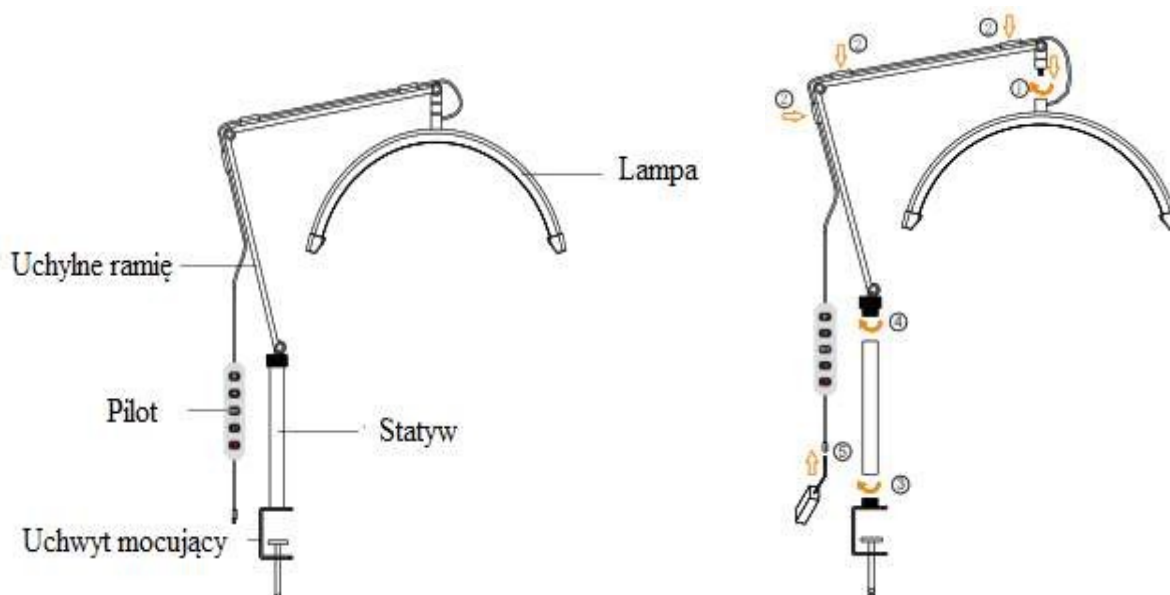

1. Screw the lamp into the top of the tilting arm
2. Install the cable in the special guide brackets
3. Mount the lamp stand to the mounting bracket
4. Connect the lamp to the tripod
5. Connect the power cord to the power supply

Note: It is possible to adjust the stiffness of the joints of the tilting arm with an Allen wrench. After prolonged or intensive use of the lamp arm, excessive joint play may occur. You should improve the rigidity of the joints by tightening the mounting screws.

 Attention! Do not over-tighten the screws. There is a risk of damaging the lamp arm when the fixing screws are over-tightened.

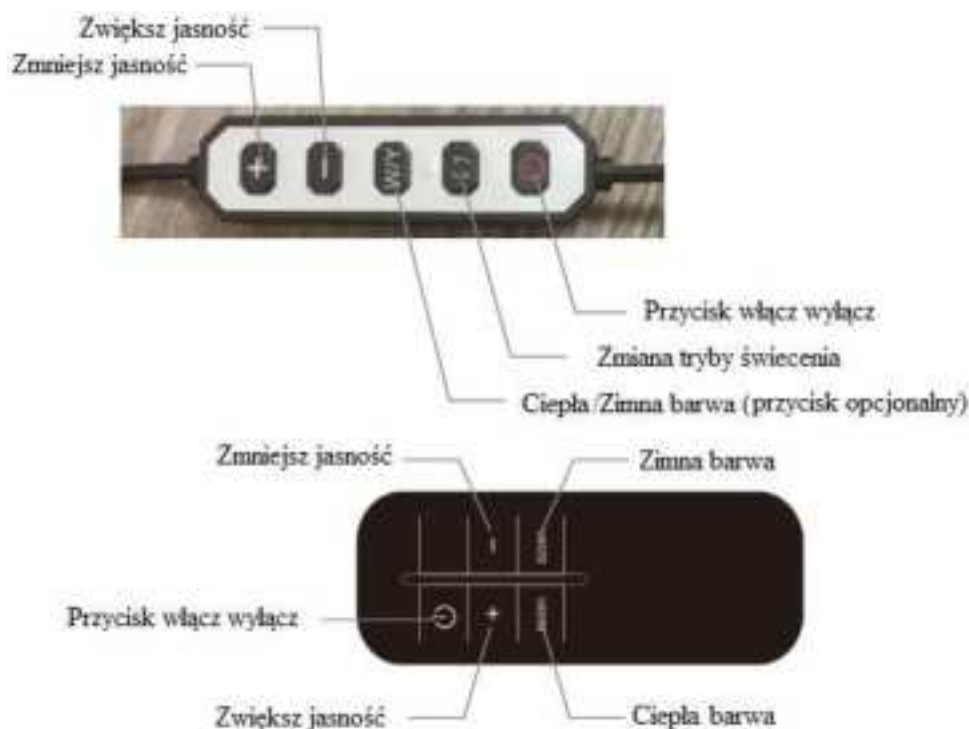

Use of HD-M3X/ HD-M6X lamp.

Note: The remote control is optional in the lamp (some models do not include the remote control)

Note: The light mode change button is optional on the lamp controller (some models do not have this button).

SECURITY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel avoids undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician (ACTIVESHOP SP. Z O.O. company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately unplug the device from the outlet and contact an authorized service provided by ACTIVESHOP SP. Z O.O.). In the following cases:
(a) liquid has entered the device, (b) the device emits a strange odor, smoke or makes strange sounds, (c) the power cord has been damaged, (d) the device has been knocked over or its housing has been damaged.
5. Do not put any objects on the cables. Do not install the device where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet every time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

CAUTION:

1. In case of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This device can be used by children at least 8 years old and by people with reduced physical and mental capabilities and those with inexperience and lack of familiarity with the equipment, if supervision or instruction on how to use the equipment in a safe manner is provided, so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the equipment unsupervised when children or persons without sufficient knowledge of the use of the equipment are near it.
5. This electrical appliance is not a toy. Incorrect use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.



DISPOSAL OF THE DEVICE

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Do not dispose of electrical appliances in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment

Waste electrical and electronic equipment should be collected separately, and sent to collection centers for waste electronic and electrical equipment.

At the end of their useful life, as well as old appliances contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to ACTIVESHOP SP. Z O.O.

STORAGE AND TRANSPORT

The device should be transported at temperatures between (-) 20 °C and (+) 50 °C only in its original packaging. Store the device in a well-ventilated area with a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.