ZR30 OPTICAL POD USER MANUAL



SIYI Technology (Shenzhen) Co., Ltd.

SIYI.biz/en



Thank you for purchasing SIYI's product.

ZR30 is a zoom optical pod with quick release structure and up to 180X hybrid zoom / 30X optical zoom, carrying a 4K 1/2.7-inch Sony CMOS, 4K video recording and photography, abundant gimbal control interface compatible with both SIYI links and third-party links. High accuracy and high collaboration control algorithms ensure stable imaging and zooming ability during flight. HDR and starlight night vision extend the application scenarios to both day and night. In a word, ZR30 optical pod is a rare and good payload for multi-rotors, VTOLs, and robotics.

To ensure you a good experience of the product, please read this manual carefully. If you encounter any issue using the product, please consult the manual or check the online pages of this product on SIYI official store (https://shop.siyi.biz). You can also write an email to SIYI official A/S center (support@siyi.biz).

Contact Us: SIYI Official Website (https://SIYI.biz/en)

SIYI User Group - Facebook	
Facebook	
Linkedln	
YouTube	

User Manual Update Log

Version	Date	Updates
1.4	2024.3	SIYI Gimbal SDK Instruction for SIYI FPV Windows software
1.3	2024.1	 Product features Technical specifications Main firmware update log. SIYI FPV app update log. SIYI FPV SDK Guide. SIYI Gimbal SDK Add diagrams in some chapters. Instruction for AI follow function
1.2	2023.10	 Main firmware update log. SIYI FPV app update log.
1.1	2023.8	 Special interesting functions and cautions. Instruction for acquiring and download files from SIYI camera's web server. Necessary update for SIYI FPV app. Necessary update for SDK commands. Instruction for gimbal Mavlink control. Instruction for integrating Mavlink flight attitude data. Trouble shooting for abnormal gimbal attitude. User manual update log. Main firmware update log. SIYI FPV app update log. Necessary update for technical specification.

CONTENT

READ TIPS	1
Icons	1
Safety	1
Storage / Carrying / Recycling	2
1 INTRODUCTION	3
1.1 Product Features	3
1.2 Ports, Interface & Definition	7
1.3 Technical Specification	8
1.4 Packing List	10
1.5 Indicator Definition	11
2 GET READY TO USE ZR30	12
2.1 Installation	12
2.2 Connection and Power	13
2.3 Interesting Functions and Cautions	14
2.3.1 Capture with Time and Location Information	14
2.3.2 Point to Focus & Focus Tracking	15
2.3.3 Output Four Video Streams from the Same RTSP Addresses	15
3 GIMBAL CONTROL	17
3.1 Enable AI Recognition, Tracking, and Follow through SIYI AI Tracking Module Using SIYI Optical P (Gimbal Camera) and SIYI Link	
3.2 Control SIYI Optical Pod (Gimbal Camera) in SIYI FPV App or SIYI QGC App through SIYI link	24
3.2.1 Preparation	25
3.2.2 Gimbal Pitch and Yaw Rotation	26
3.2.3 Zoom and Focus	27
3.2.4 Take pictures and Record Video	27
3.3 Control SIYI Optical Pod (Gimbal Camera) in SIYI QGC (Windows) Software through SIYI Link	28
3.3.1 Preparation	29
3.3.2 Gimbal Pitch and Yaw Rotation	31
3.3.3 Zoom and Focus	31
3.3.4 Take pictures and Record Video	31

3.4 Control SIYI Optical Pod (Gimbal Camera) by S.Bus Signal and Forward S.Bus Signal And S.Bus Signal	
through SIYI Link	
3.4.1 Preparation	
3.4.2 Gimbal Pitch and Yaw Rotation (Taking an example of Dial Control)	
3.4.3 Zoom and Focus (Taking an Example of Switch Control)	
3.4.4 Take Pictures and Record Video (Taking an Example of Button Control)	
3.5 UART / UDP Control (SIYI Gimbal SDK)	38
3.5.1 SDK Protocol Format	39
3.5.2 SDK Communication Commands	39
3.5.3 SIYI Gimbal Camera SDK Communication Interface	58
3.5.4 SIYI Gimbal Camera SDK Communication Code Examples	58
3.5.5 SDK CRC16 Code	61
3.5.6 Advanced Guide for SIYI Gimbal SDK Integration	63
3.5.7 Interface Documentation for SIYI Gimbal Camera's Web Server	66
3.6 Control SIYI Gimbal Camera by the ArduPilot Driver through UART and Integrate Attitude Data	e
3.7 Control SIYI Gimbal Camera by Mavlink Gimbal Protocol through UART and Into	
3.8 Necessary Trouble Shooting Steps When Gimbal Attitude Control Is Abnormal	80
4 VIDEO OUTPUT	83
4.1 Output Video to Windows Device Directly through Ethernet	83
4.2 Output Video to Third-Party Link through Ethernet	88
4.3 Output Video through Micro-HDMI	
4.4 Solutions to No Image through Ethernet	
4.4.1 Video Output to Android Device	
4.4.2 Video Output to Windows Device	
4.5 Common IP Addresses	
5 SIYI FPV APP	
5.1 Settings	
5.2 Link Status	
5.3 Gimbal Camera	
5.4 About SIYI FPV	
5.5 SIYI FPV App Update Log	
5.5 STITTI v App Opuate Log	第6页共149页

5.6 SIYI FPV SDK Guide	104
5.6.1 Access Method	104
5.6.2 Interface Instructions	106
5.7 SIYI FPV SDK Update Log	109
6 SIYI FPV WINDOWS APP	110
6.1 UI Function & Definition	112
6.1.1 Top Status Bar	112
6.1.2 Left Tools Bar	112
6.1.3 Right Tools Bar	115
6.1.4 Flight Controller Mavlink Attitude Data	117
6.1.5 Map	119
6.1.6 Sub Window	120
6.2 System Settings	121
6.2.1 Camera Settings	121
6.2.2 Gimbal Settings	122
6.2.3 Link Status	123
6.2.4 Others	124
6.3 SIYI FPV App Update Log	126
7 SIYI Assistant	127
7.1 Gimbal / Zoom Firmware Update	128
7.2 Camera Firmware Update	130
7.3 Gimbal Camera Configuration	132
7.3.1 Channel Configuration	133
7.3.2 Camera Configuration	134
7.4 Gimbal Calibration	135
7.4.1 IMU Calibration	136
7.4.2 IMU Constant Temperature Calibration	138
7.4.3 Accelerator Hexahedral Calibration	139
7.5 Main Firmware Update Log	139
7.6 SIYI PC Assistant Update Log	141
8 After-sale Service	142

READ TIPS

Icons

Please pay more attention to content indicated with the following marks:



DANGER Dangerous manipulation probably leads to human injuries.



WARNING Warnings on manipulation possibly leads to human injuries.



CAUTION Cautions on what manipulation may lead to property loss.







Safety

ZR30 optical pod is designed for professional application in specific scenes, which has been done necessary configuration before delivery, it is forbidden to disassemble the gimbal or to change its mechanical structure. And don't add more payload to the gimbal other than its own camera. Gimbal camera is designed with very precise structure, users who approach to the equipment should have the basic knowledge of how to operate it. Irregular or irresponsible manipulations to the device may cause damage, property loss, or human injuries, and SIYI Technology is not obliged to any of the damage, loss, or injury. It is prohibited to use SIYI products for military purpose. Users under 14 years' old should follow an experienced trainer's guide. Disassembling or modification to the system is prohibited without permission from its manufacturer, SIYI Technology.

Storage / Carrying / Recycling

When your SIYI products are stand idle, or you are bringing it outdoors, or the system reached service life, then please do read the precautions below.



A CAUTION

Always place your SIYI products at places where babies or kids do not reach.



⚠ DANGER

SIYI products should be placed in places with below conditions:

Not too hot (above 60°C) or too cold (under -20°C).

Not under direct sunshine or too dusty or too wet.

Not on an unstable holder which lacks solid supports or may cause vibration.

Not nearby steam or other heat sources.

1 INTRODUCTION

1.1 Product Features

Professional UAV Imaging System

ZR30 carries an 1/2.7-inch Sony image sensor, an 8 megapixels CMOS with remarkable photosensitivity ability, impressive 4K video recording and photography. Up to 180x hybrid zoom (30x optical zoom). The scenery is clear, the algorithm is fast and accurate, and the viewpoint is automatically focused, making it easy to produce grand pictures. Silky movement, smooth zoom, distant scenery, now within reach.

*The picture files captured by ZR30 can be written with GPS location information and time attributes.

Point To Focus

Point anywhere to focus lens from zoom camera to get clear view on selected part of screen.

Focus Tracking

Zoom camera stays focusing and keeps filming smooth videos while users are scaling images.

Starlight Night Vision

The ultra-sensitive starlight CMOS keep images bright in low light environment.

HDR

HDR (High Dynamic Range) precisely captures good details of highlights and shadows in dynamic scenes to get true colors and natural brightness.

AI Enhanced Smart Identify and Tracking

ZR30 works with the optional SIYI AI tracking module, which combines SIYI's self-developed AI algorithm and collaborate with SIYI optical pods (gimbal cameras) to achieve real-time tracking and capture of targets, and real-time focusing and zooming to highlight the selected object in the picture. The target will always be in the center of the picture and maintain a clearly visible proportion of the picture.

It supports the anti-lost function. During the following process, if the target is blocked or briefly leaves the monitoring screen, the AI tracking module can automatically recognize and continue tracking when it re-enters the monitoring screen.

540-Degree Yaw Axis Rotation

Quick Release, Fast Payload Switch

The yaw axis of ZR30 rotates in a range of 540 degrees. Hanging below VTOL drones or planes, ZR30 optical pod captures 360 degrees around. SIYI quick release structure will support more interesting payloads in the future. Welcome to follow for updates!

Incomparable Gimbal Control Interface

SIYI optical pods' (gimbal cameras') powerful compatibility contribute to smart robotics e cology in all dimensions. They can be controlled through traditional S.Bus signal by switc hes and dials, or through Ethernet by touchscreen or by UDP / TCP commands based on S IYI gimbal SDK, or through UART by SIYI gimbal SDK or by mainstream open-source p rotocols ArduPilot and PX4 (Mavlink).

Gimbal Motion Mode

Nose Mode

When the gimbal is installed at an angle of 90 degrees to the horizontal plane, it will auto matically enter the nose mode, which is convenient for installation on the nose position of the fixed-wing drone to achieve a friendlier installation angle and a wider field of view.

Upside Down Mode

Gimbal automatically activates upside down mode when it is placed upside down, very convenient to be mounted on multiple kinds of vehicles like UGV, USV, robot dog, and more robotics.

Follow Mode

Horizontally, gimbal follows when aircraft rotates.

Lock Mode

Horizontally, gimbal does not follow when aircraft rotates.

FPV Mode

Gimbal rotates simultaneously as aircraft rolls to get FPV view, and output enhanced stable images.

High Accuracy and High Collaboration Control Algorithms

SIYI has done even more in control algorithms and stabilization algorithms.

IMU Calibration Algorithms

Compensate and correct errors of the inertial measurement unit, reduce interference factors such as zero bias, scale factor, inter-axis error, temperature drift, noise, etc., greatly improve the measurement accuracy of IMU, and improve the stability of the gimbal in large temperature differences, wide margin steering, and strong vibration environments.

Attitude Fusion Algorithms

Comprehensively utilize the data of sensors such as accelerometers and gyroscopes, obtain the pitch angle, roll angle, and yaw angle of the gimbal through mathematical models and filtering algorithms, and fuse this information to effectively improve system performance, stability, and robustness.

Industry-Level 3-Axis Stabilization Algorithms

Deeply integrate and utilize 3-axis gyroscopes, 3-axis accelerometers, PID controllers, motors, and magnetic encoders to achieve gimbal attitude stabilization control and continuously output stable high-definition video images during motion.

High-Precision FOC Motor Control Algorithms


Control the current components of the motor to control torque and magnetic field respectively, thereby achieving decoupling control of the brushless motor and greatly reducing picture jitter.

1.2 Ports, Interface & Definition




- ① Power Input (3S to 6S)
- ② Control Signal Input & Output (S.Bus / UART)
- ③ Control Signal Input & Output (S.Bus / UART)
- Ethernet (Ethernet video stream and SDK protocol control)
- Micro-HDMI (Video output)


- Type-C (Upgrade and configure)
- TF Card Slot (File storage and copy)
- Status Indicator

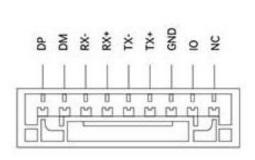

Video & Protocol

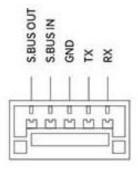

Gimbal Control

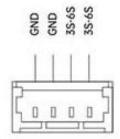

Power

1.3 Technical Specification

Overall

Video Output Port	Ethernet
	Micro-HDMI
Control Signal Input Port	S.Bus
	UART
	Ethernet UDP / TCP
III ah A sawasay	Yaw
High Accuracy 3 Axis Stabilization	Pitch
	Roll
Working Voltage	11 ~ 25.2 V
	(3S to 6S)
Power Consumption	Average 5 W
	Summit 12 W
Waterproof Level	IP4X
Working Temperature	-10 ~ 50 °C
Dimension	
(Quick Release Board	132 x 100 x 180 mm
Included)	
Weight	
(Quick Release Board	668 g
Included)	

ZR30 Quick Release Anti-Vibration Board

Dimension	82 x 65 x 20 mm
Weight	38 g

Gimbal

Angular Vibration Range	±0.01°
Controllable Pitch Angle	-90° ~ +25°
Controllable Yaw Angle	-270° ~ +270°
Rotatable Roll Angle	-45° ~ +45°

Camera

Lens	30X Optical Zoom (180X Hybrid Zoom)
Focal Length	4.5 ~ 148.4 mm (±5%)
Image Sensor	1/2.7 Inch Sony CMOS 8 MP Effective Resolution
Aperture	F1.3 ~ 2.8 (±5%)
FOV	Without Zoom: Diagonal 65.4°, Horizontal 58.1° 30X Optical Zoom: Diagonal 2.5°, Horizontal 2.1°
Video Recording Resolution	4K (3840 x 2160) @ 25 fps 2K (2560 x 1440) @ 30 fps 1080p (1920 x 1080) @ 30 fps 720p (1280 x 720) @ 30 fps
Still Photo Resolution	4K (3840 x 2160)
Video Storage Bitrate	12 Mbps (H.265 Codec)
Supported File System	FAT32 ExFAT
Image Format	JPG
Video File Format	MP4
Supported MicroSD Cards	MicroSD Class10, max 128 GB
Still Photography Mode	Single
Metering Mode	Evaluative metering
White Balance	Automatic

Mark

To make sure that you get smoothly recorded video, please format the SD card, and make the minimum storage unit as 64 KB before recording.

Please format the SD card to FAT32 before camera firmware upgrade.

1.4 Packing List

1 x ZR30 Optical Pod

1 x ZR30 Quick Release Board

1 x MK15 / HM30 Air Unit S.Bus Y Cable

(Connect SIYI MK15 and HM30 air unit's S.Bus port to acquire control signal, then one connector of the cable goes to SIYI gimbal, another goes to flight controller)

1 x 3 in 1 Control Cable

(A universal cable for ZT30, ZR30, and A8 mini, it connects SIYI gimbal's control signal port with SIYI link and controller, including UART control input, S.Bus input and output)

1 x SIYI Gimbal Power Cable

(Power supply cable for SIYI gimbal)

1 x SIYI Gimbal Ethernet Cable

(A backup cable for customer DIY purpose to connect SIYI gimbal to third-party Ethernet devices)

1 x SIYI Gimbal to SIYI Link Cable

(An all-in-one cable for only touch screen control to SIYI gimbal through SIYI link, it can power SIYI gimbal and can also transfer video stream and control signal)

1 x SIYI Gimbal Ethernet to RJ45 Cable

(Connect SIYI gimbal with RJ45 device directly)

1 x SIYI Gimbal to PX4 / ArduPilot Flight Controller UART Cable

(A universal cable for ZT30, ZR30, and A8 mini, it connects SIYI gimbal to the UART port on PX4 / ArduPilot flight controller for data communication and gimbal control)

1 x ZT30 / ZR30 Screw Pack

(Using with the fixing board to mount ZT30 quick release anti-vibration claw and ZR30 quick release anti-vibration board, including 6 x Hex Socket Large Flat Head Cap Screw TM3*8)

1.5 Indicator Definition


The status indicator on SIYI gimbal uses three different colors and different blinking frequencies to indicate the system's working or abnormal status.

- O Solid Green: Normally working.
- O Slow Green Blinks: S.Bus signal input is normal.
- O Double Green Blinks: Integrating flight controller attitude data is normal.
- Slow Red Blinks: One of or all the firmware does not match (camera firmware, gimbal firmware, zoom firmware).
- ■ Triple Red Blinks: Failed to identify zoom module (for optical zoom gimbal camera only).
- Red-Red-Yellow Blinks Continuously: Failed to identify camera board.
- Yellow Blinks: Power input voltage is low (lower than 10 V).
- Double Red Blinks: IMU temperature rising is abnormal.
- O Double Yellow Blinks: IMU temperature is rising.
- O O Triple Yellow Blinks: IMU temperature is abnormal.

2 GET READY TO USE ZR30

2.1 Installation

Screw Holes' Position and Distance

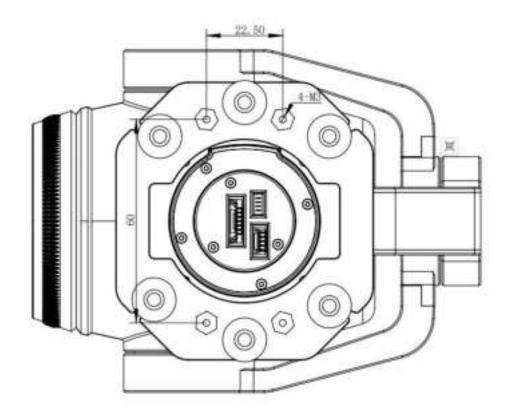

O Mark

The specs of the screws for fixing the four tube screws are M.3*8 mm. Quantity: 4.

Welcome to contact SIYI to get the SIYI Gimbal 3D Model for pre-installation.

2.2 Connection and Power

SIYI optical pod and gimbal camera can be powered in many ways. If you plan to carry SIYI gimbal by your plane and the plane may roll in a wide margin, then please use connect SIYI gimbal's power port directly by a 3S to 6S power battery, not through power distribution board or air unit.

2.3 Interesting Functions and Cautions

SIYI optical pod and gimbal camera support abundant interesting functions.

2.3.1 Capture with Time and Location Information

SIYI optical pod and gimbal camera can save time and location information into captured pictures in EXIF format. The preconditions that the function will work are:

- Time Information: The ground station must connect to internet and run the latest SIYI
 FPV app.
- Location Information: Gimbal must be communicating with the flight controller through UART.

Mark

Location information can only be acquired from Mavlink protocol at this moment.

The above functions are only available in SIYI optical pods and gimbal cameras which support capturing pictures and TF card recording and can communicate with the flight controller (ZT30, ZT6, ZR30, A8 mini, ZR10).

2.3.2 Point to Focus & Focus Tracking

Point to Focus


The zoom camera in ZT30 four-sensor optical pod support selecting focus and focusing to a point on any place in the image while SIYI FPV or SIYI QGroundControl app is running. Fast and accurate.

Focus Tracking

The zoom camera in ZT30 four-sensor optical pod automatically adjust focal length during optical zooming to keep filming smooth and clear images.

2.3.3 Output Four Video Streams from the Same RTSP Addresses

SIYI optical pod (gimbal camera) can output up to four video streams from the same RTSP addresses.

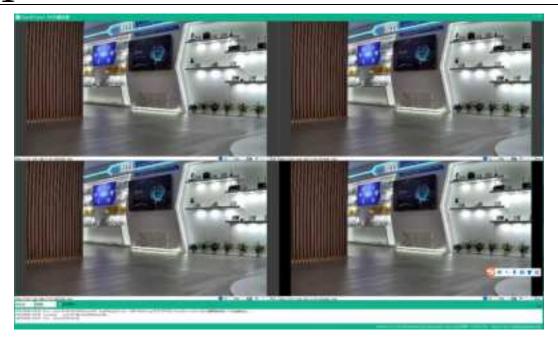

3 GIMBAL CONTROL

SIYI optical pod (gimbal camera) support multiple methods to control.

3.1 Enable AI Recognition, Tracking, and Follow through SIYI AI Tracking Module Using SIYI Optical Pod (Gimbal Camera) and SIYI Link

SIYI optical pod (gimbal camera) can connect to SIYI link through SIYI AI tracking module and enable AI recognition, tracking, and follow feature through SIYI FPV app or SIYI QGC app while the air unit is communicating with the ground unit.

It is necessary to prepare the tools, firmware, and software below before controlling gimbal camera in this way.

- SIYI Links (MK32 Standard Combo / HM30 / MK15 Enterprise Standard Combo is suggested for excellent compatibility with SIYI gimbal cameras)
- SIYI Optical Pod (Gimbal Camera)
- Flight Controller
- SIYI AI Tracking Module

Mark

Above products can be purchased from SIYI directly or from SIYI authorized dealers.

• SIYI Gimbal to SIYI Link Cable

Mark

Above tools come with product package.


- SIYI FPV App (v2.5.15.695 or latest version)
- SIYI QGC App

Mark

Above software can be downloaded from relevant product page on SIYI official website.

Steps

- Confirm if gimbal camera's firmware has been upgraded to be compatible with SIYI
 AI tracking module and the AI follow function.
- 2. Confirm if SIYI FPV app has been upgraded to be compatible with SIYI AI tracking module and the AI follow function.
- 3. Please refer to the picture below to connect SIYI AI tracking module with SIYI gimbal camera and SIYI link.

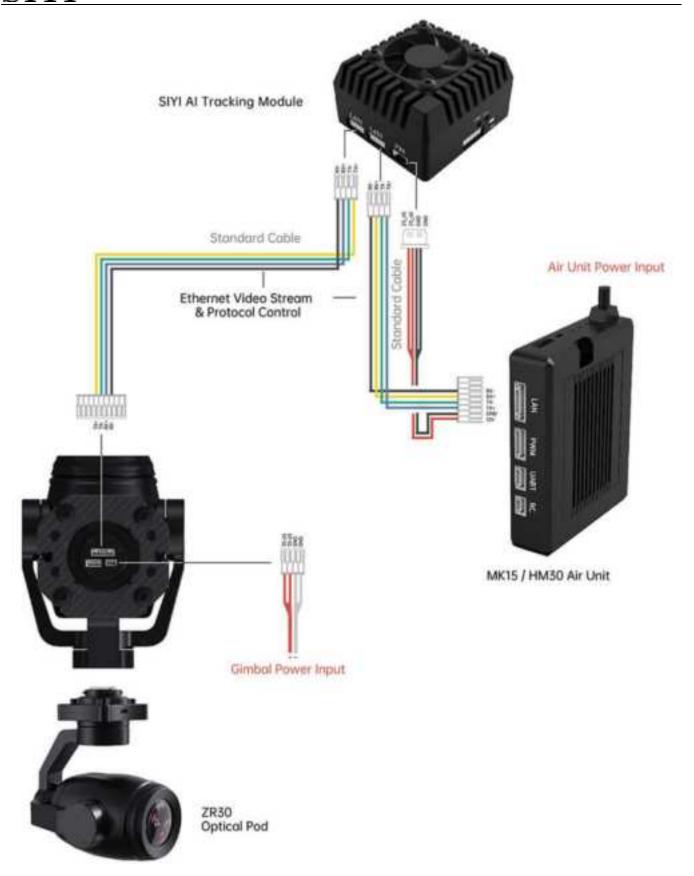

4. Please refer to the picture below to connect SIYI gimbal camera with flight controller and integrate attitude data.



5. Run SIYI FPV app, go to "Settings - Addresses", and select "SIYI AI Camera".



- 6. Return to main image, touch the AI tracking function button to enable the function.
- 7. Confirm if the flight controller integration button shows up (which means flight controller attitude data is integrated).
- 8. Switch flight mode to "Guided" and configure the max flight speed.



9. Touch the AI tracking / follow button again to disable the function.





DANGER

Considering flight safety, it is recommended to use the AI follow function and obstacle avoidance function together.

When the AI follow function is activated, the operator will not be able to manually control the flight, and the ground station cannot use the guided mode to control the aircraft. Switching flight mode can regain control.

When the AI follow function is activated, please ensure that the view on the follow route is clear and free of obstacles, and always pay attention to flight safety. When encountering obstacles, please immediately take over the flight manually and re-plan the route.

When the tracking target is lost, the aircraft will hover.

Mark

Using SIYI AI tracking module with multiple-sensor optical pods, in SIYI FPV app, the main stream of the optical pod should be configured as zoom camera.

When the tracked object is higher than the multi-rotor drone on the horizontal plane, AI

follow function does not work; when the tracked object and the multi-rotor drone are on the same horizontal plane, AI follow function works best.

3.2 Control SIYI Optical Pod (Gimbal Camera) in SIYI FPV App or SIYI QGC App through SIYI link

SIYI optical pod (gimbal camera) can connect to SIYI link directly to control gimbal rotation, gimbal functions, and video display in SIYI FPV app or SIYI QGC app when the air unit is communicating with the ground unit.



3.2.1 Preparation

It is necessary to prepare the tools, firmware, and software below before controlling gimbal camera in this way.

- SIYI Links (MK32 Standard Combo / HM30 / MK15 Enterprise Standard Combo is suggested for excellent compatibility with SIYI gimbal cameras)
- SIYI Optical Pod (Gimbal Camera)

Mark

Above products can be purchased from SIYI directly or from SIYI authorized dealers.

• SIYI Gimbal to SIYI Link Cable

Mark

Above tools come with product package.

- SIYI FPV App (v2.5.15.691 or latest version)
- SIYI QGC App

Mark

Above software can be downloaded from relevant product page on SIYI official website.

SIYI FPV App Steps

- 1. Power the air unit and bind it with the ground unit.
- 2. Use SIYI Gimbal to SIYI Link Cable to connect the air unit's Ethernet port to the gimbal camera's Ethernet port.
- 3. Update SIYI FPV app to the latest.
- 4. Run SIYI FPV app, go to "Settings" and select the relevant SIYI camera type with main / sub stream, video stream will display. Gimbal motion and camera functions can be controlled by the application.

SIYI QGC App Steps

- 1. Power the air unit and bind it with the ground unit.
- 2. Use SIYI Gimbal to SIYI Link Cable to connect the air unit's Ethernet port to the gimbal camera's Ethernet port.
- 3. Run SIYI QGC app, go to "Comm Links Video Settings", and select "RTSP Video Stream" for "Source", then enter the default RTSP addresses of SIYI gimbal camera, video stream will display. Gimbal motion and camera functions can be controlled by the application.

3.2.2 Gimbal Pitch and Yaw Rotation

While SIYI FPV App or SIYI QGC app is running,

Sliding on touchscreen can control gimbal rotation. Sliding left and right are yaw rotation, up and down are gimbal pitch rotation.

Double tap touchscreen, gimbal will automatically center.

Mark

Slide on touchscreen and hold it, gimbal will continue rotating till it reaches physical limit.

Farther that you hold it from the center of the screen, faster the gimbal rotates.

3.2.3 Zoom and Focus

While SIYI FPV App or SIYI QGC app is running,

Touching "Zoom in" or "Zoom out" icon on can control the zoom camera.

Click the touchscreen once, optical zoom gimbal camera will focus automatically.

3.2.4 Take pictures and Record Video

While SIYI FPV App or SIYI QGC app is running,

Touch "Photo" icon once on to take a picture. Touch "Record" icon to start video recording. Touch "Recording" icon to stop video recording.

Mark

Before taking a picture or recording video, it is necessary to insert SD card into the camera.

3.3 Control SIYI Optical Pod (Gimbal Camera) in SIYI QGC (Windows) Software through SIYI Link

SIYI optical pod (gimbal camera) can connect to SIYI link directly to control gimbal rotation, gimbal functions, and video display in SIYI QGC Windows software when the air unit is communicating with the ground unit.



3.3.1 Preparation

It is necessary to prepare tools, firmware, and software below before controlling gimbal camera in this way.

- SIYI Links (MK32 Standard Combo / HM30 / MK15 Enterprise Standard Combo is suggested for excellent compatibility with SIYI gimbal cameras)
- SIYI Optical Pod (Gimbal Camera)

Mark

Above products can be purchased from SIYI directly or from SIYI authorized dealers.

- SIYI Gimbal to SIYI Link Cable
- Mark

Above tools come with product package.

- SIYI QGC Windows Software
- Mark

Above software can be downloaded from relevant product page on SIYI official website.

Steps

1. Power the air unit and bind it with the ground unit.

- 2. Use SIYI Gimbal to SIYI Link Cable to connect the air unit's Ethernet port with the gimbal's Ethernet port.
- 3. Then connect the ground unit of the SIYI link to the Windows computer.
- 4. Modify the computer's Ethernet settings to have the same gateway with SIYI link and avoid IP addresses conflict.

For example, let's assign "192.168.144.30" for the computer IP addresses.



5. Run SIYI QGC Windows software, go to "Comm Links – Video Settings", and select "RTSP Video Stream" for "Source", then enter the default RTSP addresses of SIYI gimbal camera, video stream will display. Gimbal motion and camera functions can be controlled by mouse in QGroundControl.

3.3.2 Gimbal Pitch and Yaw Rotation

While SIYI QGC Windows software is running,

Drag the mouse on screen can control gimbal rotation. Dragging the mouse left and right are yaw rotation, up and down are pitch rotation.

Double click the mouse on screen, gimbal will automatically center.

Mark

Drag the mouse on screen and hold it, gimbal will continue rotating unless there is a physical stop. Farther you hold it from the center of the screen, faster the gimbal rotates.

3.3.3 Zoom and Focus

While SIYI QGC Windows software is running,

Clicking "Zoom in" or "Zoom out" icon on can control the zoom camera.

Click on screen, optical zoom camera will focus automatically.

3.3.4 Take pictures and Record Video

While SIYI QGC Windows software is running,

Click "Photo" icon once on to take a picture. Click "Record" icon to start video recording.

Click "Recording" icon to stop video recording.



Before taking a picture or recording video, it is necessary to insert SD card into gimbal camera.

3.4 Control SIYI Optical Pod (Gimbal Camera) by S.Bus Signal and Forward S.Bus Signal to Flight Controller through SIYI Link

SIYI optical pod (gimbal camera) can be connected to the air unit of SIYI link and the flight controller simultaneously for attitude control through joysticks, dials, switches, and buttons on a remote controller or on an SIYI handheld ground station.



3.4.1 Preparation

It is necessary to prepare tools, firmware, and software below before controlling gimbal camera in this way.

- SIYI Links (MK32 Standard Combo / HM30 / MK15 Enterprise Standard Combo is suggested for excellent compatibility with SIYI gimbal cameras)
- SIYI Optical Pod (Gimbal Camera)

Mark

Above products can be purchased from SIYI directly or from SIYI authorized dealers.

- SIYI Gimbal to SIYI Link Cable
- 3 in 1 Control Cable (For ZT30, ZT6, ZR30, and A8 mini)
- MK15 / HM30 Air Unit S.Bus Y Cable

Mark

Above tools come with product package.

- Cable (USB-C to USB-A)
- Mark

Above tools should be prepared by customer.


• SIYI PC Assistant (v1.3.9 or latest version)

Mark

Above software can be downloaded from relevant product page on SIYI official website.

Steps

- 1. Power the air unit and bind it with the ground unit.
- 2. Use SIYI Gimbal to SIYI Link Cable to connect the air unit's Ethernet port with gimbal's Ethernet port.
- 3. Wire the 3 in 1 Control Cable with the MK15 / HM30 Air Unit S.Bus Y Cable.
- 4. Then use the combined cable to connect the air unit's RC port and the gimbal's control signal port.
- 5. Install and run SIYI PC Assistant on Windows computer.
- 6. Use the USB-C to USB-A cable to connect the gimbal to the computer, then run SIYI PC Assistant and go to "Gimbal Config" page.

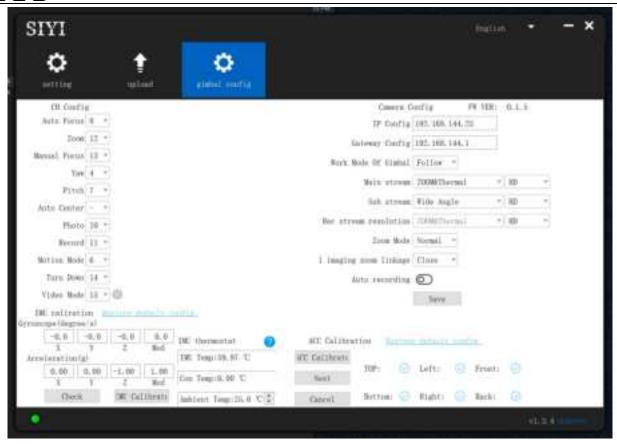

- 7. Under "Channel Config" page, assign the communication channel 1 to 16 to target gimbal and camera functions according to your requirement.
- 8. For the assigned channels, operate their mapped joysticks, dials, switches, and buttons on the handheld ground station to confirm if they are working normally.

3.4.2 Gimbal Pitch and Yaw Rotation (Taking an example of Dial Control)

Below is suggested channel mapping settings for testing, customers are free to assign channel mappings as required through SIYI TX app.

- Channel 7 = Left Dial (Reversed)
- Channel 8 =Right Dial
- Channel 12 = Any Button

In SIYI PC Assistant, map "Yaw" function to channel 7 and "Pitch" to channel 8, "Center" to channel 12.

Then, if you operate the left dial, gimbal will rotate on yaw axis. If you operate the right dial, gimbal will rotate on pitch axis. Press the button, gimbal will center itself automatically.

Mark (

Hold the dial from its center position, gimbal will keep rotating unless there was a physical limit. Farther you hold it away from center, faster gimbal rotates.

3.4.3 Zoom and Focus (Taking an Example of Switch Control)

Below are the suggested channel mapping settings for testing, customers are free to assign channel mappings as required through SIYI TX app.

- Channel 13 = A Switch
- Channel 14 = B Switch

In SIYI PC Assistant, map "Zoom" function to channel 13, map "Auto Focus" function to channel 14.

Then, if you operate switch A, camera will zoom in or zoom out. If you operate switch B, optical zoom camera will focus automatically.

3.4.4 Take Pictures and Record Video (Taking an Example of Button Control)

Below are the suggested channel mapping settings for testing, customers are free to assign channel mappings as required through SIYI TX app.

- Channel 9 = Button A
- Channel 10 = Button B

In SIYI PC Assistant, map "Photo" function to channel 9 and "Record" to channel 10.

Then, if you press button A, camera will take a picture. If you press button B, camera will start or stop video recording.

Mark (

Before taking pictures or recording video, it is necessary to insert SD card into the camera.

3.5 UART / UDP Control (SIYI Gimbal SDK)

SIYI gimbal camera provides control protocol for all customers. Please refer to the below 第 38 页 共 149 页 2024 SIYI Technology Copyright

guide for secondary development based on SIYI gimbal camera.

3.5.1 SDK Protocol Format

Field	Index	Bytes	Description
STX	0	2	0x6655: starting mark. Low byte in the front
CTRL	2	1	0: need_ack (if the current data pack need "ack") 1: ack_pack (if the current data pack is an "ack" package) 2-7: reserved
Data_len	3	2	Date field byte length Low byte in the front
SEQ	5	2	Frame sequence $(0 \sim 65535)$ Low byte in the front
CMD_ID	7	1	Command ID
DATA	8	Data_len	Data
CRC16		2	CRC16 check to the complete data package. Low byte in the front

3.5.2 SDK Communication Commands

TCP Heartbeat

	CMD_ID:0x00TCP Heartbeat				
	Send data format				
No.	No. Data Type Data Name Description				
	ACK data format				
			No ack		

Mark:

- 1. Heartbeat pack: 55 66 01 01 00 00 00 00 00 59 8B
- 2. Only available for TCP protocol.

Request Gimbal Camera Firmware Version

CMD_ID:0x01-----Request Gimbal Camera Firmware Version

	Send data format				
No.	Data Type	Data Name	Description		
	ACK data format				
	uint32_t	code_board_ver	Camera firmware version		
	uint32_t	gimbal_firmware_ver	Gimbal firmware version		
	uint32 t	zoom firmware ver	Zoom firmware version		

Eg: 0x6E030203 = firmware version v3.2.3

Mark:

1. Ignore the 4th byte (higher byte)

2. Zoom firmware version is only available for optical zoom cameras such as ZR10, ZR30, and ZT30 at this moment.

Request Gimbal Camera Hardware ID

	CMD_ID:0x02Request Gimbal Camera Hardware ID					
	Send data format					
No.	Data Type Data Name Description					
	ACK data format					
	Uint8_t	hardware_id[12]	Hardware ID character string (10 digits)			

Mark:

The first two digits of the hardware ID character string indicates product model number in hexadecimal.

• 0x6B: ZR10

• 0x73: A8 mini

• 0x75: A2 mini

• 0x78: ZR30

• 0x82: ZT6

• 0x7A: ZT30

Request Gimbal Camera's Present Working Mode

	CMD_ID:0x19Request Gimbal Camera's Present Working Mode				
	Send data format				
No.	No. Data Type Data Name Description				
		ACK data	format		
1	1 uint8_t gimbal_mode 00: Lock Mode 01: Follow Mode 02: FPV Mode				

Auto Focus

	CMD_ID:0x04Auto Focus			
	Send data format			
No.	Data Type	Data Name	Description	
	uint8_t	auto_focus	1: Start auto focus for once	
	uin16_t	touch_x	x coordinates, the range is the length of the video stream resolution	
	uin16_t	touch_y	y coordinates, the range is the height of the video stream resolution	
	ACK data format			
1	uint8_t	sta	1: Success 0: Failure	

Mark:

- 1. Auto focus command is only available for optical zoom gimbal cameras like ZT30, ZR30, and ZR10 at this moment.
- 2. Under split image, the effective value of the x coordinates is a half of the length of the video stream resolution.

Manual Zoom and Auto Focus

	CMD_ID:0x05Manual Zoom and Auto Focus			
		Send data f	format	
No.	Data Type	Data Name	Data Description	
1	int8_t	zoom	1: Start zooming in 0: Stop zooming in / out (send when released from control command) -1: Start zooming out	
		ACK data	format	
	uint16_t	zoom_multiple	Current (hybrid) zoom multiples (zoom_multiple / 10, accuracy is one decimal point)	

Mark:

- 1. Manual zoom and auto focus command is only available for optical zoom gimbal cameras like ZT30, ZR30, and ZR10 at this moment.
- 2. Under this command, ZT6 and A8 mini can only do manual zoom but cannot do auto focus.

Absolute Zoom and Auto Focus

	CMD_ID:0x0FAbsolute Zoom and Auto Focus			
Send data format				
No.	Data Type	Data Name	Data Description	
1	uint8_t	Absolute_movement_ int	Input the integer part of the target multiple $(0X1 \sim 0X1E)$	
2	uint8_t	Absolute_movement_	Input the fractional part of the target	

		float	multiple $(0X0 \sim 0X9)$	
ACK data format				
	uint8_t	Absolute_movement_ ask	Success and return to 1	

Mark:

- 1. Absolute zoom command is only available for optical zoom gimbal cameras like ZT30, ZR30, and ZR10 at this moment.
- 2. Under this command, ZT6 and A8 mini can only do absolute zoom but cannot do auto focus.

Request the Max Zoom Value in Present

	CMD_ID:0x16Request the Max Zoom Value in Present			
	Send data format			
No.	No. Data Type Data Name Description			
	ACK data format			
	uint8_t zoom_max_int Integer of the max zoom value in present			
	uint8_t	zoom_max_float	Float of the max zoom value in present	

Mark:

This command is available for zoom gimbal cameras.

Request the Zoom Value in Present

	CMD_ID:0x18Acquire the Zoom Value in Present				
	Send data format				
No.	No. Data Type Data Name Description				
	ACK data format				
	uint8_t	zoom_int	Integer of the zoom value in present		
	uint8_t	zoom_float	Float of the zoom value in present		

Mark:

This command is available for zoom gimbal cameras.

Manual Focus

	CMD_ID:0x06Manual Focus				
Send data format					
No.	Data Type	Data Name	Description		
1	int8_t	focus	1: Long shot 0: Stop manual focus (send when		

-					
				released from control command) -1: Close shot	
	ACK data format				
uint8_t sta		sta	1: Success 0: Fail		

Mark:

Auto focus command is only available for optical zoom gimbal cameras like ZT30, ZR30, and ZR10 at this moment.

Gimbal Rotation

	CMD_ID:0x07Gimbal Rotation				
	Send data format				
No.	Date Type	Date Name	Description		
1	int8_t	turn_yaw	-100~0~100: Negative and positive represent two directions, higher or lower the number is away from 0, faster the rotation speed is. Send 0 when released from control command and gimbal stops rotation.		
2	int8_t	turn_pitch	-100~0~100: Same as above		
	ACK data format				
	uint8_t	sta	1: Success 0: Fail		

Center

	CMD_ID:0x08Center			
	Send data format			
No.	Data Type	Data Name	Description	
1	uint8_t	center_pos	1: gimbal centers to position 0	
ACK d	ata format			
1	uint8_t	sta	1: Success 0: Fail	

Request Gimbal Configuration Information

	CMD_ID:0x0ARequest Gimbal Configuration Information				
	Send data format				
No.	Data Type	Data Name	Description		
	ACK data format				
1	uint8_t	reserved			

2	uint8_t	hdr_sta	0: HDR OFF 1: HDR ON
3	uint8_t	reserved	
4	uint8_t	record_sta	0: Recording OFF 1: Recording ON 2: TF card slot is empty 3: (Recording) Data loss in TF card recorded video, please check TF card
5	uint8_t	gimbal_motion_mode	0: Lock Mode 1: Follow Mode 2: FPV Mode
6	uint8_t	gimbal_mounting_dir	Gimbal Mounting Method 0: Reserved 1: Normal 2: Upside Down
7	uint8_t	video_hdmi_or_cvbs	(Only available on ZT6 and A8 mini) Video output status of HDMI and CVBS: 0: HDMI output ON CVBS output OFF 1: HDMI output OFF CVBS output OFF

Function Feedback Information

	CMD_ID:0x0BFunction Feedback Information				
	Send data format				
No.	Data Type	Data Name	Description		
		ACK data fo	rmat		
1	uint8_t	info_type	 0: Success 1: Fail to take a photo (Please check if TF card is inserted) 2: HDR ON 3: HDR OFF 4: Fail to record a video (Please check if TF card is inserted) 		

Photo and Record

CMD_ID:0x0C-----Photo and Record

		Send data fo	rmat
No.	Data Type	Data Name	Description
	uint8_t	func_type	0: Take a picture 1: Switch on / off HDR (not supported yet) 2: Start / Stop Recording 3: Motion – Lock Mode 4: Motion – Follow Mode 5: Motion – FPV Mode 6: Set video output as HDMI (Only available on ZT6 and A8 mini, restart gimbal to take effect) 7: Set video output as CVBS (Only available on ZT6 and A8 mini, restart gimbal to take effect) 8: Turn off both HDMI and CVBS video output (Only available on ZT6 and A8 mini, restart gimbal to take effect)
		ACK data fo	
			No ack

Request Gimbal Attitude

	CMD_ID:0x0DRequest Gimbal Attitude				
	Send data format				
No.	Data Type	Data Name	Description		
	•	ACK data fo	ormat		
	int16_t	yaw	Yaw axis degree		
	int16_t	pitch	Pitch axis degree		
	int16_t	roll	Roll axis degree		
	int16_t	yaw_velocity	Yaw axis rotation speed		
	int16_t	pitch_velocity	Pitch axis rotation speed		
	int16_t	roll_velocity	Roll axis rotation speed		

Mark:

- 1. The above data to be divided by 10 is the actual degree, accuracy in one decimal place.
- 2. It is suggested to use the command "0x25" to configure the sending frequency of gimbal attitude data in certain frequency continuously and actively.

Send Control Angle to Gimbal

CMD_ID:0x0ESend Control Angle to Gimbal				
Send data format				
No. Data Type Data Name Description				

int16_t	yaw	Target yaw angle		
int16_t	pitch	Target pitch angle		
ACK data format				
int16_t	yaw	Current yaw angle		
int16_t	pitch	Current pitch angle		
int16 t	roll	Current roll angle		

Control Angle Range

Yaw:

ZR10 / A8 mini: -135.0 ~ 135.0 degrees
 ZT6 / ZR30: -270.0 ~ 270.0 degrees

• ZT30: Limitless

Pitch

• $ZT30 / ZT6 / ZR30 / ZR10 / A8 mini / A2 mini: -90.0 \sim 25.0 degree$

Mark:

- 1. The accuracy of the control angle is in one decimal place. Eg: Set yaw as 60.5 degrees, the command number should be set as 605.
- 2. The actual angle data returned to be divided by 10 is the actual degree, accuracy in one decimal place.

Single Axis Control (only available on A8 mini)

CMD_ID:0x41 Single Axis Control					
	Send data format				
No.	Data Type	Data Name	Description		
	int16_t	angle	Target angle		
	uint8_t	single_control_flag	Target axis: 0: Yaw 1: Pitch		
		ACK data fo	ormat		
	int16_t	yaw	Current yaw angle		
	int16_t	pitch	Current pitch angle		
	int16_t	roll	Current roll angle		

Control Angle Range

Yaw: $-135.0 \sim 135.0$ degrees

Pitch: $-90.0 \sim 25.0$ degree

Mark:

- 1. The accuracy of the control angle is in one decimal place. Eg: Set yaw as 60.5 degrees, the command number should be set as 605.
- 2. The actual angle data returned to be divided by 10 is the actual degree, accuracy in one decimal place.

Request Gimbal Camera Codec Specs

	CMD	_ID:0x20Request Gim	ıbal Camera Codec Specs
Send data for			rmat
No.	Data Type	Data Name	Description
			0: Recording stream
	uint8 t	req stream type	1: Main stream
	unito_t	req_stream_type	2: Sub stream (only available on ZT30
			and ZT6)
		ACK data fo	rmat
	uint8_t	stream_type	0: Recording stream1: Main stream2: Sub stream (only available on ZT30 and ZT6)
	uint8_t	VideoEncType	Codec Format 1: H264 2: H265
	uint16_t	Resolution_L	Resolution in length
	uint16_t	Resolution_H	Resolution in height
	uint16_t	VideoBitrate	Video Bitrate in Kbps
	uint8_t	VideoFrameRate	Video frame rate

Send Codec Specs to Gimbal Camera

	CMD_ID:0x21Send Codec Specs to Gimbal Camera			
Send data format			ormat	
No.	Data Type	Data Name	Description	
	uint8 t	stream type	0: Recording stream 1: Main stream	
	umio_t	sacam_sype	2: Sub stream (only available on ZT30 and ZT6)	
	uint8_t	VideoEncType	Codec Format 1: H264 2: H265	
	uint16_t	Resolution_L	Resolution in length: 1920, 1280	
	uint16_t	Resolution_H	Resolution in height: 1080, 720	
	uint16_t	VideoBitrate	Video Bitrate in Kbps	
	uint8_t	reserve	Reserved	
		ACK data fo	ormat	
	uint8_t	stream_type	0: Recording stream 1: Main stream 2: Sub stream (only available on ZT30 and ZT6)	
	uint8_t	sta	1: Success 0: Failure	

Request Gimbal Camera Image Mode

CMD ID:0x10Request Gimbal Camera Image Type
CIVID_ID.0A10Request Gillioar Camera illiage Type
Send data format

No.	Data Type	Data Name	Description
		ACK data fo	ormat
1	uint8_t	vdisp_mode	Image Mode: 0: Split Screen (Main: Zoom & Thermal. Sub: Wide Angle) 1: Split Screen (Main: Wide Angle & Thermal. Sub: Zoom) 2: Split Screen (Main: Zoom & Wide Angle. Sub: Thermal) 3: Single Image (Main: Zoom. Sub: Thermal) 4: Single Image (Main: Zoom. Sub: Wide Angle) 5: Single Image (Main: Wide Angle. Sub: Thermal) 6: Single Image (Main: Wide Angle. Sub: Zoom) 7: Single Image (Main: Thermal. Sub: Zoom) 8: Single Image (Main: Thermal. Sub: Wide Angle)

Mark:

This command is only available for ZT30 and ZT6 at this moment.

Send Image Mode to Gimbal Camera

	CMD_ID:0x11Send Image Type to Gimbal Camera			
	Send data format			
No.	Data Type	Data Name	Description	
1	uint8_t	vdisp_mode	Image Mode: 0: Split Screen (Main: Zoom & Thermal. Sub: Wide Angle) 1: Split Screen (Main: Wide Angle & Thermal. Sub: Zoom) 2: Split Screen (Main: Zoom & Wide Angle. Sub: Thermal) 3: Single Image (Main: Zoom. Sub: Thermal) 4: Single Image (Main: Zoom. Sub: Wide Angle) 5: Single Image (Main: Wide Angle. Sub: Thermal) 6: Single Image (Main: Wide Angle. Sub: Zoom) 7: Single Image (Main: Thermal. Sub: Zoom) 8: Single Image (Main: Thermal. Sub: Wide Angle)	
		ACK data fo	ormat	
1	uint8_t	vdisp_mode	Image Mode: 0: Split Screen (Main: Zoom & Thermal. Sub: Wide Angle)	

	Split Screen (Main: Wide Angle &
The	ermal. Sub: Zoom)
2: \$	Split Screen (Main: Zoom & Wide
An	gle. Sub: Thermal)
3: \$	Single Image (Main: Zoom. Sub:
The	ermal)
4: \$	Single Image (Main: Zoom. Sub: Wide
An	gle)
5: S	Single Image (Main: Wide Angle. Sub:
The	ermal)
6: \$	Single Image (Main: Wide Angle. Sub:
Zoo	om)
7: S	Single Image (Main: Thermal. Sub:
Zoo	om)
8: \$	Single Image (Main: Thermal. Sub:
Wie	de Angle)

Mark:

This command is only available for ZT30 and ZT6 at this moment.

Request the Temperature of a Point

	CMD_ID:0x12Request the Temperature of a Point		
		Send data fo	ormat
No.	Data Type	Data Name	Description
1	uint16_t	x	x coordinate of the point
2	uint16_t	у	y coordinate of the point
3	uint8_t	get_temp_flag	0: Turn off temperature measuring1: Measure the temperature once2: Continuous temperature measuring at 5Hz
	•	ACK data fo	ormat
1	uint16_t	temp	Temperature of the point / 100 (two decimal places)
2	uint16_t	X	X coordinate of the point
3	uint16_t	у	Y coordinate of the point

Mark:

This command is only available for ZT30 and ZT6 at this moment.

Request the Max / Min Temperature in a Selected Box

	CMD_ID:0x13Request the Max / Min Temperature in a Selected Box			
	Send data format			
No.	Data Type	Data Name	Description	
1	uint16_t	startx	X coordinate of the starting point of the box	
2	uint16_t	starty	Y coordinate of the starting point of the box	

3	uint16_t	endx	X coordinate of the ending point of the box
4	uint16_t	endy	Y coordinate of the ending point of the box
5	uint8_t	get_temp_flag	O: Turn off temperature measuring 1: Measure the temperature once 2: Continuous temperature measuring at 5 Hz
		ACK data fo	ormat
1	uint16_t	startx	X coordinate of the starting point of the box
2	uint16_t	starty	Y coordinate of the starting point of the box
3	uint16_t	endx	X coordinate of the ending point of the box
4	uint16_t	endy	Y coordinate of the ending point of the box
5	uint16_t	temp_max	The maximum temperature in the box / 100 (two decimal places)
6	uint16_t	temp_min	The minimum temperature in the box / 100 (two decimal places)
7	uint16_t	temp_max_x	X coordinate of the max temperature in the box
8	uint16_t	temp_max_y	Y coordinate of the max temperature in the box
9	uint16_t	temp_min_x	X coordinate of the min temperature in the box
10	uint16_t	temp_min_x	Y coordinate of the min temperature in the box

Mark:

- 1. Thermal camera supports digital zoom, the temperature measuring box will zoom in and out according to the digital zoom multiples. Under digital zoom, the temperature measuring range should refer to the box responded by the camera.
- 2. This command is only available for ZT30 and ZT6 at this moment.

Request the Max / Min Temperature in the Full Image

	CMD_ID:0x14Request the Max / Min Temperature in the Full Image			
		Send data fo	ormat	
No.	Data Type	Data Name	Description	
1	uint8_t	get_temp_flag	O: Turn off temperature measuring 1: Measure the temperature once 2: Continuous temperature measuring at 5 Hz	
	ACK data format			
1	uint16_t	temp_max	The maximum temperature in the full image / 100 (two decimal places)	
2	uint16_t	temp_min	The minimum temperature in the full	

			image / 100 (two decimal places)
3	uint16_t	temp_max_x	X coordinate of the max temperature in the full image
4	uint16_t	temp_max_y	Y coordinate of the max temperature in the full image
5	uint16_t	temp_min_x	X coordinate of the min temperature in the full image
6	uint16_t	temp_min_x	Y coordinate of the min temperature in the full image

Mark:

This command is only available for ZT30 and ZT6 at this moment.

Request the Thermal Color Palette

	CMD_ID:0x1ARequest the Thermal Color Palette				
	Send data format				
No.	Data Type	Data Name	Description		
		ACK data fo	ormat		
			11 thermal colors are available in total:		
			0: White_Hot		
			1: Reserved		
			2: Sepia		
			3: Ironbow		
			4: Rainbow		
	uint8_t	pseudo_color	5: Night		
			6: Aurora		
			7: Red_Hot		
			8: Jungle		
			9: Medical		
			10: Black_Hot		
			11: Glory_Hot		

Mark:

This command is only available for ZT30 and ZT6 at this moment.

Send a Thermal Color to Gimbal Camera

	CMD_ID:0x1BSend a Thermal Color to Gimbal Camera			
		Send data fo	ormat	
No.	Data Type	Data Name	Description	
	uint8_t	pseudo_color	11 thermal colors are available in total: 0: White_Hot 1: Reserved 2: Sepia 3: Ironbow 4: Rainbow	

<u> </u>				
			5: Night	
			6: Aurora	
			7: Red_Hot	
			8: Jungle	
			9: Medical	
			10: Black_Hot	
			11: Glory_Hot	
		ACK data fo	ormat	
			11 thermal colors are available in total:	
			0: White_Hot	
			1: Reserved	
			2: Sepia	
			3: Ironbow	
			4: Rainbow	
	uint8_t	pseudo_color	5: Night	
			6: Aurora	
			7: Red_Hot	
			8: Jungle	
			9: Medical	
			10: Black_Hot	
			11: Glory Hot	

Mark:

This command is only available for ZT30 and ZT6 at this moment.

Send Thermal RAW Data Command to Gimbal

CMD_ID:0x34 Send Thermal RAW Data Command to Gimbal			
Send data format			
No.	Data Type	Data Name	Description
1	uint8_t	mode	0: 30 fps 1: 25 fps and output temperature frame
ACK data format			
1	uint8_t	mode	0: 30 fps 1: 25 fps and output temperature frame

Mark:

This command is only available for ZT30 and ZT6 at this moment.

Request Temperature from the Thermal Imaging Camera Once

CMD_ID:0x35 Request Temperature from the Thermal Imaging Camera Once				
Send data format				
No.	Data Type Data Name Description		Description	
	ACK data format			
1	uint8_t	ack	1: Success	

Mark:

This command is only available for ZT30 and ZT6 at this moment.

Request Thermal Gain

	CMD_ID:0x37 Request Thermal Gain			
Send data format				
No.	Data Type	Data Name	Description	
	ACK data format			
1	uint8_t	Ir_gain	0: Low gain 1: High gain	

Mark:

This command is only available for ZT30 and ZT6 at this moment.

Send Thermal Gain to Gimbal

	CMD_ID:0x38 Send Thermal Gain to Gimbal				
	Send data format				
No.	Data Type	Data Name	Description		
1	uint8_t	Ir_gain	0: Low gain 1: High gain		
	ACK data format				
1	uint8_t	Ir_gain	0: Low gain 1: High gain		

Mark:

This command is only available for ZT30 and ZT6 at this moment.

Request Thermal Calibration

	CMD_ID:0x39 Request Thermal Calibration			
	Send data format			
No.	Data Type	Data Name	Description	
	ACK data format			
1 uint8_t EnvCorrect 0: ON 1: OFF				

Mark:

This command is only available for ZT30 and ZT6 at this moment.

Send Thermal Calibration to Gimbal

CMD_ID:0x3A Send Thermal Calibration to Gimbal	
Send data format	



No.	Data Type	Data Name	Description		
1	uint8_t	EnvCorrect	0: ON		
1			1: OFF		
	ACK data format				
1	nimt0 t	EuryComont	0: ON		
1	uint8_t	EnvCorrect	1: OFF		

Mark:

This command is only available for ZT30 and ZT6 at this moment.

Request Thermal Calibration Parameters

	CMD_ID:0x3B Request Thermal Calibration Parameters			
	Send data format			
No.	Data Type	Data Name	Description	
	ACK data format			
1	uint16_t	Dist	Distance (m)	
2	uint16_t	Ems	Target emission rate (%)	
3	uint16_t	Hum	Humidity (%)	
4	uint16_t	Ta	Atmospheric Temperature (°C)	
5	uint16_t	Tu	Reflection Temperature (°C)	

Mark:

- 1. All parameters of this protocol are divided by 100 and retained to two decimal places.
- 2. This command is only available for ZT30 and ZT6 at this moment.

Send Thermal Calibration Parameters to Gimbal

	CMD_ID:0x3C Send Thermal Calibration Parameters to Gimbal				
	Send data format				
No.	Data Type	Data Name	Description		
1	uint16_t	Dist	Distance (m)		
2	uint16_t	Ems	Target emission rate (%)		
3	uint16_t	Hum	Humidity (%)		
4	uint16_t	Та	Atmospheric Temperature (°C)		
5	uint16_t	Tu	Reflection Temperature (°C)		
ACK data format					
1	uint8_t	ack	1: Success		

Mark:

- 1. All parameters of this protocol are divided by 100 and retained to two decimal places.
- 2. This command is only available for ZT30 and ZT6 at this moment.

Request Range Value from the Laser Rangefinder

CMD_ID:0x15Request Range Value from the Laser Rangefinder				
Send data format				
No. Data Type Data Name Description				

	ACK data format				
1	uint16_t	info_type	Range from Laser Rangefinder low byte in the front, high byte in the back Minimum value is 50 Data unit is dm		

Mark:

This command is only available for ZT30 and at this moment.

Request the Latitude and Longitude of the Laser Rangefinder's Target

CME	CMD_ID:0x17 Request the Latitude and Longitude of the Laser Rangefinder's Target			
	Send data format			
No.	Data Type	Data Name	Description	
	ACK data format			
1	int32_t	lon_degE7	[degE7] Longitude (WGS84, EGM96 spheroid)	
2	int32_t	lat_degE7	[degE7] Latitude (WGS84, EGM96 spheroid)	

Mark:

This command is only available for ZT30 at this moment.

Request Laser Rangefinder Status

	CMD_ID:0x31 Request Laser Rangefinder Status			
	Send data format			
No.	Data Type	Data Name	Description	
	ACK data format			
1	uint8_t	laser_state	1: ON 0: OFF	

Mark:

This command is only available for ZT30 at this moment.

Send Lase Rangefinder Status to Gimbal

	CMD_ID:0x32 Send Lase Rangefinder Status to Gimbal				
		Send data for	ormat		
No.	Data Type	Data Name	Description		
1	uint8_t	laser_state	1: ON 0: OFF		
	ACK data format				
1	uint8_t	sta	1: Success 0: Fail		

Mark:

This command is only available for ZT30 at this moment.

Send Flight Controller Attitude Data to Gimbal UART Port

	CMD_ID:0x22 Send Flight Controller Attitude Data to Gimbal UART Port					
		Send data for	ormat			
No.	Data Type	Data Name	Description			
1	float	roll	[rad] Roll angle (-pi+pi)			
2	float	pitch	[rad] Pitch angle (-pi/2+pi/2)			
3	float	yaw	[rad] Yaw angle (-pi+pi)			
4	float	rollspeed	[rad/s] Roll angular speed			
5	float	pitchspeed	[rad/s] Pitch angular speed			
6	6 float yawspeed [rad/s] Yaw angular speed					
	ACK data format					

Request the Flight Controller to Send Data Stream to Gimbal

	CMD_ID:0x24 Request the Flight Controller to Send Data Stream to Gimbal			
	Send data format			
No.	Data Type	Data Name	Description	
1	uint8_t	data_type	 Attitude data RC channel data (not ready yet) 	
2	uint8_t	data_freq	Outputting Frequency 0: OFF 1: 2 Hz 2: 4 Hz 3: 5 Hz 4: 10 Hz 5: 20 Hz 6: 50 Hz 7: 100 Hz	
	ACK data format			
1	uint8_t	data_type	Attitude data RC channel data	

Send Flight Controller GPS Data to Gimbal

	CMD_ID:0x3E Send Flight Controller GPS Data to Gimbal			
	Send data format			
No.	Data Type	Data Name	Description	
1	uint32_t	time_boot_ms	[ms] time since boot	
2	int32_t	lat	[degE7] Latitude	
3	int32_t	lon	[degE7] Longitude	
4	int32_t	alt	[cm] Altitude (MSL)	
5	int32_t	alt_ellipsoid	[cm] Altitude (above WGS84, EGM96	
			ellipsoid). Positive for up.	
6	float	vn	[m/s] X Speed	

7	float	ve	[m/s] Y Speed	
8	float	vd	[m/s] Z Speed	
	ACK data format			

Request the Gimbal to Send Data Stream

	CMD_ID:0x25 Request the Gimbal to Send Data Stream				
	Send data format				
No.	Data Type	Data Name	Description		
1	uint8_t	data_type	1: Attitude data 2: Laser rangefinder data (available in ZT30 only)		
2	uint8_t	data_freq	Outputting Frequency 0: OFF 1: 2 Hz 2: 4 Hz 3: 5 Hz 4: 10 Hz 5: 20 Hz 6: 50 Hz 7: 100 Hz		
	ACK data format				
1	uint8_t	data_type	 Attitude data Laser rangefinder data 		

Mark:

The frequency of sending laser rangefinder data cannot be configured at this moment. If the frequency is not 0, it sends data.

Set UTC Time

	CMD_ID:0x30 Set UTC Time			
	Send data format			
No.	Data Type	Data Name	Description	
1	uint64_t	Timestamp	UNIX epoch time(us)	
	ACK data format			
1	int8_t	ack	1: Success 0: Time format error	

Format SD Card

	CMD_ID:0x48 Format SD Card				
	Send data format				
No.	Data Type Data Name Description				
	ACK data format				
1	uint8_t	format_sta	0: Fail		



1: Success

Gimbal Camera Soft Restart

	CMD_ID:0x80 Gimbal Soft Restart				
		Send data fo	ormat		
No.	Data Type	Data Name	Description		
1	uint8_t	Camera_reboot	0: No action 1: Camera restart		
2	uint8_t	Gimbal_reset	0: No action 1: Gimbal restart		
	ACK data format				
1	uint8_t	Camera_reboot_sta	0: No action 1: Camera restart		
2	uint8_t	Gimbal_reset_sta	0: No action 1: Gimbal restart		

3.5.3 SIYI Gimbal Camera SDK Communication Interface

TTL Serial Port

• Baud rate: 115200

• Data position: 8 digits. Stop position: 1 digit. No check.

UDP

IP: 192.168.144.25Port Number: 37260

TCP

IP: 192.168.144.25Port Number: 37260

Heartbeat Package Data: 55 66 01 01 00 00 00 00 00 59 8B

3.5.4 SIYI Gimbal Camera SDK Communication Code Examples

Request the Gimbal Camera's Working Mode in Present 55 66 01 00 00 00 00 19 5D 57

zoom 1

55 66 01 01 00 00 00 05 01 8d 64

zoom -1

55 66 01 01 00 00 00 05 FF 5c 6a

Absolute Zoom (4.5X) 55 66 01 02 00 10 00 0f 04 05 6b 15

Request the Zoom Camera's Max Zoom Value in Present 55 66 01 00 00 00 00 16 B2 A6

Request the Zoom Camera's Zoom Value in Present 55 66 01 00 00 00 00 18 7C 47

Manual Zoom 1 55 66 01 01 00 00 00 06 01 de 31

Manual Zoom -1 55 66 01 01 00 00 00 06 ff 0f 3f

Take a Picture 55 66 01 01 00 00 00 00 00 34 ce

Record Video 55 66 01 01 00 00 00 0c 02 76 ee

Gimbal Rotation 100 100 55 66 01 02 00 00 00 07 64 64 3d cf

Center

55 66 01 01 00 00 00 08 01 d1 12

Request Gimbal Camera's Status Information 55 66 01 00 00 00 00 00 0 0f 75

Auto Focus 55 66 01 01 00 00 00 04 01 bc 57

Request the Gimbal Camera's Hardware ID 55 66 01 00 00 00 00 02 07 f4

Request the Gimbal Camera's Firmware Version 55 66 01 00 00 00 00 01 64 c4

Lock Mode



55 66 01 01 00 00 00 0c 03 57 fe

Follow Mode

55 66 01 01 00 00 00 0c 04 b0 8e

FPV Mode

55 66 01 01 00 00 00 0c 05 91 9e

Request the Gimbal Camera's Attitude Data 55 66 01 00 00 00 00 0d e8 05

Send Control Angle (-90, 0) (Upwards) to Gimbal Camera 55 66 01 04 00 00 00 0e 00 00 ff a6 3b 11

Send "Enable HDMI Output" Command to Gimbal Camera (Available for ZT6, ZR30, and A8 mini, restart after configuration)

55 66 01 01 00 00 00 0c 06 f2 ae

Send "Enable CVBS Output" Command to Gimbal Camera (Available for ZT6 and A8 mini, restart after configuration) 55 66 01 01 00 00 00 0c 07 d3 be

Send "Disable CVBS / HDMI Output" Command to Gimbal Camera (Available for ZT6, ZR30, and A8 mini, restart after configuration)

55 66 01 01 00 00 00 0c 08 3c 4f

Request Gimbal Camera Codec Specs 55 66 01 01 00 00 00 20 00 BF 8D

Configure Camera Codec Specs – Main Stream to HD Resolution 55 66 01 09 00 00 00 21 01 02 00 05 d0 02 dc 05 00 58 45

Configure Camera Codec Specs – Main Stream to Ultra HD Resolution 55 66 01 09 00 00 00 21 01 02 80 07 38 04 d0 07 00 5a 68

Configure Recording Video Stream Resolution as 2K and H265 Bitrate as 15 Mbps 55 66 01 09 00 00 00 21 00 02 00 0a a0 05 98 3a 00 15 f3

Configure Recording Video Stream Resolution as 4K and H265 Bitrate as 15 Mbps 55 66 01 09 00 00 00 21 00 02 00 0f 70 08 98 3a 00 70 be

Request Gimbal Camera's Image Mode in Present 55 66 01 00 00 00 00 10 74 c6

Send "Image Mode" Command to Gimbal Camera 55 66 01 01 00 00 00 11 01 3a ab

Request the Temperature of a Point in Thermal Image 55 66 01 05 00 00 00 12 00 00 00 00 1 a8 2f

Request the Thermal Color Palette 55 66 01 00 00 00 00 1A 3e 67

Send the "Thermal Color Palette" Command to the Thermal Camera $55\ 66\ 01\ 01\ 00\ 00\ 00\ 1B\ 03\ b3\ 64$

Request Range Value from the Rangefinder (Low byte in front, high byte in back, available for ZT30) 55 66 01 00 00 00 15 D1 96

3.5.5 SDK CRC16 Code

```
const uint16 t crc16 tab[256];
CRC16 Coding & Decoding G(X) = X^16+X^12+X^5+1
********************************
uint16_t CRC16_cal(uint8_t *ptr, uint32_t len, uint16_t crc_init)
    uint16 t crc,
                   oldcrc16;
    uint8 t temp;
    crc = crc init;
    while (len--!=0)
    {
         temp=(crc>>8)\&0xff;
         oldcrc16=crc16 tab[*ptr^temp];
         crc=(crc<<8)^oldcrc16;
         ptr++;
    }
    //crc=~crc;
                    //??
    return(crc);
uint8_t crc_check_16bites(uint8_t* pbuf, uint32_t len,uint32_t* p_result)
    uint16 t crc result = 0;
    crc result= CRC16 cal(pbuf,len, 0);
    *p result = crc result;
```

```
return 2;
```

const uint16 t crc16 tab[256]= {0x0,0x1021,0x2042,0x3063,0x4084,0x50a5,0x60c6,0x70e7,

0x8108,0x9129,0xa14a,0xb16b,0xc18c,0xd1ad,0xe1ce,0xf1ef, 0x1231,0x210,0x3273,0x2252,0x52b5,0x4294,0x72f7,0x62d6, 0x9339,0x8318,0xb37b,0xa35a,0xd3bd,0xc39c,0xf3ff,0xe3de, 0x2462,0x3443,0x420,0x1401,0x64e6,0x74c7,0x44a4,0x5485,0xa56a,0xb54b,0x8528,0x9509,0xe5ee,0xf5cf,0xc5ac,0xd58d, 0x3653,0x2672,0x1611,0x630,0x76d7,0x66f6,0x5695,0x46b4,0xb75b,0xa77a,0x9719,0x8738,0xf7df,0xe7fe,0xd79d,0xc7bc, 0x48c4,0x58e5,0x6886,0x78a7,0x840,0x1861,0x2802,0x3823,0xc9cc,0xd9ed,0xe98e,0xf9af,0x8948,0x9969,0xa90a,0xb92b, 0x5af5,0x4ad4,0x7ab7,0x6a96,0x1a71,0xa50,0x3a33,0x2a12, 0xdbfd,0xcbdc,0xfbbf,0xeb9e,0x9b79,0x8b58,0xbb3b,0xab1a, 0x6ca6,0x7c87,0x4ce4,0x5cc5,0x2c22,0x3c03,0xc60,0x1c41,0xedae,0xfd8f,0xcdec,0xddcd,0xad2a,0xbd0b,0x8d68,0x9d49, 0x7e97,0x6eb6,0x5ed5,0x4ef4,0x3e13,0x2e32,0x1e51,0xe70, 0xff9f,0xefbe,0xdfdd,0xcffc,0xbf1b,0xaf3a,0x9f59,0x8f78, 0x9188,0x81a9,0xb1ca,0xa1eb,0xd10c,0xc12d,0xf14e,0xe16f, 0x1080,0xa1,0x30c2,0x20e3,0x5004,0x4025,0x7046,0x6067, 0x83b9,0x9398,0xa3fb,0xb3da,0xc33d,0xd31c,0xe37f,0xf35e, 0x2b1,0x1290,0x22f3,0x32d2,0x4235,0x5214,0x6277,0x7256, 0xb5ea,0xa5cb,0x95a8,0x8589,0xf56e,0xe54f,0xd52c,0xc50d, 0x34e2,0x24c3,0x14a0,0x481,0x7466,0x6447,0x5424,0x4405,0xa7db,0xb7fa,0x8799,0x97b8,0xe75f,0xf77e,0xc71d,0xd73c, 0x26d3,0x36f2,0x691,0x16b0,0x6657,0x7676,0x4615,0x5634,0xd94c,0xc96d,0xf90e,0xe92f,0x99c8,0x89e9,0xb98a,0xa9ab, 0x5844,0x4865,0x7806,0x6827,0x18c0,0x8e1,0x3882,0x28a3, 0xcb7d,0xdb5c,0xeb3f,0xfb1e,0x8bf9,0x9bd8,0xabbb,0xbb9a, 0x4a75,0x5a54,0x6a37,0x7a16,0xaf1,0x1ad0,0x2ab3,0x3a92, 0xfd2e,0xed0f,0xdd6c,0xcd4d,0xbdaa,0xad8b,0x9de8,0x8dc9, 0x7c26,0x6c07,0x5c64,0x4c45,0x3ca2,0x2c83,0x1ce0,0xcc1,0xef1f,0xff3e,0xcf5d,0xdf7c,0xaf9b,0xbfba,0x8fd9,0x9ff8, 0x6e17,0x7e36,0x4e55,0x5e74,0x2e93,0x3eb2,0xed1,0x1ef0

};

3.5.6 Advanced Guide for SIYI Gimbal SDK Integration

This special guide is to help developers (especially whose development is based on Linux platform) use SIYI gimbal SDK.



Before using the guide, please do read the chapter 3.3.1 to 3.3.5 of the user manual.

This guide is using UDP protocol:

1. Go to chapter 3.3.4 of this manual for SIYI Gimbal Camera SDK Communication Code Examples and fill your required examples to "send buff" following the below format in hexadecimal.

```
int escars; int cet, 1, recv_les; struct schor, recv_addr; struct schorded in send schor, recv_addr; send, even, e
```

2. Chang the gimbal camera's server port and IP addresses to what you need. The double quotation marks of the IP addresses should be kept.

```
#define SERVER_PORT 37268 //云台相机 (服务端) 鳴口号 #define SERVER_IP "192.168.1.25" //云台相机 (服务端) IP
```

3. Create a socket keyword.

```
/* 创建UDP包接字
AF_INET: ipv4地址
SOCK_DGRAM: UDP 协议
6: 自动选择类型对应的默认协议
*/
if ((sockfd = socket(AF_INET, SOCK_DGRAM, 0)) < 0) {
    perror("socket");
    exit(1);
}
```

4. Send data to the gimbal camera and do not revise.

```
/* 能認輸數區
sackefd:
send_buf.
sizeof(seed_buf):

0:
(struct sockeddr "}&send_addr: 整理性收填的理解(1頁) 的压构体例针
addr_len:

//
printf("Send SEX data\n");
socklen_t addr_len = sizeof(struct sockeddr_in);

if(sendto(sockefd, send_buf, sizeof(sand_buf), 0, (struct sockeddr ")&send_addr, addr_len) < 0)

perror("sendto");
exit(1);
}
```

5. Receive data responded by the gimbal camera and do not revise.



```
/* 是這輪數冊
sackfd: sacket香港子文特提述再
send_buf. 整定点的數据在內容中的言題結
sizeof(seed_buf): 整定点的数据在內容中的言題結
0: 发送标志、被为e
(struct sockeddr "}&send_addr: 数据标准编的现象(包含并始终组织信息)的证标格例计
addr_len: 数据标准编的现象(包含并统正例)
printf("Send NEX detain");
socklen_t addr_len = sizeof(struct sockeddr_in);
if(sendte(sockfd, send_buf, sizeof(send_buf), e, (struct sockeddr ")&send_addr, addr_len) < e)

perror("sendto");
exit(1);
```

6. Print the received data in hexadecimal and do not revise.

```
// 十六进制用式打印接收到的股票
printf("Received HEX data: ");
for (int i = 0; i < recv_len; i++)
{
    printf("%02x ", recv_buf[i]);
}
printf("\n");</pre>
```

7. Following the above steps, compile and run the SDK and you will see the printed data below, which means data can be sent and received normally. At this moment, please observe if the gimbal camera executes the relevant actions.

```
yang@ubuntu:-/_star$ gcc siyl.c -o siyl
yang@ubuntu:-/_star$ ./siyl
Send HEX data
Received HEX data: 55 66 02 01 00 00 00 01 90 4f
yang@ubuntu:-/_star$
```

Mark

Before using the SDK to communicate with the gimbal camera in UDP protocol, please do make sure that the device and the gimbal camera are in the same gateway, which means that ubuntu can ping the gimbal camera's IP addresses successfully.

If they still didn't communicate, the possible reason is that the Windows firewall is interrupting the sending and receiving of data, then try to disable Windows firewall temporarily.

Relevant Code Examples

```
#include <stdio.h>
#include <stdlib.h>
#include <string.h>
#include <errno.h>
#include <sys/socket.h>
#include <netinet/in.h>
#include <arpa/inet.h>
#include <unistd.h>
#define RECV BUUF SIZE
                                64
#define SERVER PORT
                            37260
                                                        // Gimbal Camera (Server) Port
#define SERVER IP
                                                        // Gimbal Camera (Server) IP Addresses
                            "192.168.144.25"
```

```
int main(int argc, char *argv[])
         int sockfd;
         int ret, i, recv len;
         struct sockaddr in send addr, recv addr;
         unsigned char send buf[] = \{0x55,0x66,0x01,0x01,0x00,0x00,0x00,0x08,0x01,0xd1,0x12\}; // Frame protocol
  of the relevant functions in hexadecimal
         unsigned char recv buf[RECV BUUF SIZE] = {0};
         /* Create UDP Socket
              AF INET:
                             ipv4 addresses
              SOCK DGRAM: UDP protocol
              0:
                             automatically choose the default protocol of the relevant type
          */
         if ((sockfd = socket(AF INET, SOCK DGRAM, 0)) < 0) {
                   perror("socket");
                   exit(1);
          }
         /* Set IP addresses and port number of gimbal camera
              sin family:
                                      ipv4 addresses
                                 IP addresses of gimbal camera
              sin addr.s addr:
              sin port:
                                      port of gimbal camera
         memset(&send addr, 0, sizeof(send addr));
         send addr.sin family = AF INET;
         send addr.sin addr.s addr = inet addr(SERVER IP);
         send_addr.sin_port = htons(SERVER PORT);
         /* Send frame data
              sockfd:
                                                     descriptor of socket
              send buf:
                                                     head address in RAM of the sending data
              sizeof(send buf):
                                                length of sending data
                                                     sending mark, usually it is 0
                                                         structure pointer of the receiving data addresses (including IP
              (struct sockaddr *)&send addr:
addresses and port)
                                                structure size of the receiving data addresses
              addr len:
         printf("Send HEX data\n");
         socklen t addr len = sizeof(struct sockaddr in);
         if(sendto(sockfd, send buf, sizeof(send buf), 0, (struct sockaddr *)&send addr, addr len) < 0)
              perror("sendto");
              exit(1);
```

<u>SIYI</u>

```
/* Receive the responding data from gimbal camera
               sockfd:
                                                       descriptor of "sockfd" socket
               recv buf:
                                                  head address in RAM of the responding data
               RECV BUUF SIZE:
                                                       size of the buffer, which is the length of the max data to receive
                                                       receiving mark, usually it is 0
               (struct sockaddr *)&recv addr:
                                                           the target structure will be filled with addresses (including IP
addresses and port) from the data sender
                  &addr len:
                                                            the target storage position, the structure size of "src addr"
  and "addrlen" should be filled before calling, the actual size of the sender will be filled after calling
          */
          recv_len = recvfrom(sockfd, recv_buf, RECV_BUUF_SIZE, 0, (struct sockaddr *)&recv_addr, &addr_len);
          if (recv len < 0) {
               perror("recvfrom");
               exit(1);
          }
          // print the received data in hexadecimal
          printf("Received HEX data: ");
          for (int i = 0; i < recv len; i++)
               printf("%02x ", recv_buf[i]);
          printf("\n");
          // close socket
          close(sockfd);
          return 0;
```

3.5.7 Interface Documentation for SIYI Gimbal Camera's Web Server

Videos and images stored in SIYI gimbal camera can be acquired directly from the web server interface.

Interface

baseUrl: http://192.168.144.25:82//cgi-bin/media.cgi

A Request File Directory

The below interface is to request the directory of the file format for an easy overview.

URL: /api/v1/getdirectories

Method: GET

Request Data

Data Name	Туре	Description
media_type	ınt	0: Images 1: Videos

Response Data

The format of the response data is below:

```
{
    "code": 200, // Status code.
    "data": {}, // Content of the data.
    "success": true, // If the request is successful.
    "message": "" // Error message if the request is failed.
}
```

The definition of data is below:

Data Name	Туре	Description
media_type	int	0: Images 1: Videos
directories	[{ "name": "aa", "path": "/yyy/aa" }, { "name": "bb", "path": "/yyy/bb" },	File directory

第 67 页 共 149 页

Request Example

```
Request the number of all the images:

{
    "media_type": 0
}
```

Successful Response

Condition: Request data is legal.

Status Code: 200 OK **Response Example:**

File directory after response:

Error Response

Condition: Request data is illegal. Eg: File type is illegal.

Status Code: 400 BAD REQUEST

Response Example:

```
{
    "code": 400,
    "message": "Invalid media type",
    "success": false
}
```

B Request the File Numbers under the File Directory

The below interface is for authorized users to request the file numbers under the target directory.

URL: /api/v1/getmediacount

Method: GET

Request Data

Data Name	Туре	Description
media_type	int	0: Images 1: Videos
path	String	If the string is empty, return to request the total file number in present. If the string is not empty, return to the number of the target directory.

Response Data

The format of the response data is below:

```
"code": 200, // Status code.
"data": {}, // Content of the data.
"success": true, // If the request is successful.
"message": "" // Error message if the request is failed.
}
```

The definition of data is below:

Data Name	Туре	Desciption
media_type	int	0: Images 1: Videos
count	int	File number
path	int	Path of file directory

Request Example

Request the number of all the images:

```
{
    "media_type": 0,
    "path": ""
}
```

Request the image numbers under the target path:

```
SIYI
```

```
"media_type": 0,
"path": "/photo/aa"
}
```

Successful Response

Condition: Request data is legal and user identity verification passed.

Status Code: 200 OK **Response Example:**

File numbers which return to 'photo/aa' after response:

```
{
    "code": 200,
    "data": {
        "media_type": 0,
        "count": 20,
        "path": "/photo/aa"
    },
    "success": true
}
```

Error Response

Condition: Request data is illegal. Eg: File type is illegal. File path does not exist.

Status Code: 400 BAD REQUEST

Response Example:

```
{
    "code": 400,
    "message": "Invalid media type",
    "success": false
}
```

C Request File List

The below interface is for authorized users to request the file list.

URL: /api/v1/getmedialist

Method: GET

Request Data

Data Name	Туре	Description
media_type	l int	0: Images 1: Videos
path	String	Empty String: File list is for all the files

		of the present type.
		Non-empty String: File list is for the
		files under the target path.
start	int	Start index of the file list
count	int	Number of the file list.
		If "start" plus "count" is more than the
		number of the file list, return to the end
		of the file list from "start".

Response Data

The format of the response data is below:

```
{
    "code": 200, // Status code.
    "data": {}, // Content of data.
    "success": true, // If the request is successful.
    "message": "" // Error message if the request is failed.
}
```

The definition of data is below:

Data Name	Туре	Description
media_type	ınt	0: Images 1: Videos
path	String	The requested path.
list	[File list.

Request Example

Request the image list from "photo/20230630" directory:

```
"media_type": 0,
"path": "photo/20230630",
"start": 0,
```

```
SIYI
```

```
"count": 10
```

Successful Response

Condition: Request data is legal and user identity verification passed.

Status Code: 200 OK **Response Example:**

Return to the image list under "photo/20230630" directory after response:

```
{
     "code": 200,
     "data":{
          "media type": 0,
          "path": "photo/20230630",
       "list": [
          "name": "aa.jpg",
          "url": "http://xxx/yy/aa.jpg"
          },
          "name": "bb.jpg",
          "url": "http://xxx/yy/bb.jpg"
               ...
          ],
     },
     "success": true
}
```

Error Response

Condition: Request data is illegal. Eg: File type is illegal. File path does not exist. Start index exceed the max value. Etc.

Status Code: 400 BAD REQUEST


Response Example:

```
{
    "code": 400,
    "message": "path not exist",
    "success": false
}
```



3.6 Control SIYI Gimbal Camera by the ArduPilot Driver through UART and Integrate Flight Controller Attitude Data

Gimbal camera's UART port connects to ArduPilot flight controller's UART port directly to communicate with the flight controller and to control gimbal rotation, gimbal functions, and camera functions.

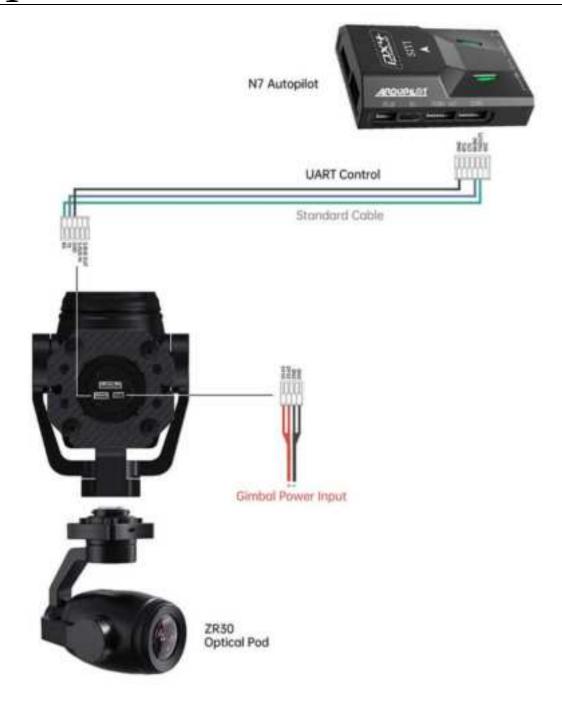

Preparation

It is necessary to prepare the tools, firmware, and software below before controlling gimbal camera in this way.

- ArduPilot Flight Controller (v4.4.4 and above firmware)
- SIYI Optical Pod (Gimbal Camera)

Mark

Above products can be purchased from SIYI directly or from SIYI authorized dealers.

• SIYI Gimbal to PX4 / Ardupilot Flight Controller UART Cable

Mark

Above tools come with product package.

• Mission Planner (Windows) Software

Steps

- 1. Power SIYI gimbal camera and ArduPilot flight controller.
- 2. Connect gimbal camera's UART port to ArduPilot flight controller's UART port and make sure they are communicating with each other.
- 3. Run ground station and set the following parameters.

Gimbal Control

The params below assume the autopilot's telem2 port is used and the Camera1 control instance.

- SERIAL2_PROTOCOL to 8 ("SToRM32 Gimbal Serial")
- SERIAL2 BAUD to "115" for 115200 bps
- MNT1_TYPE to "8" ("SIYI") and reboot the ardupilot

- MNT1 PITCH MIN to -90
- MNT1_PITCH_MAX to 25
- MNT1_YAW_MIN to -80
- MNT1 YAW MAX to 80
- MNT1_RC_RATE to 90 (deg/s) to control speed of gimbal when using RC targetting
- CAM1 TYPE to 4 (Mount / SIYI) to allow control of the camera.
- RC6_OPTION = 213 ("Mount Pitch") to control the gimbal's pitch angle with RC channel 6
- RC7_OPTION = 214 ("Mount Yaw") to control the gimbal's yaw angle with RC channel 7
- RC8_OPTION = 163 ("Mount Lock") to switch between "lock" and "follow" mode with RC channel 8
 Optionally these auxiliary functions are also available.
- RC9 OPTION = 166 ("Camera Record Video") to start/stop recording of video
- RC9_OPTION = 167 ("Camera Zoom") to zoom in and out
- RC9 OPTION = 168 ("Camera Manual Focus") to adjust focus in and out
- RC9_OPTION = 169 ("Camera Auto Focus") to trigger auto focus

Integrate Flight Controller Attitude Data

The params below assume the autopilot's telem2 port is used and the Camera1 control instance.

SERIAL2 BAUD to "115" for 115200 bps



 SR2_EXTRA1 to "50" to set flight controller attitude angle data sending frequency.



After configuration, it is necessary to "Write Parameters" and reboot the flight controller to take effect.



Integrate flight controller attitude data can effectively promote gimbal performance while drone attitude is changing fast.

Welcome to visit ArduPilot official documentation for SIYI gimbal as well.

https://ardupilot.org/copter/docs/common-siyi-zr10-gimbal.html

3.7 Control SIYI Gimbal Camera by Mavlink Gimbal Protocol through UART and Integrate Flight Controller Attitude Data

Gimbal camera's UART port connects to PX4 flight controller's UART port directly to communicate with the flight controller and to control gimbal rotation, gimbal functions, and camera functions.



Preparation

It is necessary to prepare the tools, firmware, and software below before controlling gimbal camera in this way.

- PX4 Flight Controller
- SIYI Optical Pod (Gimbal Camera)

Mark

Above products can be purchased from SIYI directly or from SIYI authorized dealers.

- SIYI Gimbal to PX4 / Ardupilot Flight Controller UART Cable
- **Mark**


Above tools come with product package.


QGroundControl Windows GCS

3.8 Necessary Trouble Shooting Steps When Gimbal Attitude Control Is Abnormal

Let's take an example of the problem that gimbal roll axis tilts abnormally.



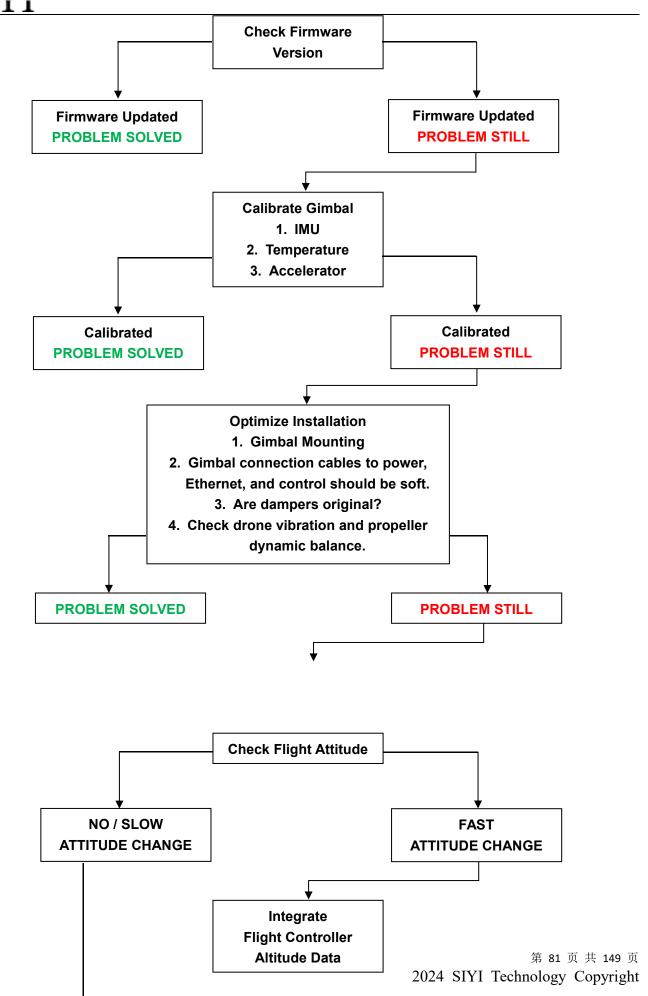

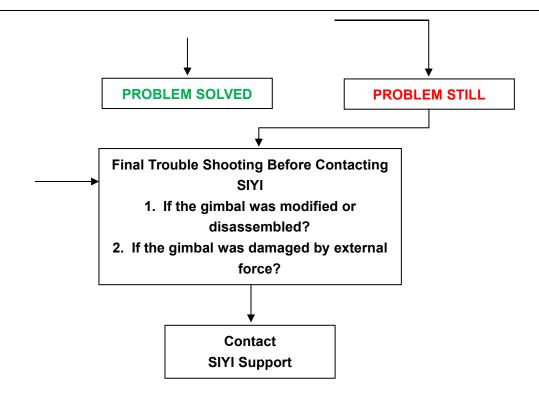

4 VIDEO OUTPUT


ZR30 optical pod outputs video through Ethernet and Micro-HDMI port.



ZR30's Ethernet port and Micro-HDMI port can output video stream simultaneously.

4.1 Output Video to Windows Device Directly through Ethernet

Gimbal camera connects to Windows device directly, then video will be displayed in SIYI QGC Windows software.

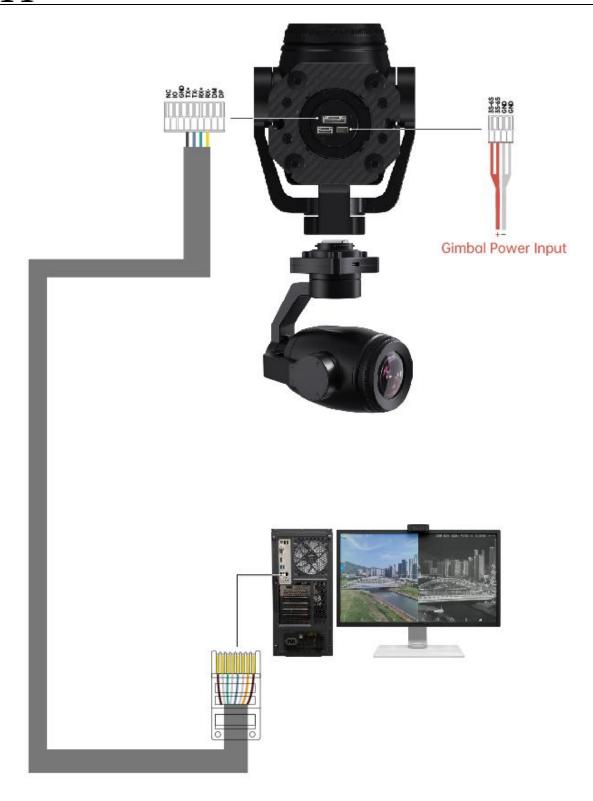

SIYI Gimbal RJ45 Cable (New)



SIYI Gimbal RJ45 Cable (Old)

Preparation

It is necessary to prepare the tools, firmware, and software below before outputting video

stream in this way.

• SIYI Optical Pod (Gimbal Camera)

Mark

Above products can be purchased from SIYI directly or from SIYI authorized dealers.

• SIYI Gimbal Ethernet to RJ45 Cable

Mark

Above tools come with product package.

SIYI QGC Windows Software

Mark (

Above software can be downloaded from relevant product page on SIYI official website.

Steps

- 1. Power gimbal camera.
- 2. Use SIYI Gimbal Ethernet to RJ45 Cable to connect the gimbal quick release board's Ethernet port to Windows device's RJ45 port. If your computer does not come with RJ45 port, it is suggested to use an RJ45 to USB converter.
- 3. Modify the computer's Ethernet settings to have the same gateway with SIYI link and avoid IP addresses conflict.

For example, let's assign "192.168.144.30" for the computer IP addresses.



4. Run SIYI QGC Windows software, go to "Comm Links – Video Settings", and select "RTSP Video Stream" for "Source", then enter the default RTSP addresses of SIYI gimbal camera, video stream will display. Gimbal motion and camera functions can be controlled by mouse in QGroundControl.

4.2 Output Video to Third-Party Link through Ethernet

SIYI gimbal camera can output video to any third-party link which provides Ethernet port and is compatible with RTSP video stream.

In this way, it is necessary to prepare a customized video cable for connection between SIYI gimbal camera and the third-party link.



CAUTION

SIYI gimbal camera Ethernet port's "RX-" pinout should connect to the third-party link Ethernet port's "RX-" pinout, and "RX+" pinout to "RX+" pinout. Do not cross the pinouts, otherwise it will cause damage to the device.

Steps

- 1. Power the air unit of the third-party link and bind it with the ground unit.
- 2. Use the video cable to connect SIYI gimbal camera's Ethernet port and the third-party link's Ethernet port.
- 3. Open RTSP video player and input SIYI gimbal camera's default RTSP addresses, if connection is successful, video will display normally.

Mark

SIYI QGC Android app and Windows software support video display from third-party links as well.

4.3 Output Video through Micro-HDMI

ZR30 optical pod can output video directly though the Micro-HDMI port.

Steps

- 1. Power ZR30 and connect it to PC. Run SIYI Assistant, switch video output mode to "HDMI" under the "Gimbal Config" page.
- 2. Connect ZR30 to the HDMI monitor.
- 3. If video shows up, the connection is successful.

4.4 Solutions to No Image through Ethernet

If gimbal camera failed to output video or the video cannot be displayed properly, please follow the steps below for trouble shooting.

- 1. Confirm if the link's ground unit is communicating with the air unit and if the camera is connected to the air unit.
- 2. Check Camera IP addresses and RTSP addresses.
- 3. If you are using SIYI FPV app, check the connection status, app version, video stream settings.
- 4. If you are using SIYI handheld ground stations, check the Ethernet switch in Android system.
- 5. Please double check if the gimbal camera's IP addresses was modified accidentally.

If video still does not show up, please follow the steps below and make a deep investigation according to the video output mode, the video display device, and the application / software you are using.

4.4.1 Video Output to Android Device

1. Input SIYI gimbal's default IP addresses "192.168.144.25" in the "Ping Tools" app and check if the network communication is successful. If the tool responds, then check if the RTSP address in the application / software is correct.



Successful Network Communication



Network Communication Failed

2. If the network communication is failed, then check the communication between the link's ground unit and the air unit. If the communication is good, then check if the video cable between the camera and the link's air unit is good, and if the voltage input is in normal range.

4.4.2 Video Output to Windows Device

1. Use the "Win + R" key combo to wake up the "Run" program and input the command "cmd".

```
EL 世程元: CAWindows\system32\cmd.exe

Microsoft Windows [版本 10.0.19042.804]
(c) 2020 Wicrosoft Corporation. 保留所有权利。

C:\Users\Administrator\ping 192.168.144

正在 Ping 192.168.0.144 具有 32 字节的数据:
Control-C
C
C:\Users\Administrator\ping 192.168.144.25

正在 Ping 192.168.144.25 與有 32 字节的数据:
来目 192.168.144.25 的回复:字节=32 时间=9mm TTL=64
来目 192.168.144.25 的回复:字节=32 时间=3mm TTL=64
```

Successful Network Communication

```
正在 Ping 192.168.144.25 具有 32 字节的数据:
Control-C
C:\Users\Administrator>ping 192.168.144.25

正在 Ping 192.168.144.25 具有 32 字节的数据:
请求超时。
请求超时。
来自 192.168.144.153 的四复: 无法访问目标主机。
来自 192.168.144.153 的回复: 无法访问目标主机。
来自 192.168.144.153 的回复: 无法访问目标主机。
第2.168.144.25 的 Ping 统计信息:
数据包: 已发送 = 4. 已接收 = 2. 丢失 = 2 (50% 丢失)。
C:\Users\Administrator>
```

Network Communication Failed

2. Input SIYI gimbal camera's default IP addresses "192.168.144.25" and press the "Enter" key to check if the communication is successful. If it is, please check the RTSP addresses in the software or try to switch to another software.

3. If the network didn't connect, then check the communication between the link's ground unit and the air unit. If the communication is successful, then check if the video cable between the camera and the link's air unit is good, and if the voltage input is in normal range.

Mark

If you have done all trouble shooting by following the steps above and still didn't solve the problem, then please contact your dealer, or contact SIYI Support directly.

4.5 Common IP Addresses

SIYI Optical Pod / Gimbal Camera's Default IP Addresses: 192.168.144.25

(NEW) SIYI Optical Pod / Gimbal Camera's Default RTSP Addresses:

- Main Stream: rtsp://192.168.144.25:8554/video1
- Sub Stream: rtsp://192.168.144.25:8554/video2

(NEW) SIYI FPV App's Private Video Stream Protocol's Addresses:

- SIYI Camera 1 Main Stream: 192.168.144.25: 37256
- SIYI Camera 1 Sub Stream: 192.168.144.25: 37255
- SIYI Camera 2 Main Stream: 192.168.144.26: 37256
- SIYI Camera 2 Sub Stream: 192.168.144.26: 37255

Mark

SIYI cameras released after ZT30 (including ZT30 and ZT6) start to use the new addresses.

SIYI cameras released before ZT30 (including ZR30, A2 mini, A8 mini, ZR10, and R1M) are stilling using the old addresses.

5 SIYI FPV APP

SIYI FPV is an Android application developed by SIYI to configure many SIYI products for video display, camera stream settings, and communication link status monitoring.



This chapter is edited based on SIYI FPV App v2.5.15.691.

SIYI FPV App can be downloaded from SIYI official website:

https://siyi.biz/en/index.php?id=downloads&asd=25


SIYI FPV App compatible SIYI devices

- ZT6 Mini Dual-Sensor Optical Pod
- SIYI AI Tracking Module
- ZT30 Four-Sensor Optical Pod
- ZR30 4K AI 180X Hybrid Zoom Optical Pod
- A2 mini Ultra-Wide-Angle FPV Gimbal
- MK32 / MK32E Enterprise Handheld Ground Station
- A8 mini AI Zoom Gimbal Camera
- ZR10 2K 30X Hybrid Zoom Optical Pod
- R1M HD Recording FPV Camera
- Air Unit HDMI Input Converter
- HM30 Full HD Image Transmission System
- MK15 / MK15E Mini Handheld Ground Station

SIYI FPV App OSD Information Definition




SIYI FPV Camera Function Icon Definition

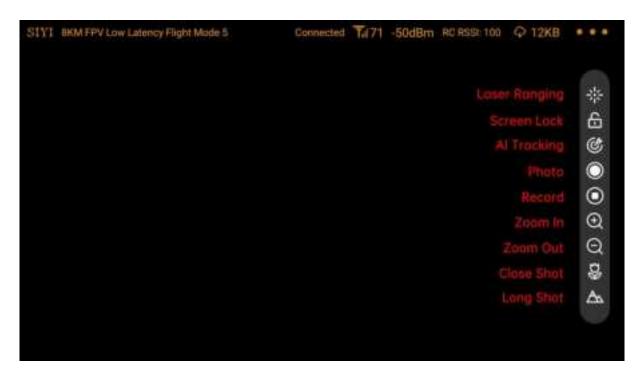

5.1 Settings

In "Settings" page, you can select camera type with stream type, select or input video stream IP addresses, custom app interface, and switch map type.

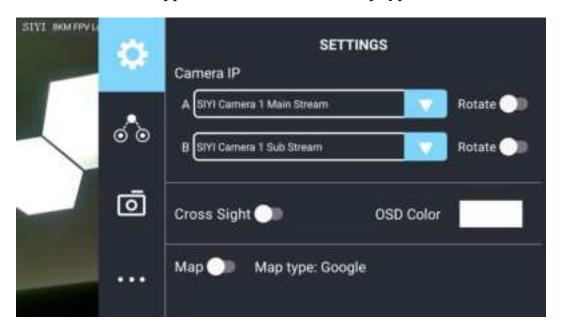

About Settings

Camera IP: Select among SIYI AI Camera, SIYI Camera 1 and SIYI Camera 2, between main stream and sub stream, select or input video stream RTSP addresses, disable image, or rotate the relevant image in 180 degrees.

Cross Sight: Enable / disable a cross sight in the center of the image.

OSD Color: Custom the color of all OSD information.

Map: Enable / disable the map box over the left-bottom corner of the image.

Map Type: Switch map type (currently between Baidu and Google).

5.2 Link Status

Display the link status directly over the FPV image.



About Link Status

OSD: Enable / disable standard OSD information.


Mavlink OSD: Enable / disable Mavlink OSD information.

Speed Unit: Switch speed unit between meter per seconds and kilometer per hour.

Longitude and Latitude: Enable / disable information.

5.3 Gimbal Camera

Configure the basic functions for SIYI gimbal cameras and cameras.

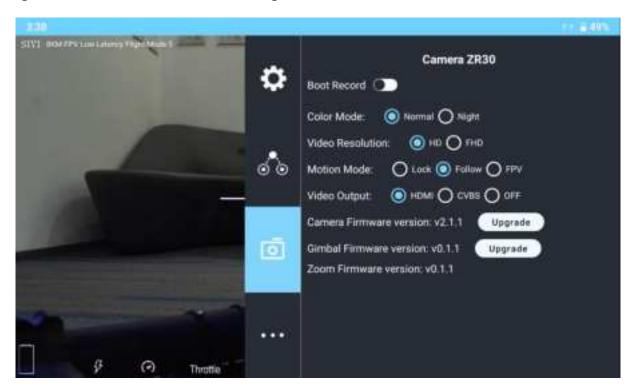

About Gimbal Camera

Boot Record: Enable / disable automatic video recording by SD card as soon as the camera is powered.

File Manager: Preview stored images in TF card. Format the TF card.

Main / Sub Stream: Configure the main stream and the sub stream separately for their camera source and parameters.

Image Mode: Select the video stream's image type and camera source. Single image or split image. Zoom camera, wide angle camera, or thermal imaging camera.

Stream Resolution: Decide to switch the output resolution of the current video stream or not according to camera source. Max output resolution is Ultra HD (1080p).

Record Resolution: Decide to switch the recording resolution or not according to camera source. Max record resolution is 4K.

Video Output Port: Switch the video outputting ports.

- HDMI: Through the gimbal camera's Micro-HDMI port.
- CVBS: Through the CVBS pin in the gimbal camera's Ethernet port to output videos in analog signal (Only available for ZT6 and A8 mini).
- OFF: Through the gimbal camera's Ethernet only.

Gimbal Working Mode: Switch gimbal working mode among Lock Mode, Follow Mode, and FPV Mode.

- Lock Mode: Horizontally, gimbal does not follow when aircraft rotates.
- Follow Mode: Horizontally, gimbal follows when aircraft rotates.
- FPV Mode: Gimbal rotates simultaneously as aircraft rolls to get FPV view, and output images with enhanced stability.
- AI Tracking: When the gimbal is connected to the AI tracking module and the AI tracking function is activated. It will be AI tracking mode only.

Camera Firmware Version: Display current camera firmware version.

Gimbal Firmware Version: Display current gimbal firmware version.

Zoom Firmware Version: Display current gimbal firmware version. (Only available for optical zoom cameras)

5.4 About SIYI FPV

Displays the software version of SIYI FPV and common contact information of SIYI Technology.



5.5 SIYI FPV App Update Log

Date	2024-01-26	
Version	2.5.15.695	
Updates	1. New: Support AI follow function.	

Date	2023-12-18
Version	2.5.15.691
	2. Fix: Temperature data still shows on image after switching to optical cameras
	from thermal camera.
	3. New (A8 mini): Enable OSD watermark on recording images.
	4. New: Both video streams can turn on / off recording.
Updates	5. New (SIYI AI Tracking Module): A switch for flight tracking.
	6. New (Thermal): A switch for thermal gain.
	7. New (Thermal): A switch for thermal calibration.
	8. New (Thermal): A switch for thermal RAW.
	9. Fix: Camera control interface bug when two different cameras are plugged.

Date	2023-10-20		
Version	2.5.15.679		
	10. New: AI recognition and tracking function control interface.		
Undates	11. New (ZT30): Zoom & thermal camera simultaneous recording function control interface.		
Updates	12. New: Add the AI tracking module to IP addresses settings.		
	13. Improve: Occasionally video stream does not recover when the link is		
	disconnected under SIYI camera protocol.		

Date	2023-08-24	
Version	2.5.15.660	
	1. New (ZT30): Laser calibration. Display laser ranging target's coordinates.	
	2. New: Support TF format.	
Updates	3. New (ZT30): Thermal color palette.	
	4. New: File manager to preview stored pictures in TF card.	
	5. Improve: New icon indication for missing TF card.	

Date	2023-07-31		
Version	2.5.14.644		
1. New: Status indication for successfully integrated flight controller attitude			
	2. New: Google map is supported.		
Updates	3. Fix: Flight controller location was no accurate. New icons for flight controller		
	location and device location.		
	4. New: Status indication for missing TF card.		

5.6 SIYI FPV SDK Guide

SIYI provides the SIYI FPV SDK to help professional Android application developers to integrate the unique features in SIYI FPV app to their own GCS.

5.6.1 Access Method

a) Add "fpvlib" into Your Project

Copy the "fpvlib.aar" file to the "libs" folder in your "module" like below:

Revise the "build.gradle" file:

b) Configure "AndroidManifest" File


Add USB reading authorization to the "AndroidManifest" file in your "module" and configure the "intent-filter" file.

```
# The first and the first and
```

c) Add FPV Display Function into Code

Add JNI Library

Like the example below, add JNI library file into the "main" directory, then the "so" library file can be copied from "demo" to your project directory.

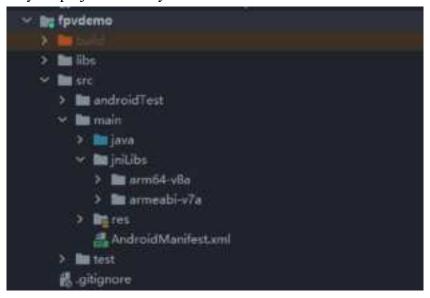

Add FPV Video Display to Code

Please pay attention to the below points for your code:

- Firstly, use the static method "getInstances()" of "ConnectionManager" to get the "ConnectionManager" object. Then call the "ConnectionManager.checkConnectWithIntent()" method in the lifecycle method "onCreate()" and "onNewIntent()".
- Video stream should be displayed through "SurfaceView". So, we create an "SurfaceView" object and need to call "ConntionManager.notifySurfaceCreate()" and "notifySurfaceDestroy" method from "surfaceCreated()" and "surfaceDestroy()".

```
mSurfaceView.getHolder().addCallback(new SurfaceHolder.Callback() {
     @Override
     public void surfaceCreated(SurfaceHolder holder) {
        Logcat.d(TAG, "onSurfaceCreated...");
        mConnectionManager.notifySurfaceCreate(holder.getSurface());
     }
     @Override
     public void surfaceChanged(SurfaceHolder holder, int format, int width
     , int height) {
      }
     @Override
     public void surfaceDestroyed(SurfaceHolder holder) {
        mConnectionManager.notifySurfaceDestroy(holder.getSurface());
     }
});
```

Dual-Channel FPV Display:

Dual-channel FPV display supports Ethernet connection only. It does not support AOA or USB connection. For dual-channel FPV display, we should configure the IP addresses first, then create two "SurfaceView" for image display. Whether the second video stream is required or not can be judged by the connection type through connection status. You can refer to "demo" for detail.

 When you quit the application, please do not forget to call the "UsbConnectionManager.release()" method.

For more detail, please refer to the codes in "demo".

5.6.2 Interface Instructions

ConnectionManager

Name	Description			
cotInstance(Contact contact)	Single case method for			
getInstance(Context context)	"ConnectionManager"			
setWirelessUrl(String url1, String url2)	Set the addresses for video stream.			
checkConnectWithIntent(Intent intent)	Initial the connection.			
	Notify that the first "Surface" is			
notifySurfaceCreate(Surface surface)	created, the "Surface" is for video			
	display.			
notifySurfaceDestroy(Surface surface)	Notify that the first "Surface" is			
notifySurfaceDestroy(Surface Surface)	destroyed.			
notifySecondSurfaceCreate(Surface	Notify that the second "Surface" is			
surface)	created, the "Surface" is for video			

	display.	
notifySecondSurfaceDestroy(Surface	Notify that the second "Surface" is	
surface)	destroyed.	
setConnectionListener(ConnectionListen	Set callback for the connection status.	
er listener)	Set canoack for the connection status.	
setFrameListeners(FrameListener		
frameListener, FrameListener	Set callback for video stream.	
secondFrameListener)		
getSDKVersion()	Request SDK version.	
release()	Release SDK.	

SettingsConfig

Name	Description
SettingsConfig.getInstance().initConfig(context)	Initialize the settigns. This method must be called.
setLogEnable(boolean)	Set if print the log in the sdk. It is suggested to disable print in the "release" version.
setDecodeType(Context context, @IDecodeListener.DecodeType int decodeType)	Set decoding type. In default it is hardware decoding.
setSupportWirelessConnection(Context context, boolean supportWireless)	Set if to support Ethernet connection method.
setRectify(Context context, boolean rectify)	Set if to activate the video stream distortion correction function. The function is disabled in default and is only for A2 mini FPV gimbal at this moment. It works only when the video stream addresses is "RtspConstants.DEFAULT_TCP_VID EO_URL" "SUB_TCP_VIDEO_URL". Attention: If distortion correction is activated, when you switch from SIYI camera addresses "RtspConstants.DEFAULT_TCP_VID EO_URL" "SUB_TCP_VIDEO_URL" to RTSP addresses, new surface objects should be imported. One way to do this is to remove "SurfaceView" and add a

_			
	new	"SurfaceView"	through
	"addVie	w", then import the	"Surface"
	object	again	in
	"Surface	eHolder.Callback".	
gatCamaraMana gar()	Request	camera control object	ets.
getCameraManager()	SYSDK	CameraManager	

SYSDKCameraManager

5.7 SIYI FPV SDK Update Log

Version	2.5.15		
	1. Fix the issue that RTSP stream may blurr.		
	2. Add camera control interface.		
	3. Fix some other known issues.		
Updates			
	Mark:		
	It is necessary to update the "so" and "aar" file, which can be		
	updated frm the "aar_so" folder.		

Version	2.5.14		
	 Fix some issues which causes anormal in JNI library (need to update "so" library). Fix some other known issues. 		
Updates	Mark: It is necessary to update the "so" and "aar" file, which can be updated frm the "aar so" folder.		

Version	2.5.13
	1. Fix the issue that the video stream of some IP65 cameras may
	blurr.
	2. Add to support ZT30 camera video stream.
Updates	
-	Mark:
	It is necessary to update the "so" and "aar" file, which can be
	updated frm the "aar so" folder.

6 SIYI FPV WINDOWS APP

SIYI FPV Windows is a Windows OS based application developed by SIYI to support many SIYI link products, optical pods (gimbal cameras), and autopilot (flight controller) for their abundant function, configuration, and device status monitoring.

Mark

This chapter is edited based on SIYI FPV Windows app v0.0.6.

SIYI FPV Windows app can be downloaded from SIYI official website:

https://siyi.biz/en/index.php?id=downloads&asd=602

SIYI FPV App compatible SIYI devices

- ZT6 Mini Dual-Sensor Optical Pod
- ZT30 Four-Sensor Optical Pod
- ZR30 4K 180X Hybrid Zoom Optical Pod
- MK32 Enterprise Handheld Ground Station
- A8 mini Zoom Gimbal Camera
- ZR10 2K 30X Hybrid Zoom Optical Pod
- HM30 Full HD Image Transmission System
- MK15 Mini Handheld Ground Station

SIYI FPV Windows App Function Definition



6.1 UI Function & Definition

6.1.1 Top Status Bar

Top status bar is to display the system's working status.



About Top Status Bar

Flight Controller Alerts: Alert messages from flight controller.

Flight Mode: Currently activated flight mode.

Current Voltage: Current voltage from aircraft power battery.

Battery Life Percentage: Current battery level from aircraft power battery in percentage.

Connection Status: Connection status of video stream.

Link Signal Strength: Signal strength of the communication link in dBm.

Application Settings: Some basic application settings.

6.1.2 Left Tools Bar

Left tools bar is to control the basic function of optical pod (gimbal camera).



Gimbal Rotation

Provide some quick actions to control gimbal attitude.



About Gimbal Rotation

Center: Gimbal camera centers in both yaw axis and pitch axis.

Yaw Center & Pitch Down: Gimbal camera centers in yaw axis and points down in pitch axis.

Yaw Center: Gimbal camera centers in yaw axis.

Pitch Down: Gimbal camera points down in pitch axis.

Image Type

Switch image type for multi-sensor optical pods.



About Image Type

Singe Image (Zoom Camera): Main windows displays image from zoom camera only.

Singe Image (Wide Angle Camera): Main windows displays image from wide angle camera only.

Singe Image (Thermal Camera): Main windows displays image from thermal camera only.

Split Image (Zoom & Thermal): Main windows displays image from zoom camera in left and thermal camera in right.

Split Image (Wide Angle & Thermal): Main windows displays image from wide angle camera in left and thermal camera in right.

Split Image (Zoom & Wide Angle): Main windows displays image from zoom camera in left and wide-angle camera in right.

Thermal Palette

Switch thermal image type in multiple-sensor optical pods.



Laser Range Finder


Turn on / off the laser range finder in multiple-sensor optical pods.

Synchronize Zoom

Turn on / off synchronize zoom of zoom camera and thermal camera from 1X to 2X under split image in in multiple-sensor optical pods.

6.1.3 Right Tools Bar

Right tools bar is to control the basic function of camera.

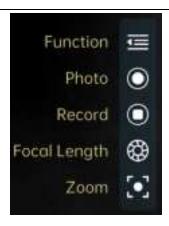

Function

Basic settings for optical cameras.



About Optical Camera Basic Settings

Boot Record: Enable / disable automatic video recording by SD card as soon as the camera is powered.

Record Sub Stream: Turn on video recording for the sub stream.

Stream Resolution: Decide to switch the output resolution of the current video stream or not according to camera source. Max output resolution is Ultra HD (1080p).

Record Resolution: Decide to switch the recording resolution or not according to camera

source. Max record resolution is 4K.

Basic settings for thermal camera.



About Thermal Camera Basic Settings


Thermal RAW: Choose to include the RAW data in thermal images or not.

Thermal Calibration: To calibrate the thermal camera by changing environment elements.

Thermal Gain: Switch between low gain and high gain for the thermal imaging camera.

6.1.4 Flight Controller Mavlink Attitude Data

Displays Mavlink flight attitude data telemetry from flight controller in real-time.

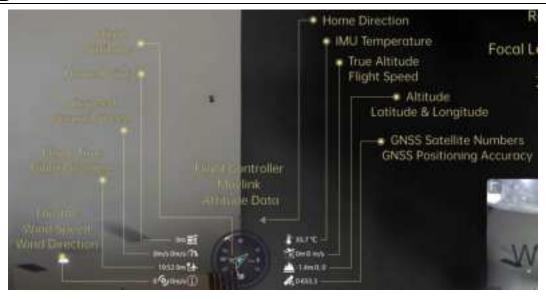

About Flight Controller Mavlink Attitude Data

Flight Attitude: Aircraft flight direction and yaw angle.

Home Point: Direct distance between the projection of the current position of the aircraft on the ground and the home point.

Airspeed: The speed of the aircraft relative to the surrounding air during flight (Unit: m/s or km/h).

Ground Speed: The speed of the aircraft relative to ground during flight (Unit: m/s or km/h).

Flight Time: Accumulated flight time of aircraft.

Flight Distance: Accumulated flight distance of aircraft relative to ground.

Throttle: Current throttle output (0 \sim 100).

Wind Speed: The velocity of air flow around the aircraft (Unit: m/s or km/h).

Wind Direction: The direction of air flow around the aircraft.

IMU Temperature: Flight controller IMU temperature.

True Altitude: The current flight altitude of the aircraft relative to the home point.

Flight Speed: The absolute flight speed of the aircraft in real time.

Altitude: The absolute altitude of the aircraft in real time.

Latitude & Longitude: Latitude and longitude of the aircraft's current location.

GNSS Satellite Number: The current number of satellites captured by the global positioning and navigation system.

GNSS Positioning Accuracy: The current positioning accuracy of the global positioning and navigation system.

Mark

Ground speed depends on the airspeed of the aircraft, the wind speed around the aircraft, and the direction of the wind. If the aircraft flies downwind, the ground speed will be higher than the air speed; If the aircraft flies against the wind, the ground speed will be lower than the airspeed. Ground speed is usually provided by the aircraft navigation system or flight controller.


6.1.5 Map

Map box locates in the left-down corner of the main window which can be displayed / hided, and the size can be adjusted.



6.1.6 Sub Window


Sub window locates in the right-down corner of the main window which displays video stream from sub stream. Sub window can be displayed or hided, and the size can be adjusted. Sub window and main window can be switched for image display.

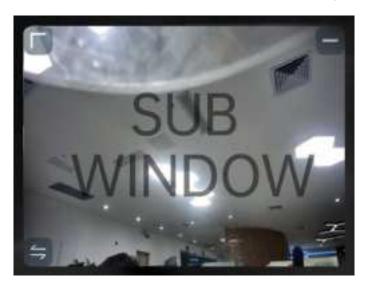

6.2 System Settings

6.2.1 Camera Settings

Check current camera model, camera network addresses, and camera firmware version.

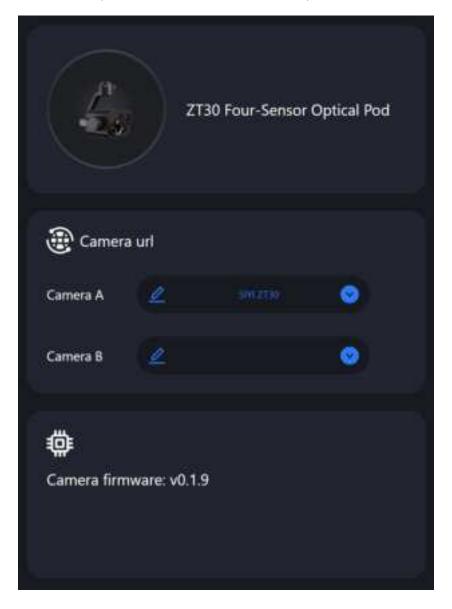

About Camera Settings

Camera Addresses: Select camera model, default camera network addresses, or input RTSP addresses for main stream and sub stream, or disable image.

Camera Firmware Version: Display current camera firmware version.

6.2.2 Gimbal Settings

Set gimbal motion mode, check gimbal firmware version, and zoom firmware version.



About Gimbal Settings

Gimbal Motion Mode: Switch gimbal working mode among Lock Mode, Follow Mode, and FPV Mode.

- Lock Mode: Horizontally, gimbal does not follow when aircraft rotates.
- Follow Mode: Horizontally, gimbal follows when aircraft rotates.
- FPV Mode: Gimbal rotates simultaneously as aircraft rolls to get FPV view, and output images with enhanced stability.

Gimbal Firmware Version: Display current gimbal firmware version.

Zoom Firmware Version: Display current gimbal firmware version (Only available for optical zoom cameras).

6.2.3 Link Status

Monitor SIYI image transmission link's status.



About Link Status

Channel: Current frequency channel of the transmission link under current working frequency.

Signal Quality: Current signal quality of the link in percentage (0 \sim 100).

Signal Strength: Current signal strength of the link in dBm.

Latency: Current signal transmission latency of the link (Unit: ms).

Data Download: Downloading data of the transmission link from air unit per second (Unit: KB).


Bandwidth Download: Downloading bandwidth of the transmission link from air unit (Unit: Mbps).

Data Upload: Uploading data of the transmission link to air unit per second (Unit: KB).

Bandwidth Upload: Uploading bandwidth of the transmission link to air unit (Unit: Mbps).

6.2.4 Others

Switch map type, check application version and SIYI contact information.

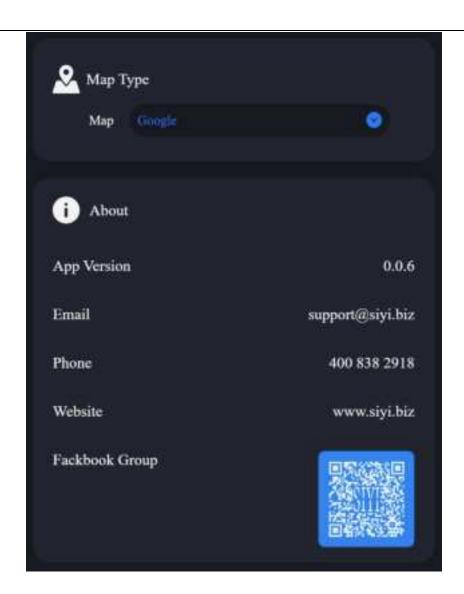

6.3 SIYI FPV App Update Log

No update is available at this moment.

7 SIYI Assistant

SIYI PC Assistant is a Windows software developed by SIYI to configure many SIYI products for configuration, firmware update, and calibration.

Mark

The manual is edited based on SIYI PC Assistant v1.3.9.

SIYI PC Assistant and the relevant firmware pack can be downloaded from SIYI official website:

https://siyi.biz/en/index.php?id=downloads&asd=25

7.1 Gimbal / Zoom Firmware Update

SIYI gimbal camera connects to SIYI PC Assistant for gimbal firmware and zoom firmware update.

Mark

Zoom firmware update is only available for optical zoom gimbal cameras.

Before upgrading, it is necessary to prepare the tools, software, and firmware below.

- SIYI PC Assistant (v1.3.9 or latest version)
- Gimbal Firmware
- Zoom Firmware

Mark

Above software and firmware can be downloaded from relevant product page on SIYI official website.


• Cable (USB-C to USB-A)



Customers should prepare the above tools.

Firmware Upgrade Steps

- 1. Install "SIYI PC Assistant" on your Windows device.
- 2. Use the USB-C to USB-A cable to connect Windows device's USB-A port to gimbal camera's USB-C port.
- 3. Run "SIYI PC Assistant" and switch to "Upload" page to check gimbal camera's current firmware version.

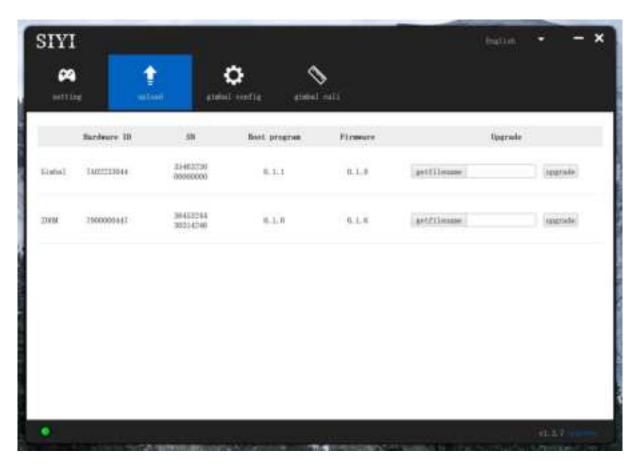

4. If the firmware is not latest, then click the "Select File" button in the "Gimbal" to import the latest firmware. And click "Upgrade" and wait till it is "100%" finished.

Mark

Before updating any firmware, gimbal camera should be powered.

It is the same process for both gimbal firmware and zoom firmware.

7.2 Camera Firmware Update

The camera firmware of SIYI gimbal camera should be upgraded by SD card.

Before upgrading, it is necessary to prepare the tools, software, and firmware below.

Micro-SD Card

Mark

Customers should prepare the above tools.

Please make sure that the TF card has been formatted to FAT32 before camera firmware upgrade.

• Camera Firmware



Above software and firmware can be downloaded from relevant product page on SIYI official website.

Firmware Upgrade Steps

1. Save camera firmware's ".bin" file to the SD card's root directory and do not change the file name.




- 2. Restart gimbal camera and wait for 3 to 5 minutes. Camera firmware will be flashed automatically.
- 3. Run SIYI FPV app or SIYI PC Assistant software to check if camera firmware is updated successfully.



7.3 Gimbal Camera Configuration

SIYI gimbal camera can be connected to SIYI PC Assistant for channel settings and camera settings.

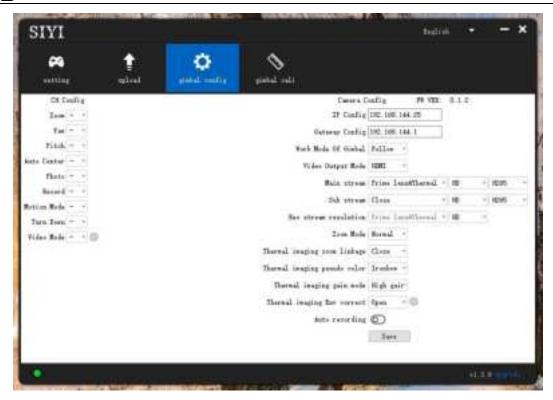


7.3.1 Channel Configuration

The "Channel Config" menu under "Gimbal Config" menu can assign the below gimbal camera functions to up to 16 channels and an idle channel (disabled).

Gimbal Functions and Description

- Auto Focus: Control zoom camera for automatic focus.
- Zoom: Control camera for optical zoom and digital zoom.
- Manual Focus: Adjust zoom camera focal length for manual focus.
- Yaw: Control gimbal rotation on yaw axis.
- Pitch: Control gimbal rotation on pitch axis.
- Auto Center: Control gimbal to reset to initial position. Coordinates (0, 0).

- Photo: Control camera to take a picture.
- Record: Enable / disable video recording.
- Motion Mode: Switch gimbal working mode (follow mode, lock mode, FPV mode).
- Auto Down: Control gimbal pitch axis to point downward vertically. Coordinates (0, -90).
- Image Mode: Select the video stream's image type and camera source. Single image or split image. Zoom camera, wide angle camera, or thermal imaging camera. Max three switches to be assigned for different image mode.

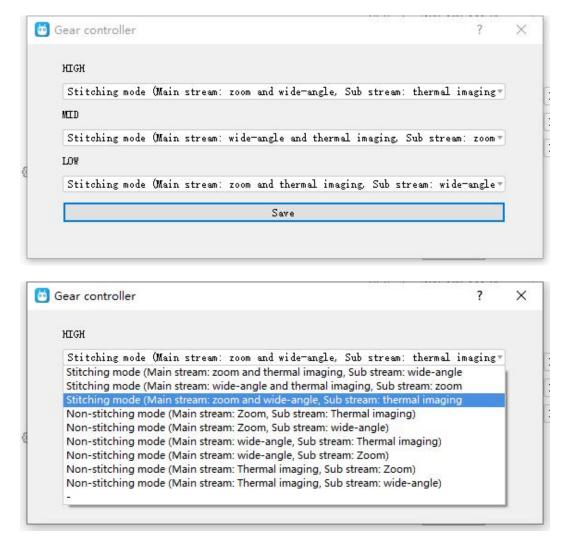

7.3.2 Camera Configuration

The "Gimbal Config" menu also supports abundant and core features of SIYI gimbal camera, such as, checking camera firmware version, modifying camera IP addresses, selecting camera source for main / sub stream and video recording, switching camera 第 134 页 共 149 页

resolution or zoom mode, enabling / disabling thermal camera's synchronized zoom, enabling / disabling boot recording.

About Camera Configuration

- IP Config: Modify camera IP addresses.
- Gateway Config: Modify camera gateway.
- Gimbal Working Mode: Switch gimbal working mode (Follow Mode / Lock Mode / FPV Mode)
- Main Stream: Select camera source and switch output resolution for the main stream.
- Sub Stream: Select camera source and switch output resolution for the sub stream.
- Record Resolution: Select camera source and switch video resolution for recording.
- Zoom Mode: Switch zoom camera's zoom mode (Normal / Absolute Zoom).
- Boot Record: Enable / disable automatic video recording by TF card as soon as gimbal camera is powered.

O Mark


The camera image source of the record stream is the same with the main stream.

7.4 Gimbal Calibration

The "Gimbal Calibration" can help users do IMU calibration, IMU Constant temperature calibration, and accelerator hexahedral calibration.

7.4.1 IMU Calibration

IMU calibration can keep the inertial measuring unit's accuracy and reliability.

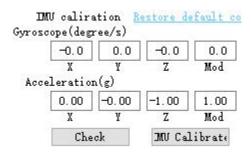


Steps


Click "Check", gimbal camera will power off automatically. Meanwhile, please follow
the message box and place the gimbal camera on a flat surface and make sure that the
IMU is static. Do not touch or vibrate the gimbal camera. Then go for "Start
Checking".




2. The PC assistant start to check IMU status automatically to determine if the gimbal should be calibrated.

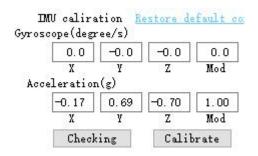


- 3. If IMU is working normally, there will be a message box to indicate "not necessary to calibrate".
- 4. If IMU is not working normally, there will be a message box to indicate "calibration is necessary".

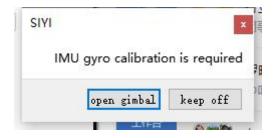

- 5. Click "Start Gimbal" and "Calibrate".
- 6. The message box will say again "please follow the message box and place the gimbal camera on a flat surface and make sure that the IMU is static. Do not touch or vibrate the gimbal camera".

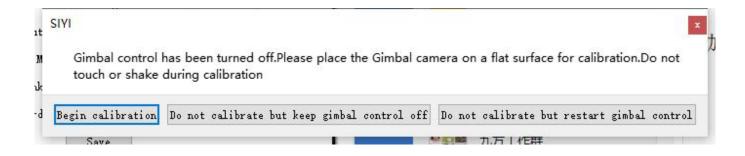


7. IMU calibration menu will display "calibrating".

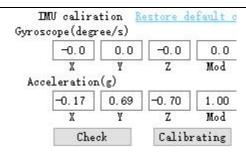

8. After a few seconds, IMU calibration will be finished.

7.4.2 IMU Constant Temperature Calibration

Specially designed for using gimbals in scenarios with big difference in temperature to avoid the situation that gimbal behaves abnormally because IMU cannot reach constant temperature normally and fast when the environment temperature is far from IMU constant temperature.

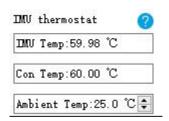

Before calibration, please input the environment temperature of your operating field, the software will start to calculate the target IMU constant temperature so that IMU can reach the temperature fast after powering on gimbal camera. The software is showing IMU temperature in real-time.



7.4.3 Accelerator Hexahedral Calibration

Accelerator hexahedral calibration can calibrate the accelerator's sensitivity, zero bias, and inter axis error, etc. During calibration, the gimbal should be placed in all hexahedrons to record accelerator's output value on each orientation and build the error model. Hexahedral calibration can keep the accelerator's accuracy and reliability.

ACC Calibra	tion Re	store	default	conf	ig	
4CC Calibrat∈	TOP:	0	Left:	0	Front:	0
Next	101.	0	Leit.	0	Front.	0
Cancel	Bottom:	0	Right:	0	Back:	\odot

7.5 Main Firmware Update Log

Date	2024-01-26	
Camera	0.1.6	
Firmware	0.1.0	
Gimbal	0.2.2	
Firmware	0.2.2	
SIYI FPV	Original Version	
Windows	Original version	
SIYI FPV	2.5.15.695	
Android	2.3.13.093	
SIYI PC	1.4.0	
Assistant	1.4.0	

~ * * *	
	1. New: Support SIYI FPV (Windows) version
	2. New: Support DCIM standard file system and EXIF information format
	3. New: SIYI gimbal SDK supports obtaining attitude data from external devices for
	flight controller integration
	4. New: SIYI gimbal SDK supports obtaining GPS information and adding it to photo
Updates	EXIF format
	5. New: AI following function (only for SIYI AI tracking module and multi-rotor
	drones)
	6. New: Adapt to Mavlink protocol control and support the integration of PX4 flight
	controller attitude data

Date	2023-10-20
Camera Firmware	0.1.5 svn1144
Gimbal Firmware	0.2.0 svn7078
SIYI FPV	2.5.15.679
SIYI PC Assistant	1.3.8
Updates	 New: Support SIYI AI tracking module. New: SIYI gimbal SDK supports configuring camera specs (bit rate, codec format, etc.).

Date	2023-08-29		
Camera Firmware	0.1.4 svn1063		
Gimbal Firmware	0.1.9 svn6966		
Zoom Firmware	0.1.6 svn6792		
SIYI FPV	2.5.15.660		
SIYI PC Assistant	1.3.7		
Updates	 New: Streaming resolution switch. New: SIYI gimbal SDK supports TCP protocol. New: SIYI gimbal SDK supports point to focus. New: Enable OSD in Micro-HDMI video output. New: Preview and download pictures through SIYI FPV app and format SD card. New: Firmware upgrade through SIYI FPV app. New: Support flight controller attitude data integration. New: SIYI gimbal SDK supports acquiring max zoom and current zoom multiples. 		

9. New: Up to four video streams through RTSP protocol simultaneously.
10. Improve: Gimbal saves working mode before power off.
11. Improve: Initial speed.
12. Improve: Focus takes too long on start.
13. Improve: Zoom firmware upgrade fails. Upgrading takes too long.
14. Improve: Focus was in the image center when controlled by S.Bus.

7.6 SIYI PC Assistant Update Log

Date	2024-01-06
Version	1.4.0
Updates	1. New: Support AI follow function and adjusting follow speed.

Date	2023-12-18
Version	1.3.9
Updates	1. New (ZT30, ZT6): An activation process for thermal imaging function.

Date	2023-11-02		
Version	1.3.8 svn6958		
	1. New: Compatibility to ZT6 Mini Dual-Sensor Optical Pod.		
	2. New: A switch to enable zoom camera and thermal camera recording		
TT 1 4	simultaneously (only in non-split-image mode and main / sub stream should be		
Updates	zoom / thermal camera).		
	3. Fix: ZT30 does not record video after setting recording resolution.		
	4. Fix: ZT30 does not set main stream resolution.		

Date	2023-08-24		
Version	v1.3.7 svn6958		
	1. New: Compatibility to a new model.		
Updates	2. New: Support ZT30 to switch between H265 and H264 codec.		
	3. Improve: Gimbal calibration function has its own page now.		
	4. New: Gimbal configuration (thermal synchronize zoom, thermal color palette)		

8 After-sale Service

Please visit the SIYI Technology support page at <u>Service and Support - SIYI Technology | Empowering and Building an Intelligent Robot Ecology</u> for the latest after-sales and warranty information.