


2012 **cube**

QUICK REFERENCE GUIDE



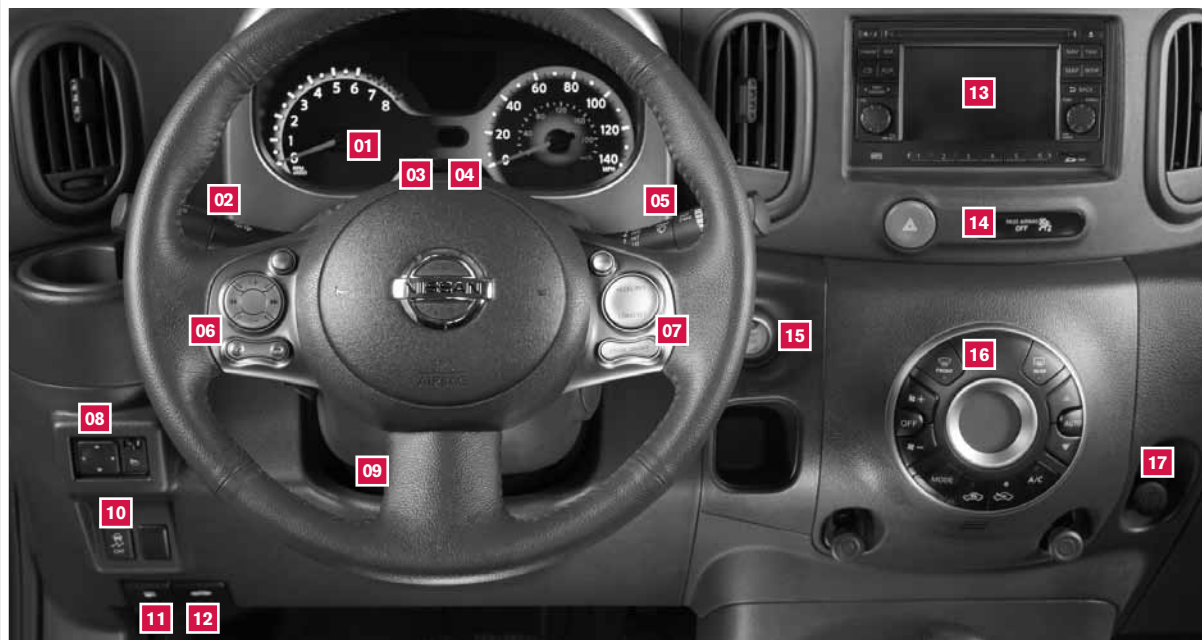

- | | | | |
|--|--|---|---|
| 01 LOW TIRE PRESSURE WARNING LIGHT | 06 STEERING WHEEL SWITCHES FOR AUDIO / BLUETOOTH* | 10 VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH* | 14 FRONT PASSENGER AIR BAG STATUS LIGHT* |
| 02 HEADLIGHT AND TURN SIGNAL CONTROL | 07 CRUISE CONTROL | 11 FUEL-FILLER DOOR RELEASE | 15 PUSH BUTTON IGNITION SWITCH |
| 03 INSTRUMENT BRIGHTNESS CONTROL* | 08 OUTSIDE MIRROR CONTROL SWITCH | 12 HOOD RELEASE* | 16 AUTOMATIC CLIMATE CONTROLS |
| 04 TWIN TRIP ODOMETER / TRIP COMPUTER | 09 STEERING WHEEL TILT ADJUSTMENT* | 13 AUDIO AND NAVIGATION SYSTEM | 17 POWER OUTLET* |
| 05 WINDSHIELD WIPER / WASHER SWITCH | | | |

*See your Owner's Manual for information.

NEW SYSTEM FEATURES

Navigation System (if so equipped)	2
--	---

ESSENTIAL INFORMATION

Loose Fuel Cap	3
Tire Pressure Monitoring System (TPMS)	3

FIRST DRIVE FEATURES

NISSAN Intelligent Key® System (if so equipped)	4
Opening the Back Door	5
Front Seat Adjustments	5
Rear Seat Adjustments	5
Outside Mirror Control Switch	6
Starting/Stopping the Engine	6
Headlight Control Switch	7
Windshield Wiper/Washer Switch	8
Automatic Climate Controls (if so equipped)	9
FM/AM/XM® Satellite Radio with CD Player (if so equipped)	11
USB/iPod® Interface (if so equipped)	12
Cruise Control (if so equipped)	12
Fuel-Filler Door	13

SYSTEM GUIDE

Trip Computer	14
Bluetooth® Hands-free Phone System (if so equipped)	14



- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **“Safety — Seats, seat belts and supplemental restraint system (section 1)”**, the **“Heater, air conditioner, audio and phone systems (section 4)”** and the **“Starting and driving (section 5)”** of your Owner’s Manual.



To view detailed instructional videos, go to
www.nissanownersinfo.mobi/2012/cube
 or snap this barcode with an appropriate barcode reader.



Additional information about your vehicle is also available in your Owner’s Manual, Navigation System Owner’s Manual and at www.nissanusa.com.

new system features



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.

For more information, refer to your Navigation System Owner's Manual.

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the twin trip odometer display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light **SERVICE ENGINE SOON** may also illuminate.



For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A **CHECK... TIRE... PRES...** warning message **01** will appear as scrolling text in the twin trip odometer **02** and the low tire pressure warning light **03** will illuminate when one or more tires are low on pressure and air is needed.

- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mile (1.6km) at moderate speeds.


- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25km/h). The **CHECK TIRE PRES** warning message and low tire pressure warning light will disappear.

- When the low tire pressure warning light flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.

- Tire pressure rises and falls depending on the heat caused by the vehicle’s operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates in low ambient temperature, check the tire pressure in your tires.

- Check the tire pressures (including the spare tire) often and always prior to long distance trips.

- The Tire and Loading Information label contains valuable information. Please refer to section 9, “Technical and consumer information”, in your Owner’s Manual for the location of the Tire and Loading Information label.

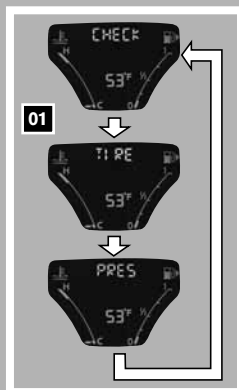

For more information, refer to the “**Instruments and controls (section 2)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it-yourself (section 8)**” of your Owner’s Manual.

first drive features

NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)

The NISSAN Intelligent Key® System allows you to lock or unlock the vehicle, open the back door and start the engine.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **01**, push the back door request switch **02**, or press the **i** button **03** on the keyfob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **01** once or the back door request switch **02** once; the corresponding door will unlock. Push the request switch again within 1 minute; all other doors will unlock, or
 - Press the **i** button **04** on the keyfob to unlock the driver's side door. Press the **i** button again; all other doors will unlock.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the **panic** button **05** for more than 1 second. Once activated, the panic alarm and headlights will stay on for 25 seconds.



INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged, or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:

1. Move the shift lever to the **P (PARK)** position.
2. Firmly apply the foot brake.
3. Touch the ignition switch with the Intelligent Key and a chime will sound.
4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.





For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it yourself (section 8)**” of your Owner's Manual.

OPENING THE BACK DOOR

Use one of the following methods to unlock the back door then pull the handle **01** to open:



- Press the **1** button **02** on the keyfob twice.
- Push the back door request switch **03** while carrying the NISSAN Intelligent Key® with you (if so equipped).

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

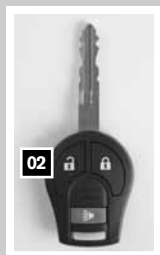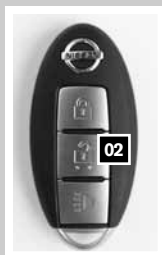

FRONT SEAT ADJUSTMENTS

- To slide the seat forward or backward, pull up on the lever **01** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- To recline the seatback, pull up on the lever **02** and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.

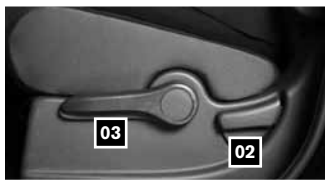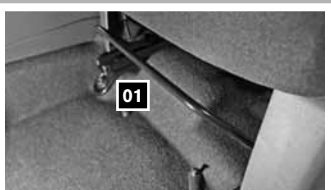

SEAT LIFTER (driver’s seat only)


- To adjust the seat height, pull up or push down repeatedly on the adjusting lever **03**.

For more information, refer to the “**Safety – Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

REAR SEAT ADJUSTMENTS

ADJUSTING THE REAR BENCH SEAT

- To slide the rear bench seat forward or backward, pull up on the lever **01** under the front of the seat and slide forward or backward. The seat will slide in 3 fixed positions. Release the lever to lock the seat in position.
- To recline the seatback, pull the strap **02** and lean back. To bring the seatback forward, pull the strap and lean forward. Release the strap to lock the seatback in position.

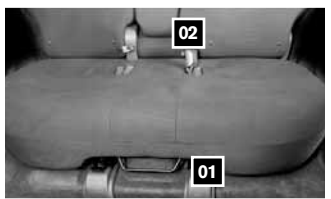

first drive features

FOLDING DOWN THE REAR BENCH SEAT


- To fold the seats flat, secure the seat belts on the seat belt hooks on the side wall. Release the connector tongue of the rear center seat belt from the buckle, then store the connector and seat belt tongues on the seat belt hook.
- Before folding down the seatback, tuck the seat belt buckles into the seat cushion pockets.
- Fold the seatback down by pulling the adjusting strap **01**.
- To raise the seatback, lift up each seatback and push it to the upright position until it is latched.
- After raising the seatback, pull the seat belt buckles out of the seat cushion pockets until they are fully extended before using the seat belts.



For more information, refer to the “**Safety – Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

OUTSIDE MIRROR CONTROL SWITCH

- The outside mirror control switch is located on the left side of the instrument panel.
- To select the left or right mirror, move the switch **01**.
- Adjust each mirror to the desired position using the switch **02**.
- To prevent accidentally moving the mirror, move this switch **01** to the center “neutral” position.

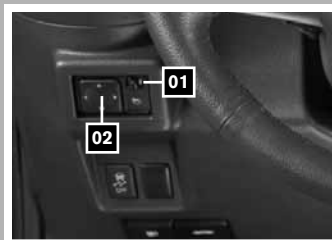

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

STARTING/STOPPING THE ENGINE

CONTINUOUSLY VARIABLE TRANSMISSION (NISSAN Intelligent Key® models only - if so equipped)

- Depress the brake pedal.
- Move the shift lever to **P (PARK)**.
- Push the ignition switch to start the engine.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position, apply the parking brake and push the ignition switch.



PUSH BUTTON EMERGENCY ENGINE SHUT OFF

To shut off the engine in an emergency situation while driving, perform one of the following procedures:

- Rapidly push the push button ignition switch 3 consecutive times in less than 1.5 seconds, or
- Push and hold the push button ignition switch for more than 2 seconds.

MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to **N (Neutral)**.
- Depress the clutch pedal to the floor.
- Turn the ignition switch to start the engine.



TURNING THE ENGINE OFF


- Apply the foot brake and place the vehicle in first gear, then apply the parking brake and turn the ignition switch to **OFF**.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **03** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **01** to turn on the headlights.

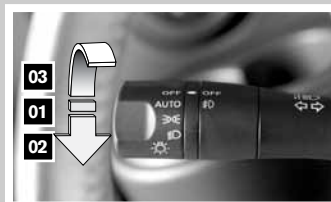


AUTOLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  **01** or  position **02**.

HIGH BEAM SELECT

- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light goes off.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.

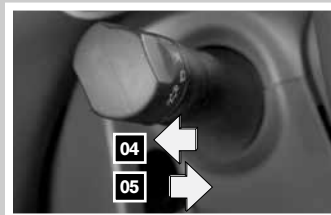


first drive features

FOG LIGHT SWITCH (if so equipped)

NOTE: The headlights must be on and the low beams  selected for the fog lights to operate.

- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.


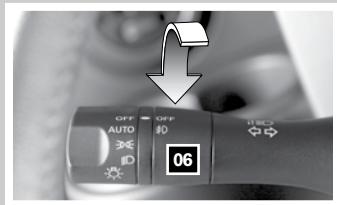


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

WINDSHIELD WIPER/WASHER SWITCH


- Move the lever to the following positions to operate the windshield wipers:

- 01** Mist (**MIST**) - One sweep operation of the front wipers.
- 02** Intermittent (**INT**) - Front wipers operate intermittently. The intermittent operation speed can be adjusted by twisting the time control ring **03**.
- 04** Low (**LO**) - Front wipers operate at a continuous low-speed.
- 05** High (**HI**) - Front wipers operate at a continuous high-speed.
- 06** Pull the lever toward you to activate the front washer. The front wipers will operate several times.

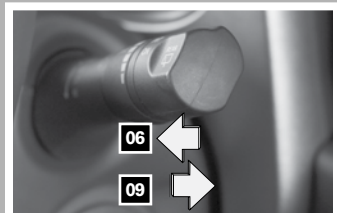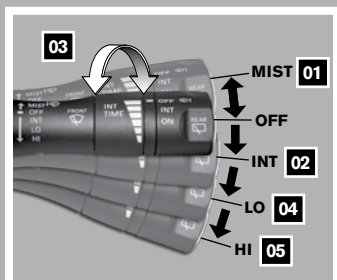


REAR WINDSHIELD WIPER AND WASHER

- 07** Intermittent (**INT**) - Rear wiper operates intermittently.
- 08** Low (**ON**) - Rear wiper operates at a continuous low-speed.
- 09** Push the lever forward to activate the rear washer. The rear wiper will operate several times.

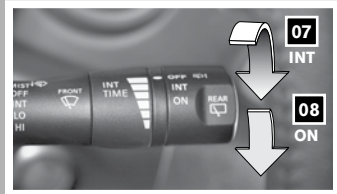

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

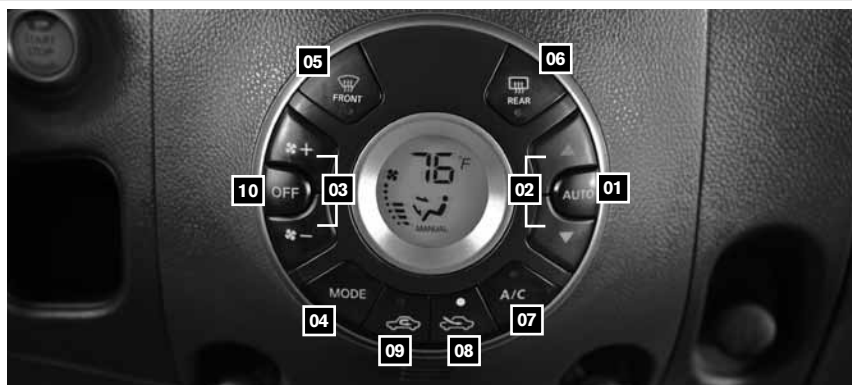

AUTOMATIC CLIMATE CONTROLS (if so equipped)

01 AUTO BUTTON

- The auto mode may be used year-round. Press the **AUTO** button and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

02 TEMPERATURE CONTROL BUTTONS

- Press the temperature control buttons **02** up ▲ to increase the temperature or down ▼ to decrease the temperature.

03 FAN SPEED CONTROL BUTTONS

- Press the fan speed control buttons to manually adjust the fan speed faster ☼+ or slower ☼-.
- Using the fan speed control buttons will disable the auto mode; to resume auto mode, press the **AUTO** button **01**.

04 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

- ☼ Air flows from the center and side vents.
- ☼ Air flows from the center, side and foot vents.
- ☼ Air flows mainly from the foot vents.
- ☼ Air flows from the defroster and foot vents.

05 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster control button  to turn the system on. The **A/C** automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Use the temperature control buttons **02** to set the desired temperature.
- To set the defroster on high, press the fan speed control button ☼+ to increase the fan speed to the maximum setting.

first drive features

06 DEFROSTING REAR WINDOW AND OUTSIDE HEATED MIRRORS (if so equipped)

- Push the rear window defroster switch  to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

07 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.

08 OUTSIDE AIR CIRCULATION BUTTON

- Press the outside air button  to draw fresh air into the vehicle; the indicator light on the button will illuminate.
- Press and hold the outside air circulation button  for more than 1.5 seconds to set automatic outside air circulation mode.

09 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate air inside the vehicle; the indicator light on the button will illuminate. This system is used to avoid outside odors and helps to adjust the inside vehicle temperature more effectively.
- The air recirculation mode can only be selected if the air flow mode control is in the following positions: ,  or .

10 OFF BUTTON

- Press the **OFF** button to turn the climate control system off.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Heater, air conditioner, audio and phone systems (section 4)**” of your Owner’s Manual.



FM/AM/XM[®] SATELLITE RADIO WITH CD PLAYER (if so equipped)

01 VOL/ON-OFF CONTROL KNOB

- Press the **VOL/ON-OFF** control knob to turn the system on or off.
- Turn the **VOL/ON-OFF** control knob to the right or left to increase or decrease the volume.

02 TUNE/SCROLL/AUDIO KNOB

- To manually tune the radio, turn the **TUNE/SCROLL/AUDIO** knob left or right.

03 SEEK/CATEGORY BUTTONS

- To scan through each broadcasting station, press the **SEEK/CATEGORY** buttons.
- To skip from one track to another on a CD, press the **SEEK/CATEGORY** buttons.
- When the **SEEK/CATEGORY** buttons are pressed and held while a CD is playing, the CD will rewind or fast forward. When the button is released, the CD will play at normal speed.

04 STATION SELECT BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for XM[®] satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM•AM** button **05** or **XM** button **06**, then tune to the desired AM, FM or XM satellite radio station.
- Then press and hold the desired station select button (**1-6**) until a beep is heard and the sound is briefly muted. The channel indicator will appear on the display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (**1-6**).

*XM[®] Satellite Radio is only available on vehicles equipped with optional XM[®] satellite subscription service.

For more information, refer to the **"Heater, air conditioner, audio and phone systems (section 4)"** of your Owner's Manual.

first drive features

USB/IPOD® INTERFACE (if so equipped)


- The USB jack **01** is located on the instrument panel in front of the shift lever.
- When a compatible USB memory device or iPod® is plugged into the USB jack **01**, compatible audio files stored on the device can be played through the vehicle's audio system.

For more information, refer to the "**Heater, air conditioner, audio and phone systems (section 4)**" of your Owner's Manual.



CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph.
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **CRUISE ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **04**.
- To turn off cruise control, push the **CRUISE ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will turn off.

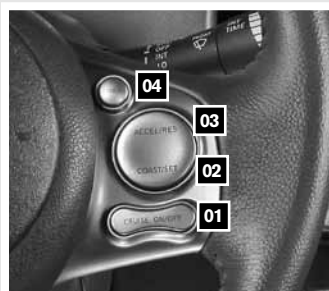

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

FUEL-FILLER DOOR

- To open the fuel-filler door, pull the release **01** located on the driver's side instrument panel.
- The fuel-filler door is located on the right, rear side of the vehicle.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.




system guide

TRIP COMPUTER

With the ignition switch in the **ON** position, trip computer **01** modes can be selected by pressing the trip computer mode switch **02** on the instrument panel.

The following modes can be selected in the display:

- Trip A – measures the distance of one specific trip.
- Trip B – measures the distance of a second specific trip.
- Current Fuel Consumption – displays the current fuel consumption.
- Distance to Empty (dte) – displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
- Average Fuel Consumption – displays the average fuel consumption since the last reset.

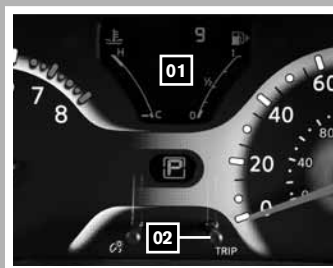

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth wireless technology and voice recognition to provide hands-free cellular phone communication.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- Close all windows. Surrounding noises may interfere with system operation and performance.
- Press the  button on the steering wheel to activate voice recognition.
- Wait for the tone before speaking.
- Begin speaking a command within 5 seconds of the tone.
- Speak in a clear and natural voice without pausing between words.
- Look straight ahead and avoid speaking too loudly or too softly.
- To go back to the previous command, say "Go back" or "Correction."
- To cancel a voice recognition session, simply wait 5 seconds, say "Cancel" or "Quit," or press the  button for 5 seconds.



*Some jurisdictions prohibit the use of cellular telephones while driving.

- To interrupt the system voice and give a command quickly, press the  button.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To increase or decrease the volume of the voice prompts, push the volume control switches  or  on the steering wheel or turn the **VOL/ON-OFF** control knob on the audio system while the system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner's Manual for detailed information.
- Some commands are not available while the vehicle is in motion.
- The "Help" command can be used to hear a list of available commands at any time.
- Please refer to the cellular phone manufacturer's Owner's Manual for detailed information regarding your Bluetooth phone.
- For recommended phones and detailed instructions, please visit www.nissanusa.com/bluetooth.

CONNECTING PROCEDURE

NOTE: The vehicle must be stationary when connecting the phone.

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say: "Connect phone". The system acknowledges the command and announces the next set of available commands.
3. Say: "Add phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
4. Initiate connecting from the phone:
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a Passkey code, enter "1234" from the handset. (The Passkey code is assigned by NISSAN and cannot be changed.)
5. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.

PHONEBOOK SETUP

- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth system.
- If the phonebook does not download automatically, 40 entries can be individually downloaded.
- To manually download entries:
 1. Push the  button on the steering wheel.
 2. After the tone, say "Phonebook".

3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.

- The transfer procedure varies according to each cellular phone. See your cellular phone's owner's manual for details. You can also visit www.nissanusa.com/bluetooth for instructions on transferring phone numbers from NISSAN recommended cellular phones.

4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store."

5. The system confirms the name, location and number.

MAKING A CALL

1. Press the  button. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button. To reject the call, press the  button.
- To hang up the phone at the end of a call or to disconnect during call placement, press the  button.

For more information, refer to the "Heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at anytime, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact Nissan North America, Inc.



To view detailed instructional videos,
go to **www.nissanownersinfo.mobi/2012/cube**
or snap this barcode with an appropriate barcode reader.

