

# Saitel DR

## M555A0000y / AB\_DI

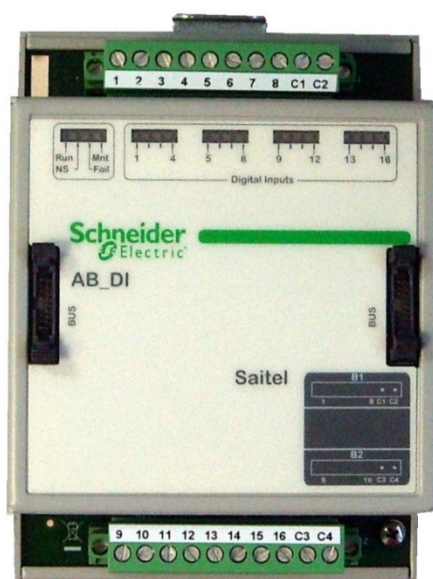
### User Manual

This manual provides information for the assembly, wiring, configuration and maintenance of the AB\_DI module.

SE-M555-USR

Publication Date (05/2020)

Read carefully the information contained in this manual before assembly, installation and use of the equipment.



## Change control

Rev	Date	Description
01	29-03-2019	Initial edition.
02	20-05-2020	Fixed errors and removed information included in the Saitel DR platform user manual.

## General Information

The Saitel platform and all its components have been developed in accordance to the requirements for a quality management system, complying with the ISO 9001:2015 Norm.

Document n°:	SE-USR-M555
Revision/Date:	02 / 20-05-2020
File:	AB_DI – User Manual_EN_02.pdf
Retention period:	Permanent throughout its validation period + 3 years after its cancellation.

## Reference Documents

User Manual	Document Code
Easergy Builder User Manual	FTE-MSS-S856
Saitel DR Platform user manual	FTE-F800-USR
webApp User Manual	FTE-WPP-S856
Webtool user manual	FTE-MSW-S856
EOL Instructions	FTE-EOLI-M555

## Software Version in this Manual

The information in this manual is valid for the software versions listed below. This information is also valid for later versions, although some parameters may change slightly:

Module	RTU Software		Easergy Builder (Plugin)	
	Module	Version	Plugin	Version
Baseline	HUe	11.06.03		
Linux	HUe	18.06.08.12.24.45		
Baseline	HU_A/HU_AF	11.04.13		
vxWork	HU_A/HU_AF	17.09.14.13.41.44		
Baseline	HU_B	02.03.01		
Easergy Builder Tool				1.2.10.3
AB_DI software	AB_DI.bin	01.07.08		

# Content

<b><u>1</u></b>	<b><u>SAFETY &amp; HEALTH.....</u></b>	<b><u>4</u></b>
<b><u>2</u></b>	<b><u>GENERAL DESCRIPTION .....</u></b>	<b><u>14</u></b>
<b><u>3</u></b>	<b><u>PHYSICAL MOUNTING &amp; INSTALLING .....</u></b>	<b><u>20</u></b>
<b><u>4</u></b>	<b><u>MAINTENANCE &amp; CONFIGURATION.....</u></b>	<b><u>27</u></b>
<b><u>5</u></b>	<b><u>TECHNICAL SPECIFICATION TABLE.....</u></b>	<b><u>47</u></b>

# 1 Safety & Health

# Content

<b>1</b>	<b>SAFETY &amp; HEALTH.....</b>	<b>4</b>
<b>1.1</b>	<b>INTRODUCTION .....</b>	<b>6</b>
1.1.1	INFORMATION OF SAFETY .....	6
1.1.2	PRESENTATION .....	6
<b>1.2</b>	<b>INTRODUCTION TO SAFETY.....</b>	<b>7</b>
<b>1.3</b>	<b>SYMBOLS AND LABELS ON THE EQUIPMENT .....</b>	<b>8</b>
<b>1.4</b>	<b>INSTALLATION, SETUP AND OPERATION .....</b>	<b>8</b>
<b>1.5</b>	<b>EARTHING .....</b>	<b>10</b>
1.5.1	ELECTRICAL SAFETY .....	10
1.5.2	FUNCTIONAL EARTH (EMC).....	11
<b>1.6</b>	<b>HANDLING ELECTRONIC COMPONENTS .....</b>	<b>11</b>
<b>1.7</b>	<b>TECHNICAL SPECIFICATIONS FOR SAFETY.....</b>	<b>12</b>
1.7.1	PROTECTIVE ELEMENTS .....	12
1.7.2	ENVIRONMENTAL CONDITIONS .....	12
1.7.3	STORAGE CONDITIONS .....	12
<b>1.8</b>	<b>TECHNICAL LABEL.....</b>	<b>13</b>
<b>1.9</b>	<b>PACKING AND UNPACKING.....</b>	<b>13</b>
<b>1.10</b>	<b>DECOMMISSIONING AND DISPOSAL.....</b>	<b>13</b>

## 1.1 Introduction

### 1.1.1 Information of Safety

#### Important information

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service or maintain it. In this manual you can find different types of messages associated with situations that have different level of risk for people and / or for the equipment.



This symbol indicates "DANGER" or "WARNING". This symbol informs of an electrical risk that will cause personal injuries if the instructions are not followed.



This symbol is associated to a safety alert. It is used to warn of possible personal injury hazards. The user must follow all instructions or messages associated to this symbol to avoid possible injuries.



#### DANGER

**DANGER** indicates a hazardous situation which, if not avoided, **will result** in death or serious injury.



#### WARNING

**WARNING** indicates a hazardous situation which, if not avoided, **could result** in death or serious injury.

#### INFORMATION

**INFORMATION** is used to address practices not related to physical injury. The safety alert symbol shall not be used with this signal word.

### To Keep in Mind

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is who fulfill with requirements in paragraph 1.2

### 1.1.2 Presentation

This manual provides information for a safe handling, commissioning and testing. This Safety chapter also includes descriptions of the labels on the equipment.

Documentation for equipment ordered from Schneider Electric is dispatched separately from manufactured goods and may not be received at the same time. Therefore, this guide is provided in order to do that printed information which may be present on the equipment is fully understood by the recipient.

The technical data in this safety guide is typical only, see the technical data section of the user manual for specific details of a particular equipment.



Before carrying out any work on the equipment the user should be familiar with the contents of this Safety chapter and the ratings on the equipment's rating label.

**THE SAFETY SECTION MUST BE READ BEFORE STARTING ANY WORK ON THE EQUIPMENT.**

## 1.2 Introduction to Safety

The information in this section is intended to get that equipment is properly installed and handled in order to maintain it in safety conditions. It is assumed that everyone who will be associated with the equipment will be familiar with the contents of that Safety section.

When electrical equipment is in operation, dangerous voltages will be present in certain parts of the equipment. Failure to observe warning notices, an incorrect or improper use may endanger personnel and equipment and also cause personal injury or physical damage.



### **WARNING**

Before working with the terminal of connection, the device must be turned off and disconnected of the feeding.

Proper and safe operation of the equipment depends on appropriate shipping and handling, proper storage, installation and commissioning, and on careful operation, maintenance and servicing. For this reason only qualified personnel may work on or operate the equipment.

Qualified personnel are individuals who:

- Have read and understood the information on the device and its user manual.
- Are familiar with the installation, commissioning, and operation of the equipment and of the system to which it is being connected.
- Are able to safely perform switching operations in accordance with accepted safety engineering practices and are authorized to energize and de-energize equipment and to isolate, ground, and label it.
- Are trained in the care and use of safety apparatus in accordance with safety engineering practices.
- Are trained in emergency procedures (first aid).





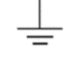





It is necessary to consider that the documentation of the device collects the instructions for its installation, set up and operation. However, the manuals could not cover all the possible circumstances neither include specific information on all the details.

In case of questions or specific problems, contact with his office of sales Schneider Electric or with the center of attention to the customer and request the necessary information.

## 1.3 Symbols and Labels on the Equipment

Before the equipment is installed or commissioned, the user must understand the following symbols, which may be used on the equipment or referred to in the user documentation:

Table 1 – Symbols

Symbol	Associated Text	Description
	<b>Possibility of electric chock</b>	International Electrotechnical Commission (IEC) symbol associated to a <b>DANGER</b> or <b>WARNING</b> message indicating that there is an electrical risk. Failure to follow these instructions could cause damage to people or death.
	<b>Caution, read the manual.</b>	Symbol associated with a risk alert. The user must read the manual before handling the equipment.
	<b>Possibility of electric chock</b>	American National Standards Institute (ANSI) symbol associated to a <b>DANGER</b> or <b>WARNING</b> message indicating that there is an electrical risk. Failure to follow these instructions could cause damage to people or death.
	<b>Protective earth connection</b>	Associated symbol to the protective ground connection. See paragraph 1.5.1 in this manual.
	<b>Functional earth connection</b>	Associated symbol to the functional ground connection. See paragraph 1.5.2 in this manual.
	<b>CE Mark</b>	This symbol indicates that the equipment has been developed in compliance with all applicable European Directives.
	<b>Electronic device. Special instructions must be follow for discard it.</b>	This symbol indicates that, at the end of its life, this module must be discarded according to the WEEE Directive (Waste Electrical and Electronic Equipment).
	<b>Compliant with RoHS.</b>	The equipment has been designed and manufactured according to RoHS Directive (Restriction of Hazardous Substances).
	<b>Direct Voltage</b>	Symbol of direct voltage ( $V_{DC}$ ).
	<b>Alternate Voltage</b>	Symbol of alternate voltage ( $V_{AC}$ ).

## 1.4 Installation, Setup and Operation

This equipment could use high voltages (> 50 V) depending on the ordering option. The user is responsible to check that the device is adequate for the installation where it will be mounted. The user should read the instructions of installation before proceeding to the use or maintenance of the device.

Not following these instructions can be dangerous for the people and the devices.



## ⚠ ⚡ DANGER

Devices that handle dangerous tensions are marked with a sticker on the front label (size: 12,5 mm). This label must be visible all the time while the module is installed on the DIN rail

The following products handle dangerous tensions:

- **HU120:** High-performance CPU with acquisition (P/N M590xx000x).
- **HU\_AF:** Advanced head unit with acquisition (P/N M503xx3x0x and P/N M503xx4x0x). For other part numbers, depending on the voltage handled by the equipment connected to the digital outputs (voltage > 50 V), this module must be marked with an electric risk label. It will not be marked on factory.
- **AB\_DI:** Digital inputs module (P/N: M55520000x, M55530000x and M55540000x).
- **AB\_DIDO:** Input and output digital module (P/N M5722x000x, M5723x000x and M5724x000x). For other part numbers, depending on the voltage handled by the equipment connected to the digital outputs (voltage > 50 V), this module must be marked with a electric risk label. It will not be marked on factory.
- **AB\_AC:** Direct measurements module (P/N M562x0000x).
- **AB\_DO:** This module does not handle high voltages, it will not be marked at the factory. This module must be marked to inform about the risk when some equipment that manage voltage higher than 50 V are connected to digital outputs.

It is recommended to install the RTU inside a cabinet with a key. This cabinet only should be opened by a qualified person.

## ⚠ WARNING

If this type of cabinet isn't available, a barrier must be installed in order to avoid an accidental contact with these dangerous elements. This barrier only should can be removed using a special tool.

If the barrier has to be removed in order to access to equipment, personnel responsible for the task must be sure that the barrier is installed again when the task is finished.

While the RTU is accessible for a user, all people must follow all instructions to prevent electrical risk or discharges.

**Not following these instructions can give like result that the device do not work properly or even can damage to the people or devices.**



An electrical risk symbol with enough size must be included on the cabinet's door or on the barrier.

The following image shows an example:

Figure 1 - Barrier of protection for elements with dangerous voltages.



**INFORMATION**

Terminals will not be accessible to the user directly once it has made the installation of the device. The cabinet will have to remain closed with key or the screen of installed protection.

The cabinet or installation must have a general switch placed just in the cable entry of the installation (see paragraph 1.7.1 )

For the cleaning of the equipment, it is recommended to remove the power and to use only a dry cloth by the surface when it detects excessive presence of dust or any element deposited on the surface.

**WARNING**

Don't use liquid products of cleanliness due to the presence of active parts.

Because of the variety of uses of the product, the managers of the application and use of this device of control will have to take the measures to ensure the fulfillment of all the requests of security and provision of each application. The requests do reference to the applicable laws, regulations, codes and standard.

## 1.5 Earthing

**WARNING**

Before energizer the device, it has to be placed to earth properly such as it indicates in sections 1.5.1 and 1.5.2 .

When installing the device, ground is the first thing that should be connected and the last one that should be disconnected.

Saitel can be earthed for two distinct needs:

- For purposes of electrical safety (Protective Earth, PE).
- Improve the behavior in EMC and derive perturbations to earth (functional Earth).

### 1.5.1 Electrical Safety

Only qualified personnel, with knowledge about hazards associate with electrical equipment is allowed to install Saitel DR. In general, the installation will be following IEC 61010-1 recommendations in order to be compliant with this norm.



The modules must be installed on a metallic DIN Rail which is fixed on a metallic surface. This metallic surface must have an M4 screw marked with this symbol. According to the norm IEC 61010-1, the ground of the cabinet or installation must be connected to this screw.

AB\_DI is mounted in a metallic enclosure offering protection for isolation faults.

**WARNING**

AB\_DI and all electronic equipment with high voltage must be disconnected before dismounting a module from the DIN rail.

In the cabinet where the AB\_DI module is mounted, a dedicated connection with green/yellow wire should be used to have electric continuity to the installation protective earth. Use a wire with adequate section according to IEC 61010.

Figure 2 – Example of yellow/green cable for earthing.



The design and installation of the cabinet must be compliance with all the existing international and national electrical codes concerning protective grounding of any equipment.

### **WARNING**

According to Electrical Safety:

- The screw for ground must be exclusive for this use.
- Improve the behavior in ElectroMagnetic Compatibility (EMC) and derive perturbations to earth (functional Earth).

## 1.5.2 Functional Earth (EMC)

AB\_DI doesn't need to be connected to the functional earth.

## 1.6 Handling Electronic Components

Like any electronic device, Saitel is susceptible to receive electrostatic discharges during the handling. It is necessary to take the usual measures to minimize this risk, since serious damage to the equipment can be caused, which may not be detected immediately but which may affect the reliability of the product.

### **WARNING**

The enclosure **ONLY** should be removed when is **strictly necessary**, because this action has a risk for the equipment:

- Before removing the enclosure, the operator must be equipotential with the equipment.
- Avoid touching the electronic. The board must be always manipulated for the edges.
- If the equipment has to be passed between two persons, both must be equipotential.
- Put the module always on an antistatic surface or on a surface equipotential with you.
- During the storage and transport, the module will remain in the packaging.

**Not following these instructions can give like result that the device do not work properly or even can damage to the people or devices.**


## 1.7 Technical Specifications for Safety

### 1.7.1 Protective Elements

The cabinet's engineering and installation must include a general automatic switch next to the cables' input in the cabinet; once the door is opened, high voltages must be interrupted inside. This switch must be located at a place which is not accessible by a third person while the operator is using the boards in the cabinet.


Moreover, the installation will incorporate a circuit breaker of 5A next to the cabinet protecting it from possible overcurrent in the power supply.

Both switches will be labeled with the symbol O as "Off" and I as "On".

 <b>WARNING</b>
The connection / disconnection switch must be installed in a fixed element (for example the wall of the cabinet) and it mustn't break any earthing wire.

### 1.7.2 Environmental Conditions

The protection degree of the device is IP20.



 <b>WARNING</b>
This equipment has been designed ONLY for indoor use.

If it is necessary for his use in some external surroundings, it has to mount in a cabinet or specific accommodation that contributes a degree of protection IP54, protected against the dust and water.

The electronic cards of the modules will be able to be tropicalized or no according to the option of setting chosen. The tropicalized used is the AVR80, of the company ABchimie. It can consult all the technical information of this type of finishing in <http://www.abchimie.com/>.

Other data to take into account about the environmental are:

- Altitude until 2000 m.
- Operation temperature range: Between -40 °C and 70 °C. (IEC 60068-2-1 and IEC 60068-2-2).

 <b>WARNING</b>
 <p>According to the standard 60950-1, all electrical safety tests have been done in an environmental temperature range of -40 °C to 60 °C. For higher temperature (&gt; 60 °C), the module must be handled with care, since the metal surface could reach a dangerous temperature for the user.</p>

- Maximum relative humidity of 95%. (IEC 60068-2-30)
- Degree of pollution II. (IEC 60255-5)
- Overvoltage transitory until levels of Category III. (IEC 60255-5)

### 1.7.3 Storage Conditions

The continuous exhibition to some high levels of humidity during the storage can cause damages to the electronic components and reduce the useful life of the device.


We recommend that, in the enclosure of storage, the relative humidity do not exceed 50%.

Before the installation of an electrical equipment, it is recommended to leave the necessary time for the acclimatization of the environmental temperature.

## 1.8 Technical Label

Each Saitel product includes a technical label with the following information:

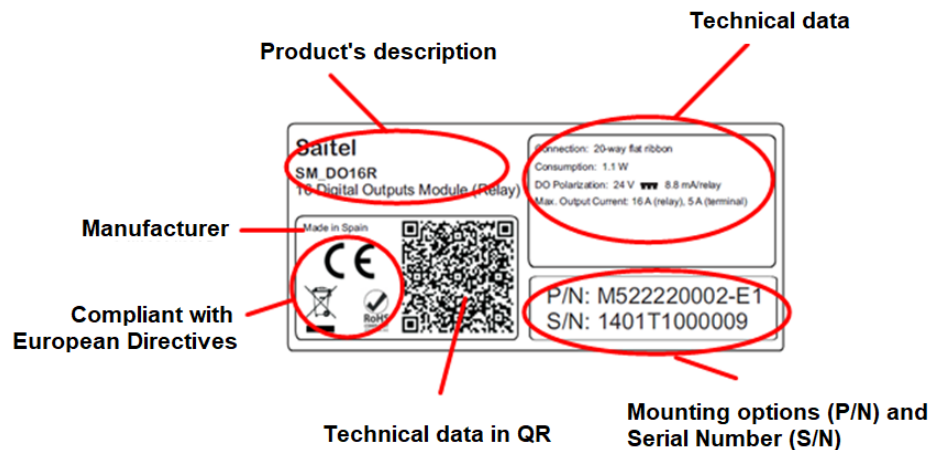Figure 3 - Technical label.



### NOTICE

On the "Technical data" zone, you can see relevant information about the input and output voltage in the module. Any voltage greater than 50 V must be considered as a high voltage.

## 1.9 Packing and Unpacking

All Saitel modules are packaged separately in their own carton box and shipped inside outer packaging. Use special care when unpacking the device. Don't use force.

### NOTICE

Our products leave our factory in closed, sealed original packaging. If at receipt of the delivery the transport packaging is open or the seal is broken, the confidentiality and authenticity of the information contained in the products cannot be ensured.

The design revision and manufacturing options can be determined using the P/N included in the packaging label on packaging.

After unpacking the device, inspect it visually to be sure it is in proper mechanical condition.

If the product needs to be shipped, the original packaging must be used, including foams and the carton box. If the original packaging is no longer available, make sure that the packaging used is according to ISO 2248 specifications for a drop height 1 m.

## 1.10 Decommissioning and Disposal



When the product is marked with this symbol, it means that, at the end of its life cycle, you mustn't dispose the product together with habitual residues. To avoid the possible damage to the environment or to the human health that represents the uncontrolled elimination of residues, please, separate the battery (if there is one) of the other elements, and each one must be recycled according to the local regulation.

## 2 General Description

# Content

<b><u>2</u></b>	<b><u>GENERAL DESCRIPTION .....</u></b>	<b><u>14</u></b>
2.1	SAITEL DR PLATFORM.....	16
2.2	AB_DI FUNCTIONS .....	17
2.3	HARDWARE ARCHITECTURE.....	18
2.4	SOFTWARE PROCESSING .....	19

## 2.1 Saitel DR Platform

Saitel DR is a hardware platform by Schneider Electric. It consists of a set of equipment which have been specifically designed for real-time control and automation applications. Saitel DR is a high-technology platform which serves Schneider Electric's business areas.

On this hardware platform, the Baseline Software Platform is installed. This software is used in Saitel families (Saitel DP and Saitel DR) and other Schneider Electric products.

Other features identifying Saitel DR are:

- A DIN rail is used for the mechanical installation.
- The communication between the controls units integrated in a distributed system is mainly established by Ethernet.
- The terminal blocks for field-connection are completely built into acquisition blocks.

Figure 4 - Saitel DR.



Saitel DR's design has been optimized to meet the most demanding requirements of multiple sectors:

- Safety and reliability requirements for power, gas and water supply, as well as sewage treatment plants, etc.
- Compliance with electric safety, electromagnetic compatibility, and environmental standards.
- Centralized monitoring and control of geographically-distributed systems which support hierarchical data acquisition and sharing networks.
- Local monitoring and control with data sharing capabilities of plant-distributed equipments.
- Quick troubleshooting, including the possibility of using programmable automation execution.

### WARNING


Please note Saitel DR **does not** support hot-swapping, that is, module replacements during operation.



## 2.2 AB\_DI Functions

The AB\_DI module offers 16 high-precision (1 ms) configurable digital inputs and a digital filter for each of them.

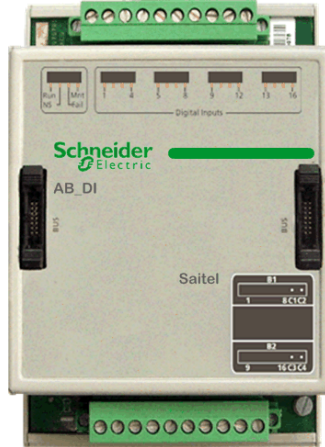Figure 5 - AB\_DI Module.




The main features of this module are:

- 16 digital inputs using 2 removable terminal blocks. Each terminal allows connecting 8 signals with common inputs.
- Each digital input can be configured as: Single / Double / Slow counter.
- Filtering the information before transmitting it to the HU, including a bounce filter and an anti-chattering filter.
- Information of each change for each signal. Each change is transmitted to the HU as an event including the value change and the timestamp.
- The module is synchronized via a message received from the HU.

The diagram below illustrates the functional blocks integrated in the AB\_DI acquisition block:

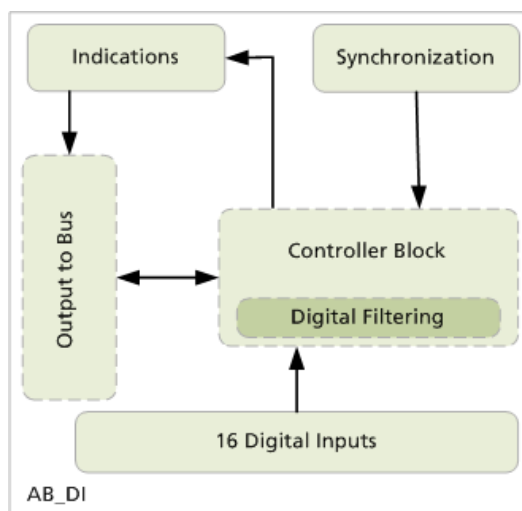Figure 6 - Functional block diagram.




These electronic boards allow the following functions:

- **Power supply:** Converts the 5 V<sub>DC</sub> to 3.3 V<sub>DC</sub> to power the AB\_DI electronic components. This block is not insulated.

- **I/O expansion:** There are two bus connectors in AB\_DI. The left connector is used as input whereas the right connector is used as output to expand the bus to the next ITB module.
- **Synchronization block:** AB\_DI is synchronized via a message received from the HU that includes the CPU time. Therefore the module will be synchronized with the synchronization source accuracy used for the HU.
- **Digital inputs:** The AB\_DI mounts two terminal blocks labeled as B1 and B2 which allow the 16 digital inputs to be connected through screw terminals. Each digital input can be configured as: Single, Double or Slow counter.
- **Controller block:** AB\_DI does a previous filtering of the information before it is transmitted to the HU. Additionally, every time the signal changes, it is transmitted to the HU as an event which includes the value change and the timestamp. The rest of the digital input processing is done by the CPU.
- **Indicators:** There are 20 LED indicators on the module's top panel which provide information about the module and the input signals.


## 2.3 Hardware Architecture

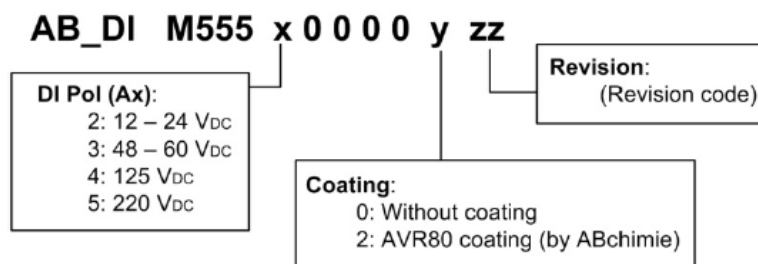Figure 7 - AB\_DI's P/N description.



The figure below illustrates the hardware block diagram:

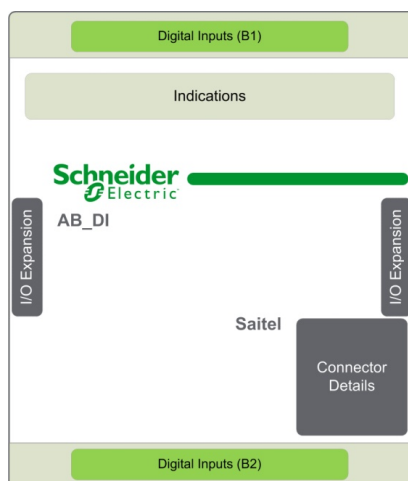Figure 8 - Hardware block diagram.



AB\_DI can be physically divided into two parts:

- A control board. This electronic board is common with others 90 mm modules).
- An acquisition board for management of the digital input signals.

The following P/N describes all available ordering options for this module:

## 2.4 Software Processing

AB\_DI can manage digital inputs with or without timestamp. In both cases, the values are 0 and 1. The acquisition block transmits the signal's value to the HU whenever it changes; it also attaches a timestamp if using this type of signals.

The quality values associated to the signal's values are:

- Invalid value due to a polarization failure.
- Locked signal.
- Invalid time; the module is not synchronized (only for signals with timestamp).

The types of points managed by RTDB and that are defined in function of these digital inputs are:

- Single digital.
- Double digital.
- Slow counter.

Before to send the information to the HU, each AB\_DI module process the information received for each digital input (depending on the type). This processing includes:

- **Filtering:** The changes that take less than the user-specified time are rejected (Filtering time- **TF**). The aim of this filtering is to prevent changes caused by transients.
- **Change memory:** It applies to the signals set to "event". After an event, the signal's value is retained for a brief period of time (Change in memory- **TM**) before another event occurs. It must assure the correct detection by the logic.
- **Inversion:** The input can be configured as enabled when the value is "1" or disabled when the value is "0"
- **Settling Time - TS:** It applies to the signals configured as double signals and it is controlled by the HU, not by the acquisition block. In digital signals defined as double signals, the stand-by time intends to create a time frame in which the deactivation of the active input is not detected until the other input is activated
- **Anti-chattering:** It applies to the signals set to "event". It allows the behaviour of a digital input, in which a determined number of changes are made in a specific timeframe, to be managed. Both the number of changes (**NCHAT**) and the duration of the monitoring frame (**TCHAT**) are user-definable.

## 3 Physical Mounting & Installing

# Content

<b>3</b>	<b>PHYSICAL MOUNTING &amp; INSTALLING .....</b>	<b>20</b>
<b>3.1</b>	<b>ITB INSTALLATION.....</b>	<b>22</b>
3.1.1	HANDLING .....	22
3.1.2	LOCATION IN THE ITB .....	22
3.1.3	POWER SUPPLY REQUIREMENTS .....	22
3.1.4	MOUNT AND DISMOUNT PROCEDURES .....	22
<b>3.2</b>	<b>WIRING AB_DI .....</b>	<b>24</b>
<b>3.3</b>	<b>LED INDICATORS.....</b>	<b>25</b>

## 3.1 ITB Installation

### 3.1.1 Handling

#### DANGER

Depending on the P/N, the module AB\_DI has hazard of electric shock, electric arc or burns. For any of these cases, follow these instructions:

- Only qualified operator should install this equipment. Such work should be performed only after reading this entire set of instructions and checking the technical characteristics of the device.
- NEVER work alone.
- Turn off all power supplying this equipment before working on or inside it. Consider all sources of power, including the possibility of back feeding.
- Always use a properly rated voltage sensing device to confirm that all power is off.
- Start by connecting the device to the protective ground and to the functional ground.
- Screw tight all terminals, even those not in use.

**Failure to follow these instructions will result in death or serious injury.**

To avoid electrostatic damage, the following precautions must be strictly followed:

- Do not touch the bus connector pins.
- If unused, keep the modules in the antistatic bag.

#### WARNING

An electrostatic discharge might degrade electronic components or cause permanent damages.

### 3.1.2 Location in the ITB

There is not special considerations for locating this module in the ITB.

### 3.1.3 Power Supply Requirements

The main power for the ITB is connected to the HU and XU modules. These modules supply the power to other modules in the ITB through the bus.

A polarization source is required for digital inputs, and the voltage depends on the ordering option.

The maximum power requirement for each AB\_DI module is:

- **Main power supply:** *Basic consumption*<sup>1</sup>
- **Polarization supply:**  $16 * \text{Polarization voltage per signal}^2 * \text{Maximum current per signal}^2$

### 3.1.4 Mount and Dismount Procedures

#### WARNING

It is important to assure that handling is always done while the ITB elements are unpowered. **Don't remove** the flat ribbon while the ITB is powered.

<sup>1</sup> *Basic consumption* and *Maximum current per signal* values are indicated in the technical specifications table at the end of this manual.

<sup>2</sup> *Polarization voltage per signal* value depends on the manufacturing option of each module.

Saitel DR modules have a DIN-rail bracket at the rear side that allows mounting on a DIN rail.

Figure 9 - Mount bracket on DIN rail.



The mounting procedure is described below:

- Switch off the power supply.
- Attach the module's rear bracket on the upper DIN rail.
- Press the lower front panel gently until a click confirms that the bracket is fit on the rail.
- Verifying the module is anchored firmly to the rail, although lateral movement is possible.

Figure 10 - Saitel DR module on a DIN rail.



The module is dismantled from the DIN rail as follows:

- Switch off the power supply.
- If necessary, disconnect the bridge(s) connecting the module to the system bus.
- Holding the module by the front panel, push the upper metal tab downward. The user can also pull the tab down using for example a screwdriver as follow:

Figure 11 - Remove module.






- Pressing the tab, remove the module from the lower DIN rail.
- Once detached, the module can be removed easily.

## 3.2 Wiring AB\_DI

The following table shows several wiring recommendations for signals:

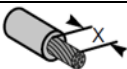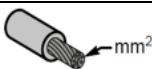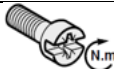
Table 2 – Wiring recommendation

				Type of wire
Digital input	7 mm	1.5 mm <sup>2</sup> 15 AWG	0.5 Nm	Copper

This module has two terminal blocks labeled as B1 and B2 which allow the 16 digital inputs to be connected through screw terminals.

Both B1 and B2 have 10 terminals, 8 terminals for signals and the last two at the right common input (Cx). Signals from DI 1 to DI 8 are connected to B1, whereas signals from DI 9 to DI 16 are connected to B2.

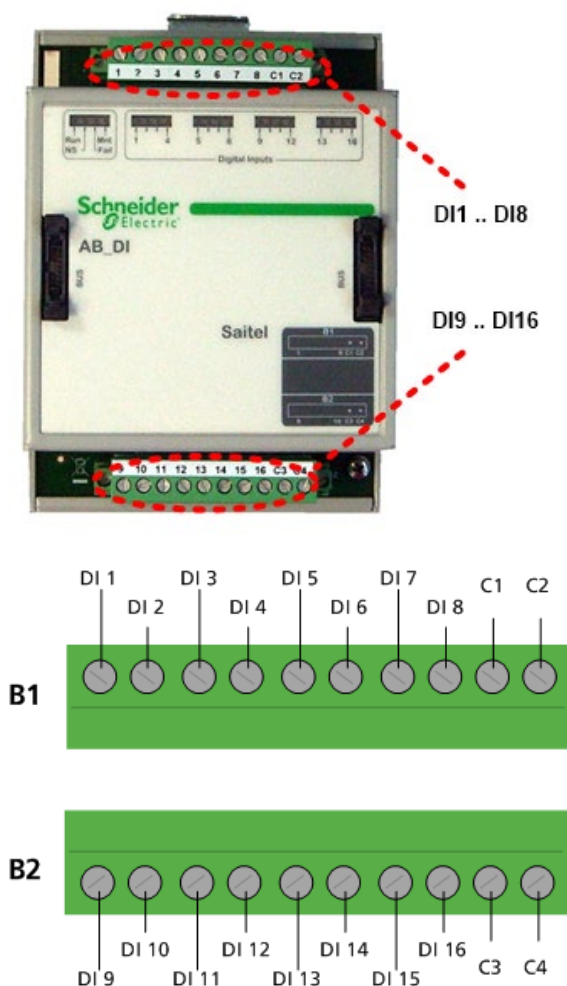
Figure 12 - B1 and B2 terminal blocks wiring.






The following figure shows the connection to field:

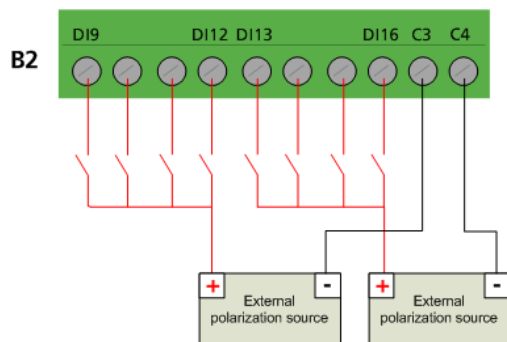Figure 13 - Connection to field (using two polarization source).



We also have the option of combining the two commons, using a single source of polarization, as shown in the following scheme:

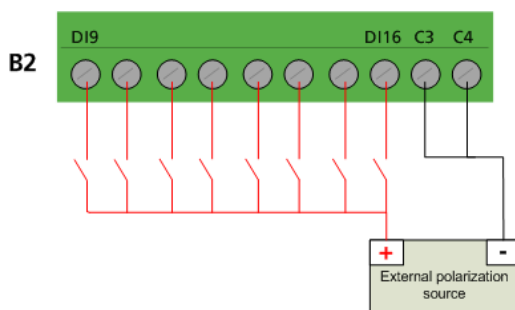Figure 14 - Connection to field (using one polarization source)



#### INFORMATION

AB\_DI revision B7 and earlier have two commons for each B1 and B2 terminal blocks, identified both as "Cx". These common are interconnected internally, so that these versions of the module have to be wired as shown in **Error! Reference source not found..**

These wiring diagrams are also valid for the B1 terminal block.

#### INFORMATION


Consult other wiring recommendations for Saitel DR in the HU user manual.

## 3.3 LED Indicators

There are 20 light indicators (LED) on the front of the module:

Figure 15 – AB\_DI LED indicators.
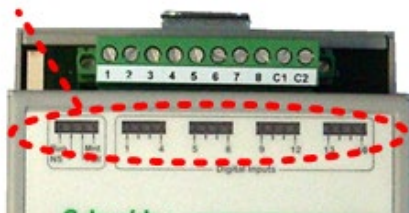
#### LED Indicators














The information by the LED indicators includes:

- Acquisition and configuration status (**Run** and **Fail**)
- Synchronization status (**NS**)
- Module in maintenance (**Mnt**)
- Status for each digital input (**Digital Input x**).

AB\_DI's LED provide the following information to the operator:

 /  → On
  /  → Blink
  → Off

Table 3 – Led indicators meaning

LED	Status	Description	Recommended action
<b>Run</b>		Module working properly.	
		Module not in acquisition mode.	The module was not included into the configuration, the module doesn't have an address or according to the loaded configuration, the type of the module is wrong.
<b>NS</b>		Synchronization message not received for over 10 s.	Check the synchronization source.
		Synchronization message is being received.	
<b>Fail</b>		Module not configured or in abnormal state.	Check the configuration loaded in the HU. The module must be addressed and with the correct type (AB_DI).
		No fault has been detected in configuration or hardware.	
		Failure in EEPROM.	Send the module to the repair service.
<b>Mnt</b>		The module is in maintenance (Flashing, addressing, ...)	
		The module is in operation.	
<b>1..16</b>		The corresponding input is active (the contact is closed).	
		The corresponding input is inactive or not connected (the contact is open).	

## 4 Maintenance & Configuration

# Content

<b>4</b>	<b>MAINTENANCE &amp; CONFIGURATION.....</b>	<b>27</b>
<b>4.1</b>	<b>ITB CONFIGURATION .....</b>	<b>29</b>
<b>4.2</b>	<b>AB_DI CONFIGURATION .....</b>	<b>31</b>
4.2.1	INFORMATION OF LOCAL ACQUISITION.....	32
4.2.2	AB_DI SIGNALS.....	32
4.2.3	LOCAL ACQUISITION COORDINATES .....	33
4.2.4	INFORMATION IN THE TABLE STATUS .....	34
<b>4.3</b>	<b>MAINTENANCE OF MODULE VIA WEB .....</b>	<b>35</b>
4.3.1	WEBAPP VS WEBTOOL.....	35
<b>4.4</b>	<b>USING WEBAPP .....</b>	<b>36</b>
4.4.1	HOME TAB.....	37
4.4.2	MONITORING & CONTROL .....	38
4.4.3	MAINTENANCE.....	42
<b>4.5</b>	<b>USING WEBTOOL .....</b>	<b>42</b>
4.5.1	INFORMATION.....	43
4.5.2	MONITORING.....	43
<b>4.6</b>	<b>FIRMWARE UPGRADE.....</b>	<b>44</b>

## 4.1 ITB Configuration

### INFORMATION

To perform the operations described in this chapter, the user must be familiar with the configuration tool. Otherwise, please consult the user manual of Easergy Builder.


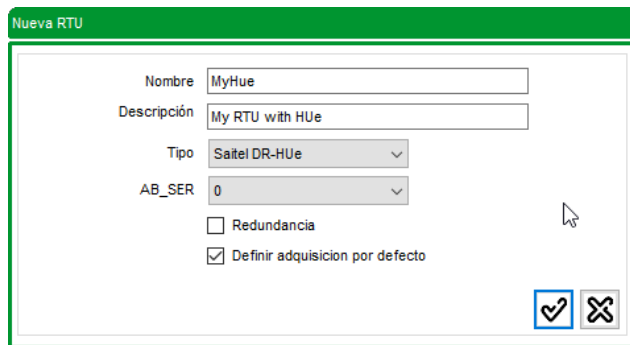
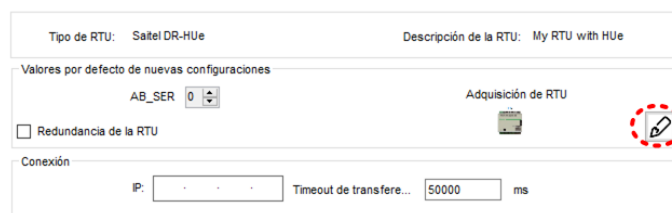
In the Workspace of Easergy Builder, create a new RTU using  button or pressing right button of the mouse in an empty area of the RTUs tree:

Figure 16 - Add RTU.




Pressing button next to the graphical ITB, you can add, remove or change the I/O modules included on the default configuration.





The user needs understand some basic concepts about Saitel DR before configuring the acquisition:

- An **ITB** is a set of acquisition blocks connected to a CPU (HU).
- An **Acquisition Block** or **AB** is a Saitel DR input/output module.
- Each acquisition block is allocated to a unique address in the ITB, the Node Number; this number identifies both the module and its type.
- The procedure **AAP (Automatic Addressing Procedure)** is performed by the operator every time an AB module is added, deleted, replaced or moved inside the ITB. It can be launched manually or automatically depending on the configuration switches of the HU (consult user manual of the HU).

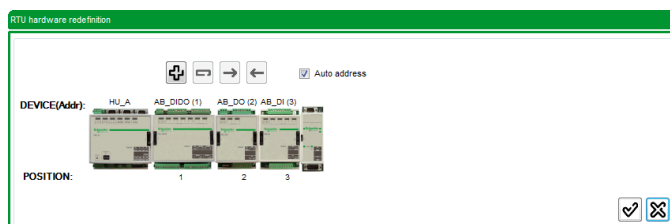
Figure 17 - Acquisition modules in a default configuration.



The number under each module corresponds with its address. You can select any AB and use buttons   to change its physical position.

When **"Auto Address"** box is checked (by default), if you reorder, add or delete an AB, all addresses are automatically recalculated matching their physical position in the rail. Address number 1 is assigned to the AB closest to the HU module (for HU\_AF or HU\_BI, address number 1 will be attached to the HU itself).

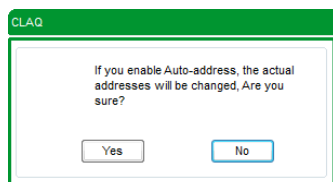If **"Auto Address"** box is unchecked, modules will retain the allocated address, ignoring any changes made. If rechecked, the following message will appear:





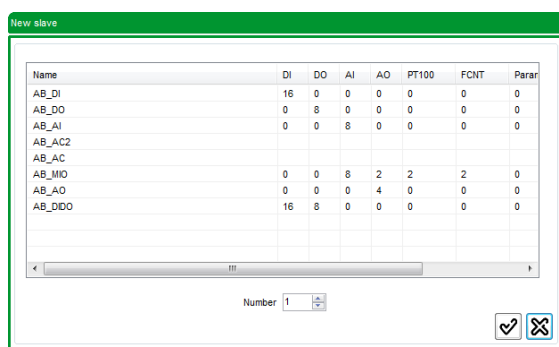
Select an AB (click on the AB image) and use button  to remove it. Use button  to add a new AB and select the type of module to include:

Figure 18 - Adding one (or several) AB.



If **"Auto Address"** is checked, you can add several AB at one time. This window allows selecting the quantity of modules to be added. If **"Auto Address"** is unchecked, you only can add one AB each time and you have to select the address to be assigned.


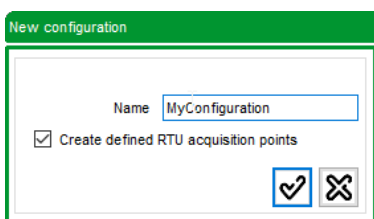
To create a new configuration, select RTU in the tree and pulse right button of the mouse or use  button.

Figure 19 - Adding a configuration.




If the field **"Create acquisition points defined in the RTU"** is marked, all points of the local acquisition of the acquisition blocks included in the default acquisition configuration associated with the RTU will be included in coreDb.

For example, if a HUe has an ITB with an AB\_DI module, if **"Create acquisition points defined in the RTU"**, 16 digital inputs signals will be included in the Status table.

Finally, the new configuration will appear in the RTUs tree.


Access to the configuration edition clicking on the configuration name in the tree:

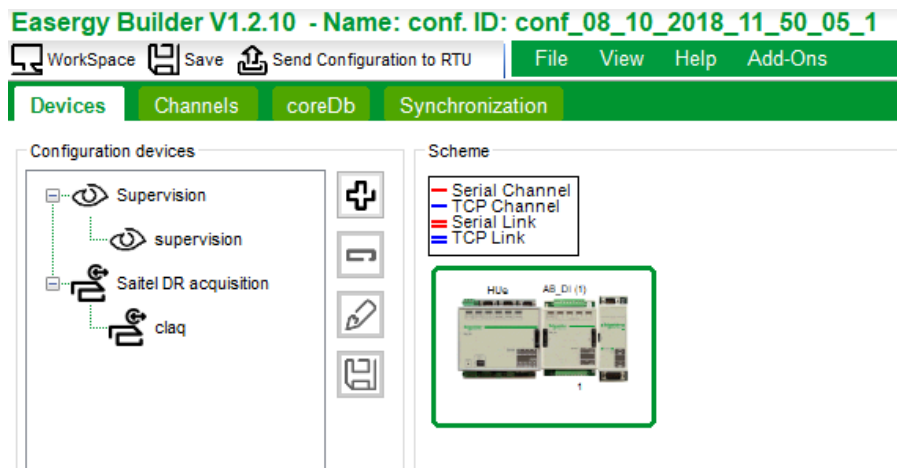Figure 20 – Configuration edition.



Double click on the claq Device open the window to configure/modify the ITB.

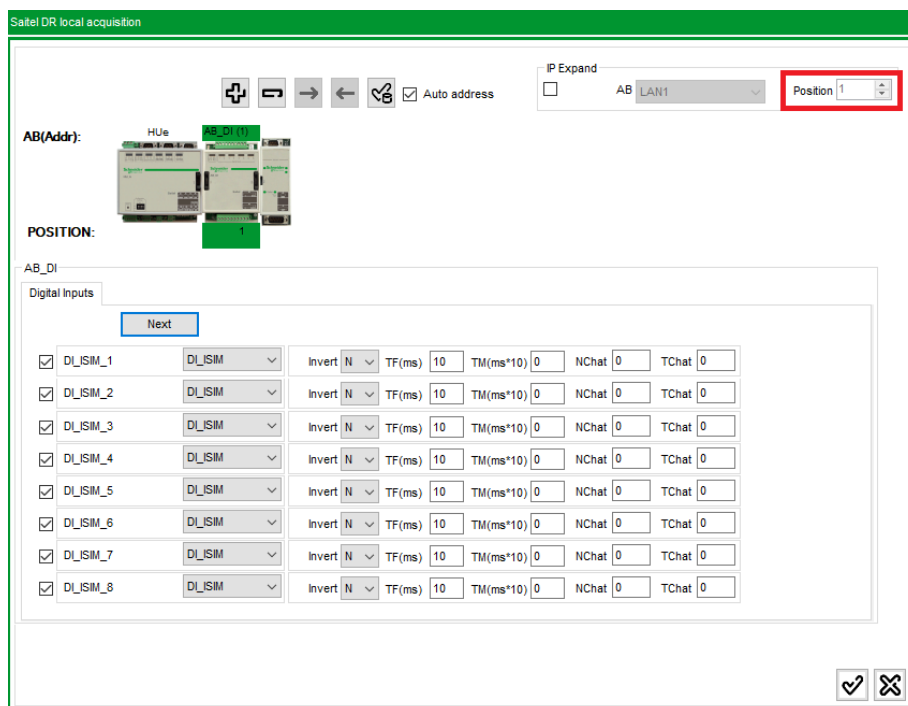Figure 21 – Changing the ITB configuration.



More information in the user manual of Easergy Builder.

## 4.2 AB\_DI Configuration

The local acquisition Device for Saitel DR is named “Local Acquisition Device Controller” (claq). The main functionality of claq is supporting the communication between field signals of each AB and its linked coreDb points.

The first step to configure the acquisition settings is to assure that the ITB in the graphical interface is according to the system. Each module must be addressed according its position in the ITB.

### INFORMATION


The graphical interface does not show if the ITB is mounted in one or multiple rows.

Modules AB\_SER, TU nor XU aren't included in the schema.

## 4.2.1 Information of Local Acquisition

The following figure shows the relationship between the field information received by the AB\_DI module and the related points in coreDb:

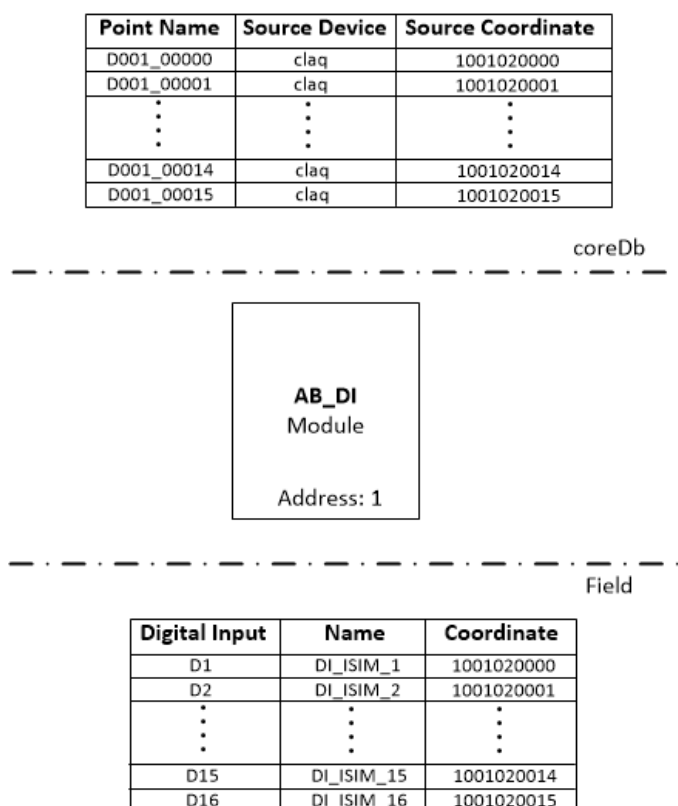Figure 22 – Field signals and points in coreDb.




All signals in this picture are simple. If a signal is configured as double or counter its default name will be different.

## 4.2.2 AB\_DI signals

The following figure shows the configuration panel when the ITB is composed by an HUE and one AB\_DI module with address 1:

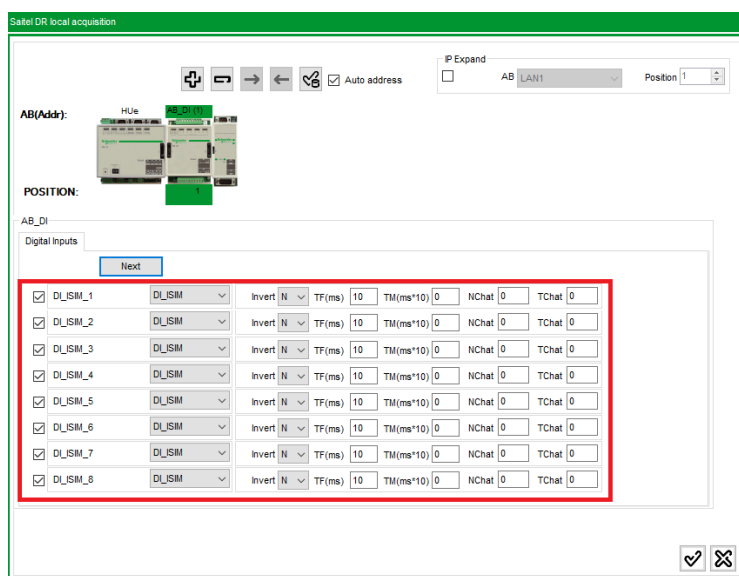Figure 23 – AB\_DI field signals.





Select the module in the ITB and all its field signals are shown (marked in red).

The first position of each row corresponds with the signal's description (DI\_ISIM\_1 .. DI\_ISIM\_16). In coreDb, each signal will be identified using its coordinate. (see paragraph 4.2.3)

For each signal, the following parameters can be changed:

- **Type of signal:** The signal is configured as: Simple digital (DI\_ISIM), double digital (DI\_IDOB) or slow counter (DI\_ICNT32).

When a signal is configured as double digital this signal and the following are grouped together. For example, if the signal 1 and 2 are configured as DI\_IDOB then they must be considered as two binary join digits, thus 00 – no signal On, 01 – first signal On, 10 – second signal On and 11 – both signals On.

So, it is possible to control two signals form the same command.

The associated specific parameters will depend on the type of signal. A simple digital signal has the associated parameters shown in the figure above.

If a signal is configured as double, the following signal will disappear automatically, and the associated parameters are the following:

Figure 24 – AB\_DI field signals.

<input checked="" type="checkbox"/>	DI_IDOB_1	DI_IDOB	Invert	N	TF(ms)	10	TM(ms*10)	0	TS(ms*100)	0	NChat	0	TChat	0
<input checked="" type="checkbox"/>	DI_ISIM_3	DI_ISIM	Invert	N	TF(ms)	10	TM(ms*10)	0	NChat	0	TChat	0		
<input checked="" type="checkbox"/>	DI_ISIM_4	DI_ISIM	Invert	N	TF(ms)	10	TM(ms*10)	0	NChat	0	TChat	0		

Counter signals have the following associated configuration parameters:

<input checked="" type="checkbox"/>	DI_ICNT_1	DI_ICNT32	DbICnt	Y	Invert	N	TF(ms)	10					
<input checked="" type="checkbox"/>	DI_ISIM_2	DI_ISIM	Invert	N	TF(ms)	10	TM(ms*10)	0	NChat	0	TChat	0	

The following parameters will be available or not depending on the type of signal:

- **Invert:** Inversion flag. The signal is inverted (Y) or not inverted (N).
- **TF (ms):** Filtering time. All changes that take less than this time are rejected.
- **TM (ms\*10):** It applies to the signals set to "event". After an event, the signal's value is retained for this time before another event occurs. It must assure the correct detection by the logic.
- **TS (ms\*100):** It applies only for double signals. The stand-by time intends to create a time frame in which the deactivation of the active input is not detected until the other input is activated.
- **NChat and TChat:** These parameters are associated to the anti-chattering function and it applies to the signals set to "event". If a number of changes (NChat) are made in a specific timeframe (TChat), these all changes are rejected.
- **DbICnt:** This field is available only for slow counters. The value "Y" indicates that the two edges of each pulse are counted, whereas the value "N" indicates that only one edge is counted.

## 4.2.3 Local Acquisition Coordinates

Each digital input is identified in coreDb by a name (it is stored in the field Description), but this name is only used for information purpose. coreDb uses the signal's coordinate in order to identify a field signal.

The following picture shows some digital inputs in the status table:

Name	Description	Source1 Device	Source1 Coordinates	Source1 Vmask	De De
D001_00000	DI_ISIM_1	claq	1001020000		
D001_00001	DI_ISIM_2	claq	1001020001		
D001_00002	DI_ISIM_3	claq	1001020002		
D001_00003	DI_ISIM_4	claq	1001020003		
D001_00004	DI_ISIM_5	claq	1001020004		
D001_00005	DI_ISIM_6	claq	1001020005		
D001_00006	DI_ISIM_7	claq	1001020006		
D001_00007	DI_ISIM_8	claq	1001020007		

A claq coordinate is a numerical identifier of 10 digits with the following structure:

1XXXYYZZZZ

Where:

- **1**: First digit of the coordinate. In local acquisition signals, it must always be 1.
- **XXX**: Number that identifies the acquisition block. For the HUE signals, it will always be 000. For the rest of the ABs, this number will correspond with the address of the module.
- **YY**: Type of signal. For digital input could be:
  - 02: Simple digital input.
  - 03: Count.
  - 07: Double digital input.
- **ZZZZ**: Position of the signal in the module.

## 4.2.4 Information in the Table Status

Each AB\_DI's signal is associated to a coreDb register in the status table using its claq coordinate as source:

Figure 25 – Information of digital inputs in coreDb.

Devices Channels coreDb Synchronization												
Status Command Analog Setpoint dbNET												
Name		Source		AND		Destination		<input checked="" type="checkbox"/> <input type="checkbox"/> Error rows				
	Name	Description	Source1 Device	Source1 Coordinates	Source1 Vmask	Destination1 Device	Destination1 Coordinates	Init value	Blocked	Non volatile	Shared Publish	Shared Subscribe
0	D001_HW_DI...	HW_DIAG	claq	1001000001					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1	D001_COMM...	COMM_DIAG	claq	1001000000					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2	D001_00015	DI_ISIM_16	claq	1001020015					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3	D001_00014	DI_ISIM_15	claq	1001020014					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4	D001_00013	DI_ISIM_14	claq	1001020013					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5	D001_00012	DI_ISIM_13	claq	1001020012					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6	D001_00011	DI_ISIM_12	claq	1001020011					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7	D001_00010	DI_ISIM_11	claq	1001020010					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
8	D001_00009	DI_ISIM_10	claq	1001020009					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	D001_00008	DI_ISIM_9	claq	1001020008					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
10	D001_00007	DI_ISIM_8	claq	1001020007					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
11	D001_00006	DI_ISIM_7	claq	1001020006					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
12	D001_00005	DI_ISIM_6	claq	1001020005					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
13	D001_00004	DI_ISIM_5	claq	1001020004					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
14	D001_00003	DI_ISIM_4	claq	1001020003					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
15	D001_00002	DI_ISIM_3	claq	1001020002					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
16	D001_00001	DI_ISIM_2	claq	1001020001					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	D001_00000	DI_ISIM_1	claq	1001020000					<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

These points and other diagnostic points (D001\_COMM\_DIAG and D001\_HW\_DIAG) can be created automatically when the module is included in the ITB, but they can be created manually using the claq's wizard.

In order to include a point manually, please create a new point, select claq as Source Device, click right-button on the field Source Coordinates and select **Launch Point wizard**:

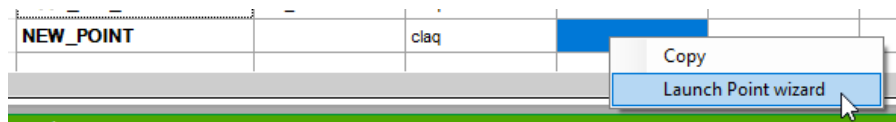


Figure 26 – Adding points in coreDb for an AB\_DI module .

Select the module in which it wants to create these points and then select the point to be created.

### INFORMATION

Only not created point will be shown in the list.

The following point can be added for a AB\_DI module:

- 16 points for information from field. A coreDb point will be included in the Status table for each field signal. The default name is: D00x\_00000 ... D00x\_00015, where 00x is the module's address.
- Two diagnostic points associated to the module:
  - **COMM\_DIAG**: Status of the communication with the HU. 0 → "Communication FAIL", 1 → "Communication OK".
  - **HW\_DIAG**: Hardware diagnostic. 0 → No problem detected, 1 → Problem detected in the hardware.

## 4.3 Maintenance of Module via WEB

### 4.3.1 webApp vs Webtool


webApp and Webtool are remote user interfaces for consulting, monitoring and maintenance tasks. Once the username and password have been entered, you can access to the main window and, depending on the web tool, several sections are available.

## INFORMATION

webApp has been designed to work only with the Cybersecurity brick. At now, it can be only used with HUe. HU\_A and HU\_AF use Webtool, while HU\_B doesn't allow a remote connection using a web server.

When use webApp, the following message is shown previously to access the tool:

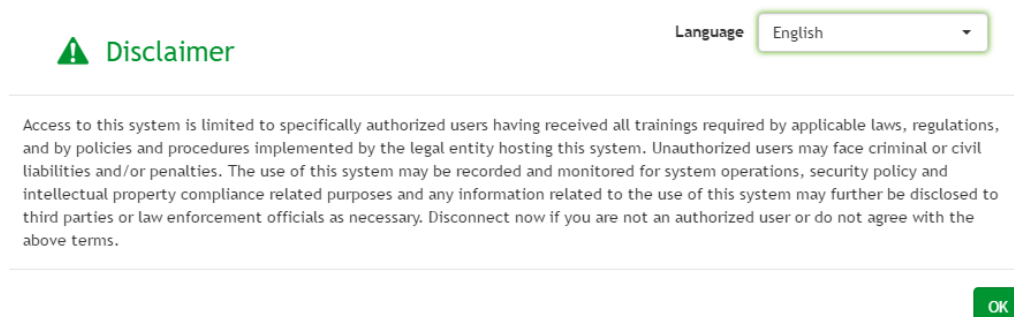Figure 27 – Disclaimer information.



**Disclaimer** Language: English

Access to this system is limited to specifically authorized users having received all trainings required by applicable laws, regulations, and by policies and procedures implemented by the legal entity hosting this system. Unauthorized users may face criminal or civil liabilities and/or penalties. The use of this system may be recorded and monitored for system operations, security policy and intellectual property compliance related purposes and any information related to the use of this system may further be disclosed to third parties or law enforcement officials as necessary. Disconnect now if you are not an authorized user or do not agree with the above terms.

OK


Please, read this information and take it into account.

In this manual, only the information about AB\_DI is shown. For more information about these tools, please, consult the user manual for each one.

## 4.4 Using webApp

Saitel webApp includes an access management allowing to control users who can login in the tool. To access webApp, write **https://< CPU IP address>** in the navigation address bar, where <CPU IP address> must be changed for the correct IP address.

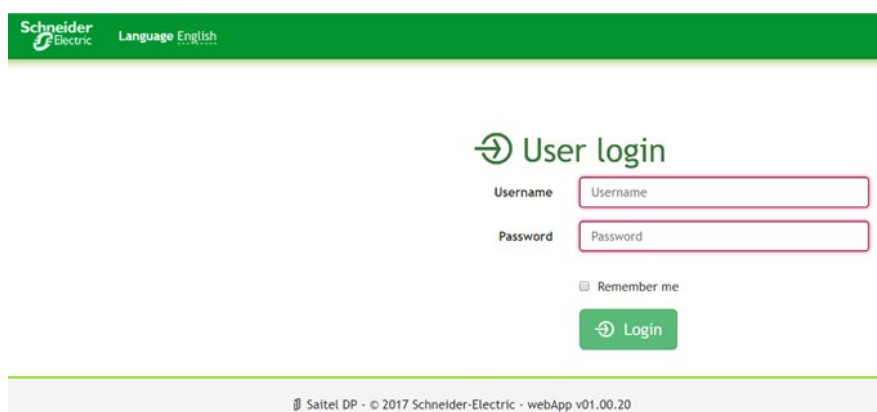Figure 28 – Access window.



Schneider Electric Language: English

### User login

Username:

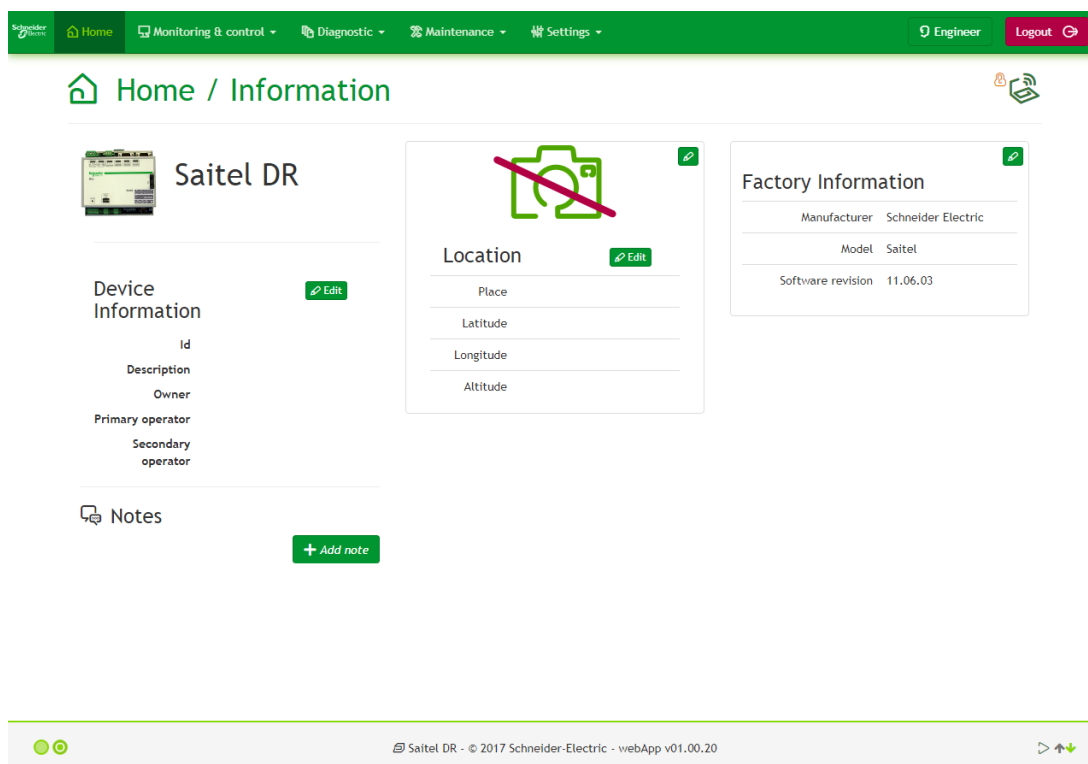
Password:

☐ Remember me

Login

Saitel DP - © 2017 Schneider-Electric - webApp v01.00.20

Write the Username and password in order to access the webApp's main window:



All information about default users is detailed in the webApp user manual.


There are the following tabs in the main menu:

- Home.
- Monitoring & Control.
- Diagnostic
- Maintenance
- Settings





## 4.4.1 Home tab

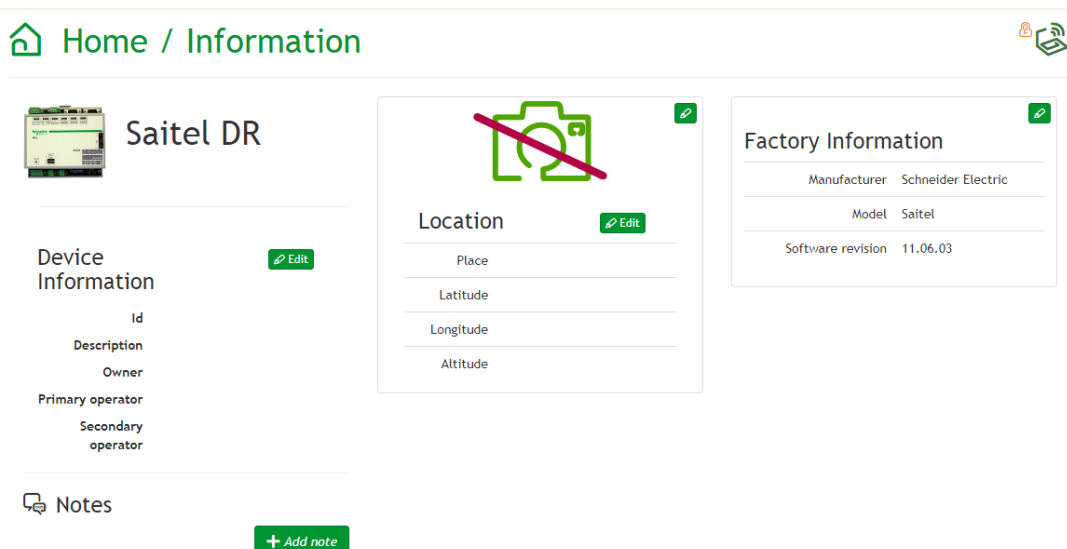Select **Home** in the main toolbar and the following information is shown:

Figure 29 –Home tab.



Some of this information can be filled in by the user.

- **Device Information.** It is possible to add the names of the operators who have used or configured the equipment or a specific custom note that can be viewed each time a connection is established to this RTU. This information can be changed using button “Edit”, next to “Device information”.
- **Location.** The GPS coordinates for the RTU location (place, latitude, longitude, and altitude) should be entered here by the installer. Location is not set automatically. The image must be include manually by clicking button  on the map.
- **Image associated to the RTU.** It could be useful to include a location map corresponding to the GPS coordinates. Use button  on the graphic zone to do it.
- **Notes.** This zone allows the user to include notes that are shown to other users. Use button  to add new notes.
- **Factory information:** This zone shows the manufacturer, model and the version of the software loaded on the HU module. Using button  next to the text “Factory Information”, it is also possible to include an image of the particular RTU or CPU for identification purposes.


## 4.4.2 Monitoring & Control

Select tab “Monitoring & Control” to access:

- System information.
- Information about coreDb points.

### System Information

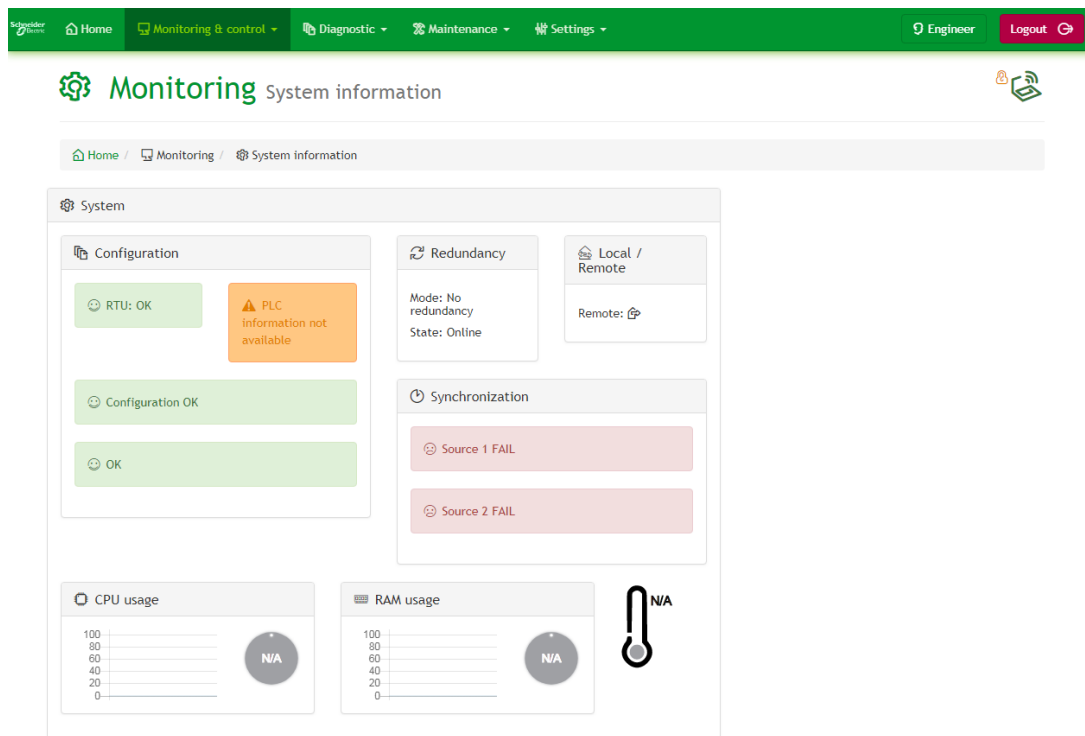Figure 30 - Monitoring & Control tab.



The correspondent supervision points must be installed, otherwise, you will see a warning like the one in the example above (“PLC information not available”). Other example of not defined point is the following:



More information about how supervision information webApp user manual .

## Signals Value

Select Monitoring tab and all signals in coreDb are shown. There are 4 pages for viewing status, analog command and setpoint information

- Status page: For viewing the status of the digital data
- Command page: For sending change of state commands based on the digital data.
- Analog page: For viewing measurement values.
- Setpoint page: For forcing parameter values.

For an AB\_AI module, the showed points are the followings:

Figure 31 - Monitoring and Control – Status

Point name	Description	Value	Quality	Locking
M_00000	DI_ISIM 1	0		<input type="checkbox"/>
M_00001	DI_ISIM 2	0		<input type="checkbox"/>
M_00002	DI_ISIM 3	0		<input type="checkbox"/>
M_00003	DI_ISIM 4	0		<input type="checkbox"/>
D001_COMM_DIAG	COMM_DIAG	1		<input type="checkbox"/>
D001_HW_DIAG	HW_DIAG	0		<input type="checkbox"/>
WARN_BAT	Alarma de batería baja	1		<input type="checkbox"/>
FAIL_SYNC1	Fallo en la fuente de sincronización primaria	1		<input type="checkbox"/>
FAIL_SYNC2	Fallo en la fuente de sincronización secundaria	1		<input type="checkbox"/>
FAIL_CONF	Fallo en la configuración	0		<input type="checkbox"/>

The description of a data item is displayed over 3 columns:

- Point name: Internal name of the data item in coreDb.
- Description: Detailed description.
- Value: Point's value in coreDb.

By clicking the button associated with the Value field, you can manually edit the state or value of a **Command** or **Setpoint** data item.

Similarly, for a **Status** or **Analog** data item, you can force its status or value. However, this type of data is only processed in read mode; forcing is only applied in simulation. To do this, the actual data item must first be locked by clicking the Locking option.

Once the data is locked, the “Edit” button associated with the Value field then becomes accessible and can be used to change its status or value in simulation mode.

Figure 32 – Editing value

Edit value

0

OK Cancel

### INFORMATION

The modified value also impacts the remote retransmission. This allows you, for instance, to simulate the state of a variable and to test its retransmission, without affecting the actual equipment operation.


Unchecking the field Locking cancels the simulation and returns to the actual status or value of the data item

## Quality Values

Two icons displayed in the Quality column provide an indication of the data processing quality. The quality of a data item can give an indication of the validity of the status or value entered on the web server page.

This quality is indicated for the following 2 sources:

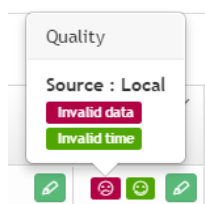- Local source: Reflects the quality of the data item from the viewpoint of its processing in the HU.
- Remote source: Reflects the quality of the data item sent by the information source (device) processing the data.






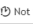

In the same way as for a change of state or value for Status or Analog data, it is possible to manually simulate the quality of a data item. To do this you must first lock the data item using the Locking option. Then click the button  associated with the Quality field. The possible options for the local and remote source quality are then displayed on this window:

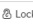

Figure 33 – Changing quality value.

Edit M\_00000 quality

Source : Local  Good\_quality 0x00001010

Overflow	Rollover	Counter adjustment	Chatter	 Locked	Manual
 Not topical	Invalid data	Critical alarm	High level alarm		
Low level alarm	Signal alarm	Invalid time			

Source : Remote  Good\_quality

Overflow	Rollover	Counter adjustment	Chatter	 Locked
Substituted data	 Not topical	Invalid data	Invalid time	

OK Cancel

Unchecking the field Locking cancels the simulation and returns to the actual quality of the data item.

The table below shows the correspondence of the different quality types that can be simulated after having locked a data item. Note that this also gives an indication of the different quality types that can be obtained in actual operation.



Table 4 – Local quality bits

Text	coreDb	Description
Overflow	0x00000001	There has been an overflow
Rollover	0x00000002	There has been a carry on a counter or a roll-over.
Counter adjustment	0x00000004	There has been a counter adjustment.
Chatter	0x00000008	Excessive changes in a digital input.
Locked	0x00000010	Locked Point (blocked)
Manual	0x00000020	Point manually replaced (manual)
Not typical	0x00000040	The point has not yet been written into the database (No refresh)
Invalid data	0x00000080	Invalid value (Error)
Critical alarm	0x00000100	The value of the item has exceeded Highest Limit Alarm.
High level alarm	0x00000200	The value of the item has exceeded High Limit Alarm.
Low level alarm	0x00000400	The value of the point has fallen down of Low Limit Alarm.
Signal alarm	0x00000800	The value of the point has fallen down of Lowest Limit Alarm.
Invalid time	0x00001000	Invalid time.

Table 5 – Remote quality bits





Text	coreDb	Description
	0x00000000	OK
Overflow	0x00010000	There has been an overflow.
Rollover	0x00020000	There has been a carry on a counter or a roll-over.
Counter adjustment	0x00040000	There has been a counter adjustment.
Chatter	0x00080000	Excessive changes in a digital input.
Locked	0x00100000	Locked Point.
Substituted data	0x00200000	Point manually replaced.
Not typical	0x00400000	The point has not yet been written into the database.
Invalid data	0x00800000	Invalid value.
Invalid time	0x10000000	Invalid time.

### NOTICE

If more than one error is detected for a signal, the hexadecimal value monitored for quality bits will result from the sum of all. For example:  
**0x00000001** indicates that an overflow has occurred and **0x00000002** indicates that there has been a carry on a counter or a roll-over. The value **0x00000003** would appear monitored.

## 4.4.3 Maintenance

Using the Maintenance tab, the user can consult the status of the I/O modules in the ITB. Each AB is shown in a tab, with its name and two icons showing the current status:

Icon	Meaning
	Communications are OK.
	Communications error.
	Module has no diagnostics.
	Module has diagnostics

## 4.5 Using Webtool

Saitel Webtool is the tool used for maintenance and monitoring of Saitel RTUs which is supplied with the Baseline Software Platform without Cybersecurity brick. The values of all the coreDb signals in real-time can be monitored through the Saitel Webtool as well as the quality data related to these values.


### NOTICE

Saitel Webtool is not available in HU\_B nor HU\_BI modules.

Saitel Webtool includes an access management allowing to control users who can login in the tool. To access webApp, write **https://< CPU IP address >** in the navigation address bar, where <CPU IP address> must be changed for the correct IP address.

If the browser has been correctly configured, and the remote equipment is connected to the PC, the login window will prompt:

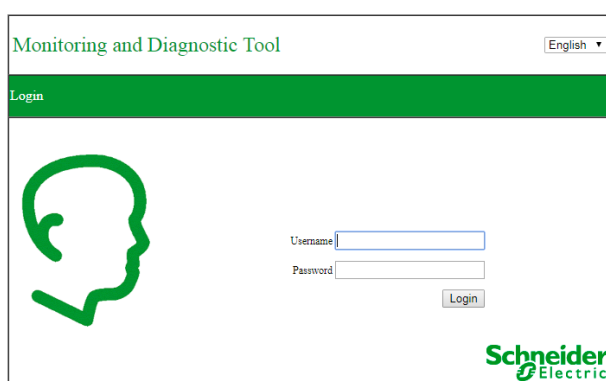Figure 34 - Saitel Webtool login window



Once the username and the password are introduced in the login window, the main workspace is displayed:

Figure 35 - Initial screen of Saitel Webtool



This window shows:

- Information about the user who opened the session.
- Button “Exit” to close the current session.
- Available languages for the tool.
- The main menu is located on the left side of the window. Each button allows accessing to the RTU information:
  - **Information:** General information about the CPU configuration.
  - **Monitoring:** Information in coreDb tables.
  - **Bins:** Devices (protocols and others) that have been configured in the RTU.
  - **Network configuration:** Information about communication ports and routers.

## 4.5.1 Information

Clicking Information on the main menu, you can see general information about the system.

The following real-time information can be monitored on this menu:

- System’s Configuration.
- Hardware Status.
- Synchronization Status.
- Software Versions.

The information on these screens is only available if the respective supervision signals have been defined in coreDB. The value “Not available” means that the corresponding signal is not available (because it does not correspond to the CPU model that is being used, or because it has not been configured).

## 4.5.2 Monitoring

The top area of the screen includes the following information for any signal type (go to “**Monitoring → Status**”, “**Monitoring → Command**”, “**Monitoring → Analog**” or “**Monitoring → Setpoint**”):

For each kind of modules, the information will be included in different tables. In the case of the AB\_DI module, the information for the acquisition points can be found in the Status tab.

In addition to the field signals, for each AB\_DI, two diagnostic signals are included in the Status table:

- **COMM\_DIAG:** CPU diagnosis communication variable. Value 0 → the module cannot communicate with the CPU. Value 1 → the module is communicating properly with the CPU.
- **HW\_DIAG:** Auto diagnosis hardware variable. Value → 0 the module is correct. Value 1 → the module has some hardware problem.

The information available in the status monitor window for each signal is the following:

- **Point name:** Signal's name in coreDb.
- **Value:** Current value of the signal. This value is retrieved from the signal's source and it is updated in Saitel Webtool according to the refresh period specified in the RT field.
- **QF:** Current quality flags of the value displayed for this signal

NOTICE
If the value of the quality bit associated to the signal is "Unrefreshed" (0x00000040) or "Invalid" (0x00000080), the signal value will be "???".

Using button "Set", the value and the quality flag can be modified.

Each code of quality bit has a different meaning. See Table 4 and Table 5 to know the description of each one.

NOTICE
If more than one error is detected for a signal, the hexadecimal value monitored for quality bits will result from the sum of all. For example: <b>0x00000001</b> indicates that an overflow has occurred and <b>0x00000002</b> indicates that there has been a carry on a counter or a roll-over. The value <b>0x00000003</b> would appear monitored.

- **Blocked:** This checkbox indicates whether the signal's source is blocked or not, that is, if the signal's value is refreshed with the changes made to the source's value. If blocked, the number displayed in the VALUE field can be edited. This change can be sent to the CPU using the SET button. Therefore, the signal's value in coreDb will be modified. If it is unblocked, the value can also be changed, although it will be a temporary change as it will be restored automatically in the next refresh.
- For security reasons, the sources of command and setpoint signals cannot be blocked, so this field is not included in the corresponding screens.

## 4.6 Firmware Upgrade

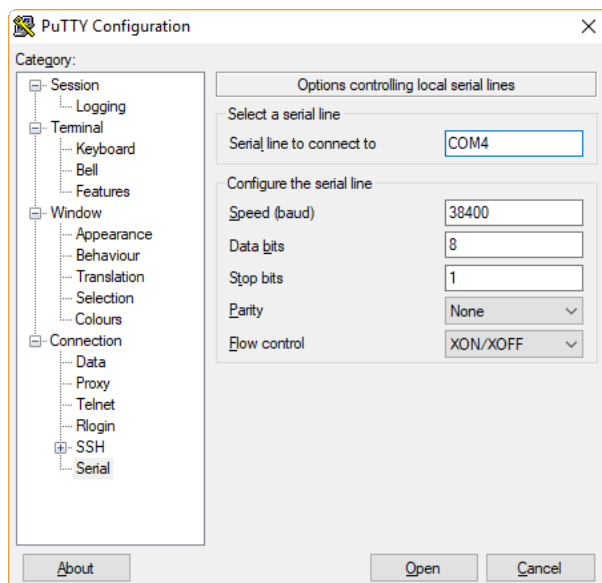
Once the ITB is configured, the HU module already knows the type of acquisition blocks that are been installed and their corresponding addresses.

To update the software of the AB\_DI module, you need:


- A console connection with the HU.
- AB\_DI module must be correctly addressed and working fine in the ITB (LED Run must be blinking).
- AB\_DI.bin file with the new version. This file must be available in the flash folder of the HU. If not, you can contact Schneider Electric in order to ask for it. Use an SFTP client and transfer this binary file into the HU flash folder.

The console tool can be executed using any commercial tool for serial or SSH connection. In this manual, PuTTY software is used.

Open a serial connection as follow:



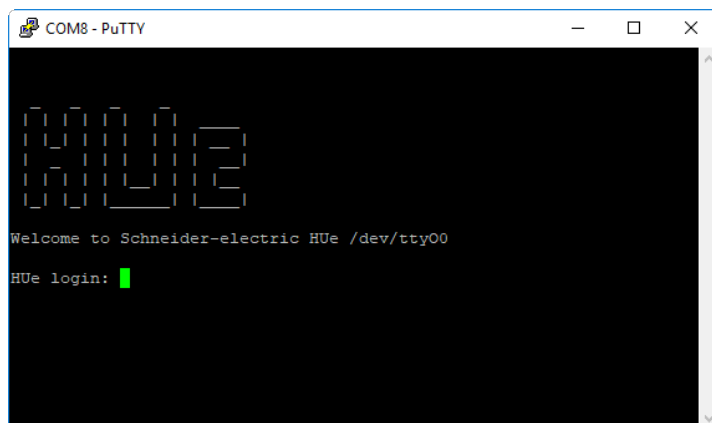SSH connection via Ethernet can be used too. More information about the console use in the HU user manual. In the following picture, HUE is used as CPU:



### INFORMATION

If the baseline includes the cybersecurity brick, you need to login in the console with **Installer**. No other user has permissions to execute this operation. Please, consult the HU user manual for more information.

If the file AB\_DI.bin is available in the flash folder, use one of the following commands to upgrade the software of AB\_DI modules:

Table 6 – Upgrading AB\_DI's software.

Module	File	Command	Description
All modules	*.bin	claqUpgrade "all"	It updates all acquisition blocks addressed in the ITB. Binary files for each type of block must be available in the /flash folder.
By position	AB_DI.bin	claqUpgrade "<position>"	It updates the module AB_DI with the <position> address.
AB_DI	AB_DI.bin	claqUpgrade "all AB_DI"	It updates all AB_DI modules installed in the ITB.

## INFORMATION

Console commands are case-sensitive, and quotation marks must be included.

After running the command, the console will show some messages indicating the process status. Here below it is shown an example of how the firmware of an AB\_MIO module is updated. It is similar for AB\_DI:

```
ITB> claqUpgrade "all AB_MIO"
ITB>
Going into programming mode...
*****
Ready to flash: AB_MIO: v02.00.00:Nov 17 2010 11:43:47
Installed now: AB_MIO: v02.00.00 Nov 17 2010 11:43:47
INFO: Version to install is the same as version installed now!
Flashing /flash/AB_MIO.bin in node 1 (38160 bytes)
-----0-----25-----50-----75-----100-----
--- Flashing ---| | | | | | | | | | | | | | | | | | | | |
```

When you run the command, the first step is to check the version that is installed in the module. After that, the file transfer to the module begins.

Finally, if the process has finished successfully, the console will show information about the process as well as an upgrading summary, as shown here below.

```
INFO: Version to install is the same as version installed now!

Flashing /flash/AB_MIO.bin in node 1 (38160 bytes)
-----0-----25-----50-----75-----100---
--- Flashing ---|-----Transferr
d!--- Reading ---|-----Verified!
----- Successfully loaded -----
/flash/AB_MIO.bin has been transferred to node 1
38160 bytes in 6.227 seconds

*****
AB module with id 1 has been rebooted!
Switching to normal mode
*****
***** UPGRADING MODULES SUMMARY *****
*****

Node 1 has been flashed SUCCESSFULLY !
    /flash/AB_MIO.bin, v02.00.00:Nov 17 2010 11:43:47

*****
```

## 5 Technical Specification Table

Hardware Specifications		
Consumption	0.55 W	
Weight	420 g	
Dimensions	94 mm x 129 mm x 60 mm	
Coating	AVR80 (Depending on P/N)	
I/O Signals	Number of digital inputs: 16 Max. Number of counter inputs: 16 Inputs per common: 4	
Polarization voltage (PV)	12-24 V <sub>DC</sub> / 48-60 V <sub>DC</sub> / 125 V <sub>DC</sub> / 220 V <sub>DC</sub> , ±20%	
Isolation (Inputs)	2 kV	
Input current per signal	< 5.5 mA at nominal PV	
Logic voltage levels	High level “1”: From 80 % (PV) Low level “0”: Up to 30 % (PV)	
Connectivity	Two 10-pole terminal blocks for digital inputs / 1.8 mm / 13 AWG	
Software		
Type	Simple / Double / Slow counter	
Processing	Status indication (simple and double)	
	Memorized indication	
	32-bit pulse counters, 45 Hz (single or double edge)	
	Digital Filtering / Settling time / Change memory / Anti-chattering / Inversion	
Timestamp for events	1 ms	
Parameters	Filtering time: 0 – 255 ms	
	Settling time: 0 – 25500 ms	
	Change memory: 0 – 2550 ms	
	Anti-chattering window: 0 – 255 s	
	Number of events for chattering: 1 – 255 changes	
Ordering Options		
<div><div><div>AB_DI M555 x 0 0 0 0 y zz</div><div><div>DI Pol (Ax): 2: 12 – 24 V<sub>DC</sub> 3: 48 – 60 V<sub>DC</sub> 4: 125 V<sub>DC</sub> 5: 220 V<sub>DC</sub></div><div><div>Coating: 0: Without coating 2: AVR80 coating (by ABchimie)</div><div><div>Revision: (Revision code)</div></div></div></div></div></div>		
CE Mark		
Standards, Directives and harmonized norms.	LVD – Low Voltage Directive	Directive 2014/35/UE
	EMC – Electromagnetic Compatibility	Directive 2014/30/UE
	RoHS 2 – Restriction of Hazardous Substances	Directive 2011/65/EU
	WEEE – Waste Electrical and Electronic Equipment	Directive 2012/19/UE
EMC		
EMC tests according to (Internal report: 55481REM.001)	Power supply and EMC	
	EN 60870-2-1:1996	
	Immunity for equipment used in power station and substation environment	
	IEC 61000-6-5:2015	
	Information technology equipment - Radio disturbance characteristics - Limits and methods of measurement.	
	EN 55022:2006 + A1:2007	



<b>EMC</b>		
Emission EMC tests	Radiated emissions EN 55022:2006 + A1:2007	From 30 to 1000 MHz (Class A)
	Conducted emissions EN 55022:2006 + A1:2007	From 0.15 to 30 MHz (Class A)
Immunity EMC tests	Electrostatic discharges (ESD) EN 61000-4-2:2009	By air $\pm 8$ kV and by contact $\pm 6$ kV (Level 3)
	RF electromagnetic field EN 61000-4-3:2006 + A2:2010	From 80 to 2700 MHz (Level 3).
	Fast transients common mode EN 61000-4-4:2012	I/O ports: $\pm 4$ kV 5 kHz (Level 4).
	Surge EN 61000-4-5:2006	I/O ports: $\pm 4$ kV CM, $\pm 2$ kV DM
	RF common mode EN 61000-4-6:1996 + A1:2001	10 V <sub>RMS</sub> 0.15-80 MHz 80% AM (Level 3).
	Power frequency magnetic field EN 61000-4-8:2010.	100 A/m, 1000 A/m 3 s (Level 4).
	Power frequency common mode disturbances. EN 61000-4-16:1998	30 V 50 Hz, 300V 50 Hz 1 s (Level 4).
	Damped oscillatory wave EN 61000-4-18:2007 + A1:2010	I/O ports: 1 kV DM, 2.5 kV CM (Level 4) (f=1 MHz)
<b>Electrical Safety</b>		
<b>Electrical Safety</b> (Internal report: 46811RSE.002 and 46811RSE.003)	General requirements IEC 61010-1: 2010 + CORR.1: 2011 EN 61010-1:2010 UNE-EN 61010-1: 2011	Meets all the requirements indicated in the normative.
	Insulation, dielectric rigidity and impulse voltage IEC 60255-5:2000; EN 60255-5:2001; UNE EN 60255-5:2002 (Paragraph 6)	Isolation >100 M $\Omega$ Electric strength: 2 kV <sub>AC</sub> . Impulse voltage: 5 kV
<b>Environmental</b>		
<b>Environmental tests</b> (Internal report: 46811RSE.001 and 48039RSE.001)	Cold EN 60068-2-1:2007	-40 °C / 16 h
	Dry heat EN 60068-2-2:2007	+70 °C / 16 h
	Damp heat EN 60068-2-30:2005	From 25 °C up to 55 °C / 95% RH 2 cycles of 24 h
	Salt mist, cyclic (sodium chloride solution) IEC 60068-2-52:1996	3 cycles of 24 h each (Severity 4)

# Index of Figures

Figure 1 - Barrier of protection for elements with dangerous voltages.....	9
Figure 2 – Example of yellow/green cable for earthing. ....	11
Figure 3 - Technical label. ....	13
Figure 4 - Saitel DR. ....	16
Figure 5 - AB_DI Module. ....	17
Figure 6 - Functional block diagram. ....	17
Figure 7 - AB_DI's P/N description. ....	18
Figure 8 - Hardware block diagram. ....	18
Figure 9 - Mount bracket on DIN rail. ....	23
Figure 10 - Saitel DR module on a DIN rail. ....	23
Figure 11 - Remove module. ....	23
Figure 12 - B1 and B2 terminal blocks wiring. ....	24
Figure 13 - Connection to field (using two polarization source). ....	25
Figure 14 - Connection to field (using one polarization source).....	25
Figure 15 – AB_DI LED indicators.....	25
Figure 16 - Add RTU.....	29
Figure 17 - Acquisition modules in a default configuration.....	29
Figure 18 - Adding one (or several) AB. ....	30
Figure 19 - Adding a configuration.....	30
Figure 20 – Configuration edition.....	31
Figure 21 – Changing the ITB configuration.....	31
Figure 22 – Field signals and points in coreDb. ....	32
Figure 23 – AB_DI field signals. ....	32
Figure 24 – AB_DI field signals. ....	33
Figure 25 – Information of digital inputs in coreDb.....	34
Figure 26 – Adding points in coreDb for an AB_DI module .....	35
Figure 27 – Disclaimer information.....	36
Figure 28 – Access window.....	36
Figure 29 –Home tab.....	37
Figure 30 - Monitoring & Control tab.....	38
Figure 31 - Monitoring and Control – Status.....	39
Figure 32 – Editing value .....	40
Figure 33 – Changing quality value.....	40
Figure 34 - Saitel Webtool login window .....	42
Figure 35 - Initial screen of Saitel Webtool.....	43

## Index of Tables

Table 1 – Symbols .....	8
Table 2 – Wiring recommendation.....	24
Table 3 – Led indicators meaning.....	26
Table 4 – <i>Local quality bits</i> .....	41
Table 5 – Remote quality bits .....	41
Table 6 – Upgrading AB_DI's software. ....	45

# Glossary

## A

**A:** Ampere. Base unit of electric current in the International System of Units.

**AAP:** Automatic Addressing Procedure.

**AB:** Saitel DR Acquisition Block.

**AB\_AC:** Acquisition block for direct measurements.

**AB\_AI:** Acquisition block for analog inputs.

**AB\_AO:** Acquisition block for analog outputs.

**AB\_DI:** Acquisition block for digital inputs.

**AB\_DIDO:** Acquisition block for digital inputs and outputs.

**AB\_DO:** Acquisition block for digital outputs .

**AB\_MIO:** Acquisition block for multiple inputs and outputs.

**AB\_SER:** Acquisition block for serial communications.

**AC:** Alternate Current.

**AI:** Analog Input.

**AO:** Analog Output.

**AWG:** American Wire Gauge..

## C

**°C:** Celsius degrees.

**EMC:** ElectroMagnetic Compatibility.

**CPU:** Central Processing Unit.

## D

**DC:** Direct Current.

**DI:** Digital Input.

**DIN:** Deutsches Institut für Normung..

**DO:** Digital Output.

## E

**EEPROM:** Electrically Erasable PROgrammable read-only Memory.

**EOL:** End-of-Life. According to the WEEE CE Directive, the EOL document provides instructions for discard the product at the end of its life.

## G

**G:** Grame.

**GPS:** Global Positioning System.

## H

**HU:** Head Unit.

**HU\_A:** Advanced Saitel DR CPU.

**HU\_AF:** Advanced Saitel DR CPU with acquisition.

**HU\_B:** Basic Saitel DR CPU .

**HUe:** High-performance Saitel DR CPU .

**Hz:** Hertz. Frequency in cycles per second.

## I

**IED:** Intelligent Electronic Device.

**I/O:** Input / Output.

**IRIG:** Inter Range Instrumentation Group.

**IRIG-B:** Mode B of the standard IRIG.

**ISO 9001:** Standard International of quality management systems.

**ITB:** Intelligent Terminal Block.

## K

**KB:** Kilobytes.

**kHz:** Kilohertz.

## L

**LAN:** Local Area Network.

**LED:** Light Emitting Diode.

**LVD:** Low Voltage Directive.

## M

**MΩ:** Megaohm.

**mA:** Milliampere.

**MHz:** Megahertz.

**Mbps:** Megabits por segundo.

**m:** Meter.

**mm:** Millimeter.

**ms:** Milisecond.

## N

**N/A:** Not apply.

**NCHAT:** Number of changes for chattering.

## P

**PC:** Personal Computer.

**PE:** Protective Earth.

**PPS:** Pulses per Second.

**P/N:** Part Number.

**PS:** Power Supply.

**PV:** Polarization Voltage.

**PWR:** Power.

## R

**RAM:** Random Access Memory.

**RoHS:** Restriction of Hazardous Substances.

**RTDB:** Real-Time DataBase.

**RTU:** Remote Terminal Unit.

## S

**s:** Second.

**SCADA:** Supervisory Control And Data Acquisition.

**SNTP:** Simple Network Time Protocol.

**SRAM:** Static Random Access Memory.

## T

**TCHAT:** Time for chattering.

**TCP/IP:** Transmission Control Protocol/Internet Protocol.

**TF:** Filtering Time.

**TFTP:** Trivial File Transfer Protocol.

**TM:** Change in Memory Time.

**TS:** Settling Time.

**TU:** Terminal Unit.

## V

**VAC:** Volts of alternate current.

**VDC:** Volts of direct current.

## W

**W:** Watt.

**WEEE:** Waste Electrical and Electronic Equipment.

## X

**XU:** Expansion Unit.



Printed in:

Friday, May 22, 2020

## Schneider Electric

C/ Charles Darwin s/n  
Parque Científico y Tecnológico de la Cartuja  
Seville, Spain

©2019 All rights reserved. The information contained in this document is confidential and is owned by Schneider Electric. It cannot be copied or distributed in any way, unless there is express written authorization by Schneider Electric. Although this information was verified at the time of publication, may be subject to change without notice.

FTE-M588-USR-02 05/2020