



Portable USB Beard Vacuum Cleaner

9403

User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.


1. Read all instructions before using this appliance.
2. Always turn the appliance OFF and disconnect with the USB cable when not in use, before cleaning or storing.
3. Never use the appliance if the cable, main unit or any part are damaged.
4. Do not store this appliance outdoors. Do not charge the battery outdoors.
5. Use of accessories not provided by manufacturer may cause fire, electric shock or personal injury.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
7. Children should be supervised to ensure that they do not play with the appliance.
8. This appliance must be always used in accordance with the user instructions supplied with the product and must not be used for other purposes.
9. Do not touch the power plug or the product with wet hands.
10. Never immerse the appliance in water or other liquids.
11. For electrical safety, any repairs to the product should be carried out by a qualified electrical person only or the product must be disposed of.
12. Keep hair, loose clothing and all other parts of the body away from air inlet of the appliance during operation.
13. Use the vacuum cleaner only on dry surfaces.
14. **WARNING:** Keep the appliance dry.
15. Ensure that the charging cable is not stretched tightly or kinked.
16. Do not expose the appliance to direct sunlight or high temperatures.
17. Keep the appliance away from flammable and explosive substances.
18. Do not vacuum any burning, smoking or flammable objects.
19. This product is for household use only and not designed for commercial use.
20. Do not use solvents, abrasive or aggressive cleaning agents to clean the appliance.
21. The product is equipped with a lithium-ion battery. Do not throw the rechargeable battery into fire and do not subject it to high temperatures. There is a risk of an explosion!
22. This appliance contains batteries that are non-replaceable.
23. This appliance must only be supplied by AS/NZS 61558.1 & AS/NZS 61558.2.16 certified power supply unit with SELV output voltage corresponding to the marking on the appliance.
24. Cleaning and user maintenance shall not be made by children without supervision.
25. Switch OFF the appliance before charging.
26. For cleaning, please refer to CLEANING AND STORAGE section.

CAUTION!

27. The product has built-in lithium-ion batteries. Pay attention to the following:
 - a) Only use and store the product in an environment where the temperature is between -5°C and $+35^{\circ}\text{C}$.
 - b) If not used for a long time, re-charge every three months to prevent battery damage.
 - c) Charging time may be longer when the room temperature is below 10°C .
 - d) Charge the battery when the battery power goes low, avoid allowing the battery to go flat.
28. DO NOT squeeze, puncture, or short circuit the product or put it into water, fire or use in an environment where the temperature is higher than 60°C .
29. Do not expose the product to high temperatures (above $+35^{\circ}\text{C}$), strong magnetic fields, near flammable and explosive gases (such as natural gas, methane, etc.) to avoid accidents such as abnormal operation or fire.

**SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

KNOW YOUR PORTABLE USB BEARD VACUUM CLEANER

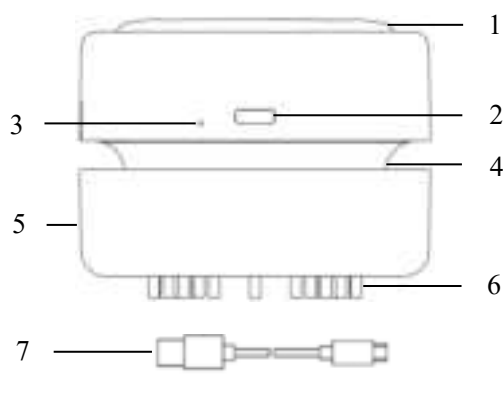

1. On/Off switch
2. Charging port
3. Charging indicator
4. Air outlet
5. Bottom cover (dustbin)
6. Brush
7. USB cord

IMPORTANT!

Please make sure that your appliance is received with the right components shown above. Check everything carefully before use. If any parts are missing or damaged, return the product to respective Customer Service Centre.

When using the appliance for the first time, carefully remove all internal and external packaging and dispose them responsibly.

BEFORE FIRST USE

- Fully charge the appliance before first use.
- Always power off the appliance before charging.
- The supplied USB charging cable should be inserted into the standard USB power source rated at 5Vd.c. 1A specification.

WARNING: Use only the supplied USB charging cable to charge the appliance.

- Blue indicator lights up when charging, and the light goes off when fully charged.
- The charging time is approx. 2 hours.
- The normal working time is approx. 45 minutes after fully charged.

USE YOUR PORTABLE USB BEARD VACUUM CLEANER

1. Push the On/Off button to turn on the appliance and start cleaning.

Note: Allow the appliance to rest 30 minutes after 30 seconds running.

Tips: The brush helps to sweep the stubborn attached stains.

2. Push the On/Off button again to turn off the appliance after cleaning.
3. Take off the bottom cover directly and use a brush to brush the dust off.
4. Reassemble the bottom cover.

CLEANING AND STORAGE

- Clean the product regularly to maintain optimal performance and prolong the life of the product.
- Do not use a steel ball, abrasive cleaners or corrosive liquid (such as gasoline, acetone) to clean the product.
- Rinsing the bottom cover with water, dry thoroughly.
- The main unit can be wiped with a slightly damp cloth. Do not rinse, soak or spray water or other liquids into the product to avoid damage to the appliance.
- Ensure the product is clean and dry before storage.
- Store the product indoors in cool and dry location.
- Charging the appliance every 3 months if the appliance is not used for a long period of time.

TECHNICAL SPECIFICATION

Input: 5Vd.c. 1A

Rated Power: 5W

Battery: Li-ion 3.7Vd.c. 600mAh

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us