

IV .Notes

1. Please use ~110V/220V voltage.
2. The machine lid has the safe protective device, if the top head has not covered even if presses down the starting switch the machine won' t be able to start.
3. Please put in the smooth place, the ice piece invested must be even, otherwise can cause the fuselage vibration.
4. The height of the ice quantity in the trough should 1cm below the red line.
5. Please cleaning the trough after working.
6. Please don' t touch the blade, prevent from hurting.
7. Don' t dismantal the machine when cleaning.

Ice Shaver

Operation Manual

Model No.: BY-168



Please read this manual carefully before use.

Technology is subject to change without notice.

I .Parts Name



- 1.The entrance for adding ice 2.Power switch 3.Exit for ice
4.Blade adjuster 5.base

II . Technical Parameter

Overall Size ————— 290mmx390mmx430mm
Power Supply ————— 110V~120V 220V~240V/50~60Hz
Specified Current —————3.5A
Speed Range ————— 320R/M
Specified Power ————— 250W
Productivity ————— 120Kg/H
N.W.:————— 12Kg

Notice: If the machine was jammed by ice,
press the switch to Reverse!

III . Operation Instruction

1. Open the lid, clean the ice trough with dry towel, check whether the blade is installed firmly.
2. Please check whether there are damages of the power line and the plug, the leakage phenomenon, contacts whether good, close the switch, insert the power source.
3. Open the machine lid, invest the right amount ice piece then cover the top head
4. Press down the starting switch in the front of the machine.
5. According your needs to adjust the blade adjuster to process each various ice with different thickness .
6. The use ice piece diameter in 3–5cm is best, also may pound the big ice into small ones.