

FOR THE SAFETY OF YOUR CHILD, PLEASE READ ALL WARNINGS AND ASSEMBLY/USE INSTRUCTIONS. KEEP THIS GUIDE FOR

1. **ADULT ASSEMBLY REQUIRED.** The product contains small parts,

which are for adult assembly only. Keep small children away when

assembly.

2. Always remove protective material and poly bags and dispose before


US Importer:

Importer Address:



Parts List

Driving wheel

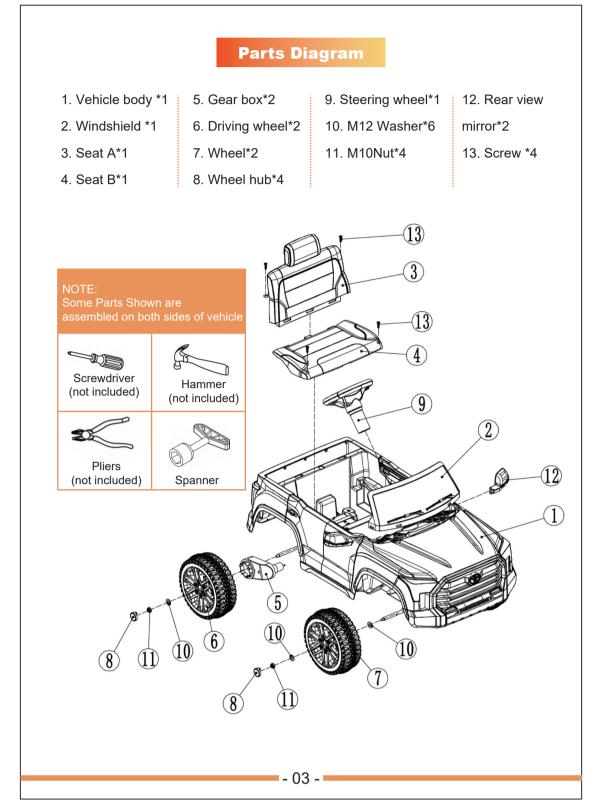

/!\ WARNING!

Alaysearshes.

Always sit on the seat.

Not to be used in traffic.

Rules for Safe Riding

greater than 15 degrees.

forward to back.

Direct Adult Supervision Required.

Keep Children within Safe Riding Areas.

PREVENT INJURIES AND DEATHS:

swimming pools or other bodies of water.

The battery on the vehicle is not replaceable.

well, the power has already been put through.

AND MAKE SURE THEY UNDERSTAND THEM!

Never driving in roadway, near motor vehicles, on lawn space, on near steep

Never use in the dark. A child could encounter unexpected obstacles and have

• Use the toy only on flat surfaces, such as inside your house, garden or

an accident. Operate the vehicle only in the daytime or a well-lit area.


It is not recommended to drive the vehicle on wet surfaces or on lopes of

Make sure you come to a complete stop before changing directions from

Troubleshooting Guide

inclines or steps, swimming pools or other bodies of water.


Do not use this vehicle outdoors when it is raining or snowing.

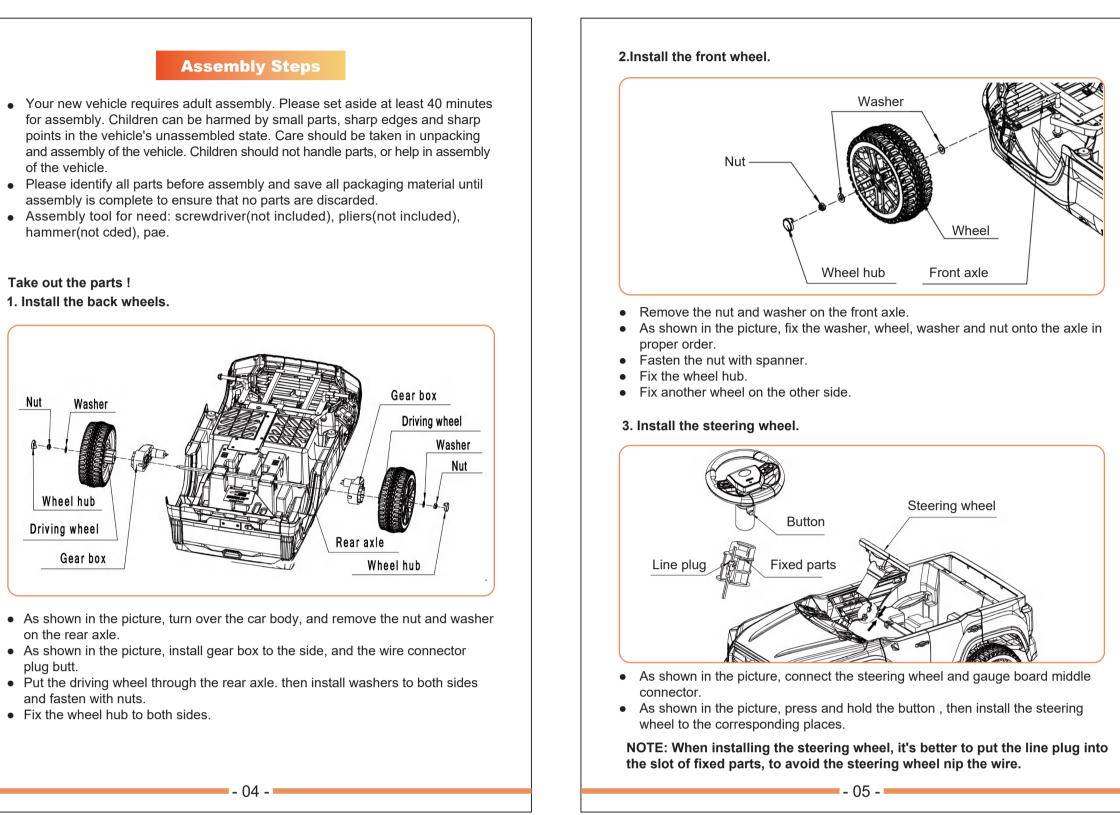



(7) How to use the remote controller:


AAA1.5V


AAA1.5V

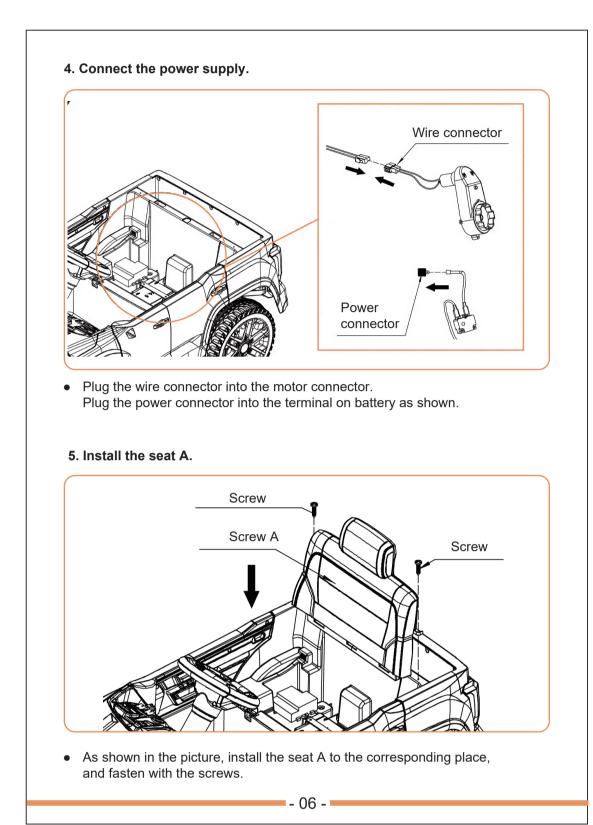

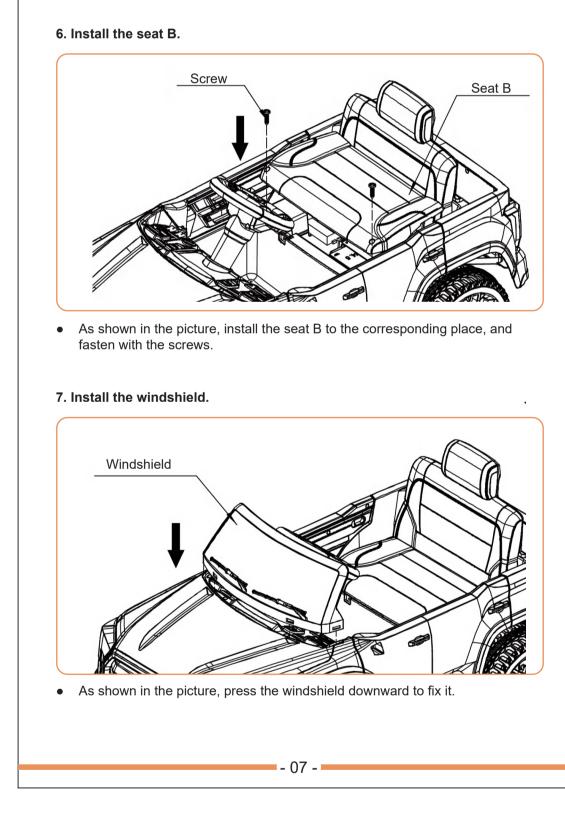

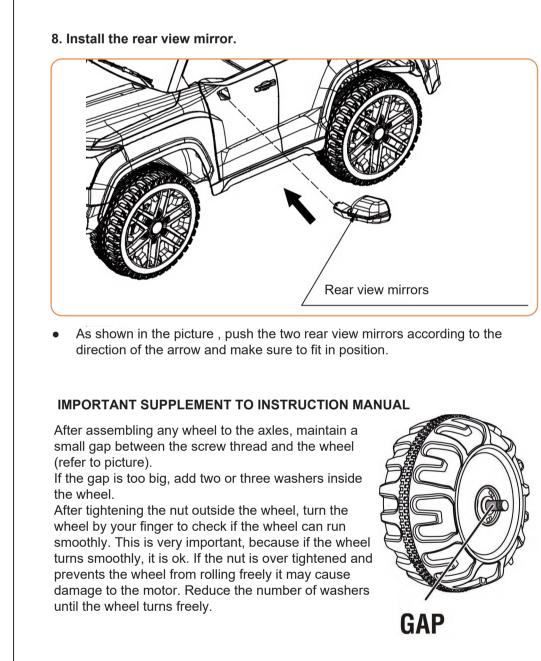

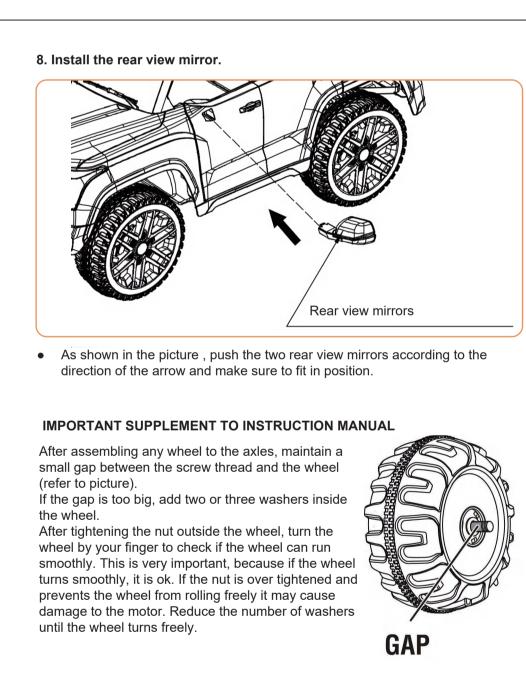

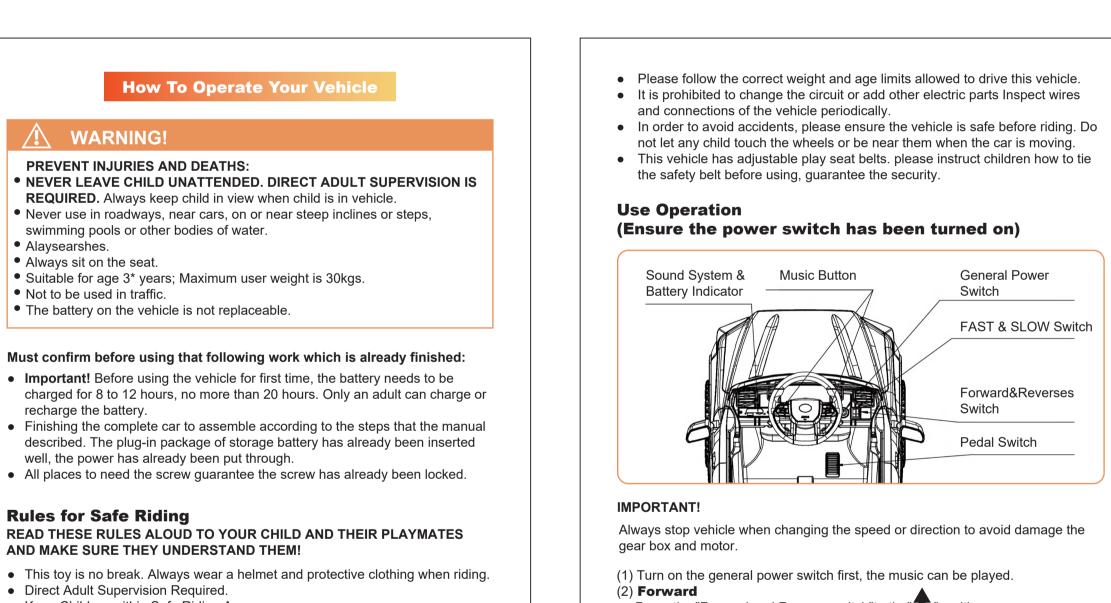


(3) **Stop**

by push any music button.

POSSIBLE CAUSE: Battery is old.


which is also normal.

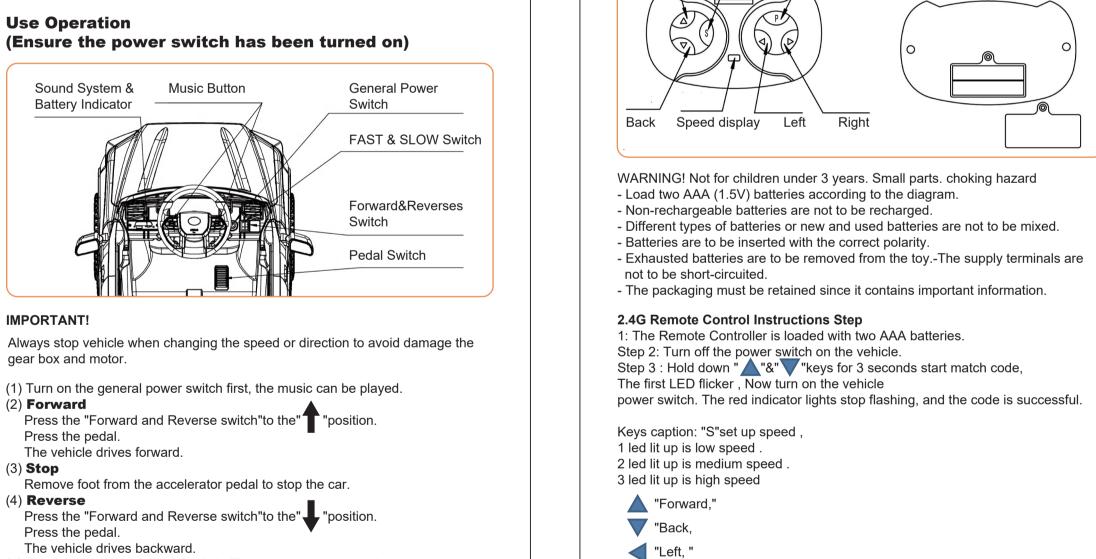


"Right,

parts may melt.

Press "P "key hold the brake, ALL LED flicker.

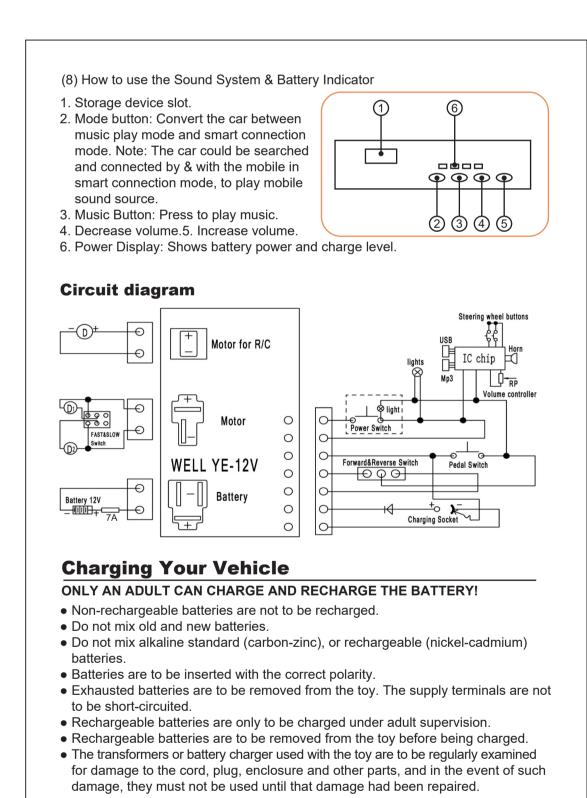

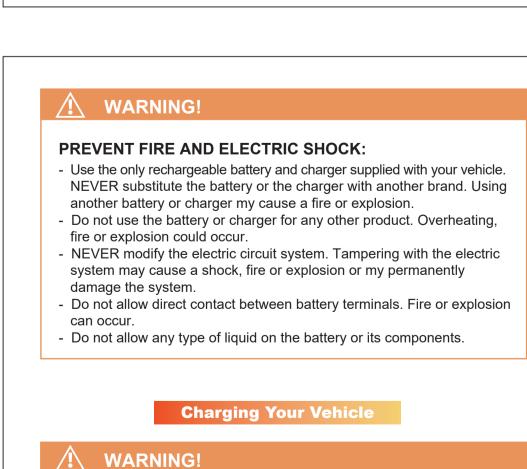

PREVENT FIRE AND ELECTRIC SHOCK:

materials. Charge the battery in a well-ventilated area ONLY.

cause a fire. Pick up the battery by the case ONLY.

Battery is heavy and contains lead acid (electrolyte).

• A recommendation for adult supervision of young children.

Charge the battery in a dry area ONLY.

month if not used regularly.

Do not charge battery upside down.

injury to the user or third parties.

• Explosive gasses are created during charging. Do not charge near heat or flammable

NEVER pick up the battery by the wires or charger. Damage can occur to the battery and may

• Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.

Do not open the battery. Battery contains lead acid and other materials that are toxic and corrosive.

• Do not open the charger. Exposed wiring and circuitry inside case may cause electric shock.

• Only adults may handle or charge the battery. NEVER allow child to handle or charge the battery.


 Do not drop the battery. Permanent damage to the battery could occur or cause serious injury. Before charging the battery, check for wear or damage to the battery, charger, its supply cord


and the connectors. DO NOT charge the battery if any damage to parts has occurred.


• Do not allow the battery to drain completely. Recharge the battery after each use or once a

• Always secure the battery with the bracket. Battery can fall out and injure a child if vehicle tips over.

The toy should be used with caution since skill is required to avoid falls or collisions causing

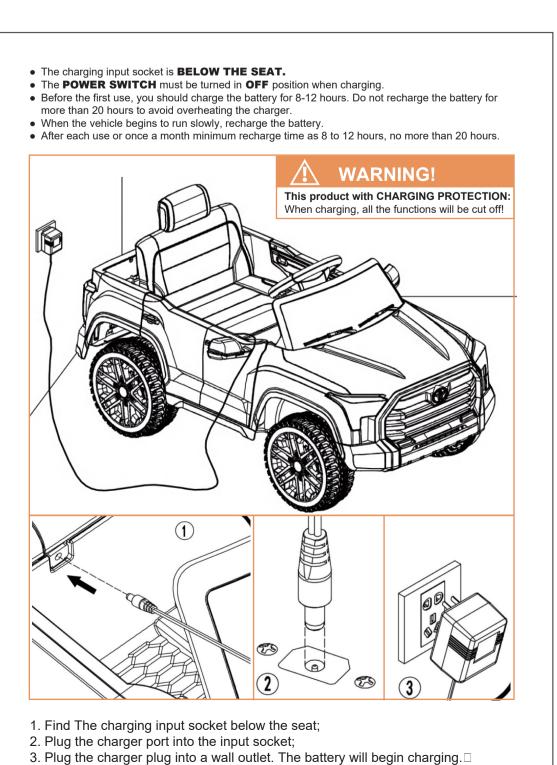

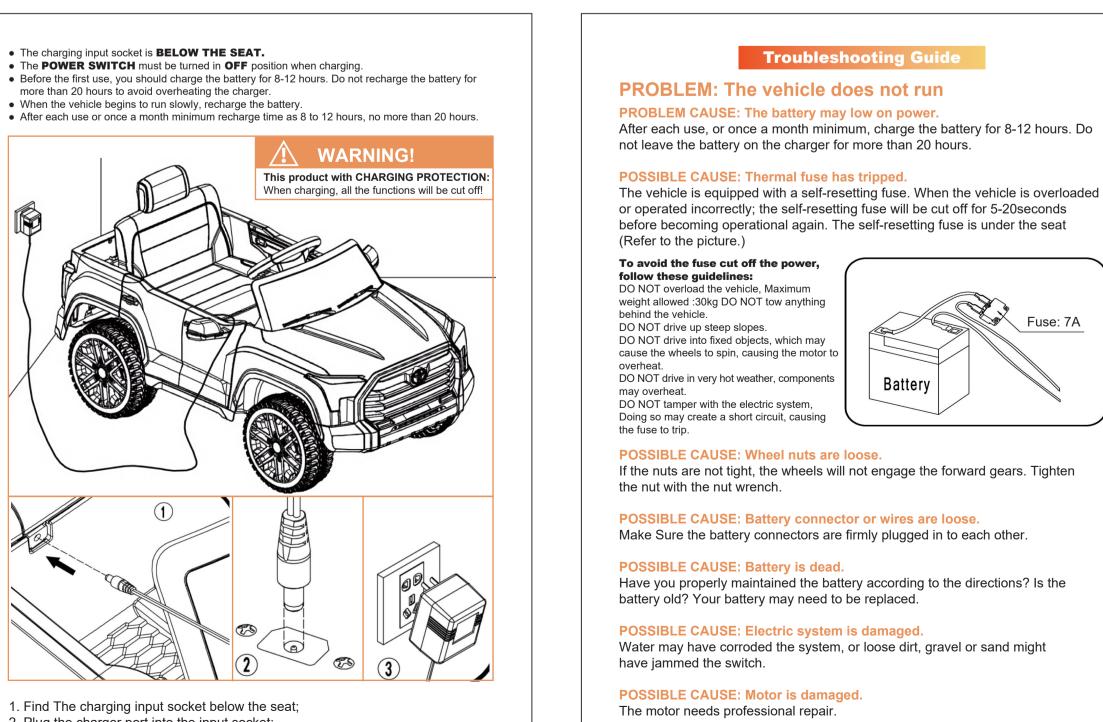

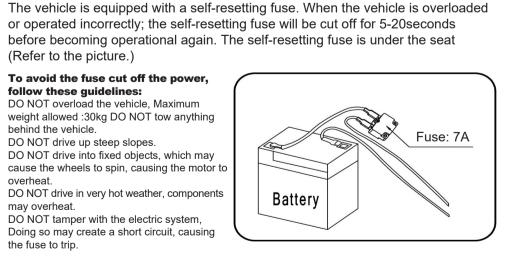

POSSIBLE CAUSE: Wheel nuts are loose. If the nuts are not tight, the wheels will not engage the forward gears. Tighten the nut with the nut wrench.

POSSIBLE CAUSE: Battery connector or wires are loose. Make Sure the battery connectors are firmly plugged in to each other. POSSIBLE CAUSE: Battery is dead.

Have you properly maintained the battery according to the directions? Is the battery old? Your battery may need to be replaced. POSSIBLE CAUSE: Electric system is damaged. Water may have corroded the system, or loose dirt, gravel or sand might

POSSIBLE CAUSE: Motor is damaged. The motor needs professional repair.

PROBLEM: The battery will not recharge. POSSIBLE CAUSE: Battery connector or adapter connector is loose.

(5) Turn on the general power switch, Then you can enjoy music

(6) Turn on the "FAST and SLOW Switch", control the speed of the car.

Make sure the battery connector and adapter connector are firmly plugged together. POSSIBLE CAUSE: Charger is not plugged in.

Assembly Steps

assembly is complete to ensure that no parts are discarded.

Assembly tool for need: screwdriver(not included), pliers(not included),

As shown in the picture, install gear box to the side, and the wire connector

of the vehicle.

hammer(not cded), pae.

Take out the parts!

1. Install the back wheels.

and fasten with nuts.

Fix the wheel hub to both sides.

Make sure the charger is plugged into the wall outlet and the power flow to the

POSSIBLE CAUSE: Charger is not working. Is the charger warm while charging? If not, the charger may be broken and may

need to be replaced.

PROBLEM: The vehicle does not run very long. POSSIBLE CAUSE: Battery may be undercharged.

You may not be charging the battery long enough. After each use, or once a month minimum, charge the battery for 8 to 12 hours. Do not leave the battery on the charger for more than 20 hours.

The battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery should operate for one to three years. Replace the battery with a new One.

PROBLEM: Battery buzzes or gurgles when charging. This is normal and not a cause for concern. It may also be silent when charging,

PROBLEM: Charger feels warm when recharging battery. This is normal and not a cause for concern.

Maintaining Your Vehicle

 It is parents' responsibility to check main parts of the toy before using, Must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be until that damage had been properly removed.

Make sure the plastic parts of the vehicle are not cracked or broken.

 Occasionally use a lightweight oil to lubricate moving parts such as wheels. Park the vehicle indoors or cover it with a tarp to protect it from wet weather. • Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic

• Recharge the battery after each use. Only an adult can handle the battery.

• Recharge the battery at least once a month when the vehicle Raider is not being

 Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.

• Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners. • Do not drive the vehicle in loose dirt, sand or fine gravel which could damage moving parts, motors or the electric system.

• When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.

Disposal Of Battery

• Your sealed lead-acid battery must be recycled or disposed of in an environmentally

sound manner. • Do not dispose of your lead-acid battery in a fire. The battery may explode or leak.

 Do not dispose of a lead-acid battery in your regular, household trash. The incineration, land filling or mixing of sealed lead-acid batteries with household trash is prohibited by law.

• Return an exhausted battery to your local approved lead-acid battery recycle, such as a local seller of automotive batteries.

 Contact your local waste management officials for other information regarding the environmentally sound recycling and disposal of lead-acid batteries. • The battery must be charged only by adult . Please charge the product before

 The toy should not be connected to excessive powers (more than the quantity specified herein), and it should not be operated during charging process. • Any rechargeable battery must only be charged under adult's supervision.

Battery charger shall regularly check the wires, plugs. casing and other parts for damage and found damage should stop using and restored. Open the battery cover on the remote control, and put two pieces of batteries, paying attention to batteries polarity. Replace the battery cover and lock with screws

(please replace the battery according to the above steps and should be done by

All batteries should be inserted with the correct polarity.

 Non-rechargeable battery should not be charged, please remove any running-off Do not use old and new batteries together, or mix different types of batteries.

• The battery charger used with the toy are to be regularly examined for damage

to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until that damage had been repaired. Our products are suitable for

M F963; GB6675, GB19865; EN71 and EN62115 standard.