

MILK FROTHER
User Guide


INTRODUCTION

Congratulations on your new Milk Frother! With this small handheld appliance, you will be able to whisk up perfectly thick and creamy froth in seconds. Simply immerse the stainless steel whisk in milk, press the power button, and soon you will have a cup of delicious milk foam to top off all your lattes and cappuccinos. Battery-powered and ergonomically designed, this small but powerful Milk Frother is a great addition to any kitchen.

FEATURES

- One-button operation.
- Durable, stainless steel whisk.
- Ergonomically designed handle, for comfortable use.
- Powered by 2x AA batteries, for extra convenience.
- Whisks up a thick and creamy foam in seconds. Ideal for frothing milk, or mixing salad dressings and powdered drinks.

PRODUCT DIAGRAM

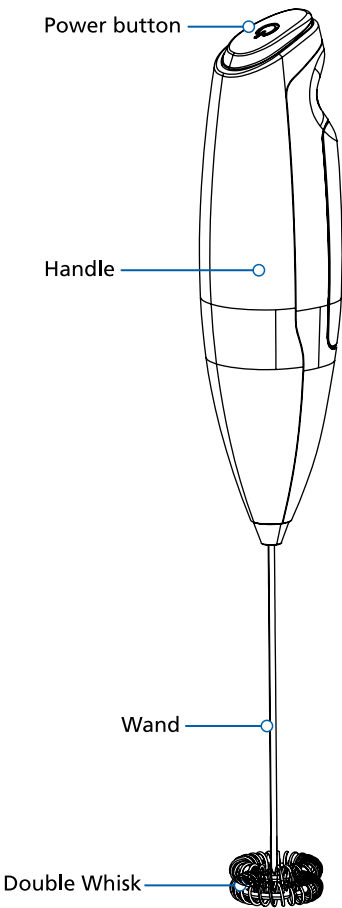

MILK FROTHER
User Guide

USING THE MILK FROTHER

1. Clean the Milk Frother before using it for the first time.
2. Open the battery lid and insert 2x AA batteries. Close the lid, making sure it is securely shut.
3. Fill a cup or beaker with 2 to 4 oz. of warm or cold milk. Dip the Milk Frother into the milk, until the whisk is near the bottom of the cup.
4. Press and hold the Power button to turn the Milk Frother ON. Gently move it up and down until the milk begins to foam.
5. Keep the whisk near the surface of the milk, and whip it for 20 to 30 seconds, or until the milk has doubled in volume.
6. Release the Power button to turn the Milk Frother OFF. Pour your milk into a cup, or scoop the foam into your beverage of choice with the help of a spoon.

CLEANING & MAINTENANCE

1. Rinse the whisk and the wand with hot water.
2. Turn the Milk Frother ON for a few seconds, or use a clean, dry cloth to wipe it dry.
3. When necessary, replace the 2x AA batteries.

NOTE: This Milk Frother is NOT dishwasher safe.

PRODUCT SPECIFICATIONS

- Power: 3V/1.5A
- Product size: 1.5 x 1.29 x 9.4 in.
- Product weight: 0.23 lbs.
- Battery type: 2x AA

WARNINGS & SAFETY PRECAUTIONS

- Do not attempt to pull the wand out.
- Do not bend the wand.
- Do not use the Milk Frother with wet hands.
- This unit is not dishwasher safe. Do not put it in the dishwasher.
- Do not submerge the unit's handle in water or any other liquid.
- Do not use this unit if it is malfunctioning or damaged in any way.

CUSTOMER SERVICE

If you have any questions or concerns regarding the Mainstays Milk Frother, we are here to help! Call us, and an experienced customer support representative will be happy to assist you: **1-866-321-9509**.