



Original	Recharge
 Standby	 Power
 Mute	 Mute / Dimmer
 EPG	 Guide / EPG / -/-
 Info	 Info / Angle
 TTX	 Text / Goto
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Menu	 Menu / Home
 Up / CH+	 CH+ / Page+
 Up / CH+	 Up
 Exit	 Exit / Cancel / Clear
 Left / Vol-	 Vol-
 Left / Vol-	 Left
 OK	 OK
 Right / Vol+	 Vol+
 Right / Vol+	 Right
 Favourite	 Fav / Marker / PC

Original	Recharge
 Down / CH-	 CH- / Page-
 Down / CH-	 Down
 TV/Radio	 TV/Radio /
 1	 1
 2	 2
 3	 3
 Recall	 Back / Return
 4	 4
 5	 5
 6	 6
 Goto	 Shift + Text /
 7	 7
 8	 8
 9	 9
 0	 0
 Rev	 << / Tune-
 Fwd	 >> / Tune+





Power **DIMMER MUTE** **SHIFT**

TV SLOW STEP-FREEZE **DVD** HOLD **SAT** **AUX** REC MODE

▶ **II** ■ **PRESET-** **PRESET+**

◀ ▶ **◀◀** **▶▶** **◀◀** **▶▶**

TITLE **LANG UII** **EQ** **SURROUND**

SOUND **AUDIO** **SUBTITLE** **PROGRAM**

FORMAT **SIZE** **TIMER** **PROGRAM**

PICTURE **ZOOM** **SLEEP** **TV/ RADIO**

TOP MENU **OPT-TOOLS** **GOTO** **RDS**

D.MENU **SETUP** **TEXT** **AV INPUT**

HOME **ANGLE**

MENU **INFO**

OK

CLEAR **RETURN**

EXIT **BACK**

CANCEL **LIST** **CH PAGE**

+ **SMART** **+**

VOL **MEDIA** **CH PAGE**

- **DISPLAY** **-**

TV **DVD** **CD - STB**

1 **2** **3**

VIDEO **TAPE** **TUNER**

4 **5** **6**

AUX - HDD **USB** **BLUETOOTH**

7 **8** **9**

PC **HDMI - SAT** **PC**

GUIDE **0** **FAV MARKER**

EPG

NETFLIX **APP** **YouTube** **Prime Video**

SEARCH **REPEAT** **REPEAT A-B** **RANDOM**

Mandis shop

www.mandis.tv