latest support information on this product, please visit the web site

souhaitez consulter les toutes dernières informations techniques sur ce produit, rendez-vous sur le site Web suivant:

Support site Site d'assistance Sitio Web de soporte Si you have any questions or for the Si yous avez des questions ou si yous Si yous avez des questions ou si yous

Para resolver cualquier duda u obtener la información más reciente sobre el soporte técnico de este producto, visite el siguiente sitio Web:

http://esupport.sony.com/

If you have any questions/problems regarding this product, try the following:

- **Read Troubleshooting in these** Operating Instructions.
- Please contact (U.S.A. only); Call 1-800-222-7669 URL http://www.SONY.com

Smartphone app

Support by Sony app - Find information and get notification about your product:

App. de smartphone

Support by Sony app - Trouvez des infos et recevez des notifications au suiet de votre produit :

Aplicación para **Smartphone**

Aplicación Support by Sony - Busque información y obtenga notificaciones acerca de su producto:





- √ News & Alerts / Actus & Alertes / Noticias y Alertas
- √ Software updates / Mises à jour / Actualizaciones de software
- √ Tutorials / Didacticiels / Tutoriales
- √ Tips & Tricks / Conseils & Astuces / Consejos y Trucos

https://sony.net/SBS





DOLBY AUDIO









androidauto

SONY

4-743-453-11(1)

AV RECEIVER

Operating Instructions

Mode d'emploi

Manual de instrucciones

Owner's Record

The model and serial numbers are located on the bottom of the unit. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. XAV-AX210

Serial No.

To cancel the demonstration (Demo) display, see page 17. For the connection/installation, see page 31.

Pour annuler l'affichage de démonstration (Démo), reportezvous a la page 20.

Pour le raccordement/l'installation, reportez-vous à la page 35.

Para cancelar la pantalla de demostración (Demostración), consulte la página 19.

Para la conexión/instalación, consulte la página 34.

©2018 Sony Corporation Printed in China

http://www.sony.net/

For safety, be sure to install this unit in the dashboard of the car as the rear side of the unit becomes hot during use.

For details, see "Connection/Installation" (page 31).

The nameplate indicating operating voltage, etc., is located on the bottom of the chassis.

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area) and Switzerland.

Warning

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

FOR THE CUSTOMERS IN THE USA. NOT APPLICABLE IN CANADA, INCLUDING IN THE PROVINCE OF QUEBEC.

POUR LES CLIENTS AUX ÉTATS-UNIS. NON APPLICABLE AU CANADA, Y COMPRIS LA PROVINCE DE OUÉBEC.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

This device complies with Part 15 of the FCC Rules and Industry Canada's licence-exempt RSSs.

Operation is subject to the following two conditions:

(1) This device may not cause interference; and (2) This device must accept any interference, including Interference that may cause undesired operation of the device.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that is deemed to comply without maximum permissive exposure evaluation (MPE).

If you have any questions about this product:

Visit: www.sony.com/support

Contact: Sony Customer Information Service Center at 1-800-222-7669

Write: Sony Customer Information Service Center 12451 Gateway Blvd., Fort Myers, FL 33913 Supplier's Declaration of Conformity

Trade Name: SONY Model: XAV-AX210

Responsible Party: Sony Electronics Inc. Address: 16535 Via Esprillo, San Diego, CA 92127 U.S.A.

Telephone Number: <u>858-942-2230</u>
This device complies with part 15 of the FCC rules.
Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received,

including interference that may cause undesired operation.

CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this CD/DVD player is harmful to eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.

For the State of California, USA only

Perchlorate Material – special handling may apply, See

www.dtsc.ca.gov/hazardouswaste/perchlorate

WARNING: Do not ingest battery, Chemical Burn Hazard.

The remote commander contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Note on the lithium battery

Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

Warning if your car's ignition has no ACC position

Do not install this unit in a car that has no ACC position. The display of the unit does not turn off even after turning the ignition off, and this causes battery drain.

Disclaimer regarding services offered by third parties

Services offered by third parties may be changed, suspended, or terminated without prior notice. Sony does not bear any responsibility in these sorts of situations.

Important notice

Caution

IN NO EVENT SHALL SONY BE LIABLE FOR ANY INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR OTHER DAMAGES INCLUDING, WITHOUT LIMITATION, LOSS OF PROFITS, LOSS OF REVENUE, LOSS OF DATA, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, DOWNTIME, AND PURCHASER'S TIME RELATED TO OR ARISING OUT OF THE USE OF THIS PRODUCT, ITS HARDWARE AND/OR ITS SOFTWARE.

Dear customer, this product includes a radio transmitter.

Please check your vehicle operation manual or contact the manufacturer of your vehicle or your vehicle dealer, before you install this product into your vehicle.

Emergency calls

This BLUETOOTH car handsfree and the electronic device connected to the handsfree operate using radio signals, cellular, and landline networks as well as user-programmed function, which cannot guarantee connection under all conditions. Therefore do not rely solely upon any electronic device for essential communications (such as medical emergencies).

On BLUETOOTH communication

- Microwaves emitting from a BLUETOOTH device may affect the operation of electronic medical devices. Turn off this unit and other BLUETOOTH devices in the following locations, as it may cause an accident.
- where inflammable gas is present, in a hospital, train, airplane, or petrol station
- near automatic doors or a fire alarm
- This unit supports security capabilities that comply with the BLUETOOTH standard to provide a secure connection when the BLUETOOTH wireless technology is used, but security may not be enough depending on the setting. Be careful when communicating using BLUETOOTH wireless technology.
- We do not take any responsibility for the leakage of information during BLUETOOTH communication.


If you have any questions or problems concerning your unit that are not covered in this manual, consult your nearest Sony dealer.

Table of Contents	
Warning	5
Getting Started Performing Initial Settings Preparing a BLUETOOTH Device. Connecting Cameras.	8
Listening to the Radio Listening to the Radio. Using Tuner Option Functions	10
PlaybackPlaying a Disc1Playing a USB Device1Playing a BLUETOOTH Device1Searching and Playing Tracks1Other Settings During Playback1	12 13
Handsfree Calling Receiving a Call	4
Useful Functions Apple CarPlay 1 Android Auto 1 iDataLink Maestro 1 Using Gesture Command 1	15 15
Settings Basic Setting Operation 1 General Settings 1 Sound Settings 1 Visual Settings 1	17 18 19
Additional Information Updating the Firmware	20 20 22 23

Cautions					-
Darte List for Installation		0 0	0 0	0	3
Parts List for Installation					
Connection					. 32
Installation		0 1		4	3

Guide to Parts and Controls

Main unit

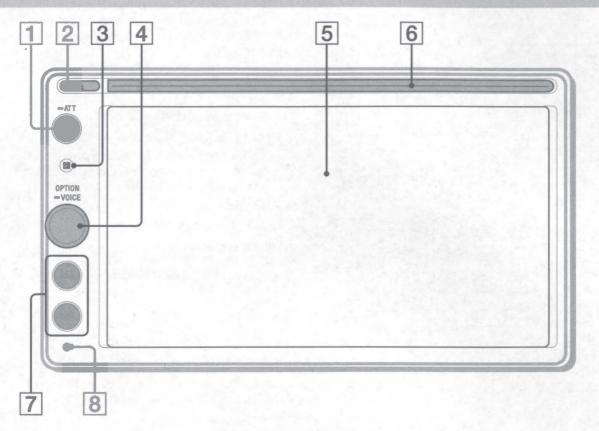

1 HOME

Open the HOME menu.

■ATT (attenuate)

Press and hold for 1 second (less than 2 seconds) to attenuate the sound.

To cancel, press and hold again, or rotate the volume control dial.

2 ≜ (disc eject)

3 Receptor for the remote commander

4 Volume control dial

Rotate to adjust the volume when the sound is output.

OPTION

Press to open the OPTION screen (page 7).

-VOICE

Press and hold to activate the voice command function for Apple CarPlay and Android Auto™.

5 Display/touch panel

6 Disc slot

7 ► (previous/next)


- Move to the previous/next item.
- Press and hold to fast-reverse/fast-forward.

8 Reset button

Use a pointed object such as a ballpoint pen.

RM-X170 remote commander

The remote commander can be used to operate the audio controls. For menu operations, use the touch panel.

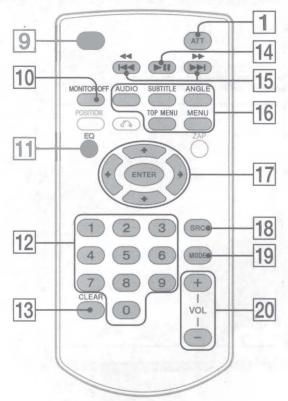

Note

The white buttons in the illustration above are not supported.

9 OFF

Turn the source off.

10 MONITOR OFF

Turn off the monitor.
To turn back on, press again.

11 EQ (equalizer)

Select an equalizer curve.

12 Number buttons (0 - 9)

13 CLEAR

14 ►II (play/pause)

15 ► (previous/next)

◄ (fast-reverse/fast-forward)

16 DVD playback setting buttons

17 ←/1/4/→

Functions differ depending on the selected source.

- Tuner: select a preset station or tune into a station automatically.
- SiriusXM: select a preset channel or move to the previous/next channel.
- USB: select a folder or move to the previous/ next file.
- CD: move to the previous/next track.
- DVD: move the cursor.

ENTER

Enter the selected item.

18 SRC (source)

Change the source. Each time you press this button, a selectable source is displayed in a popup on the current display.

19 MODE

Select the radio band.


20 VOL (volume) +/-

Remove the insulation film before use.




Screen displays


Playback screen:

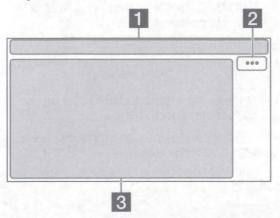

HOME screen:

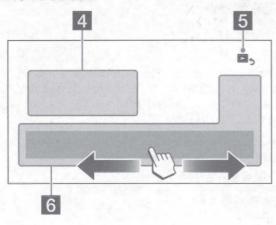

OPTION screen:

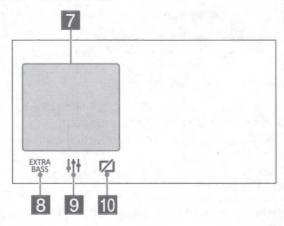

1 Status indication

- Lights up when the sound is attenuated.
- Indicates the signal strength status of the connected SiriusXM Connect Vehicle Tuner.
- Lights up when the audio device is playable by enabling the A2DP (Advanced Audio Distribution Profile).
- Lights up when handsfree calling is available by enabling the HFP (Handsfree Profile).
- Yill Indicates the signal strength status of the connected cellular phone.
- Indicates the remaining battery status of the connected cellular phone.
- Lights up when the Bluetooth® signal is on. Flashes when the connection is in progress.

2 ··· (source option)

Open the source option menu. The available items differ depending on the source.

3 Application specific area

Display playback controls/indications or show the unit's status. Displayed items differ depending on the source.

- 4 Clock (page 17)
- 5 (return to the playback screen)
 Switch from the HOME screen to the playback screen.
- 6 Sources and Settings select keys
 Change the source or make various settings.
 Display the setting icon and other icons by

flicking the bottom of this area.

- 7 Sources select keys
 Change the source.
- 8 EXTRA (EXTRA BASS)
 Change the EXTRA BASS setting (page 18).
- 9 In (EQ10/Subwoofer)
 Change the EQ10/Subwoofer setting (page 18).
- 10 (monitor off)

Turn off the monitor. When the monitor is turned off, touch any part of the display to turn it back on.

Getting Started

Performing Initial Settings

You need to perform initial settings before operating the unit for the first time, after replacing the car battery, or changing connections. If the initial settings screen does not appear when you turn on the unit, perform the factory reset (page 18) to initialize the unit.

- 1 Touch [Language], then set the display language.
- 2 Touch [Demo], then touch and select [OFF] to disable the demonstration mode.
- 3 Touch [Set Date/Time], then set the date and time.
- 4 After setting the date and time, touch [OK]. The startup caution appears.
- 5 Read through the startup caution, then if you accept all conditions, touch [Close]. The setting is complete.

This setting can be further configured in the setting menu (page 17).

Preparing a BLUETOOTH Device

You can enjoy music or perform handsfree calling depending on the BLUETOOTH compatible device such as smartphones, cellular phones, and audio devices (hereafter "BLUETOOTH device" if not otherwise specified). For details on connecting, refer to the operating instructions supplied with the device.

Before connecting the device, turn down the volume of this unit; otherwise, a loud sound may result.

Pairing and connecting with a BLUETOOTH device

When connecting a BLUETOOTH device for the first time, mutual registration (called "pairing") is required. Pairing enables this unit and other devices to recognize each other.



- 1 Place the BLUETOOTH device within 1 m (3 ft) of this unit.
- **2** Press HOME, then touch [Settings].

- 3 Touch 图.
- 4 Touch [Bluetooth Connection], then set the signal to [ON].

The BLUETOOTH signal is turned on and 3 lights up on the status bar of the unit.

5 Touch [Pairing].

© flashes while the unit is in pair

§ flashes while the unit is in pairing standby mode.

 
- 6 Perform pairing on the BLUETOOTH device so it detects this unit.
- 7 Select [XAV-AX210] shown in the display of the BLUETOOTH device.

If your model name does not appear, repeat from step 5.



If the connection confirmation display appears, operate the BLUETOOTH device to approve the connection, then touch [OK] on the unit and/or the BLUETOOTH device.

- 8 If passkey* input is required on the BLUETOOTH device, input [0000].
 - * Passkey may be called "passcode," "PIN code," "PIN number," "password," etc., depending on the BLUETOOTH device.



When pairing is made, 8 stays lit.

9 Select this unit on the BLUETOOTH device to establish the BLUETOOTH connection.

or policies up when the connection is made.

Notes

- The unit can only be connected with one BLUETOOTH device at a time.
- To disconnect the BLUETOOTH connection, turn the connection off from either the unit or the BLUETOOTH device.

Connecting with a paired BLUETOOTH device

To use a paired device, connection with this unit is required. Some paired devices will connect automatically.



- 1 Press HOME, then touch [Settings].
- 2 Touch 国.
- 3 Touch [Bluetooth Connection], then touch [ON].

 Make sure that 3 lights up on the status bar of the unit.
- 4 Activate the BLUETOOTH function on the BLUETOOTH device.
- 5 Operate the BLUETOOTH device to connect to this unit.

 or or lights up on the status bar.

To connect the last-connected device from this unit

When the ignition is turned to on with the BLUETOOTH signal activated, this unit searches for the last-connected BLUETOOTH device, and connection is made automatically.

Note

While streaming BLUETOOTH audio, you cannot connect from this unit to the cellular phone. Connect from the cellular phone to this unit instead.

To install the microphone

For details, see "Installing the microphone" (page 34).

Connecting Cameras

By connecting the optional cameras to the CAMERA IN terminals, you can display pictures from the cameras. For details, see "Connection/Installation" (page 31).

To display pictures from the cameras


Press HOME, touch [Camera], then touch [1], [2] or [Rear].

Listening to the Radio

Listening to the Radio

To listen to the radio, press HOME then touch [Tuner].

Reception controls/indications

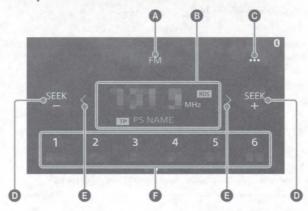

- Current band Change the band (FM or AM).
- B Current frequency, program service name*, RDS (Radio Data System) indication*
 - * During RDS reception.
- Open the tuner option menu.
- SEEK-/SEEK+ Tune in automatically.
- Tune in manually.
 Touch and hold to continuously skip frequencies.
- **Preset numbers**

Select a preset station. Swipe right/left to show the other preset stations.

Touch and hold to store the current frequency in that preset.

Tuning

- 1 Select the desired band (FM or AM).
- 2 Perform tuning.

To tune automatically

Touch SEEK-/SEEK+.

Scanning stops when the unit receives a station.

To tune manually

Touch and hold </>

 to locate the approximate frequency, then touch

 repeatedly to fine adjust to the desired frequency.

Storing manually

While receiving the station that you want to store, press and hold the desired preset number.

Receiving stored stations

Select the band, then touch the desired preset number.

Using Tuner Option Functions

The following functions are available by touching ••••.

BTM

Stores stations in order of frequency on the preset numbers. 18 stations can be stored for FM and 12 stations for AM as preset stations.

Local

Select [ON] to tune only to stations with strong signals. To tune normally, select [OFF].

PTY*

Select a program type from the PTY List to search for a station broadcasting the selected program type.

* Only available during FM reception.

Listening to the SiriusXM Radio

To listen to the SiriusXM radio, press HOME then touch [SXM].

Activating your SiriusXM Subscription

Only SiriusXM brings you more of what you love to listen to, all in one place. Get over 140 channels, including commercial-free music plus the best sports, news, talk, comedy and entertainment. Welcome to the world of satellite radio. A SiriusXM Connect Vehicle Tuner and Subscription are required. For more information, visit www.siriusxm.com

After installing your SiriusXM Connect Vehicle Tuner and antenna (aerial), press HOME, then touch [SXM]. You should be able to hear the SiriusXM preview channel on Channel 1. After verifying that you can hear the preview channel, select Channel 0 to find the Radio ID of your tuner. In addition, the Radio ID is located on the bottom of the SiriusXM Connect Vehicle Tuner and its packaging. You will need this number to activate your subscription. Write the number down for reference.

To display the SiriusXM Radio ID

- 1 Press HOME, then touch [SXM].
- 2 Touch •••, then select [Channel Direct Select].
- 3 Input [000], then touch [OK].

In the USA, you can activate online or by calling SiriusXM Listener Care:

- Online: Visit www.siriusxm.com/activatenow
- Phone: Call 1-866-635-2349

In Canada, you can activate online or by calling SiriusXM Listener Care:

- Online: Visit www.siriusxm.ca/activatexm
- Phone: Call 1-877-438-9677


As part of the activation process, the SiriusXM satellites will send an activation message to your tuner. When your radio detects that the tuner has received the activation message, your radio will display: [Subscription Updated. Press Enter to Continue.]. Once subscribed, you can tune to channels in your subscription plan.


Notes

- The activation process usually takes 10 to 15 minutes, but may take up to an hour.
- Your radio will need to be turned on and receiving the SiriusXM signal to receive the activation message.

Tuning channels for SiriusXM

Reception controls/indications

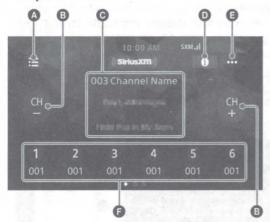

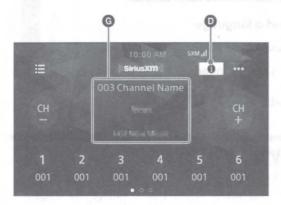

- ♠ \(\overline{\overlin
- CH- (previous channel) / CH+ (next channel)
 Select the channel.
- © Channel number, channel name, artist name, song title
- **(information)**Switch the channel information.
- (SXM option)
 Open the SXM option menu.
- Preset numbers
 Select a preset channel Swipe right/le
 - Select a preset channel. Swipe right/left to show the other preset channels. Touch and hold to store the current channel in that preset.
- **6** Channel number, channel name, category name, content information

To tune the channel from the channel list or category list

- 1 Touch =.
- 2 Touch [Channel List]. Alternatively, touch [Category List], then touch the desired category item. The channel list appears.
- 3 Touch the desired channel.

To store channels

1 While receiving the channel that you want to store, touch and hold a number key (1 to 6).

To receive the stored channel, touch a number key (1 to 6).

To set a parental control

The parental control feature allows you to limit access to SiriusXM channels with mature content. When enabled, the parental control feature requires you to enter a passcode to tune to the locked channels. Information on setting up the passcode and locking channels can be found below.

- 1 Touch •••, then touch [Parental Control].
 The passcode input display appears.
- 2 Enter your 4-digit passcode by touching the number keys, then touch [OK].
 The passcode confirmation display appears.
- **3** Enter the 4-digit passcode again, then touch [OK]. The parental control is applied, and the channels are locked.

To unlock the channels/To lock the channels again

- 1 Touch ••• , then touch [Parental Control].
 The passcode input display appears.
- 2 Enter your 4-digit passcode by touching the number keys, then touch [OK].

To change the passcode

- 1 Touch •••, touch [Pass Code Change], then enter your current passcode.
- 2 Enter your new passcode.

Using SXM Option Functions

The following functions are available by touching

Channel Direct Select

Tune the desired channel by inputting its channel number directly. Use the number buttons (0-9) and press ENTER on the remote commander.

Parental Control

Set the parental lock to on or off, and edit the passcode.

Pass Code Change


Change the passcode for the Parental Control feature.

Playback

Playing a Disc

Depending on the disc type, some operations may be different or restricted.

Insert the disc (label side up).

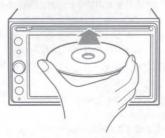

Playback starts automatically.

If a DVD menu appears

Touch the desired item in the DVD menu. You can also use the menu control panel, which can be displayed by touching the screen anywhere except the DVD menu items. Touch ◆/◆/◆/◆ to move the cursor, then touch ⊕ to confirm. If the menu control panel does not appear by touching the display, use the remote commander.

Example of playback indications (DVD)



- A Title number, chapter number, audio format
- B Progress bar, elapsed playback time

Touch the display if the indications are not displayed.

Note

To switch to the DVD playback screen while displaying the screen of the Apple CarPlay, Android Auto, etc., press HOME, then touch [Disc].

Changing the audio language/format

When playing a DVD video, the audio language can be changed if the disc is recorded with multilingual tracks. You can also change the audio format when playing a disc recorded in multiple audio formats (e.g., Dolby Digital).

During playback, touch the screen, then .

Touch Audio repeatedly until the desired audio language/format appears.

Example: Dolby Digital 5.1 ch



A Audio language

Audio format/channel numbers

If the same language is displayed two or more times, the disc is recorded in multiple audio formats.

Playing a USB Device

MSC (Mass Storage Class) type USB devices (such as a USB flash drive, digital media player) compliant with the USB standard can be used.

Notes

- USB devices formatted with file systems FAT12/16/32 are supported.
- For details on the compatibility of your USB device, visit the support site on the back cover.
- For details on the supported file formats, see "Supported formats for USB playback" (page 21).
- 1 Turn down the volume on the unit.
- **2** Connect the USB device to the USB port.
- 3 Press HOME, then touch [USB]. Playback starts.

To remove the device

Turn the unit off or turn the ignition switch to the ACC off position, then remove the USB device.

Playing a BLUETOOTH Device

You can play contents on a connected device that supports BLUETOOTH A2DP (Advanced Audio Distribution Profile).



- 1 Make a BLUETOOTH connection with the audio device (page 9).
- 2 Press HOME, then touch [BT Audio].
- **3** Operate the audio device to start playback.

Notes

- Depending on the audio device, information such as title, track number/time, and playback status may not be displayed on this unit.
- Even if the source is changed on this unit, playback of the audio device does not stop.

To match the volume level of the BLUETOOTH device to other sources

You can reduce the volume level differences between this unit and the BLUETOOTH device: During playback, touch •••, then set [Input Level] between –8 and +8.

Searching and Playing Tracks

Repeat play and shuffle play

Playback in the selected play mode may take time to start.

Available play modes differ depending on the selected sound source and connected device.

Direct search play

During DVD playback, press the number buttons on the remote commander to enter an item (e.g., track) number, then press ENTER on the remote commander. Playback starts from the beginning of the selected point.

Searching for a file from the list screen

1 During CD-DA or USB playback, touch \(\overline{\o



Furthermore, touch \(\mathbb{I}\) (audio) or \(\mathbb{I}\) (video) to list up by file type. (Available only when USB is played.)

2 Touch the desired item. Playback starts.

Other Settings During Playback

Further settings are available in each source by touching •••. The available items differ depending on the source.

Picture EQ

Adjusts the picture quality according to your taste: [Dynamic], [Standard], [Theater], [Custom]. (Available only when the parking brake is applied and USB video or DVD video is played back.)

Aspect

Selects an aspect ratio for the screen of the unit. (Available only when the parking brake is applied and USB video or DVD video is played back.)

Norma

Displays a 4:3 picture in its original size, with side bars to fill the 16:9 screen.

Zoom

Displays a 16:9 picture that has been converted into 4:3 letter box format.

Full

Displays a 16:9 picture in its original size.

Captions

Enlarges the picture horizontally, while fitting captions in the screen.

DVD Audio Level

Adjust the audio output level between –8 and +8 for a DVD recorded in Dolby Digital format to balance the volume level between discs. (Available only when DVD is played.)

Handsfree Calling

To use a cellular phone, connect it with this unit. For details, see "Preparing a BLUETOOTH Device" (page 8).



Note

The handsfree calling functions explained below are available only when the Apple CarPlay or Android Auto function is deactivated. When the Apple CarPlay or Android Auto function is activated, use the handsfree calling functions on its application.

Receiving a Call

1 Touch when a call is received.
The phone call starts.


Note

The ringtone and talker's voice are output only from the front speakers.

To reject/end a call Touch .

Making a Call

- 1 Press HOME, then touch [Phone].
- 2 Touch one of the call icons on the BLUETOOTH phone display.

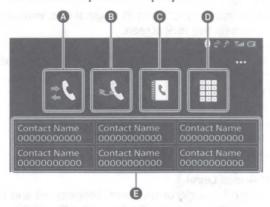

A : Call history*

Select a contact from the call history list. The unit stores the last 20 calls.

Redial
 Make a call automatically to the last contact you made.

◎ Contacts*

Select a contact from the name list/number list in the phonebook. To search for the desired contact in alphabetical order from the name list, touch **Q**.

Dialpad

Enter the phone number.

- Preset phone number list Select the stored contact. To store the contact, see "Presetting phone numbers" (page 14).
- * The cellular phone needs to support PBAP (Phone Book Access Profile).
- Touch .

 The phone call starts.

Presetting phone numbers

You can store up to 6 contacts in the preset list.

- 1 In the phone screen, select a phone number that you want to store in the preset dial from the phonebook.
 The confirmation display appears.
- 2 Touch [Add to Preset].
- 3 Select the preset phone number list where the phone number is stored.
 The contact is stored in the preset phone number list.

Available Operations During a Call

To adjust the ringtone volume

Rotate the volume control dial while receiving a call.

To adjust the talker's voice volume

Rotate the volume control dial during a call.

To adjust the volume for the other party (Mic gain adjustment)

During a handsfree call, touch •••, then set [MIC Gain] to [High], [Middle], or [Low].

To switch between handsfree mode and handheld mode

During a call, touch to switch the phone call audio between the unit and cellular phone.

Note

Depending on the cellular phone, this operation may not be available.

To answer an incoming call automatically Touch •••, then set [Auto Answer] to [ON].

Useful Functions

Apple CarPlay

Apple CarPlay lets you use your iPhone in the car in a way that allows you to stay focused on the road.

Notes on using Apple CarPlay

- iPhone with iOS 7.1 or later is required. Update to the latest iOS version before use.
- Apple CarPlay can be used on iPhone 5 or later.
- For details on compatible models, refer to the compatibility list on the support site on the back cover
- For details about Apple CarPlay, refer to the manual supplied with your iPhone, or visit the website of Apple CarPlay.
- Since the GPS on your iPhone is used, place your iPhone where it can easily receive a GPS signal.
- 1 Connect your iPhone to the USB port.
- **2** Press HOME, then touch the Apple CarPlay icon.

Your iPhone's display appears on the display of the unit. Touch and control the applications.

Use of the Apple CarPlay logo means that a vehicle user interface meets Apple performance standards. Apple is not responsible for the operation of this vehicle or its compliance with safety and regulatory standards.

Please note that the use of this product with iPhone may affect wireless performance.

Android Auto

Android Auto extends the Android™ platform into the car in a way that's purpose-built for driving.

Notes on using Android Auto

- Android phone with Android 5.0 or higher is required. Update to the latest OS version before use.
- Your Android phone needs to support Android Auto. For details on compatible models, refer to the compatibility list on the support site on the back cover.
- Download the Android Auto app on Google Play.
- For details about Android Auto, refer to the manual supplied with your Android phone, or visit the website of Android Auto.
- Since the GPS on your Android phone is used, place your Android phone where it can easily receive a GPS signal.
- Android Auto may not be available in your country or region.
- Connect your Android phone to the USB port.

2 Press HOME, then touch the Android Auto icon.

The Android Auto interface will be displayed fullscreen on the display of the unit. Touch and control the applications.

iDataLink Maestro

Connecting the iDataLink Maestro module (not supplied) to this unit allows you to display the current car status and adjust certain settings. Available functions and settings differ according to your car type and the firmware installed to the iDataLink Maestro module. For more information, visit http://maestro.idatalink.com/
Sony does not guarantee all operations of the iDataLink Maestro functions and settings.

Getting iDataLink Maestro ready

Installing the firmware to the iDataLink Maestro module is required before using the iDataLink Maestro features.

- 1 Check the serial number of the unit.
 The serial number is indicated on the back of the unit, or touch [Serial No.] in [General Settings] (page 18).
- Visit the website (http://maestro.idatalink.com/), follow the on-screen instructions to configure the firmware according to your car type, then install the firmware to the iDataLink Maestro module.

If you have any questions or problems concerning the iDataLink Maestro module that are not covered on the website, contact:

Automotive Data Solutions Inc. Email: maestrosupport@adsdata.ca

Call: 1-866-427-2999

Using iDataLink Maestro

After installing the iDataLink Maestro module, only available functions and settings are displayed on the HOME screen:

Ex., Climate, Gauges, Vehicle Info, Park Assist

Climate screen:

You can use this screen to see the status or control the climate control in your car.




Gauges screen:

Driving information of your car, such as running speed and engine speed, can be displayed.



Vehicle Info screen:

Information from your car, such as the tire pressure and car battery voltage, can be displayed.

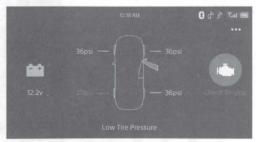

Park Assist screen:

Adds a visual display of detected objects to the existing parking sensor system in your car.



Note on the obstacle detect information

This function is for supporting the driver's vision only, and not all obstacles and risks can be detected.

Using Gesture Command

You can perform frequently-used operations by swiping your finger on the reception/playback display.

Note

The gesture commands explained below are not available on the screens of Apple CarPlay, Android Auto and iDataLink Maestro.

Do this	To
Swipe left to right	Radio reception: seek forward stations. (The same as pressing and holding ►►I.) SiriusXM reception: tune the next channel (channel +).
	Video/audio playback: skip forward a file/track. (The same as ►►I.)
Swipe right to left	Radio reception: seek backward stations. (The same as pressing and holding I◄ .) SiriusXM reception: tune the previous channel (channel -).
	Video/audio playback: skip backward a file/track. (The same as ◄◄.)
1	Radio reception: receive stored stations (go forward). SiriusXM reception: tune the next preset (preset +).
Swipe upwards	USB video/USB audio playback: move to the next folder.
Swipe downwards	Radio reception: receive stored stations (go backward). SiriusXM reception: tune the previous preset (preset –).
Swipe downwards	USB video/USB audio playback: move to the previous folder.

Settings

Basic Setting Operation

You can set items in the following setup categories: ☐ General Settings, ♪ Sound Settings,

☐ Visual Settings

- 1 Press HOME, then touch [Settings].
- **2** Touch one of the setup category icons. The items that can be set differ depending on the source and settings.
- 3 Move the scrollbar up and down to select the desired item.

To return to the previous display Touch **1**.

To switch to the playback screen Touch □5.

EGeneral Settings

Language

Selects the display language: [English], [Español], [Français], [Deutsch], [Italiano], [Nederlands], [Português], [Русский], [네ոս], [简体中文], [繁體中文], [한국어].

Demo

Activates the demonstration: [OFF], [ON].

Date/Time

Date Format

Selects the format: [DD/MM/YY], [MM/DD/YY], [YY/MM/DD].
Time Format

Selects the format: [12-hour], [24-hour].
Set Date/Time

Sets the date and clock time manually.

Beep

Activates the operation sound: [OFF], [ON].

Dimmer

Dims the display: [OFF], [Auto], [ON]. ([Auto] is available only when the illumination control lead is connected and works when the head light is turned on.)

Dimmer Level

Adjusts the brightness level when the dimmer is activated: -5 to +5.

Touch Panel Adjust

Adjusts the touch panel calibration if the touching position does not correspond with the proper item.

Camera Input

Selects the cameras connected to the camera input terminals: [Rear], [1], [2]. It also selects the view from the cameras: [OFF], [Normal], [Reverse] (mirror image).

Rear Camera Line Setting

Adjusts the length and/or position of the marker lines on the picture from the rear view camera by touching the arrow marks.

To hide the marker lines, touch \(\) repeatedly until the marker line disappears.

Steering Control

Selects the input mode for the connected remote control. To prevent a malfunction, be sure to match the input mode with the connected remote control before use.

Custom

Input mode for the steering wheel remote control (follow the procedures of [Steering Control Custom] to register functions on the connected remote control).

Preset

Input mode for the wired remote control excluding the steering wheel remote control.

Steering Control Custom

The steering button panel appears.

- 1 Press and hold the button you want to assign to the steering wheel.
 - The button on the panel lights up (standby).
- Press and hold the button on the steering wheel you want to assign the function to. The button on the panel will change the color (highlighted or encircled by an orange line).
- 3 To register other functions, repeat steps 1 and 2.

(Available only when [Steering Control] is set to [Custom].)

Notes

- While making settings, the connected remote control cannot be used even though some functions have already been registered. Use the buttons on the unit.
- If an error occurs while registering, all the registered information is cleared. Restart registration from the beginning.
- This function may not be available on some vehicles.
 For details on the compatibility of your vehicle, visit the support site on the back cover.

Bluetooth Connection

Activates the BLUETOOTH signal: [OFF], [ON], [Pairing] (enters into pairing standby mode).

Bluetooth Device Info

Displays the information of the device connected to the unit.

(Available only when [Bluetooth Connection] is set to [ON] and a BLUETOOTH device is connected to the unit.)

Maestro Input Level

Adjusts the relative volume level to the signal input from the iDataLink Maestro module: -8 to +8.

(Available only when the connection with iDataLink Maestro is established.)

Maestro Settings

Displays the menus for your original car settings and setting for the Maestro module. Your display will vary based on the firmware in the iDataLink Maestro module.

(Available only when the connection with iDataLink Maestro is established.)

Clock Time

Sets the clock time by the RDS data: [OFF], [ON].

Bluetooth Reset

Initializes all BLUETOOTH-related settings such as pairing information, call history, history of connected BLUETOOTH devices, etc.

SXM Reset

Initializes the SiriusXM Connect Vehicle Tuner settings (preset channels/parental lock): [Reset], [Cancel].

Factory Reset

Initializes all the settings to the factory settings.

Serial No.

Displays the serial number of the unit.

Firmware Version

Updates and confirms the firmware version.

Open Source Licenses

Displays the software licenses.

♪ Sound Settings

EXTRA BASS

Reinforces bass sound in synchronization with the volume level: [OFF], [1], [2].

EQ10/Subwoofer

Selects an equalizer curve and adjusts the subwoofer level.

EQ10

Selects the equalizer curve: [OFF], [R&B], [Rock], [Pop], [Dance], [Hip-Hop], [Electronica], [Jazz], [Soul], [Country], [Custom].

[Custom] adjusts the equalizer curve: -6 to +6.

Subwoofer

Adjusts the volume level of the subwoofer: [OFF], -10 to +10.

Balance/Fader

Adjusts the balance/fader level.

Balance

Adjusts the sound balance between the left and right speakers: [L15] to [R15].

Fader

Adjusts the sound balance between the front and rear speakers: [Front 15] to [Rear 15].

Crossover

Adjusts the cut-off frequency and subwoofer phase.

High Pass Filter

Selects the cut-off frequency of the front/rear speakers: [OFF], [50Hz], [60Hz], [80Hz], [100Hz], [120Hz].

Low Pass Filter

Selects the cut-off frequency of the subwoofer: [50Hz], [60Hz], [80Hz], [100Hz], [120Hz].

Subwoofer Phase

Selects the subwoofer phase: [Normal], [Reverse].

DSO (Dynamic Stage Organizer)

Enhances audio output: [OFF], [Low], [Middle], [High].

■ Visual Settings

Wallpaper

Changes the wallpaper by touching the desired color or sets your favorite photo data in a MSC (Mass Storage Class) type USB device as a wallpaper.

Key Illumination

Registers a customized color for the buttons.

[Red]: [0] to [32] [Green]: [0] to [32] [Blue]: [0] to [32]

DVD Menu Language

Selects the default language for the disc's menu: [English], [Chinese], [German], [French], [Italian], [Spanish], [Portuguese], [Dutch], [Danish], [Swedish], [Finnish], [Norwegian], [Russian], [Other].

(Available only when no source is selected.)

DVD Audio Language

Selects the default language for the soundtrack: [English], [Chinese], [German], [French], [Italian], [Spanish], [Portuguese], [Dutch], [Danish], [Swedish], [Finnish], [Norwegian], [Russian], [Other].

(Available only when no source is selected.)

DVD Subtitle Language

Selects the default subtitle language for DVD: [English], [Chinese], [German], [French], [Italian], [Spanish], [Portuguese], [Dutch], [Danish], [Swedish], [Finnish], [Norwegian], [Russian], [Other].

(Available only when no source is selected.)

Output Color System

Changes the color system according to the connected monitor (SECAM is not supported): [NTSC], [PAL].

(Available only when no source is selected.)

Rear Monitor Type

Selects an aspect ratio suitable for the connected monitor.

(Available only while the source is off.)

Displays a wide picture. Suitable when connecting to a wide-screen monitor or a monitor with a wide mode function.

Letterbox

Displays a wide picture with bands on the upper and lower positions of the screen. Suitable when connecting to a 4:3 screen monitor.

Pan Scan

Displays a wide picture on the entire screen and automatically cuts off the portions that do not fit.

Album artwork display

Displays the album artwork on the background while USB music plays back: [OFF], [ON].

Additional Information

Updating the Firmware

To update the firmware, visit the support site on the back cover, then follow the online instructions. Updating the firmware takes a few minutes to complete. During the update, do not turn the ignition to the OFF position.

Precautions

- Cool off the unit beforehand if your car has been parked in direct sunlight.
- Power antenna (aerial) extends automatically.
- When you transfer ownership or dispose of your car with the unit installed, initialize all the settings to the factory settings by performing the factory reset (page 18).

To maintain high sound quality

Do not splash liquid onto the unit.

Notes on safety

- Comply with your local traffic rules, laws, and regulations.
- While driving
- Do not watch or operate the unit, as it may lead to distraction and cause an accident. Park your car in a safe place to watch or operate the unit.
- Do not use the setup feature or any other function which could divert your attention from the road.
- When backing up your car, be sure to look back and watch the surroundings carefully for your safety even if the rear view camera is connected. Do not depend on the rear view camera exclusively.
- While operating
- Do not insert your hands, fingers, or foreign objects into the unit as it may cause injury or damage to the unit.
- Keep small articles out of the reach of children.
- Be sure to fasten seatbelts to avoid injury in the event of sudden movement of the car.

Preventing an accident

Pictures appear only after you park the car and set the parking brake.

If the car starts moving during video playback, the following caution is displayed and you cannot watch the video.

[Video blocked for your safety.]

The monitor connected to the VIDEO OUT is active while the car is in motion.

You cannot watch the video, but you can hear audio.

Do not operate the unit or watch the monitor while driving.

Notice on license

This product contains software that Sony uses under a licensing agreement with the owner of its copyright. We are obligated to announce the contents of the agreement to customers under requirement by the owner of copyright for the software.

For details on software licenses, see page 18.

Notice on GNU GPL/LGPL applied software

This product contains software that is subject to the following GNU General Public License (hereinafter referred to as "GPL") or GNU Lesser General Public License (hereinafter referred to as "LGPL"). These establish that customers have the right to acquire, modify, and redistribute the source code of said software in accordance with the terms of the GPL or LGPL displayed on this unit.

The source code for the above-listed software is available on the Web.

To download, please access the following URL then select the model name "XAV-AX210."

URL: http://www.sony.net/Products/Linux/
Please note that Sony cannot answer or respond to any inquiries regarding the content of the source code.

Notes on LCD panel

• Do not get the LCD panel wet or expose it to liquids. This may cause a malfunction.



- Do not press down hard on the LCD panel as doing so can distort the picture or cause a malfunction (i.e., the picture may become unclear or the LCD panel may be damaged).
- Do not touch the panel with objects other than with your finger as it may damage or break the LCD panel.
- Clean the LCD panel with a dry soft cloth. Do not use solvents such as benzine, thinner, commercially available cleaners, or antistatic spray.
- Do not use the unit outside the temperature range
 0 °C 40 °C (32 °F 104 °F).
- If your car was parked in a cold or hot place, the picture may not be clear. However, the monitor is not damaged and the picture will become clear after the temperature in your car becomes normal.
- Some stationary blue, red, or green dots may appear on the monitor. These are called "bright spots" and can happen with any LCD. The LCD panel is precision-manufactured with more than 99.99% of its segments functional. However, it is possible that a small percentage (typically 0.01%) of the segments may not light up properly. This will not, however, interfere with your viewing.

Playable discs

Discs

- DVD*: DVD VIDEO
- CD: CD-DA
- * "DVD" may be used in these Operating Instructions as a general term for DVD VIDEOs.

Notes on discs

- Do not expose discs to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight.
- Before playing, wipe the discs with a cleaning cloth from the center out. Do not use solvents such as benzine, thinner, or commercially available cleaners.
- This unit is designed to play discs that conform to the Compact Disc (CD) standard.
 DualDiscs and some music discs encoded with copyright protection technologies do not conform to the Compact Disc (CD) standard, therefore,
- these discs may not be playable by this unit.

 Discs that this unit CANNOT play
- Discs with labels, stickers, or sticky tape or paper attached. Doing so may cause a malfunction, or may ruin the disc.
- Discs with non-standard shapes (e.g., heart, square, star). Attempting to do so may damage the unit.
- 8 cm (3 1/4 in) discs.

Supported formats for USB playback

WMA (.wma)*1*2
 Bit rate: 48 kbps – 192 kbps (Supports variable bit rate (VBR))*3

Sampling frequency*4: 44.1 kHz

MP3 (.mp3)*1*2
 Bit rate: 48 kbps – 320 kbps (Supports variable bit rate (VBR))*3
 Sampling frequency*4: 32 kHz, 44.1 kHz, 48 kHz

AAC (.m4a)*1*2
 Bit rate: 40 kbps – 320 kbps (Supports variable bit rate (VBR))*3
 Sampling frequency*4: 8 kHz – 48 kHz
 Bit per sample (Quantization bit): 16 bits

FLAC (.flac)*1
 Sampling frequency*4: 8 kHz – 96 kHz
 Bit per sample (Quantization bit): 8 bits, 12 bits, 16 bits, 20 bits, 24 bits

WAV (.wav)*1
 Sampling frequency*4: 8 kHz – 48 kHz
 Bit per sample (Quantization bit): 16 bits, 24 bits
 Xvid (.avi)

Video codec: MPEG-4 Advanced Simple Profile Audio codec: MP3 (MPEG-1 Layer3)

Bit rate: Max. 4 Mbps

Frame rate: Max. 30 fps (30p/60i) Resolution: Max. 720 × 576*5

- MPEG-4 (.mp4)

Video codec: MPEG-4 Advanced Simple Profile, AVC Baseline Profile Audio codec: AAC Bit rate: Max. 4 Mbps

Frame rate: Max. 30 fps (30p/60i) Resolution: Max. 720 × 576*5

WMV (.wmv, .avi)*1
 Video codec: WMV3, WVC1
 Audio codec: MP3, WMA
 Bit rate: Max. 6 Mbps
 Frame rate: Max. 30 fps
 Resolution: Max. 720 × 576*5

- FLV (.flv)

Video codec: Sorenson H.263, AVC Baseline

Profile

Audio codec: MP3, AAC Bit rate: Max. 660 kbps Frame rate: Max. 30 fps Resolution: Max. 720 × 480*5

MKV (.mkv)

Video codec: MPEG-4 Advanced Simple Profile,

AVC Baseline Profile

Audio codec: WMA, MP3, AAC

Bit rate: Max. 5 Mbps Frame rate: Max. 30 fps Resolution: Max. 720 × 576*5

- *1 Copyright-protected files and multi-channel audio files cannot be played back.
- *2 DRM (Digital Rights Management) files cannot be played back.
- *3 Non-standard bit rates or non-guaranteed bit rates are included depending on the sampling frequency.
- *4 Sampling frequency may not correspond to all encoders.
- *5 These numbers indicate the maximum resolution of playable video and do not indicate the player's display resolution. The display resolution is 800 × 480.

Note

Some files may not be played back even though their file formats are supported by the unit.

About iPhone

- For details on compatible iPhone models, visit the support site on the back cover.
- Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Please note that the use of this accessory with an Apple product may affect wireless performance.

If you have any questions or problems concerning your unit that are not covered in this Operating Instructions, consult your nearest Sony dealer.

 
Maintenance

Replacing the lithium battery of the remote commander

Under normal conditions, the battery will last approximately 1 year. (The service life may be shorter depending on the conditions of use.) When the battery becomes weak, the range of the remote commander becomes shorter.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.



Notes on the lithium battery

- Keep the lithium battery out of the reach of children.
 Should the battery be swallowed, immediately consult a doctor.
- Wipe the battery with a dry cloth to ensure good contact.
- Be sure to observe the correct polarity when installing the battery.
- Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur.

Specifications

FOR THE CUSTOMERS IN THE USA. NOT APPLICABLE IN CANADA, INCLUDING IN THE PROVINCE OF OUEBEC.

POUR LES CLIENTS AUX ÉTATS-UNIS. NON APPLICABLE AU CANADA, Y COMPRIS LA PROVINCE DE QUÉBEC.

AUDIO POWER SPECIFICATIONS



CTA2006 Standard

Power Output: 20 Watts RMS × 4 at

4 Ohms < 1% THD+N

SN Ratio: 80 dBA (reference: 1 Watt into

4 Ohms)

Monitor section

Display type: Wide LCD color monitor

Dimensions: 6.4 in System: TFT active matrix

Number of pixels:

1,152,000 pixels (800 × 3 (RGB) × 480)

Color system:

PAL/NTSC/SECAM/PAL-M automatic select for

CAMERA IN terminal

Tuner section

FM

Tuning range: 87.5 MHz - 107.9 MHz

Antenna (aerial) terminal:

External antenna (aerial) connector

Intermediate frequency: 150 kHz
Usable sensitivity: 10 dBf

Selectivity: 70 dB at 400 kHz Signal-to-noise ratio: 70 dB (mono)

Separation at 1 kHz: 30 dB

Frequency response: 20 Hz - 15,000 Hz

ΔM

Tuning range: 530 kHz - 1,710 kHz

Antenna (aerial) terminal:

External antenna (aerial) connector

Intermediate frequency:

9,267.5 kHz or 9,257.5 kHz/5 kHz

Sensitivity: 44 µV

DVD/CD Player section

Signal-to-noise ratio: 80 dB

Frequency response: 20 Hz – 20,000 Hz Wow and flutter: Below measurable limit

Harmonic distortion: 0.05%

Region code: Labeled on the bottom of the unit

USB player section

Interface: USB (High-speed) Maximum current: 1.5 A

Wireless communication

Communication System:

BLUETOOTH Standard version 2.1

Output:

BLUETOOTH Standard Power Class 2

(Max. +4 dBm)

Maximum communication range*1:

Line of sight approx. 10 m (33 ft)

Frequency band:

2.4 GHz band (2.4000 GHz - 2.4835 GHz)

Modulation method: FHSS

Compatible BLUETOOTH Profiles*2:

A2DP (Advanced Audio Distribution Profile) 1.2 AVRCP (Audio Video Remote Control Profile) 1.5

HFP (Handsfree Profile) 1.6

PBAP (Phone Book Access Profile) 1.1

Corresponding codec: SBC (.sbc)

*1 The actual range will vary depending on factors such as obstacles between devices, magnetic fields around a microwave oven, static electricity, reception sensitivity, antenna (aerial)'s performance, operating system, software application, etc.

2 BLUETOOTH standard profiles indicate the purpose of

BLUETOOTH communication between devices.

Power amplifier section

Outputs: Speaker outputs Speaker impedance: $4 \Omega - 8 \Omega$

Maximum power output: 55 W \times 4 (at 4 Ω)

General

Outputs:

Audio output terminals (FRONT, REAR, SUB)
Power antenna (aerial)/Power amplifier control

terminal (REM OUT)

Inputs:

SiriusXM input terminal

Illumination control terminal

Steering control input terminal

Antenna (aerial) input terminal

Microphone input terminal

Parking brake control terminal

Reverse input terminal

Camera input terminals

USB port

iDataLink Maestro input terminal

Power requirements: 12 V DC car battery

(negative ground (earth))

Rated current consumption: 10 A

Dimensions: Approx. 178 mm × 102 mm × 168 mm

 $(7.1/8 \text{ in} \times 4.1/8 \text{ in} \times 6.5/8 \text{ in}) (\text{w/h/d})$

Mounting dimensions:

Approx. 178 mm \times 100 mm \times 164 mm (7 $^{1/8}$ in \times 4 in \times 6 $^{1/2}$ in) (w/h/d)

Mass: Approx. 1.7 kg (3 lb 12 oz)

De alas as a series to the

Package contents:

Main unit (1)

Parts for installation and connections (1 set)

Remote Commander (1): RM-X170

Microphone (1)

Optional accessories/equipment:

SiriusXM Connect Vehicle Tuner: SXV100, SXV200, SXV300

Cable for steering wheel remote input: RC-SR1 iDataLink Maestro RR module

Your dealer may not handle some of the above listed accessories. Please ask the dealer for detailed information.

Design and specifications are subject to change without notice.

Region code

The region system is used to protect software copyrights.

The region code is located on the bottom of the unit, and only DVDs labeled with an identical region code can be played on this unit.



If you try to play any other DVD, the message [Disc playback prohibited by region code.] will appear on the monitor screen. Depending on the DVD, no region code may be labeled even though playing the DVD is prohibited by area restrictions.

Copyrights

SiriusXM Connect Vehicle Tuner and Subscription sold separately.

www.siriusxm.com

Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All rights reserved.

US and foreign patents licensed from Dolby Laboratories.

MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

DOLBY AUDIO

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG. Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.

"DVD VIDEO" is a trademark.

Apple, iPhone, and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries.

Apple CarPlay is a trademark of Apple Inc.

IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Android, Android Auto, Google and Google Play are trademarks of Google LLC.

This product uses font data which is licensed to Sony owned by Monotype Imaging Inc. Such font data shall be used solely in connection with this product.

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR DECODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") THAT WAS ENCODED BY A CONSUMER **ENGAGED IN A PERSONAL AND NONCOMMERCIAL** ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO.

NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE.

ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE HTTP://WWW.MPEGLA.COM

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i)ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR

(ii)DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE HTTP://WWW.MPEGLA.COM

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE AND VC-1 PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO DECODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD

("AVC VIDEO") AND/OR THE VC-1 STANDARD ("VC-1 VIDEO") THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO AND/OR VC-1 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE HTTP://WWW.MPEGLA.COM

All other trademarks are trademarks of their respective owners.

Troubleshooting

The following checklist will help you remedy problems you may encounter with your unit. Before going through the checklist below, check the connection and operating procedures. For details on using the fuse and removing the unit from the dashboard, see "Connection/Installation" (page 31).

If the problem is not solved, visit the support site on the back cover.

General

No power is being supplied to the unit.

- > Check the fuse.
- → The connection is not correct.
 - Connect the yellow and red power supply leads.

There is no beep sound.

An optional power amplifier is connected and you are not using the built-in amplifier.

The contents of the memory have been erased.

The power supply lead or battery has been disconnected or it is not connected properly.

The fuse has blown.

The unit makes noise when the position of the ignition is switched.

→ The leads are not matched correctly with the car's accessory power connector.

The display disappears from/does not appear on the monitor.

- → The dimmer is set to [ON] (page 17).
- → The monitor off function is activated (page 6, 7).
 - Touch anywhere on the display to turn the display back on.

The display does not respond to your touch correctly.

- → Touch one part of the display at a time. If two or more parts are touched simultaneously, the display will not operate correctly.
- → Calibrate the touch panel of the display (page 18).
- → Touch the pressure sensitive panel firmly.

Menu items cannot be selected.

→ Unavailable menu items are displayed in gray.

The operation buttons do not function.

→ Press the reset button (page 5).

Radio reception

The stations cannot be received. The sound is hampered by noise.

- → The connection is not correct.
 - Connect the REM OUT lead (blue/white striped) or accessory power supply lead (red) to the power supply lead of a car's antenna (aerial) booster (only when your car has built-in radio antenna (aerial) in the rear/side glass).
 - Check the connection of the car antenna (aerial).
 - If the auto antenna (aerial) will not extend, check the connection of the power antenna (aerial) control lead.

Preset tuning is not possible.

→ The broadcast signal is too weak.

RDS

PTY displays [PTY not found.].

- → The current station is not a RDS station.
- → RDS data has not been received.
- → The station does not specify the program type.

Picture

There is no picture/picture noise occurs.

- → A connection has not been made correctly.
- → Check the connection between this unit and other equipment and set the input selector of the equipment to the source corresponding to this unit.
- → The disc is defective or dirty.
- → Installation is not correct.
 - Install the unit at an angle of less than 45° in a sturdy part of the car.
- → The parking cord (light green) is not connected to the parking brake switch cord, or the parking brake is not applied.

The picture does not fit in the screen.

→ The aspect ratio is fixed on the playback source.

There is no picture/picture noise occurs in the rear monitor.

- → The color system setting is incorrect.
 - Set the color system to [PAL] or [NTSC] according to the connected monitor (page 19).
- A picture from the camera is displayed on this unit.
 - No picture appears in the rear monitor if a picture from the camera is displayed on this unit.

- → Only DVD/USB video playing on this unit can be displayed in the rear monitor.
- → While displaying the picture from the cameras or car navigation system on this unit, the picture from DVD/USB video is not displayed in the rear monitor.

Sound

There is no sound/sound skips/sound cracks.

- → A connection has not been made correctly.
- → Check the connection between this unit and the connected equipment and set the input selector of the equipment to the source corresponding to this unit.
- → The disc is defective or dirty.
- → Installation is not correct.
 - Install the unit at an angle of less than 45° in a sturdy part of the car.
- → The unit is in pause/reverse/fast-forward mode.
- → The settings for the outputs are not made correctly.
- → The DVD audio level is too low (page 13).
- → The volume is too low.
- → The ATT function is activated.
- → The format is not supported.
 - Check if the format is supported by this unit (page 21).

Sound is noisy.

→ Keep cords and cables away from each other.

Disc operation

The disc does not play.

- → The disc is defective or dirty.
- → The disc is not playable.
- → The DVD is not playable due to the region code.
- → The disc format and file version are incompatible with this unit (page 21).
- → Press to remove the disc.

Certain functions cannot be performed.

→ Depending on the disc, you may not be able to perform operations such as stop, search, or repeat/shuffle play. For details, refer to the manual supplied with the disc.

The soundtrack/subtitle language or angle cannot be changed.

- → During playback, touch then make the desired settings.
- → Multilingual tracks, multilingual subtitles, or multi-angles are not recorded on the DVD.
- → The DVD prohibits changing.

The disc will not eject.

The disc will not insert.

→ Press and hold the disc eject button.

USB playback

Items cannot be played via a USB hub.

→ Connect USB devices to this unit without a USB hub.

Items cannot be played.

→ Reconnect the USB device.

The USB device takes longer to play.

→ The USB device contains large-sized files or files with a complicated tree structure.

The sound is intermittent.

→ The sound may be intermittent at a high-bit-rate.

Audio files cannot be played.

- → USB devices formatted with file systems other than FAT12, FAT16 or FAT32 are unsupported.*
- * This unit supports FAT12, FAT16 and FAT32, but some USB device may not support all of these. For details, refer to the operating instructions of each USB device or contact the manufacturer.

BLUETOOTH function

The other BLUETOOTH device cannot detect this unit.

- → Set [Bluetooth Connection] to [ON] (page 18).
- → While connecting to a BLUETOOTH device, this unit cannot be detected by another device. Terminate the current connection and search for this unit from the other device.
- → Depending on your smartphone or cellular phone, you may need to delete this unit from the history of the connected smartphone or cellular phone then pair them again (page 8).

Connection is not possible.

→ Check the pairing and connection procedures in the manual of the other device, etc., and perform the operation again.

The name of the detected device does not appear.

→ Depending on the status of the other device, it may not be possible to obtain the name.

There is no ringtone.

→ Raise the volume while receiving a call.

The talker's voice volume is low.

→ Raise the volume during a call.

The other party says that the volume is too low or high.

→ Adjust the [MIC Gain] level (page 14).

Echo or noise occurs during call conversations.

- → Reduce the volume.
- → If ambient noise other than the phone call sound is loud, try reducing this noise.
 - Shut the window if road noise is loud.
 - Lower the air conditioner if the air conditioner is loud.

The phone sound quality is poor.

- Phone sound quality depends on reception conditions of the cellular phone.
 - Move your car to a place where you can enhance the cellular phone's signal if the reception is poor.

The volume of the connected BLUETOOTH device is low or high.

- Volume level will differ depending on the BLUETOOTH device.
 - Reduce the volume level differences between this unit and the BLUETOOTH device (page 13).

The sound skips during audio streaming or the BLUETOOTH connection fails.

- → Reduce the distance between the unit and the BLUETOOTH device.
- If the BLUETOOTH device is stored in a case which interrupts the signal, remove the case while using the device.
- Several BLUETOOTH devices or other devices (e.g. ham radio devices) which emit radio waves are used nearby.
 - Turn off the other devices.
 - Increase the distance between the unit and other devices.
- → Playback sound stops momentarily when this unit is connecting to a cellular phone. This is not a malfunction.

The connected BLUETOOTH device cannot be controlled during audio streaming.

Check that the connected BLUETOOTH device supports AVRCP.

Some functions do not work.

Check that the connecting device supports the functions in question.

A call is answered unintentionally.

- → The connecting phone is set to start a call automatically.
- → [Auto Answer] of this unit is set to [ON] (page 14).

Pairing failed due to time out.

→ Depending on the connecting device, the time limit for pairing may be short. Try completing the pairing within the time.

Cannot pair.

→ The unit may not be able to pair with a previously paired BLUETOOTH device after initializing the unit if the pairing information of the unit is on the BLUETOOTH device. In this case, delete the pairing information of the unit from the BLUETOOTH device, and then pair them again.

The BLUETOOTH function cannot be operated.

→ Turn the ignition off. Wait for a while, then turn the ignition to the ACC position.

No sound is output from the car speakers during a handsfree call.

→ If the sound is output from the cellular phone, set the cellular phone to output the sound from the car speakers.

SiriusXM Connect Vehicle Tuner

A mature channel is not blocked although parental control setting has been made.

- → If you tune to a mature channel, the passcode display will appear. Once you have entered the passcode, you will have unblocked parental control for all channels until the unit is powered down or you turn parental control back on.
 - Set [Parental Control] to [Locked] in the SXM option (•••) again (page 11).

Apple CarPlay

The Apple CarPlay icon does not appear on the HOME screen.

- → Your iPhone is not compatible with Apple CarPlay.
 - Refer to the compatibility list on the support site on the back cover.
- Disconnect your iPhone from the USB port and reconnect it again.
- Apple CarPlay may not be available in your country or region.
- → Make sure a certified Lightning cable is used to connect your iPhone and the unit.

Android Auto

The Android Auto icon does not appear on the HOME screen.

- → Check your Android phone and accept the disclaimers and permission requests required to use Android Auto on your Android phone.
- → There is no Android Auto application installed on your Android phone.
 - Download and install the Android Auto application onto your Android phone.
- Your Android phone is not compatible with Android Auto.
 - Android phone with Android 5.0 or higher is required. Refer to the compatibility list on the support site on the back cover.

- → Disconnect your Android phone from the USB port and reconnect it again.
- Android Auto may not be available in your country or region.

iDataLink Maestro

If you have any inquiries about the functions, settings and connections of iDataLink Maestro, visit the website (http://maestro.idatalink.com/) or contact:

Automotive Data Solutions Inc. Email: maestrosupport@adsdata.ca

Call: 1-866-427-2999

Messages

General

Cannot play this content.

- → The currently selected content cannot be played back, or skipped to the next one.
 - The content is not in a supported file format.
 Check supported file formats (page 21).

Device no response

- The unit does not recognize the connected USB device.
 - Reconnect the USB device.
 - Check that the USB device is supported by the unit.

No Playable Data

- → The USB device has no playable data.
 - Load music data/files into the USB device.

Overcurrent caution on USB.

- → The USB device is overloaded.
- Disconnect the USB device.
- Indicates that the USB device is out of order, or an unsupported device is connected.

USB device not supported

→ For details on the compatibility of your USB device, visit the support site on the back cover.

USB hub not supported

→ USB hubs are not supported on this unit.

BLUETOOTH function

Bluetooth device is not found.

- → The unit cannot detect a connectable BLUETOOTH device.
 - Check the BLUETOOTH setting of the connecting device.
- No device is in the list of registered BLUETOOTH devices.
 - Perform pairing with a BLUETOOTH device (page 8).

Handsfree device is not available.

- → A cellular phone is not connected.
 - Connect a cellular phone (page 9).

Disc operation

Disc Error

- → The unit cannot read the data due to some problem.
- → The data is damaged or corrupted.
- → The disc is corrupted.
- → The disc is incompatible with this unit.
- → The disc is dirty or inserted upside down.
 - Clean or insert the disc correctly.
- → The disc cannot play due to a problem.
 - Insert another disc.
- → The disc is not compatible with this unit.
 - Insert a compatible disc.
- → Press to remove the disc.

Disc playback prohibited by region code.

The DVD's region code differs from the unit's region code.

The sound in audio format is not audible.

- → Discs in DTS format are not supported. Sound is not output if the DTS format is selected.
 - DTS formatted discs are not playable on this unit. Use a compatible disc format (page 21).

SiriusXM Connect Vehicle Tuner

Channel Locked

→ The channel that you have requested is Locked by the radio Parental Control feature. See "To set a parental control" (page 11) for more information on the Parental Control feature and how to access locked channels.

Channel Not Available

→ The channel that you have requested is not a valid SiriusXM channel or the channel that you were listening to is no longer available.

You may also see this message briefly when first connecting a new SiriusXM Connect Vehicle Tuner.

Visit www.siriusxm.com in the USA or www.siriusxm.ca in Canada for SiriusXM channel lineup information.

Channel Not Subscribed Call SiriusXM to Subscribe

→ The channel that you have requested is not included in your SiriusXM subscription package or the channel that you were listening to is no longer included in your SiriusXM subscription package.

If you have questions about your subscription package or would like to subscribe to this channel, please contact SiriusXM.

In the USA, visit www.siriusxm.com or call 1-866-635-2349.

In Canada, visit www.siriusxm.ca or call 1-877-438-9677.

Check Antenna

- The radio has detected a fault with the SiriusXM antenna.
- The antenna cable may be either disconnected or damaged.
 - Verify that the antenna cable is connected to the SiriusXM Connect Vehicle Tuner.
 - Inspect the antenna cable for damage and kinks.
 - Replace the antenna if the cable is damaged.
 SiriusXM products are available at your local car audio retailer or online at www.shop.siriusxm.com

Check Tuner

- → The radio is having difficulty communicating with the SiriusXM Connect Vehicle Tuner.
- → The tuner may be disconnected or damaged.
 - Verify that the SiriusXM Connect Vehicle Tuner cable is securely connected to the radio.

Incorrect Pass Code entered

- → Passcode input failed.
 - Check that the passcode has been entered correctly.
 - If you forget your passcode, perform [SXM Reset] in [General Settings] (page 18).
 Note that performing [SXM Reset] will initialize all the SiriusXM settings and stored contents in the SiriusXM Connect Vehicle Tuner.

No Signal

- → SiriusXM Connect Vehicle Tuner is having difficulty receiving the SiriusXM satellite signal.
 - Verify that your vehicle is outdoors with a clear view of the sky.
 - Verify that the SiriusXM magnetic mount antenna is mounted on a metal surface on the outside of the vehicle.
 - Move the SiriusXM antenna away from any obstructions.
 - Inspect the antenna cable for damage and kinks.
 - Consult the SiriusXM Connect Vehicle Tuner installation manual for more information on antenna installation.
 - Replace the antenna if the cable is damaged.
 SiriusXM products are available at your local car audio retailer or online at www.shop.siriusxm.com

Subscription Updated. Press Enter to Continue.

- → The radio has detected a change in your SiriusXM subscription status.
 - Press Enter to clear the message.
 If you have questions about your subscription, please contact SiriusXM.
 In the USA, visit www.siriusxm.com or call 1-866-635-2349.
 In Canada, visit www.siriusxm.ca or call 1-877-438-9677.

Steering wheel remote control

Please retry

- → An error occurs while registering and all the registered information is cleared.
 - Restart registration from the beginning.

iDataLink Maestro

If you have any inquiries about the error messages of iDataLink Maestro, visit the website (http://maestro.idatalink.com/) or contact: Automotive Data Solutions Inc. Email: maestrosupport@adsdata.ca

Call: 1-866-427-2999

If these solutions do not help improve the situation, consult your nearest Sony dealer.

If you take the unit to be repaired due to disc playback trouble, bring the disc that was used at the time the problem began.

Language Code List

Language code listThe language spellings conform to the ISO 639: 1988 (E/F) standard.

Code	Language	Code	Language	Code	Language	Code	Language	
1027	Afar	1183	Irish	1347	Maori	1507	Samoan	
1028	Abkhazian	1186	Scots Gaelic	1349	Macedonian	1508	Shona	
1032	Afrikaans	1194	Galician	1350	Malayalam	1509	Somali	
1039	Amharic	1196	Guarani	1352	Mongolian	1511	Albanian	
1044	Arabic	1203	Gujarati	1353	Moldavian	1512	Serbian	
1045	Assamese	1209	Hausa	1356	Marathi	1513	Siswati	
1051	Aymara	1217	Hindi	1357	Malay	1514	Sesotho	
1052	Azerbaijani	1226	Croatian	1358	Maltese	1515	Sundanese	
1053	Bashkir	1229	Hungarian	1363	Burmese	1516	Swedish	
1057	Byelorussian	1233	Armenian	1365	Nauru	1517	Swahili	
1059	Bulgarian	1235	Interlingua	1369	Nepali	1521	Tamil	
1060	Bihari	1239	Interlingue	1376	Dutch	1525	Telugu	
1061	Bislama	1245	Inupiak	1379	Norwegian	1527	Tajik	
1066	Bengali;	1248	Indonesian	1393	Occitan	1528	Thai	
	Bangla	1253	Icelandic	1403	(Afan)Oromo	1529	Tigrinya	
1067	Tibetan	1254	Italian	1408	Oriya	1531	Turkmen	
1070	Breton	1257	Hebrew	1417	Punjabi	1532	Tagalog	
1079	Catalan	1261	Japanese	1428	Polish	1534	Setswana	
1093	Corsican	1269	Yiddish	1435	Pashto;	1535	Tonga	
1097	Czech	1283	Javanese		Pushto	1538	Turkish	
1103	Welsh	1287	Georgian	1436	Portuguese	1539	Tsonga	
1105	Danish	1297	Kazakh	1463	Quechua	1540	Tatar	
1109	German	1298	Greenlandic	1481	Rhaeto-	1543	Twi	
1130	Bhutani	1299	Cambodian		Romance	1557	Ukrainian	
1142	Greek	1300	Kannada	1482	Kirundi	1564	Urdu	
1144	English	1301	Korean	1483	Romanian	1572	Uzbek	
1145	Esperanto	1305	Kashmiri	1489	Russian	1581	Vietnamese	
1149	Spanish	1307	Kurdish	1491	Kinyarwanda	1587	Volapük	
1150	Estonian	1311	Kirghiz	1495	Sanskrit	1613	Wolof	
1151	Basque	1313	Latin	1498	Sindhi	1632	Xhosa	
1157	Persian	1326	Lingala	1501	Sangho	1665	Yoruba	
1165	Finnish	1327	Laothian	1502	Serbo-	1684	Chinese	
1166	Fiji	1332	Lithuanian		Croatian	1697	Zulu	
1171	Faroese	1334	Latvian;	1503	Singhalese			
1174	French		Lettish	1505	Slovak			
1181	Frisian	1345	Malagasy	1506	Slovenian	1703	Not specified	

Connection/Installation

Cautions

- Do not install this unit in a car that has no ACC position. The display of the unit does not turn off even after turning the ignition off, and this causes battery drain.
- Run all ground (earth) leads to a common ground (earth) point.
- Do not get the leads trapped under a screw or caught in moving parts (e.g., seat railing).
- Before making connections, turn the car ignition off to avoid short circuits.
- Connect the **yellow** and **red** power supply leads only after all other leads have been connected.
- Be sure to insulate any loose unconnected leads with electrical tape for safety.

Precautions

- Choose the installation location carefully so that the unit will not interfere with normal driving operations.
- Avoid installing the unit in areas subject to dust, dirt, excessive vibration, or high temperature, such as in direct sunlight or near heater ducts.
- Use only the supplied mounting hardware for a safe and secure installation.


Note on the power supply lead (yellow)

When connecting this unit in combination with other stereo components, the amperage rating of the car circuit to which the unit is connected must be higher than the sum of each component's fuse amperage rating.


Mounting angle adjustment

Adjust the mounting angle to less than 45°.

Parts List for Installation

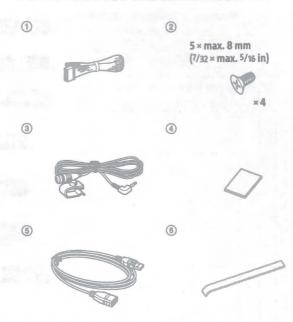

This parts list does not include all the package contents.

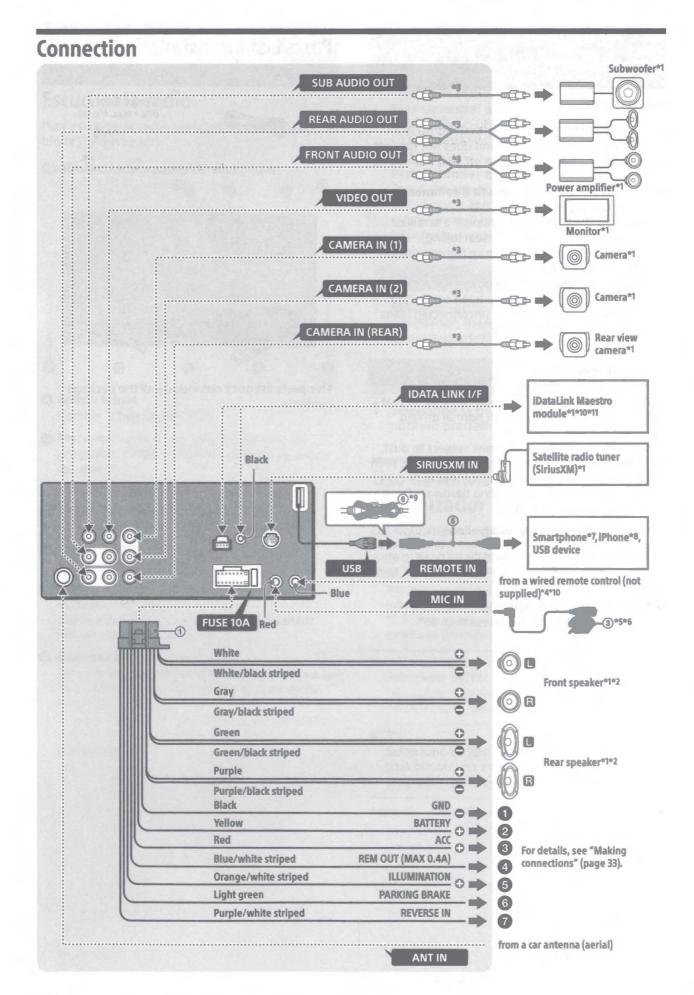

*1 Not supplied

*2 Speaker impedance: $4 \Omega - 8 \Omega \times 4$

*3 RCA pin cord (not supplied)

*4 Depending on the type of car, use an adaptor for a wired remote control (not supplied). For details on using the wired remote control, see "Using the wired remote control" (page 34).

*5 Whether in use or not, route the microphone input cord so it does not interfere with driving operations. Secure the cord with a clamp, etc., if it is installed around your

*6 For details on installing the microphone, see "Installing the microphone" (page 34).

*7 To connect a smartphone to the main unit, an appropriate cable (not supplied) is required.

*8 To connect an iPhone, use the USB connection cable for iPhone (not supplied).



*10 When connecting the iDataLink Maestro module (not supplied), do not connect any device to the REMOTE terminal (blue). Likewise, when connecting a device to the REMOTE terminal (blue), do not connect the iDataLink Maestro module (not supplied) to the IDATA LINK I/F terminal (black).

*11 Use the connection cable supplied with the iDataLink Maestro module (not supplied).

Making connections

- 1 To a common ground (earth) point First connect the black ground (earth) lead then connect the yellow and red power supply leads.
- 2 To the +12 V power terminal which is energized at all times Be sure to first connect the black ground (earth)

lead to a common ground (earth) point.

To the +12 V power terminal which is energized when the ignition switch is set to the accessory position

Be sure to first connect the black ground (earth) lead to a common ground (earth) point.

4 To the power antenna (aerial) control lead or the power supply lead of the antenna (aerial) booster

It is not necessary to connect this lead if there is no power antenna (aerial) or antenna (aerial) booster, or with a manually-operated telescopic antenna (aerial).

To AMP REMOTE IN of an optional power amplifier

This connection is only for amplifiers and a power antenna (aerial). Connecting any other system may damage the unit.


It will take about 10 seconds to shut down the output of REM OUT after the unit is turned off.

5 To a car's illumination signal

Be sure to first connect the black ground (earth) lead to a common ground (earth) point.

6 To the parking brake switch cord

The mounting position of the parking brake switch cord depends on your car. Be sure to connect the parking brake lead (light green) of the power supply connection cable ① to the parking brake switch cord.

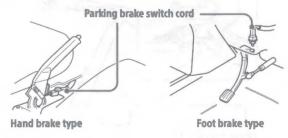

⑦ To the +12 V power terminal of the car's rear lamp lead (only when connecting the rear view camera)

Memory hold connection

When the yellow power supply lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.

Speaker connection


- Before connecting the speakers, turn the unit off.
- Use speakers with an impedance of 4 Ω to 8 Ω and with adequate power handling capacities to avoid damage.

Monitor connection

When installing a monitor for the rear seat, connect its parking brake switch cord to the ground (earth).

Installing the microphone

To capture your voice during handsfree calling, you need to install the microphone ③.

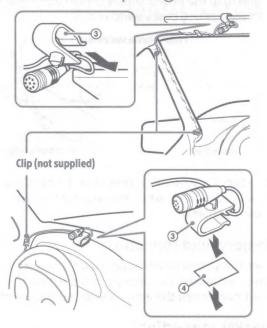

Cautions

- It is extremely dangerous if the cord becomes wound around the steering column or gearstick.
 Be sure to keep it and other parts from interfering with your driving operations.
- If airbags or any other shock-absorbing equipment are in your car, contact the store where you purchased this unit or the car dealer before installation.

Note

Before attaching the double-sided tape ④, clean the surface of the dashboard with a dry cloth.

Using the wired remote control

When using the steering wheel remote control

Installation of the connection cable RC-SR1 (not supplied) is required before use.

1 To enable the steering wheel remote control, select [General Settings] → [Steering Control Custom] to make the registration (page 18). When the registration is complete, the steering wheel remote control becomes available.

Notes on installing the connection cable RC-SR1 (not supplied)

- Refer to the support site on the back cover for details then connect each lead properly to the appropriate leads.
 Making an improper connection may damage the unit.
- Consulting the dealer or an experienced technician for help is recommended.
- When connecting the iDataLink Maestro module (not supplied), do not connect any device to the REMOTE terminal (blue). Likewise, when connecting a device to the REMOTE terminal (blue), do not connect the iDataLink Maestro module (not supplied) to the IDATA LINK I/F terminal (black).

When using the wired remote control

1 To enable the wired remote control, set [Steering Control] in [General Settings] to [Preset] (page 18).

Using the rear view camera

Installation of the rear view camera (not supplied) is required before use.


The picture from a rear view camera connected to the CAMERA IN (REAR) terminal is displayed when:

- the back lamp of your car lights up (or the shift lever is set to the R (reverse) position).
- you press HOME, touch [Camera], then touch [Rear].


Installation

Mounting the unit in a Japanese car

You may not be able to install this unit in some Japanese cars. In such a case, consult your Sony dealer.

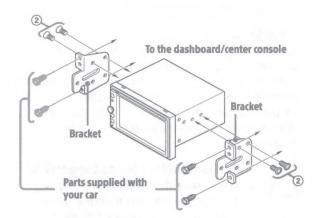

 When mounting this unit to the preinstalled brackets of your car, use the supplied screws ② in the appropriate screw holes based on your car: T for TOYOTA and N for NISSAN.



Note

To prevent a malfunction, install only with the supplied screws ②.


Fuse replacement

When replacing the fuse, be sure to use one matching the amperage rating stated on the original fuse. If the fuse blows, check the power connection and replace the fuse. If the fuse blows again after replacement, there may be an internal malfunction. In such a case, consult your nearest Sony dealer.



Subscription Offer Details: Purchase an eligible tuner (Models SXV300V1, SXV300B, SXV200V1, SXV200B) for any "SiriusXM-Ready" compatible car stereo receiver and, when you purchase a monthly subscription plan to our All Access package, receive your first 3 months free (a \$19.99/mo. savings) and get free activation (a \$15 Savings). You must pay with a credit card. Fees and taxes apply. Service will automatically renew every month thereafter and, at the beginning of your 4th month, you will be charged at then-current rates. To cancel you must call us at 1-866-635-2349. See our Customer Agreement for complete terms at www.siriusxm.com. All fees and programming subject to change. SiriusXM reserves the right to modify or terminate this offer at any time. See a sales associate for additional information or visit www.siriusxm.com/nevermissabeat.

© 2017 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All other marks, channel names and logos are the property of their respective owners. All rights reserved.

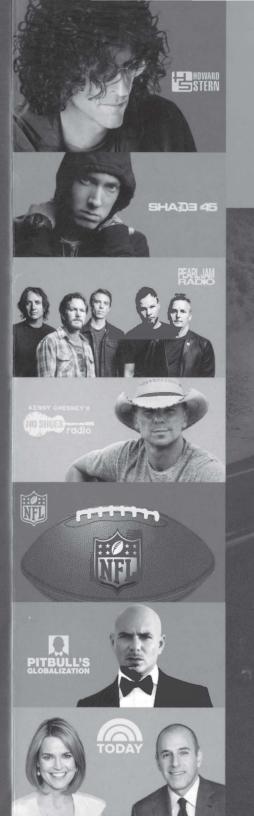



GET THE MOST OUT OF YOUR NEW CAR STEREO



ROCK OUT IN YOUR CAR, ON THE APP AND ONLINE









Rock your ride with a **3 Month Free** All Access Subscription.

You get it all here. All at the press of a button. Turn up the best commercial-free music, plus every major sport and the biggest names in entertainment, news and comedy.

Jam out, laugh out loud, show every errand who's boss. Just don't blame us when you consider taking the long way home.

We call this feeling Road Happy. And it's a heck of a good time.



INSTALL & ACTIVATE 3 Easy Steps:

Step 1

Activate Online at www.siriusxm.com/care or call 1-866-587-4225

Free Activation—\$15 Value with activation of "Never Miss A Beat" 3 Months Free.

Step 2

Enter Radio ID or Ask the Agent for "Never Miss a Beat"

Step 3

Start Enjoying Commercial-Free Music, Sports, News, Comedy, Talk & Entertainment

SPO	RTS	and the second second
225- 234		Live NFL Play-by-Play Online Ch. 800-831
88		24/7 NFL Talk & Play-by-Play
176- 189	. 2	Live MLB® Play-by-Play Online Ch. 840-869
159	en Español	MLB® News & Games Online Ch. 157
89	MI B RADIO	24/7 MLB® Talk & Play-by-Play
90	IIINASCAR RADIO	24/7 NASCAR® Talk & Races
209	MOVOJA	Verizon IndyCar®, Other Play-by-Play
212- 217	NBA NBA	Live NBA Play-by-Play Online Ch. 880-909, 960-969
86	STREAM NEWSON	24/7 NBA Talk & Play-by-Play
НΟ		ERN
100	님	The Howard Stern Show xL
101	当間	The World of Howard Stern xx.
CON	1EDY	
94	GREATS	All-Time Greatest Comedians xL
95	COMEDY CENTRAL RADIO	Comedy Central Uncensored xL
96	XHO I	Comedy & More with Jamie Foxx xL
97	ROUNDUP	Produced by Foxworthy/Larry the Cable Guy
.98	LAUGH S	Comedy for the Entire Family
99	RANTEG	The Best Uncensored Comedy XL
CAN	ADIAN	
162	radio3	Canadian Indie Music First
163	ici 🌑 musique chansons	Francophone Pop
166	rance prance country	Francophone Country Folk
167	TALKS	Canadian Current Affairs
168	EAUGH	Canadian Comedy Uncensored xL
170	ici eremitre	Radio-Canada News & Info
171	Country	New Canadian Country
	Clarkon WBB	

SCOREBOARD Final Sports Scores and Info

New & Emerging Indie/Alt-Rock

The New Indie Pop Alternative

172

173

174

EVERY MAJOR SPORT

219- 223	NHL	Live NHL® Play-by-Play Online Ch. 920-949, 960-969	
91		24/7 NHL® Talk & Play-by-Play	
92	SIRIUSXM	24/7 Golf Talk & Play-by-Play	
190- 200		Your Home for NCAA Sports	
84	COLLEGE SPURTS	College Sports Talk/Play-by-Play	
80	((RADIO))	Mike & Mike/Sports Talk	
81	ESPII XTRAI)	SportsCenter/Finebaum/PTI	
157	DEPORTES ((PADID))	Latino Sports Talk & Play-by-Play	
87	FANTASY SPORTS	Fantasy Sports Talk	

ENTERTAINMENT

102		Andy Cohen/Pop Culture/More xL
103	FACTION	Norton/Roberts/Ellis/Opie xL
105	Entertainment	Entertainment Talk & News
106	VOLUME	Music Talk That Rocks
108	TODAY	The TODAY Show — All Day
109	STARS	Jenny McCarthy/Dr. Laura/More xL
110	S DOCTOR	Real Doctors, Real People
111	Sprits 1000	Business Powered by Wharton
128	JOEL OSTEEN RADIO	Positive Inspiration for Life
146	TRUCKING	Talk for Truckers

	arraes.	99500	-	-	mile.	i
M	0	R	E			

The State of London		
11	KIIŠĖM	KIIS FM Los Angeles
12	(74)100	Z100 Plays All The Hits
141	- J. Wills	Real Talk with Real People
142	HBCU	HBCU Excellence in Education
143	byuradio	Talk About Good
144	HORER T DAY PAOJO HETHURN	Korean Music and News
152	VIVO	Modern English & Spanish Hits
153	"P@LÍTICA!	Live Hispanic Talk
154	Lalino	American Latino Talk Radio
	12 141 142 143 144 152	12 (A)00 141 (A)00 142 (A)00 143 (A)00 144 (A)00 152 (A)00 153 (A)00 153 (A)00 153 (A)00 154 (A)00 155 (A)00 156 (A)00 157 (A)00 157 (A)00 158 (A)00 159 (A)

Responses Classic Radio Shows

Mad Dog Russo, Morning Men 82 The Herd/Undisputed/Live Games 83 Soccer Talk & Play-by-Play 85 93 **Combat Sports & Entertainment Trusted Source for Gaming News** 204



For live sports schedules, visit siriusxm.com/sports

NEW	S/PUBL	IC RADIO
112	216	CNRC Simulos

INLY	73/FUDLI	CKADIO
112	CNBC	CNBC Simulcast
113	FOX	FOX Business Simulcast
114	/FOX NEWS	FOX News Simulcast
115	FOX NEWS HEADLINES 24-7	FOX News Headlines, 24/7
116	CM	CNN Simulcast
117	HLN	HLN Simulcast
118	#MSNBC	MSNBC Simulcast
119	Bloomberg Radio	Business News
120	WORLD SERVICE	World News
121	insight	Podcasts & Political Comedians
122	n p r	NPR News & Conversation
123	(PRX))	Independent Public Radio
147	IRIDIO	Agriculture/Western Lifestyle
156	CNN	CNN's 24-Hour Spanish-language News
,169	radioone	Canada's #1 Radio News Source

POLITICS/ISSUES

125	PATRIOT	Conservative Talk
126	VIEW	African-American Talk feat. Joe Madison
127	PROGRESS	Progressive Talk

P-O-T-U-S Non-Partisan Political Talk

RELIGION

129	CATHOUC	Talk for Saints and Sinners
131	FamilyTalk	Christian Talk

▲ Not available on the app/online

POP Today's Pop Hits 02 **VENUS** Pop Music You Can Move to 03 **Worldwide Rhythmic Hits** PITBULL'S 04 **Pop Hits** 05 Pop Hits with Cousin Brucie 06 Pop Hits with American Top 40 07 Pop Hits with Original MTV VJs 08 Pop Hits with Downtown Julie Brown 09 2000s Pop Hits 10 **Exclusive Limited-Run Channels** 13 Acoustic/Singer-Songwriters 14 **Adult Pop Hits** 15 **Bright Pop Hits Love Songs** 17 **Tropical Latin Music** ROCK BEATLES The Fab Four, 24/7 18 Elvis 24/7 Live from Graceland ESTREET Bruce Springsteen, 24/7 20 Little Steven's Garage Rock 21 Pearl Jam, 24/7 22 O GRATEPUL Grateful Dead, 24/7 23 Radio MARGARITAVILLE **Escape to Margaritaville** 24 **Classic** '70s/'80s Classic Rock 25 Viny! '60s/'70s Classic Rock 26 O deer Deep Classic Rock 27 SPECTRUM **New Rock Meets Classic Rock** 28 PAR Jam Bands 29 **Eclectic Rock** 30 Music Curated by Tom Petty 31 Mellow Classic Rock

COMMEDCIAL-EDEE MIISIC

COM	MERCIA	L-FREE MUSIC	
33		'80s Alternative/New Wave	
34	The same	'90s Alternative/Grunge	
35	Umk	New Indie Rock	
36	ALT NATION	New Alternative Rock	
37	OCTANE	New Hard Rock	
38	FONLY INL	Ozzy's Classic Hard Rock	
39	HAINAMINH	'80s Hair Bands	
40	The state of the s	Heavy Metal xL	
41	FACTION	Punk & Beats with Jason Ellis xL	

HP-	HOP		

TOMPE

10	-	
44	HIPHIP	Today's Hip-Hop Hits xL

5	ELAHB	Eminem's	Hip-Hop	Channel	XL
---	-------	----------	---------	---------	----

Reggae

Classic Hip-Hop XL

R&B

42

	44.46		
46	the reat	Today's R&B Hits	

47	LIN	hip-hop/k&B from the '90s & 200
40	Hearles Smil	Adult B&R Hits

49	Sant	Classic Soul/Motown
50	Morente	'70s/'80s R&B

DANCE & ELECTRONIC

ZAIN	ANCE & ELECTRONIC					
51	Lyan	Electronic Dance Music Hits				
52	electric area	EDM DJ Mix Shows				
53	CHILL	Downtempo/Deep House				
54		'70s - 2000s Dance Hits				

cou	INTRY		
55	Barth	Garth's Own Channel, 24/7	
56	Bhighway	Today's Country Hits	
57	NSR	Kenny Chesney's Music Channel	
58	COUNTRY	'80s/'90s Country Hits	

59	*	Willie's	Classic	Country
	NO.			

60	CUTLAW	Rockin' Country Rebels	
61	YZKOUNTRY	2000s Country Hits	

52	THE LINE	Bluegras
----	----------	----------

CHRISTIAN

63	mëssage	Christian Pop & Rock
64	XF PRAISE	Kirk Franklin's Gospel Channel

65	enligh on	Southern	Gosne

JAZZ/STANDARDS

66	WATERCOLORS	Smooth/Contemporary	Jazz
----	-------------	---------------------	------

67	Real	Classic Jazz
68	رفي spa	New Age

		and the	
69	Oscane	Easy	Listening

70	OR hospillo	B.B.	King's	Blues	Channe

71	Cinetra	Standards	by	Sinatra	&	More
----	---------	-----------	----	---------	---	------





CLASSICAL

74	Met Opera Radio	Opera/Classical Vocals
76	STATIONY	Classical Music

77 KIDZIOP. Pop Hits Sung by Kids for Kids	77	KIDZBOP.	Pop	Hits	Sung	by	Kids	for	Kic
--	----	----------	-----	------	------	----	------	-----	-----

78	HIDS *	Kids' Musi
	Company of the car	

Pop Hits for the Entire Family

TRAFFIC & WEATHER

133-136



New York | Boston | Philadelphia | Washington, DC Chicago | Detroit | Dallas-Ft. Worth | Los Angeles

A Not available on the app/online

SiriusXM 12-Month Limited Warranty

What This Warranty Covers

This warranty covers defects in material and workmanship for 12 months from the date of purchase by the original retail purchaser only. Sirius XM Radio Inc., at its sole option, will repair or replace the product with a new or reconditioned product without charge for parts and labor. Products replaced under this warranty become the property of Sirius XM. Replacement products are warranted to be free from defects for 30 days or the remainder of the original warranty, whichever is longer.

What This Warranty Does Not Cover

This warranty does not cover: products sold as used, as is, reconditioned or refurbished; software stored on internal or removable memory; non-rechargeable batteries, surface preparation cleaners, adhesive pads, fasteners, and ear-buds; costs incurred for installation, removal or reinstallation of the product; correction of installation problems, such as elimination of externally generated static or noise and antenna placement and aiming; defects or damage caused by alteration, improper installation or removal, use of third party accessories, mishandling, misuse, neglect, accident, power surges or acts of nature.

How to Obtain Warranty Service

To obtain warranty service, please call SiriusXM Listener Care at 1-866-635-7191. You will be required to provide proof of purchase and a description of the defect. You must prepay the cost of shipping the product to an approved service center.

LIMITATIONS OF LIABILITY

THE LIABILITY OF SIRIUSXM UNDER THIS WARRANTY IS LIMITED TO REPAIR OR REPLACEMENT AS PROVIDED ABOVE AND IN NO EVENT SHALL THE LIABILITY EXCEED THE PURCHASE PRICE PAID FOR THE PRODUCT. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF WARRANTY, INCLUDING BREACH OF ANY IMPLIED WARRANTY OF MERCHANTABILITY, MUST BE BROUGHT WITHIN 48 MONTHS FROM THE DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL SIRIUSXM BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Sirius XM Radio Inc. 1221 Avenue of the Americas New York, NY 10020




1.866.635.2349

siriusxm.com

© 2017 Sirius XM Radio Inc. SXV300V1 Installation Guide (SXV300V1IG1010) 170501a



SXV300 Connect Vehicle Tuner

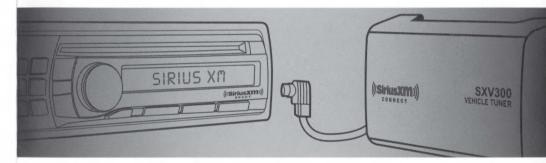

3MONTHS FREE SERVICE

Minimum subscription and credit card required. See Offer Details on page 10.





Thank you for purchasing the SXV300V1 SiriusXM Connect Vehicle Tuner Kit.

This kit comes with everything you need to add Satellite Radio to your SiriusXM-Ready headunit. Consult your headunit User Guide for features and detailed operational instructions.

For guestions or support, please visit www.siriusxm.com or call 1-866-635-2349.

What's In the Box?

The SXV300V1 kit includes the following:







Alcohol Prep Pad

SXV300 Vehicle Tuner

Magnetic Mount Antenna

Check Your Headunit For Compatibility

If your headunit has the official SiriusXM-Ready logo it is compatible with the SXV300 Vehicle Tuner. All SiriusXM-Ready headunits include a dedicated connector, allowing for quick and easy connection of the SXV300 tuner.

(((SiriusXM)))

Products with this logo are compatible







Products with these logos are not compatible

Install the Magnetic Mount Antenna

Proper placement of the Magnetic Mount Antenna is very important. Consult a professional installer if you are uncomfortable with installing the antenna yourself. More detailed installation instructions and illustrations can be found at www.siriusxm.com/installation and clicking on the XM Vehicle Installation link.


- Place the Magnetic Mount Antenna on the outside of your vehicle on a horizontal surface that always faces the sky.
- Avoid placing the antenna near obstacles that could block a clear view of the sky (such as roof racks, other antennas like AM/FM, cellular, and GPS), preventing the satellite signal from reaching the antenna.



Select the Best Location for the Magnetic Mount Antenna

For most vehicles the best location is on the roof, centered above the rear window or front windshield. Consult a professional installer to find an alternate antenna mounting location if your vehicle roof is made from a non-magnetic material such as aluminum, fiberglass, or carbon fibre.

- **Sedan or Coupe:** Recommended mounting location is above the rear window or front windshield.
- Pickup or SUV: Recommended mounting location is above the front windshield.
- Convertible: Recommended mounting location is above the front windshield, or alternately on the trunk lid, on the front hood, or on top of the front fender.

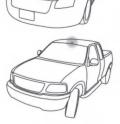






Route the Antenna Cable

Use care when routing the antenna cable into and through the vehicle interior, avoiding sharp objects that can damage the cable. Keep the antenna cable away from moving parts such as gas and brake pedals, trunk and door hinges, and sliding seat brackets.



Hide the antenna wire inside the vehicle cabin by routing the cable under the carpet and behind plastic trim, toward the headunit location. Coil and secure any excess cable in a hidden location, such as under the carpet, using wire ties (not included).


CAUTION! Do not kink or sharply fold the antenna cable.

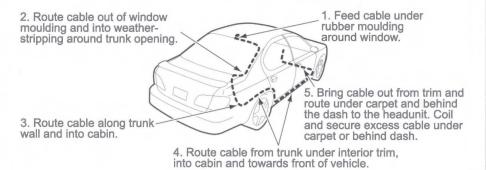

Make the Connections

You'll need to access the back of the SiriusXM-Ready headunit so you can plug the SXV300 Vehicle Tuner into it. This may require you to remove the headunit from the dashboard. If you are uncomfortable with this step, consult a professional installer.


Be sure to turn OFF the SiriusXM-Ready headunit before connecting the SXV300 Vehicle Tuner. Locate the SiriusXM connector on the headunit and connect the SXV300. The headunit may have a panel mount type connector, or it may have a pigtail type connector.

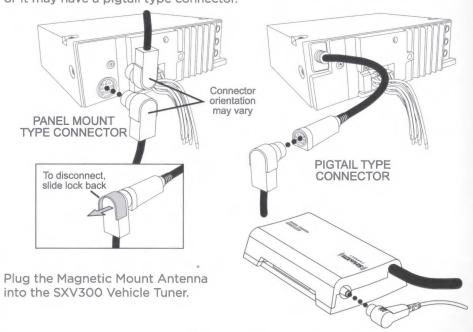

Secure the Tuner

Secure the SXV300 Vehicle Tuner behind the vehicle headunit location or under the dash using wire ties (not included).

Thread the wire ties through the molded brackets on the underside of the Tuner as shown. Then secure it to a bracket or wiring harness using the wire ties. Avoid brackets with sharp edges and any moving parts such as gas and brake pedals.

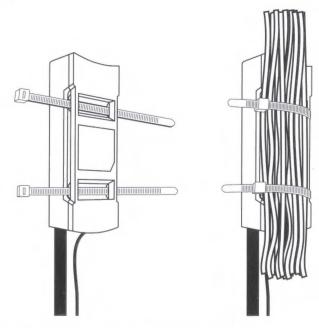

Reinstall the vehicle headunit if it had been removed from the dashboard.

Subscribe

You can subscribe to the SiriusXM service anytime by following these steps:

- 1 Make sure your vehicle headunit is turned on and that Satellite Radio is selected. Verify that you are receiving the SiriusXM signal so that you can hear the SiriusXM audio.
- 2 Make a note of your Radio ID. You can find it on channel 0, on a label on the bottom of the packaging, and on the label on the bottom of your SXV300 Vehicle Tuner.

NOTE! The Radio ID does not use the letters I, O, S, or F.

- **3** Activate your service:
 - First see our Customer Agreement for complete terms at www.siriusxm.com and then;
 - Online: Go to www.siriusxm.com/activatenow OR
 - By phone: Call 1-866-587-4225 (If calling to activate, be sure to mention "Never Miss A Beat")
- 4 Activation usually takes 10 to 15 minutes, but may take up to an hour. We recommend that your vehicle headunit remain on until subscribed. When your service is activated, you will see the SUBSCRIPTION UPDATED, PRESS ENTER TO CONTINUE or similar message displayed on the headunit. Once subscribed, you can tune to channels in your subscription plan.
- 5 Activation signals can be sent again at any time by visiting www.siriusxm.com/refresh.

Troubleshooting

The troubleshooting information listed below is for general reference. Consult the User Guide for your SiriusXM-Ready headunit for specific operating instructions and advisory messages that may be displayed. Your headunit may display slightly different messages.

If you see this on the screen:	Try this:
No Signal (NoSignal)	 Make sure that the vehicle is outdoors with a clear view of the southern sky. Make sure the Magnetic Mount Antenna is mounted outside of the vehicle. Move your antenna away from any obstructed area. For example, if you are parked in an underground garage, you should receive a signal after leaving the garage.
Check Antenna (Chek Antenna, CHK Antena, Chek Ant)	 Make sure that the Magnetic Mount Antenna cable is firmly and securely plugged into the SXV300 Vehicle Tuner. Make sure the antenna cable is not bent or broken. Turn the headunit off, then on, to reset this message. If the message persists, most likely the antenna cable has been damaged. Replace the antenna.
Antenna Disconnected	Check the antenna connection to make sure it is fully plugged into the SXV300 Vehicle Tuner.
Antenna Cable Shorted	Replace the antenna.
Check Tuner (Chek Tuner, Chk Tunr)	Check the SXV300 Vehicle Tuner connection to the headunit and make sure it is plugged all the way in.
Channel Not Available (Chan Unavailable, Ch Unavailable, Ch Unavail, Ch Unavl)	The channel you have selected is not available.
Channel Not Subscribed (CH Unsubscribed, Chan Unsub, Ch Unsub)	The channel you have selected is not part of your current subscription plan. First see our Customer Agreement for complete terms at www.siriusxm.com, and then call 1-866-635-2349 to subscribe.

Subscription Updated- Press enter to continue (or similar message)	Your subscription has been updated; press the appropriate button (or other identified key) to continue		
If this happens:	Try this:		
You do not receive all the channels to which you subscribe	 If you have not yet activated your service, call 1-866-635-2349. Go to www.siriusxm.com/refresh and follow the directions to refresh your SXV300 Vehicle Tuner. 		
No song title or artist name is displayed	The information may not be available or updates may be in progress.		
Traffic and Weather channels sound different from other channels	These channels use a different audio technology than other channels, so they often sound different from other channels.		
Audio fades or has static when listening	 Check all the cables for a firm and secure connection. Be sure that your headunit is correctly wired to the vehicle electrical system. 		

Specifications

87mm (W) x 51.8mm (H) x 17.9mm (D) Weight 3 oz (85 g)

Pigtail Cable Length 25.6 in (650 mm)

Operating Temperature-4°F to +158°F (-20°C to +70°C)

Antenna

Type Magnetic Mount Connector SMB

Network Operation XM Network Only

Specifications are subject to change without notice.

FCC Statement

The user is cautioned that changes or modifications not expressly approved by Sirius XM Radio Inc. can void the user's authority to operate this device. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference.
- 2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the installation instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna of the affected receiver.
- Increase the separation between the SiriusXM equipment and the affected receiver.
- Connect the SiriusXM equipment into an outlet on a circuit different from that to which the affected receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING! The FCC and FAA have not certified Satellite Radio Receiver use in any aircraft (neither portable nor permanent installation). Therefore, Sirius XM Radio Inc. cannot support this type of application or installation.

Patent Information

It is prohibited to, and you agree that you will not, copy, decompile, disassemble, reverse engineer, hack, manipulate, or otherwise access and/or make available any technology incorporated in this product. Furthermore, the AMBE® voice compression software included in this product is protected by intellectual property rights including patent rights, copyrights, and trade secrets of Digital Voice Systems, Inc. The software is licensed solely for use within this product. The music, talk, news, entertainment, data, and other content on the Services are protected by copyright and other intellectual property laws and all ownership rights remain with the respective content and data service providers. You are prohibited from any export of the content and/or data (or derivative thereof) except in compliance with applicable export laws, rules and regulations. The user of this or any other software contained in a SiriusXM radio is explicitly prohibited from attempting to copy, decompile, reverse engineer, hack, manipulate or disassemble the object code, or in any other way convert the object code into human-readable form.

Environmental Information

Follow local guidelines for waste disposal when discarding packaging and electronic appliances. This product is packaged with cardboard, polyethylene, etc., and does not contain any unnecessary materials.

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Copyrights and Trademarks

©2017 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All other marks and logos are the property of their respective owners. All rights reserved.

Offer Details

Offer Details: Purchase the SiriusXM SXV300 Tuner for any "SiriusXM-Ready" compatible car stereo, and when you purchase a monthly subscription plan to our All Access package, receive your first 3 months free (a \$18.99/mo. value). You must pay with a credit card, maintain at least 6 consecutive months of service (3 free then 3 paid) or you must pay a \$75 early termination fee. Fees and taxes apply. Service will automatically renew monthly and, at the beginning of your 4th month, we will bill you at then-current rates until you call us at 1-866-635-2349 to cancel. See our Customer Agreement for complete terms at www.siriusxm.com. This offer cannot be combined with any other. SiriusXM reserves the right to modify or terminate this offer at any time.

Important Legal Notice About Your Subscription

Hardware and subscription sold separately. Service will automatically renew into the subscription Package you choose (which may differ from the Package which arrived with the Radio), and will automatically bill at then current rates, after any complimentary trial or promotional period ends, until you call us at 1-866-635-2349 to cancel. See our Customer Agreement for complete terms at www.siriusxm.com. Fees and taxes apply. All fees and programming subject to change. Our satellite service is available only to those at least 18 and older in the 48 contiguous USA and DC. Our Sirius satellite service is also available in PR (with coverage limitations) but this SXV300 Tuner is not operational in PR. Our Internet radio service is available throughout our satellite service area and in AK and HI.

Important Legal Notice About Installation

Installation instructions are provided for your convenience. You must determine if you have the knowledge, skills, and ability required to properly perform installation. Professional installation is recommended. SiriusXM shall have no liability for damage/injury resulting from the installation/use of any SiriusXM or other products. You must ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. SiriusXM product warranties do not cover the installation, removal, or reinstallation of any product.



SONY®

LIMITED WARRANTY

Car Audio

U.S. and Canada only – 1 year

Sony Electronics Inc. solely for purchases made in the United States and Sony of Canada Ltd. solely for purchases made in Canada (collectively "Sony") warrants this product against defects in material or workmanship for the original owner and any subsequent end user owner(s) ("You" or "You") for the time period set forth above as set forth herein. Pursuant to this Limited Warranty, Sony will, at its option, (i) repair the product using new or refurbished parts or (ii) replace the product with a new or recertified/refurbished product of the same (or similar) model. For purposes of this Limited Warranty, "recertified" or "refurbished" means a product or part that has been returned to its original specifications. In the event of a defect, these are Your exclusive remedies. Sony does not warrant that the operation of the product will be uninterrupted or error-free.

Term: For the time period set forth above from the original date of purchase of the product when purchased directly from Sony or Sony authorized dealer (To determine if a dealer is in the Sony authorized dealer network, please visit US: www.sony.com/retailers; Canada: https://dealerlocator.sony.ca/locator; or contact Sony directly), Sony will, at its option, repair or replace with a new, recertified or refurbished product or part, any product or part determined to be defective.

This Limited Warranty covers only the hardware components packaged with the product. It does not cover separate accessories, technical assistance for hardware or software usage and it does not cover any software products whether or not contained in the product, and other included content; any such software or other included content is provided "AS IS" unless expressly provided for in any enclosed software Limited Warranty or End User License Agreement. Please refer to the End User License Agreement(s) included with the product for Your rights and obligations with respect to the software or other included content. If You purchased an extended service plan, please refer to the service plan for the coverage, duration and terms of service. Extended service plans are not governed by this Limited Warranty.

To obtain warranty service, You must deliver the product, in either its original packaging or packaging affording an equal degree of protection to a Sony authorized service center together with a dated purchase receipt in order to obtain warranty service. Sony cannot guarantee that it will be able to repair any product under this warranty or make a product exchange without risk to or loss of software or data. It is Your responsibility to remove or backup any removable media or parts, data, software or other materials You may have stored or preserved on Your product. It is likely that any media or parts, data, software, or other materials (like pictures, music, videos, etc.) will be lost or reformatted during service and Sony will not be responsible for any such damage or loss. Contact the following for specific instructions on how to obtain warranty service for Your product:

For purchases made in the UNITED STATES:

Visit Sony's Website: www.sony.com/support Or call the Customer Experience Center: 1-800-222-SONY (7669)

To register Your product or for contact information to purchase accessories or parts go to Sony's Website

For purchases made in CANADA:

Visit Sony's Website: www.sony.ca/support Or call the Customer Experience Center: 1-877-899-SONY (7669)

To register Your product or for contact information to purchase accessories or parts go to Sony's Website

On-site service for televisions of certain dimensions may be available to a customer living within a 50km radius of an authorized Sony service facility, provided the residence can be accessed by an on-road service vehicle.

Repair/Replacement Warranty: This Limited Warranty shall apply to any repair, replacement part or replacement, recertified or refurbished product for the remainder of the original Limited Warranty period or for ninety (90) days, whichever is longer. Any parts or product replaced under this Limited Warranty will become the property of Sony. Any replacement, recertified or refurbished product provided under this Limited Warranty may, at Sony's option, vary in color and/or cosmetic design from the original product and may not include any original engraving or similar customization/personalization.

Sony is not responsible for, and this Limited Warranty does not cover, any damage arising from a failure to operate the product within its intended uses, or otherwise follow the owner's manual and safety instructions relating to the product's use and installation. Sony is not responsible for any labor or parts costs you incur relating to repairs or services from providers/servicers other than from a Sony authorized service center. This Limited Warranty only covers product Issues caused by defects in material or workmanship during ordinary consumer use. This Limited Warranty does not cover products purchased from sources other than Sony or a Sony authorized dealer (including non-authorized during ordinary consumer use. This Limited Warranty does not cover products purchased from sources other than Sony or a Sony authorized dealer (including non-authorized online auctions), or issues due to: (i) outdoor exposure and other acts of nature; (ii) power surges; (iii) accidental damage; (iv) abuse; (v) limitations of technology; (vi) cosmetic damage; (vii) contact with liquid, heat, humidity or perspiration, sand, smoke, or foreign materials; (viii) damage, malfunction and/or failure to product resulting from use of parts or supplies not sold or authorized by Sony; (ix) damage, malfunction and/or failure to product resulting from servicing not authorized or performed by Sony or a Sony authorized service center; (x) computer or internet viruses, bugs, worms, or Trojan Horses; (xi) malfunctions due to peripherals/accessories; (xii) modifications of or to any part of the product, including "rooting" or other modifications to control the behavior of the product or any factory installed operating system; (xiii) consumable parts such as batteries; or (xiv) any product where the factory-applied serial number has been altered or removed from the product. Further, to the extent this product incorporates use of a display, please note that a display contains hundreds of thousands of individual pixels, and displays typically contain a small number of pixels that do not function properly. This Limited Warranty does not cover up to .01% pixel outages (small dot picture elements that are dark or incorrectly illuminated).

This Limited Warranty does not cover Sony products sold "AS IS" or "WITH ALL FAULTS" or consumables (such as fuses or disposable batteries). Sony will not replace missing components from any package purchased "Open Box" or "AS IS". This Limited Warranty is valid only in the United States and Canada (as applicable).

LIMITATION ON DAMAGES: SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT. NOR SHALL RECOVERY OF ANY KIND AGAINST SONY BE GREATER THAN THE ORIGINAL PURCHASE PRICE OF THE PRODUCT FROM SONY OR AN AUTHORIZED SONY DEALER.

DURATION OF IMPLIED WARRANTIES OR CONDITIONS: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTIBILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS LIMITED

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to You. This Limited Warranty gives You specific legal rights and You may have other rights which vary from jurisdiction to jurisdiction.

For purchases made in the U.S.: Read the following Dispute Resolution/Arbitration provision carefully. It details Your rights and instructions should a dispute related to the product arise.

What Happens If We Have A Dispute: Should a dispute or claim arise related to the product, Your purchase and/or use of the product, the terms of this Limited Warranty, or any service provided under the terms of this Limited Warranty (including any repair or replacement) ("Dispute"), You and Sony agree that the Dispute shall be resolved exclusively through binding arbitration. YOU UNDERSTAND AND ACKNOWLEDGE THAT BY AGREEING TO ARBITRATION, YOU ARE GIVING UP THE RIGHT TO LITIGATE (OR PARTICIPATE IN AS A PARTY OR CLASS MEMBER) IN ANY DISPUTES IN COURT. You also agree that ANY DISPUTE RESOLUTION PROCEEDING WILL ONLY CONSIDER YOUR INDIVIDUAL CLAIMS, AND BOTH PARTIES AGREE NOT TO HAVE ANY DISPUTE HEARD AS A CLASS ACTION, REPRESENTATIVE ACTION, CONSOLIDATED ACTION, OR PRIVATE ATTORNEY GENERAL ACTION. Despite the above, You have the right to litigate any Dispute on an individual basis in small claims court or other similar court of limited jurisdiction to the extent the amount at issue does have the right to litigate any Dispute on an individual basis in small claims court or other similar court of limited jurisdiction, to the extent the amount at issue does not exceed \$15,000, and as long as such court has proper jurisdiction and all other requirements (including the amount in controversy) are satisfied.

Arbitration Instructions. To begin Arbitration, either You or Sony must make a written demand to the other for arbitration. The Arbitration will be administered in keeping with the Expedited Procedures of the Commercial Arbitration Rules and the Supplementary Proceedings for Consumer-Related disputes ("Rules") of the American Arbitration Association ("AAA"), when applicable and in effect when the claim is filed. You may get a copy of AAA's Rules by contacting AAA at (800) 778-7879 or visiting www.adr.org. The filing fees to begin and carry out arbitration will be shared between You and Sony, but in no event shall Your fees ever exceed the amount allowable by the special rules for Consumers Disputed for by AAA, at which point Sony will cover all additional administrative fees and expenses. This does not prohibit the Arbitrator from giving the winning party their fees and expenses of the arbitration when appropriate pursuant to the Rules. Unless You and Sony agree differently, the arbitration will take place in the county and state where You live, and applicable federal or state law shall govern the substance of any Dispute during the arbitration. However, the Federal Arbitration Act.

Opt-Out Instructions. IF YOU DO NOT WISH TO BE BOUND BY THE BINDING ARBITRATION PROVISION, THEN: (1) You must notify Sony in writing within 30 days of the date that You purchased the product; (2) Your written notification must be mailed to Sony Electronics Inc., 16535 Via Esprillo, MZ 1105, San Diego CA 92127, Attn: Legal Department; AND (3) Your written notification must include (a) Your NAME, (b) Your ADDRESS, (c) the DATE You purchased the product, and (d) a clear statement that "YOU DO NOT WISH TO RESOLVE DISPUTES WITH ANY SONY ELECTRONICS ENTITY THROUGH ARBITRATION AND/OR BE BOUND BY THE CLASS ACTION WAIVER.

Opting out of this dispute resolution procedure will not affect the coverage of the Limited Warranty in any way, and You will continue to enjoy the benefits of the Limited Warranty.



GARANTIE LIMITÉE

É.-U. et Canada uniquement – 1 an

Sony Electronics Inc. exclusivement pour les achats effectués aux États-Unis et Sony du Canada Ltée. exclusivement pour les achats effectués au Canada (collectivement « Sony ») garantit ce produit contre les défauts de matériaux ou de fabrication pour le propriétaire d'origine et tous les propriétaires utilisateurs finaux suivants (« Vous » ou « Vos ») pendant la période définie cidessus et comme indiqué dans les présentes. Conformément à cette Garantie limitée, Sony, à son gré, (i) réparera le produit neuf ou recertifié/remis en état du même modèle (ou similaire). Aux fins de la présente Garantie limitée, les termes « recertifié » ou « remis en état du même modèle (ou similaire). Aux fins de la présente Garantie limitée, les termes « recertifié » ou « remis en état du même modèle (ou similaire). Sony ne garantit pas le fonctionnement ininterrompu ou sans erreur du produit.

Modalité: Pendant la période définie ci-dessus à compter de la date d'achat du produit directement chez Sony ou un vendeur autorisé Sony (pour déterminer si un vendeur fait partie du réseau de vendeurs autorisés de Sony, veuillez visiter, pour les É.-U.: www.sony.com/retailers; pour le Canada: https://dealerlocator.sony.ca/locator; ou contactez Sony directement), Sony, à son gré, réparera ou remplacera par un produit ou une pièce recertifié(e) ou remis(e) en état tout produit ou pièce défaillant(e).

Cette garantie limitée couvre uniquement les composants matériels emballés avec le produit. Elle ne couvre pas les accessoires séparés, l'assistance technique pour l'utilisation du matériel ou du logiciel et elle ne couvre pas les produits logiciels contenus ou non dans le produit, et tout autre contenu inclut; tout logiciel ou autre contenu inclut est fourni « EN L'ETAT » sauf indication contraire conformément à la Garantie limitée du logiciel joint ou à la Licence d'utilisation de l'utilisateur final. Veuillez vous reporter à la Licence d'utilisation de l'utilisateur final incluse avec le produit pour connaître vos droits et obligations en ce qui concerne le logiciel ou tout autre contenu inclut. Si vous avez acheté un plan de services étendu, veuillez vous reporter au plan de services pour connaître l'étendue de la couverture, la durée et les conditions d'utilisation. Les plans de services étendus ne sont pas régis par cette Garantie limitée.

Pour obtenir un service de garantie, vous devez livrer le produit, dans son emballage d'origine ou un emballage offrant un niveau de protection équivalent, à un centre de service autorisé Sony accompagné du reçu d'achat daté afin d'accéder au service de garantie. Sony n'est pas en mesure de garantir la réparation d'un produit au titre de ladite garantie ou l'échange d'un produit sans risque d'altérer le logiciel ou de perdre des données. Il relève de votre responsabilité de retirer ou sauvegarder tout média ou toute pièce amovible, toutes données, tout logiciel ou autre matériel stocké ou conservé sur votre produit. Il est probable que tout média ou toute pièce, toutes données, tout logiciel ou autre matériel (comme des images, de la musique, des vidéos, etc.) soit perdu ou reformaté pendant le service et Sony ne pourra être tenu pour responsable dudit dommage ou de ladite perte. Contactez les services suivants pour des instructions spécifiques sur la façon d'obtenir un service de garantie pour votre produit :

Pour les achats effectués aux ÉTATS-UNIS :

Visitez le site Web Sony : www.sony.com/support
Ou appelez le centre d'expérience client : 1-800-222-SONY (7669)

Pour enregistrer votre produit ou obtenir des coordonnées pour acheter des accessoires ou des pièces, rendez-vous sur le site Web Sony

Pour les achats effectués au CANADA :

Visitez le site Web Sony : www.sony.ca/support

Ou appelez le centre d'expérience client : 1-877-899-SONY (7669)

Pour enregistrer votre produit ou obtenir des coordonnées pour acheter des accessoires ou des pièces, rendez-vous sur le site Web Sony Un service sur place pour les téléviseurs de certaines dimensions est disponible pour les clients vivant dans un rayon de 50 km d'un local de service Sony autorisé, à condition que le lieu de résidence soit accessible à un véhicule de service.

Garantie de réparation/remplacement: Cette Garantie limitée s'applique à toute réparation, pièce de rechange ou tout produit de remplacement, recertifié ou remis en état pendant la période restante de la Garantie limitée d'origine ou pour une période de quatre-vingt-dix (90) jours, la plus longue date étant celle retenue. Toute pièce ou tout produit remplacé(e) au titre de ladite Garantie limitée sera la propriété de Sony. Tout produit de remplacement, recertifié ou remis en état fourni au titre de ladite Garantie limitée peut, au gré de Sony, être de couleur et/ou d'aspect différent par rapport au produit d'origine et peut ne pas inclure de gravure d'origine ou une personnalisation similaire.

Sony n'est pas responsable de, et ladite Garantie limitée ne couvre pas, tout dommage survenu suite à une utilisation du produit ne respectant pas ses utilisations prévues, ou autrement le non-respect du manuel du propriétaire et des consignes de sécurité se rapportant à l'utilisation et à l'installation du produit. Sony ne pourra être tenue responsable des frais liés à la maind'oeuvre ou à l'achat de pièces payés suite à une réparation ou des services offerts par un centre autre que ceux dûment autorisés par Sony. Ladite Garantie limitée couvre uniquement les dommages causés au produit par des défauts de matériaux ou de fabrication pendant son utilisation normale par le client. Ladite Garantie limitée ne couvre pas les produits achetés auprès de sources autres que Sony ou un vendeur autorisé Sony (y compris les ventes aux enchères en ligne non autorisées), ou les dommages causés par : (i) une exposition extérieure et d'autres actes de la nature; (ii) les surtensions; (iii) un dommage accidentel; (iv) un abus; (v) les limites de la technologie; (vi) un dommage cosmétique; (vii) le contact avec un liquide, la chaleur, l'humidité ou la sueur, le sable, la fumée ou des matériaux étrangers; (viii) les dommages, défaillances et/ou tout fonctionnement incorrect du produit suite à une réparation effectuée avec des pièces ou fournitures n'étant pas vendues ou autorisées par Sony; (ix) les dommages, défaillances et/ou tout fonctionnement incorrect du produit suite à des services non offerts ou autorisées par Sony; (ix) les verus et/ou tout fonctionnement incorrect du produit suite à des services non offerts ou autorisées par Sony ou un centre autre que ceux dûment autorisé par Sony; (x) les virus informatiques ou circulant sur Internet, les bogues, les vers ou les chevaux de Troie; (xi) les dysfonctionnements dus à des périphériques/accessoires; (xii) les modifications apportées à une pièce du produit, incluant l'enracinement ou toute autre modification visant à contrôler le comportement du produit ou tout système d'exp

Ladite Garantie limitée ne couvre pas les produits Sony vendus « EN L'ÉTAT » ou « AVEC DÉFAUTS » ou les consommables (comme les fusibles ou les piles jetables). Sony ne remplacera pas les composants manquants d'un emballage acheté comme « Boîte ouverte » ou « EN L'ÉTAT ». Ladite Garantie limitée est valide uniquement aux États-Unis et au Canada (selon le cas).

LIMITATIONS DES DOMMAGES-INTÉRÊTS: SONY NE PEUT PAS ÊTRE TENU RESPONSABLE DES DOMMAGES ACCESSOIRES OU CONSÉCUTIFS RÉSULTANT DE L'INEXÉCUTION D'UNE GARANTIE EXPRESSE OU IMPLICITE OU D'UNE CONDITION SUR CE PRODUIT. TOUT RECOUVREMENT DE SONY NE POURRA PAS EXCÉDER LE PRIX D'ACHAT D'ORIGINE DU PRODUIT VENDU PAR SONY OU UN VENDEUR SONY AUTORISÉ.

DURÉE DES GARANTIES OU DES CONDITIONS IMPLICITES : SAUF DANS LA MESURE OÙ CELA EST INTERDIT PAR LA LOI EN VIGUEUR, TOUTE GARANTIE IMPLICITE DE VALEUR MARCHANDE OU D'ADAPTATION À UN USAGE PARTICULIER SUR CE PRODUIT EST LIMITÉE À LA DURÉE DE LADITE GARANTIE LIMITÉE.

Certaines juridictions n'autorisent pas l'exclusion ou la limitation des dommages accessoires ou consécutifs, ou autorisent les limitations de durée d'une garantie implicite, ainsi les limitations ou exclusions ci-dessus peuvent ne pas s'appliquer à vous. Ladite Garantie limitée vos octroie des droits spécifiques reconnus par la loi et vous pouvez bénéficier d'autres droits qui varient d'une juridiction à une autre.

Pour les achats effectués aux États-Unis : Lisez attentivement la clause de résolution/d'arbitrage des litiges suivante. Vos droits et les étapes à suivre en cas de litige lié au produit y sont détaillés.

Que se passe-t-il en cas de litige: En cas de litige ou de réclamation lié(e) au produit, à votre achat et/ou à l'utilisation du produit, aux clauses de ladite Garantie limitée, ou à un service fourni conformément aux conditions de ladite Garantie limitée (incluant une réparation ou un remplacement) (« Litige »), vous et Sony acceptez que le litige soit résolu exclusivement à travers un arbitrage exécutoire. VOUS COMPRENEZ ET RECONNAISSEZ QU'EN ÀCCEPTANT L'ARBITRAGE VOUS AVEZ LE DROIT D'INTENTER UNE ACTION EN JUSTICE POUR (OU DE PARTICIPER EN TANT QUE PARTIE OU MEMBRE DU RECOURS À) LA RÉSOLUTION DES LITIGES DEVANT UN TRIBUNAL. Vous acceptez également que TOUTE PROCÉDURE DE RÈGLEMENT DES DIFFÉRENDS CONSIDÈRERA UNIQUEMENT VOS REVENDICATIONȘ INDIVIDUELLES, ET LES DEUX PARTIES ACCEPTENT QU'UN LITIGE NE SOIT PAS ENTENDU COMME UN RECOURS COLLECTIF OU UN RECOURS DU PROCUREUR GÉNÉRAL. Malgré les indications cidessus, vous avez le droit d'intenter une action en justice de manière individuelle devant la Cour des petites créances ou une Cour similaire à la compétence limitée, dans la mesure où le montant en question n'excède pas 15 000 \$, et aussi longtemps que la dite Cour soit compétente et que toutes les autres exigences (incluant le montant en litige) soient satisfaites.

Consignes d'arbitrage. Pour commencer l'arbitrage, vous ou Sony devez faire une demande d'arbitrage écrite à l'autre partie. L'arbitrage aura lieu devant un seul arbitre. L'arbitrage sera géré en suivant les Procédures accélérées des Règles d'arbitrage commercial et les Procédures additionnelles (les « Règles ») de l'association américaine d'arbitrage (« AAA ») pour les différends de consommateur, si elles sont applicables et en vigueur au moment où la réclamation est traitée. Vous pouvez demander une copie des Règles de l'AAA en contactant l'AAA au (800) 778-7879 ou en visitant le site Web www.adr.org. Les droits de dépôt pour commencer et mener l'arbitrage seront partagés entre vous et Sony, mais vos frais ne devront en aucun cas excéder le montant permis par les règles spécifiques de l'AAA pour les Différends de consommateur, après quoi Sony couvrira tous les frais administratifs et dépenses additionnels. Ce paragraphe n'interdit pas à l'arbitre de restituer à la partie ayant obtenu gain de cause les frais et dépenses qu'elle a engagées dans l'arbitrage lorsque les Règles le permettent. Sauf si Sony et vous en conveniez autrement, l'arbitrage aura lieu dans le pays et l'État où vous vivez, et la loi fédérale ou d'État applicable régira le fond du différend pendant l'arbitrage. Cependant, la Loi sur l'arbitrage fédéral 9 U.S.C. § 1, et seq., régira l'arbitrage et non une quelconque loi d'Etat sur l'arbitrage. La décision de l'arbitre sera obligatoire et définitive, sauf dans le cadre d'un droit d'appel limité conformément à la Loi sur l'arbitrage.

Consignes d'exclusion. SI VOUS NE SOUHAITEZ PAS ÊTRE CONTRAINT PAR LA CLAUSE D'ARBITRAGE OBLIGATOIRE, ALORS: (1) Vous devez en informer Sony par écrit dans les 30 jours à compter de la date d'achat du produit; (2) Votre notification écrite doit être envoyée par courrier à Sony Electronics Inc., 16535 Via Esprillo, MZ 1105, San Diego CA 92127, à l'attention de: Service juridique; ET (3) Votre notification écrite doit inclure (a) votre NOM (b) votre ADRESSE, (c) la DATE d'achat du produit, et (d) une déclaration claire stipulant que « VOUS NE SQUHAITEZ PAS RÉSOUDRE LES DIFFÉRENDS AVEC UNE ENTITÉ SONY ELECTRONICS À TRAVERS L'ARBITRAGE ET/OU ÊTRE CONTRAINT PAR LA RENONCIATION À INITIER OU PARTICIPER À UN RECOURS COLLECTIF ».

Décider de ne pas adhérer à cette procédure de résolution des différends n'affectera en aucun cas la couverture de la Garantie limitée et vous continuerez à bénéficier des avantages de la garantie limitée.

C-2662-819-2