

BTR1 ADVANCED




HIGH DEFINITION SOUND BY **RCF**



MIDLAND®

ON/OFF

DESCRIPTION OF BUTTONS

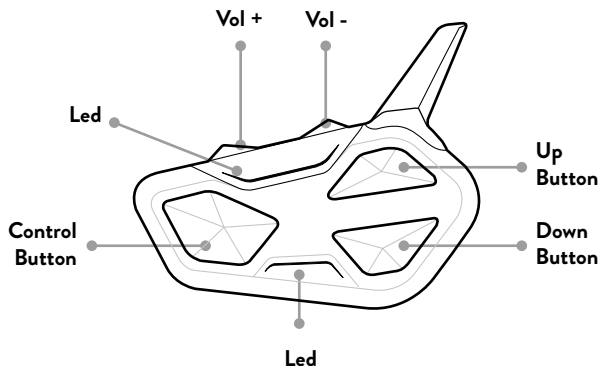

SWITCH ON



Press for 3 seconds



Beep



Flashes

SWITCH OFF



Press together for 3 sec.




Flashes



Notification jingle

PAIRINGS

DESCRIPTION OF BUTTONS

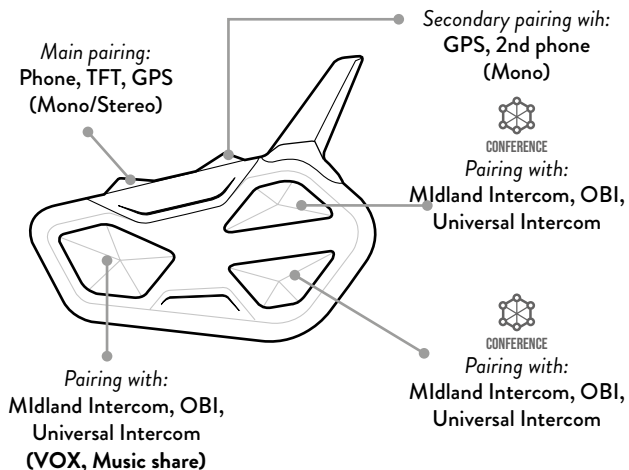

To carry out any pairing, you need to access Settings. If the Control button is pressed less than 7 seconds, the device will turn on instead of accessing Settings. Should this happen, repeat the procedure.

ACCESS SETTINGS

Status: device off



Press 7 seconds



Beep



Flashes









Steady

PAIRINGS

PHONE/GPS/TFT PAIRING







Status: Settings (steady red led)

| | |
|---|--|
|  | |
| Press VOL+ for 3 seconds | |
|  | Beep |
|  | Flashes |
|  | Select BTR1 Adv. in your phone, GPS or TFT |
|  | Beep |
|  | Confirmation (1 sec.) |

Note: to pair a second device in mono audio, repeat the same procedure but press VOL-.





MIDLAND INTERCOM PAIRING

Status: Settings (steady red led)

| | | | |
|--|-----------------------|---|-----------------------|
|  | |  | |
| Press for 3 seconds (You can use any key) | | Press for 3 seconds (You can use any key) | |
|  | Flashes |  | Flashes |
|  | Confirmation (1 sec.) |  | Confirmation (1 sec.) |
| Exit Settings mode (Press the Control button twice) | | | |





OBI INTERCOM PAIRING

Status: Settings (steady red led)

| | | | |
|---|-----------------------|--|--|
|  | |  OBi intercom (Cardo...) | |
| Press for 3 seconds (You can use any key) | | Follow the pairing procedure with the intercom device (see instructions of this device) | |
|  | Flashes | | |
|  | Confirmation (1 sec.) | | |

OTHER BRAND INTERCOM PAIRING (UNIVERSAL INTERCOM)

Status: Settings (steady red led)


| | | | |
|---|-----------------------|---|--|
|  | |  | |
| Press for 3 seconds (You can use any key) | | Follow the phone pairing procedure (see instructions of this device) | |
|  | Flashes | | |
|  | Confirmation (1 sec.) | | |

Attention: a new pairing on the same button overwrites the previous one

PAIRINGS

PAIRING 4 UNITS IN CONFERENCE

Status: Settings (steady red led)

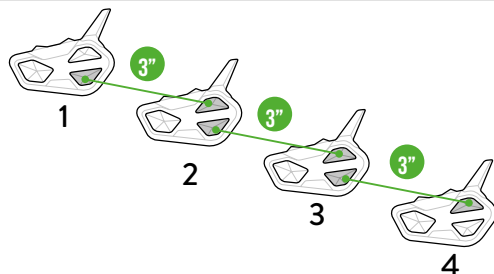

Note: the Conference allows the simultaneous communication amongs Midland units. Units must be paired in a “chain” configuration.

Down Button of Unit 1 with Up Button of Unit 2

Down Button of Unit 2 with Up Button of Unit 3

Down Button of Unit 3 with Up Button of Unit 4

EXIT SETTINGS MODE INTERRUPT PAIRING

Status: Settings (steady red led)



Press twice

Blinking changes

BLUETOOTH PAIRINGS RESET

Status: Settings (steady red led)



Press together for 3 seconds



Beep



Confirmation (1 sec.)



Steady

Exit the Settings mode (Press the Control button twice)

Go to our website midlandeurope.com,
download the complete manual and the
BT Updater software.

Customize your intercom and discover all the
functions with the **Midland Connect**.
Download it here:



OPERATING MODES

A. Intercom Mode: to communicate with another device.

B. Phone Mode: for phone calls or for managing music.

C. FM Radio Mode: to listen to radio, search and store stations.


Note: Phone mode and Intercom mode are enabled only when your intercom is paired to other devices.

SELECT THE OPERATING MODE


Status: unit on



INTERCOM MODE --> CONFERENCE

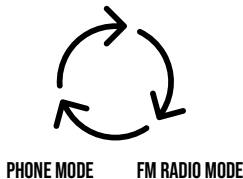

Press for 3 seconds to change mode or keep pressed to scroll quickly

 Operating mode status

Note: By pressing briefly **Vol +** and **Vol -** together, BTR1 Advanced communicates the selected operating mode.

INTERCOM MODE

FUNCTIONS DESCRIPTION

Press once the keys to activate:

Control button - Rider 1

(Passenger or favourite rider)


(Midland/OBI/Universal Intercom)

Up button - Rider 2:

(Midland/OBI/Universal Intercom)

Down button - Rider 3:

(Midland/OBI/Universal Intercom)

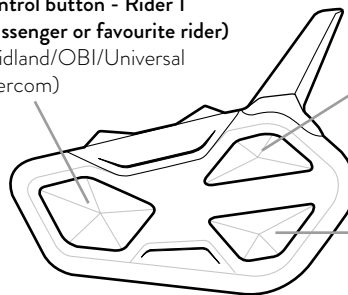

SHORTCUT: in Intercom mode press twice the buttons for the phone functionalities.

OPEN/CLOSE INTERCOM MANUALLY

Status: Intercom mode

Press once the button used for the Midland/OBI pairing



Beep



Flashes


Note: to communicate with Rider 2-3 repeat the procedure by pressing **Up (Rider 2) / Down (Rider 3)**.

OPERATING MODES

INTERCOM MODE

OPEN/CLOSE UNIVERSAL INTERCOM

Status: *Intercom mode*

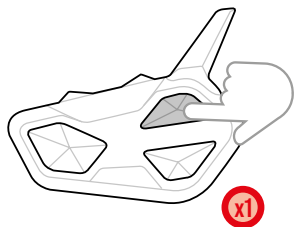

Press **once** the button used for the Universal Intercom pairing



Beep



Flashes

Note: to open/close the audio from a **different brand device**, use the voice call command (for some models it is necessary to send the voice call twice)

OPEN/CLOSE INTERCOM BY VOICE

Status: *in all modes*



Say "Hi"



Voice announcement



Flashes



Silent for 1min, **intercom closes**



Beep

Note: the voice activation is possible only with an intercom paired to the **Control button-Rider 1 (VOX must be active)**

ACTIVATE/DEACTIVATE VOX

Status: *in all modes*

the intercom communication MUST be closed)



Press for **7 seconds**



Voice announcement

ENABLE/DISABLE CONFERENCE

Status: *in all modes*

(audio must be closed)



To **enable/disable** Conference, keep pressed for 3 seconds at the same time on every paired intercom



Voice announcement



Connection status

Note: in Conference mode, the devices paired with Vol+/Vol- are temporarily disconnected.

OPERATING MODES


INTERCOM MODE

OPEN/CLOSE CONFERENCE


Status: Conference



Press once **opens/closes** Conference with the unit paired to **Down button**

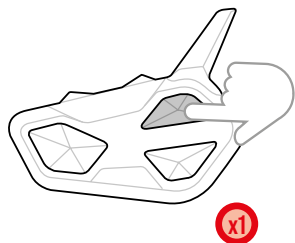

Press once **opens/closes** Conference with the unit paired to **Up button**

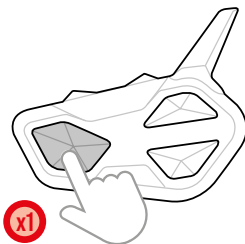


Press once opens automatically Conference to **all paired units**

PHONE MODE

DESCRIZIONE FUNZIONI


Press once the buttons to activate:

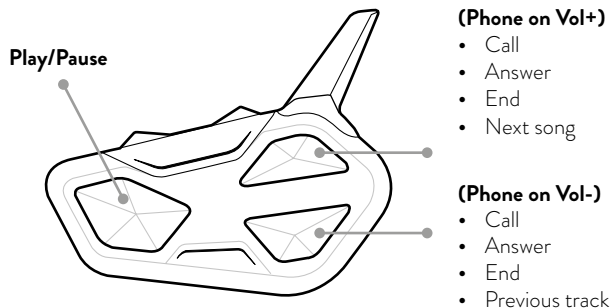

SHORTCUT: in Phone mode press twice for the Intercom functionalities.

TO MAKE A CALL

Status: Phone mode (no audio active)

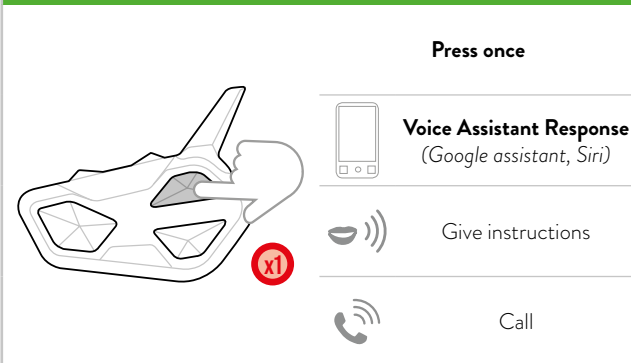

Note: if your phone is paired with **Vol-**, press the **Down button**.

OPERATING MODES

PHONE MODE

TO ANSWER/END/REJECT A CALL

Status: all modes



Press once any key
to answer/end a call

Press for 3 sec, to reject a call

Note: if your phone is paired with Vol-, press the Down button.

MUSIC

Status: phone mode



Select Music App



Press once Play/Pause



Press once Next track



Press once Previous track


MUSIC SHARE

Status: all modes



Select Music App

Open Midland intercom
(manually or by VOX)

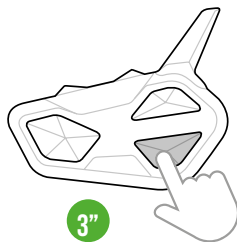

Press for 3 sec.




Voice announcement

RADIO MODE

FUNCTION DESCRIPTION

Press once the buttons:

FM Radio
On/Mute

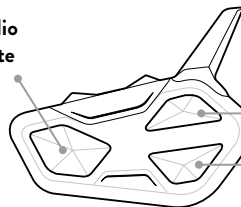

Seek radio station forward

Seek radio station backward

SHORTCUT: in Radio mode press twice the buttons for the Intercom functionalities.

FM RADIO


Status: radio mode



Press once On/Mute



Press once station forward

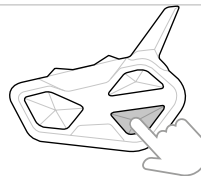

Press for 3 sec. memory forward

Press once station backward

Press for 3 sec. memory backward

Note: with FM radio mute, press once the Up or Down buttons to activate the voice call.