





BV765B USER'S MANUAL

BLUETOOTH® | **DVD/MP3/CD AM/FM RECEIVER**FEATURING 6.5" (165 mm) WIDESCREEN TOUCHSCREEN





Congratulations on your purchase of a **Boss Audio Systems ELITE**® Multimedia Receiver.

It has been designed, engineered and manufactured to bring you the highest level of performance and quality, and will offer you years of entertainment pleasure.

C	0	BI	-	B.II	7	C
		H-MI		10		-

Specifications	1
Safety Notice	2
Accessories	
Unit Installation	3
Remote Control Operation	4
Wires Connection Description	5
Panel Introduction	6
Main Menu Operation Instruction	7
Access Setup Interface	8
General Settings	
Camera Settings	
Clock Settings	
Audio Settings	8
Tuner Settings	9
Illumination Settings	
About Settings	10
Tuner Operation	10
DISC/CD/USB/SD Playback	11
DVD Mode Operation	
Media Playing — CD Audio	
CD Source Menu	12
USB/SD Music/Video/Picture	12
Bluetooth Operation	13
Bluetooth Operation Menu	13
Bluetooth Dialing	13
Bluetooth Call	
Bluetooth Phone Book	14
Bluetooth Phone Call History	14
Bluetooth Music Steaming-A2DP	14
Bluetooth Pair device	
A-LINK(Screen Mirroring) Operation	15
Troubleshooting	

SPECIFICATIONS

Model No.	BV765B			
General features	Fixed front panel 6.5 inch TFT screen FM/AM Radio RBDS DVD fully compatible with DVD/VCD/CD/MP3/MPEG4/JPEG Front USB&SD reader support Built-in Bluetooth AUX Input AV Input AV output Front/Rear view camera Front,Rear and Subwoofer Pre-Amp.Output 4*80W AMP power output maximum Steering wheel control			
TFT screen	800*480pixel			
SD	64G			
Working power	12V			
Max Output 4*80W Working Temperature -20°C ~70°C/ -4° F~158°F				
		ure -20°C ~70°C/ -4° F ~ 158°F		
Size	178*160*100mm			
Weight	1.57kg/3.46lbs			
Compatible Media				
Picture	JPG/JPEG/BMP			
Disc	CD/CD-R/CD-RW/DVD/DVD±R/DVD±RW			
Audio file	MP3/WAV/FLAC			
	Fo	rmat	Video code	Audio code
Video file	.M	PEG1	MPEG1	MP2
	.M	PG	MPEG2	MP2

Please read and understand the following safety information before operating this unit.

- The device is suitable for 12V power supply (requires grounding).Do not connect it to 24V power supply in trucks or buses, or else it will be damaged.
- Please use genuine discs instead of incompatible discs, or it will damage the device and/or shorten the service life.
- Without the guide of qualified personnel, do not replace the fuse, or else it may damage the device or cause fire.
- A Please follow the traffic laws and regulations and do not watch programs or operate the device when you are driving, to avoid accidents(excluding passengers watching through rear monitor).
- To ensure safety and operate the device normally, please ask qualified personnel to install the device. Do not disassemble or repair the device without authorization, to avoid damage and accidents. please contact a local car audio distributor for details.
- O Do not put the device in a moist environment or water, to avoid electric shock, damage and/or fire due to a short circuit.
- The mechanical drive part of the monitor uses an automatic precision transmission component.Do not pull, push or rotate the device by force or impact the TFT screen to avoid damaging the device.
- Do not insert the audio plug of the vehicle into the master unit directly. Please convert with the dedicated end cable provided by our company.
- When installing the unit, prevent metal objects from falling into the master unit from the vents to avoid a short circuit and damaging the device.


Safety Statement

- For the safety of yourself and others, do not watch programs or operate the device when you are driving. It is prohibited by law.
- The back up monitor function should be used as an auxiliary view only. We are not responsible for any accidents occurred during backing.

ACCESSORIES


Remote	1
Power Cable	1
Mounting Brackets	2
Screw	8
Trim Ring	1

UNIT INSTALLATION

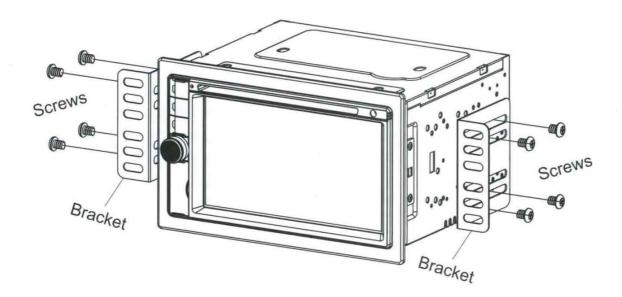

- 1. Put the 2 brackets to the left and right side of the unit;
- 2.Use screws to fix the brackets to the unit.
- 3.Once the screws are attached, the brackets can be adjusted forward or backward depending on the installation requirements.

REMOTE CONTROL OPERATION

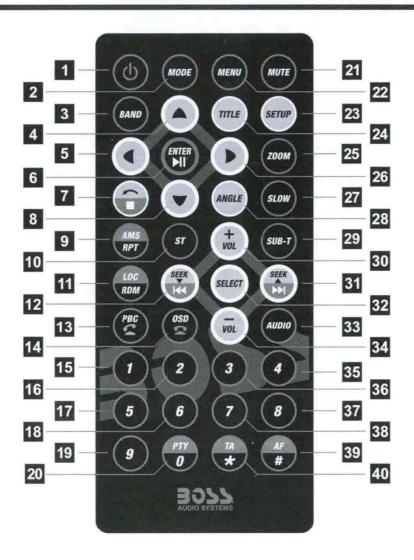


- 1.TURN ON/OFF
- 2.MODE Key
- 3.BAND Key
- 4.5.8.26. Cursor Keys
- 6.ENTER, ►II (Play/Pause) Key
- 7. ~ (STOP), (Return) Key
- 9.AMS(Auto Store/Recall Preset Station),
 - RPT(Repeat) Key
- 10.ST(Stereo/mono) Key
- 11.LOC(LOC/DX), RDM(Random) Key
- 12. I◀ (Tune/Seek Down,
 - Skip to Previous song/video/Photo) Key
- 13. PBC(Playback Control),
- (Answer/Outgoing call/ Redial)
- 14.OSD(On Screen Display),
- (Reject or End a call) Key
- 15~20, 35~40. Numeric Keypad,

- 20. PTY(Program Types)
- 21.MUTE Key
- 22.MENU Key
- 23.SETUP Key
- 24.Title Key
- 25.ZOOM(Zoom in/out) Key
- 27.SLOW Key
- 28.ANGLE Key
- 29.SUB-T(Subtitle language) Key
- 30.34.VOL+/VOL- Key
- 31. ▶ (Tune/Seek Up,
 - Skip to Next song/video/Photo) Key
- 32.SELECT(Audio Settings) Key
- 33.AUDIO(Audio Language)
- 39.AF(Alternative Frequencies)
- 40.TA(Traffic Announcement)


WIRES CONNECTION DESCRIPTION

The Description of the Input/Output Interface

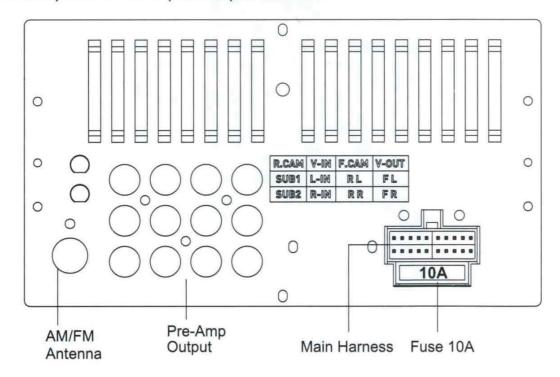

	Audio/Video Inputs & Outputs	
	R.CAM Rear Camera Input (Yellow)	V-IN Video Input (Yellow)
	SUB1 Subwoofer Output 1 (Green)	L-IN Audio Input Left CH (White)
	SUB2 Subwoofer Output 2 (Green)	R-IN Audio Input Right CH (Red)
	5.40	V 011T
	F.CAM Front Camera Input (Yellow)	V-OUT Video Input (Yellow)
	R L Rear Left PRE-AMP Output (White)	F L Front Left PRE-AMP Output (White)
	R R Rear Right PRE-AMP Output (Red)	F R Front Right PRE-AMP Output (Red)
1		

Power	Speaker Outputs
Yellow Constant (+12v)	White Left Front (+)
Red Accessory (+12v)	White/Blk Left Front (-)
Black Ground (-)	Gray Right Front (+)
Orange Illumination Input (+12v)	Gray/Blk Right Front (-)
Violet/Wht Reverse Input (+12v)	Green Left Rear (+)
Blue Ant. Output (+12v, 500 mA)	Green/Blk Left Rear (-)
Blue/WhtRem. Output (+12v, 500 mA)	Purple Right Rear (+)
Lt.Green Parking Brake Input	Purple/Blk Right Rear (-)
Control	Camera Power
3.5mm SWC Input	Red/Blk Front Output (+12v, 500 mA) Red/WhiteRear Output (+12v, 500 mA)

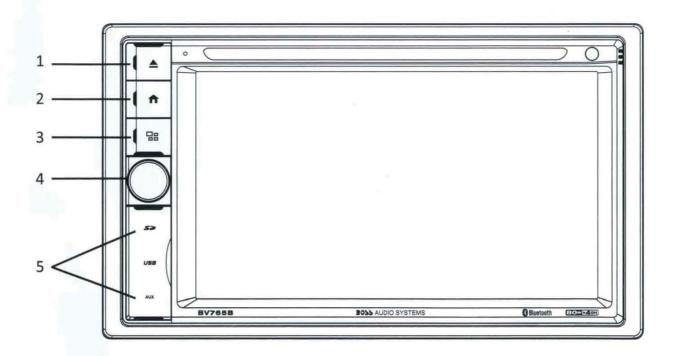

1.Eject key

Press EJECT to remove the Disc

2.MENU key

Press to return to the home menu, or previous source.

3.MODE key

Press to select system mode.

4.TURN ON/OFF&VOLUME UP/DOWN

Long touch to turn ON/OFF the unit. Short touch to activate the MUTE function and silence the audio output. Touch again to restore sound. Rotate to adjust the output volume UP or DOWN.

5. Open to see AUX IN jack, SD solt, USB port and reset key.


MAIN MENU OPERATION INSTRUCTION

MAIN MENU 1

- 1. Tuner Interface
- 2. Streaming Interface
- 3. DISC Interface
- 4. Phone Interface
- 5. USB Interface
- 6. SD Interface
- 7. Front/Rear Camera Interface
- 8. AV INPUT Interface

MAIN MENU 2

- 9. AUX IN Interface
- 10. Setting Interface
- 11. A-LINK(Autolink) Interface

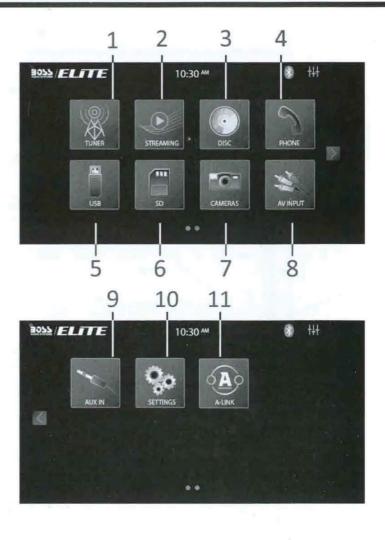

There are seven Setting Menus


GENERAL SETINGS-Menu 1



- 1. Touch to set wallpaper
- Retain ACC Power: Select how many seconds to delay shut down after the vehicle powers down
- 3. When turned on, an audible beep tone confirms each function selection.
- 4. Touch System Language to select Spanish/English
- 5. Touch to select parental control level, the default passord is "0000".

ACCESS SETUP INTERFACE

CAMERA SETTINGS-Menu 2

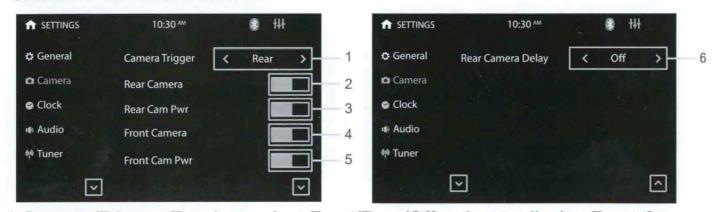


- Camera Trigger: Touch to select Front/Rear/Off, select to display Front Camera, Rear Camera, or no response when reversing.
- 2.Rear Camera: Touch to turn on or turn off the Rear Camera function.
- 3.Rear Cam Pwr: Turn on to power Rear Camera.
- 4. Front Camera: Touch to turn on or turn off the Front Camera function.
- 5. Front Cam Pwr: Turn on to power Front Camera.
- 6.Select the delay setting to define the refresh rate for the Rear Camera image when the vehicle is in reverse gear. Options are off / 1 Sec / 2 Sec / 3 Sec. It can switch to front camera delay or Front Camera delay follow the Camera Trigger change.

CLOCK SETTINGS-Menu 3

- a. Press to set clock mode:12/24 hr
- b. Press to set hour
- c. Press to set minute
- d. Press to set AM/PM at 12hr mode




AUDIO SETTINGS-Menu 4

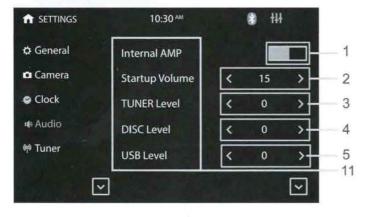



ACCESS SETUP INTERFACE

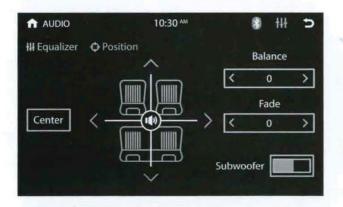



- 1. Touch to select whether to output sound from an external amplifier.
- 2. Startup volume: default volume;
- If the volume at the last shutdown is less than this volume, the volume at the last shutdown will be used when rebooting;
- ②.if the volume at the last shutdown is greater than this volume, this default volume will be used when rebooting
- 3-10. Press to set preset gain.
- 11. Slide up or down to enter previous functions.

TUNER SETTINGS - Menu 5

- Touch to choose between America/ EU regions.
- Perform radio auto preset (ps) functionality
- 3. Touch to choose Local or Distance
- Touch to turn on or turn off RBDS;Touch Set to enter RBDS page .
- 5. Touch to choose Stereo or Mono

ILLUMINATION SETTINGS - Menu 6

- Touch to turn on the illumination detection function
- 2. Touch to set screen brightness
- 3. Touch to set gamma brightness





TUNER OPERATION

ABOUT SETTINGS -Menu 7

- Touch to enter the touch calibration interface
- Touch to view the version number of the machine.
- Touch to restore the machine to factory status.
- Touch to select whether it is necessary to display a warning interface when booting up.

TUNER OPERATION

- Touch
 to go back to the home page
- 2. Show PS,PTY and RT messages from RDS
- Short press to seek backwards, long press to enter manual mode.
- Short press to seek forward, long press to enter manual mode.
- Short press to select the preset station, long press to save current Freq.


RBDS: Touch Setting >Tuner > RBDS > Set to enter the RBDS setup menu. You can choose what program type you'd like to listen to: news, sports, information, etc.

a.CT(Clock Time)

Turn on to automatically correct the current time every time the RBDS is opened.

b.TA(Traffic Announcement)

ON:When this is turned on the radio will automatically search for traffic station.

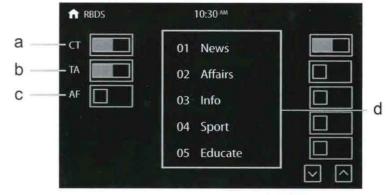


OFF:Turn off to end the TA function. In other modes, the traffic announcements will automatically switch to radio mode. Once the traffic announcements are complete it will automatically switch to the previous mode.

c.AF(Auto Frequency)

When the AF function is turned on, the radio will automatically fine tune to other frequencies when the received stations become weak. A warning message will be displayed on the screen when receiving emergency announcements.



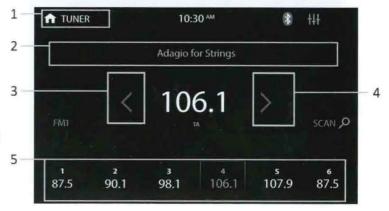

DISC/CD/USB/SD PLAYBACK

d.PTY(Programming Type)

Touch the button to display program types. Search for stations according to program type.

NOTE: If RBDS is turned OFF, AF/TA/PTY will not function.

DVD MODE OPERATION


- 1. Touch to select title/chapter of DVD
- Short press to move to the previous chapter, long press to rewind quickly.
- 3. Touch to playback/pause
- Short press to move to the next chapter, long press to fast forward quickly.
- 5. Touch to enter DVD root menu
- 6. Go to the next page of the menu bar
- 7. Go to the previous page of the menu bar
- Touch to change the repeat mode in the following sequence: DVD:repeat all, repeat off, repeat chapter,

repeat title
VCD(PBC off):repeat all repeat off repeat

VCD(PBC off):repeat all, repeat off, repeat single

- 9. Touch to change random play mode
- 10. Touch to enter video adjust page
- 11. Touch to enter DVD title menu
- Touch to select the subtitle language if the disc is recorded in multiple languages
- 13. Go to the next page of menu bar
- 14. Touch to switch video between 4:3 and 16:9
- 15. Touch to select DVD video angle
- 16. Touch to select DVD audio language

NOTE: When properly installed, a video cannot be displayed unless the parking brake is applied. If the parking brake wire is not installed correctly, the following message will appear.

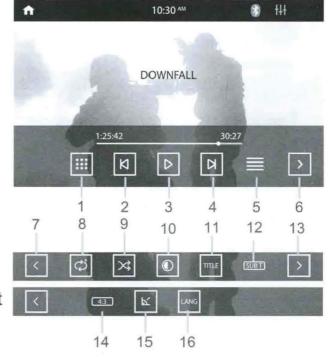




DISC/CD/USB/SD PLAYBACK

MEDIA PLAYING—CD AUDIO

- 1. Show the music's ID3 information
- Time bar:show the total time and playing time of the present song
- Touch to change play mode: repeat all, repeat directory, repeat 3 single, sequential play and shuffle 5 play.
- Touch to return to previous song.
- 5. Touch to playback/pause.
- 6. Touch to go to the next song.
- 7. Touch to enter file list page.

CD SOURCE MENU

Touch the SOURCE MENU(ICON 5) to access the CD track menu to view or change tracks manually. Touch again to return to playback.

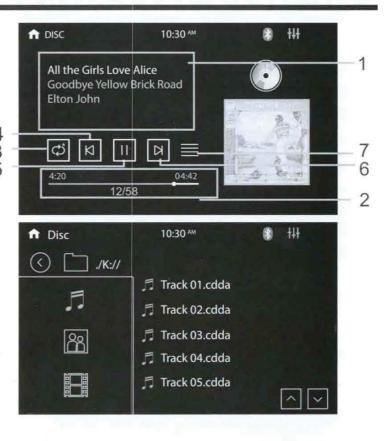

USB/SD MUSIC/VIDEO/PICTURE

Press USB/SD in the main menu. The music menu is similar to the disc music menu except there is more ID3 information on it (such as song name & singer).







- 1. Steppad: Enter number to select file.
- 2. Previous Music/Video/Picture
- Play/Pause
- 4. Next Previous Music/Video/Picture
- 5. Elist: Press to enter file list
- 6. Do to the next page of menu bar
- 7. Go to the Previous page of menu bar
- 8. Select repeat mode
- 9. 🗷 Random Play
- 10. o Enter Video adjust
- 11. Turn right 90 degree
- 12. Q Zoom In/Out

BLUETOOTH OPERATION

BLUETOOTH OPERATION MENU

Click the phone icon to enter the Bluetooth function interface.

1.Bluetooth setting menu:

- a.Turn Bluetooth on and off.

 Turn on and the display loops
 between the gray Bluetooth icon,
 the white Bluetooth icon. The icon
 will turn blue when a phone is paired.
- b.Connect automatically.
- c.Answer automatically.
- d.PIN code: The default password is
 - "0000" and can be changed by clicking "0000".
- e.Default Bluetooth name for this unit: BOSS AUDIO BV765B.

2. Function area:

a.Click to see the dialing keypad. Users can dial phone numbers and make calls.

2 a

b

C

d

е

A PHONE

- III Keypad

Recents

■ Device

Setup

♣ Phonebook

- b.Click to see the Bluetooth phonebook menu.
- c.Click to see the Bluetooth call history.
- d.Bluetooth pairing interface.
- e.Bluetooth setting menu.

BLUETOOTH DIALING

- Shows the number dialed in.
 Press to delete wrong numbers.
- 2.Key area.
- 3. Touch to call out.

10:30 AM

Bluetooth

Auto Connect

Auto Answer

Pin Code

Name

★ +11

BOSS AUDIO BV765B

1

a

b

C


d

e

0000

BLUETOOTH CALL

- 1.Show contact name.
- 2. Touch to select talk through phone or through Bluetooth.
- 3. Keypad area.
- 4. Press to hang up the phone call.

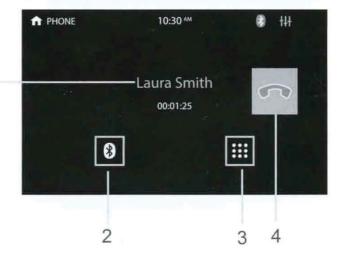



BLUETOOTH OPERATION

BLUETOOTH PHONE BOOK





- 1. Touch to search for a name or phone number.
- 2. Click to sync phonebook.
- 3.Contact list.


BLUETOOTH PHONE CALL HISTORY

- 1.Click to sync phone call history.
- 2. Touch to show missed calls.
- 3. Touch to show the dialed phone number.
- Touch to show the received phone number.



BLUETOOTH MUSIC-A2DP

- 1.Previous song.
- 2.Play/pause.
- 3.Next song.
- 4.Enter EQ setting menu.

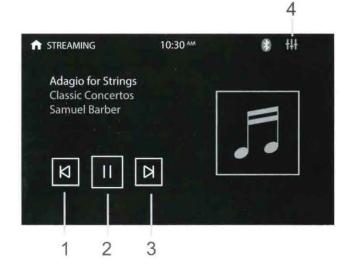

A-LINK(SCREEN MIRRORING) OPERATION

A-LINK App allows user to mirror the screen of certain Android smartphones on the screen of this car DVD player.

Please scan one of QR code to download the "A-LINK" App in Amazone App Store or Google Play Store and install it to user's smartphone.

Simply connect user's smartphone to the USB port through the original cable of smartphone and user will be able to see the favorite smartphone apps directly on the screen.







Google Play Store

Note:

- 1. Supports 2 way control for Android device.
- 2. Supports Android 8.0+ or higher, not all apps are supported.

TROUBLESHOOTING

Media displayed	Cause	Corrective Action
Loading	Disc is being read	
No Disc/Bad Disc	Disc is dirty	Clean the disc
NO DISCIDAD DISC	Disc is upside down	Insert Disc in right way
Unknown Disc	Unsupported Disc type	Check the disc and change
Error	Illegal mechanism operation	Press EJECT for 5s to reset loading mechanism
Problem	Cause	Corrective Action
	Radio fuse blown	Install new fuse with right rating
Unit will not power on	Car battery fuse blown	Install new fuse with right rating
	Illegal operation	Press the RESET button
Screen touch is insensitive	Place of touch screen is uncalibrated	Go to setup menu and set the calibration
No audio output	Improper audio output connection	Check wiring and correct
	VOLUME 0	Turn up the volume
Low audio output	Heavily biased volume balance	Check and adjust the channel balance to the center position
Poor sound quality	Speaker power rating not compatible with unit	Connect proper speakers
or distortion	Speaker short circuit	Check wiring

TROUBLESHOOTING

Problem	Cause	Corrective Action
Weak station	Auto antenna is not properly connected	Connect the auto antenna properly
searching	LOCAL function is activated	Turn LOCAL function OFF
No image	Incorrect connection to parking wire	Check wiring and correct
	Parking brake is not engaged	Stop vehicle in safe place and set parking brake ON
Flashing image or interference appears on screen	Improper video signal connections	Check wiring and correct
Improper image, improper height/width radio display	Improper aspect ratio setup	Use correct aspect ratio setting
Cannot insert Disc	Disc already inside unit	Eject the current Disc and insert the new one
Lost of noise during play, and stop then	Disc is scratched or warped	Use a new one in good condition
play, and stop then	Disc is dirty or wet	Clean the Disc



BOSS Audio Systems
3451 Lunar Court • Oxnard, CA 93030
www.bossaudio.com
805-751-4853 Customer Service
Tech Support: www.bossaudio.com/support



1120





Keep in Touch! Register Your Product Online



To register your product, scan this QR code with your smart device and fill in the online form. You can also find the online registration form at: www.bossaudio.com/support

Your product may qualify for a FREE EXTENDED WARRANTY.

Please see www.bossaudio.com/policies

for the qualifications and details of this program.

THANK YOU

Welcome to the BOSS AUDIO SYSTEMS family. Proud audiophiles since 1987.



GET INVOLVED

WE ARE A COMMUNITY!

We read all product feedback, so please share your experience with us and with others!

NEED SUPPORT?

Our U.S. based Customer Support Team is standing by to help you with your inquiries.

CUSTOMER CARE: (805) 751-4853 & Live Chat ONLINE SUPPORT: www.bossaudio.com/support

JOIN OUR COMMUNITY

Join our #BOSSInsiders Program and have an impact on product updates & releases. Apply at www.bossinsiders.com to test and have an influence on future products.











Stay connected with the BOSS Audio Systems community plus get tips & tricks on products and installs.

@BOSSAudioSystems